




## INSTRUCTION MANUAL

# PERSONNEL RESCUE RETRIEVAL SYSTEMS

## Instruction Manual

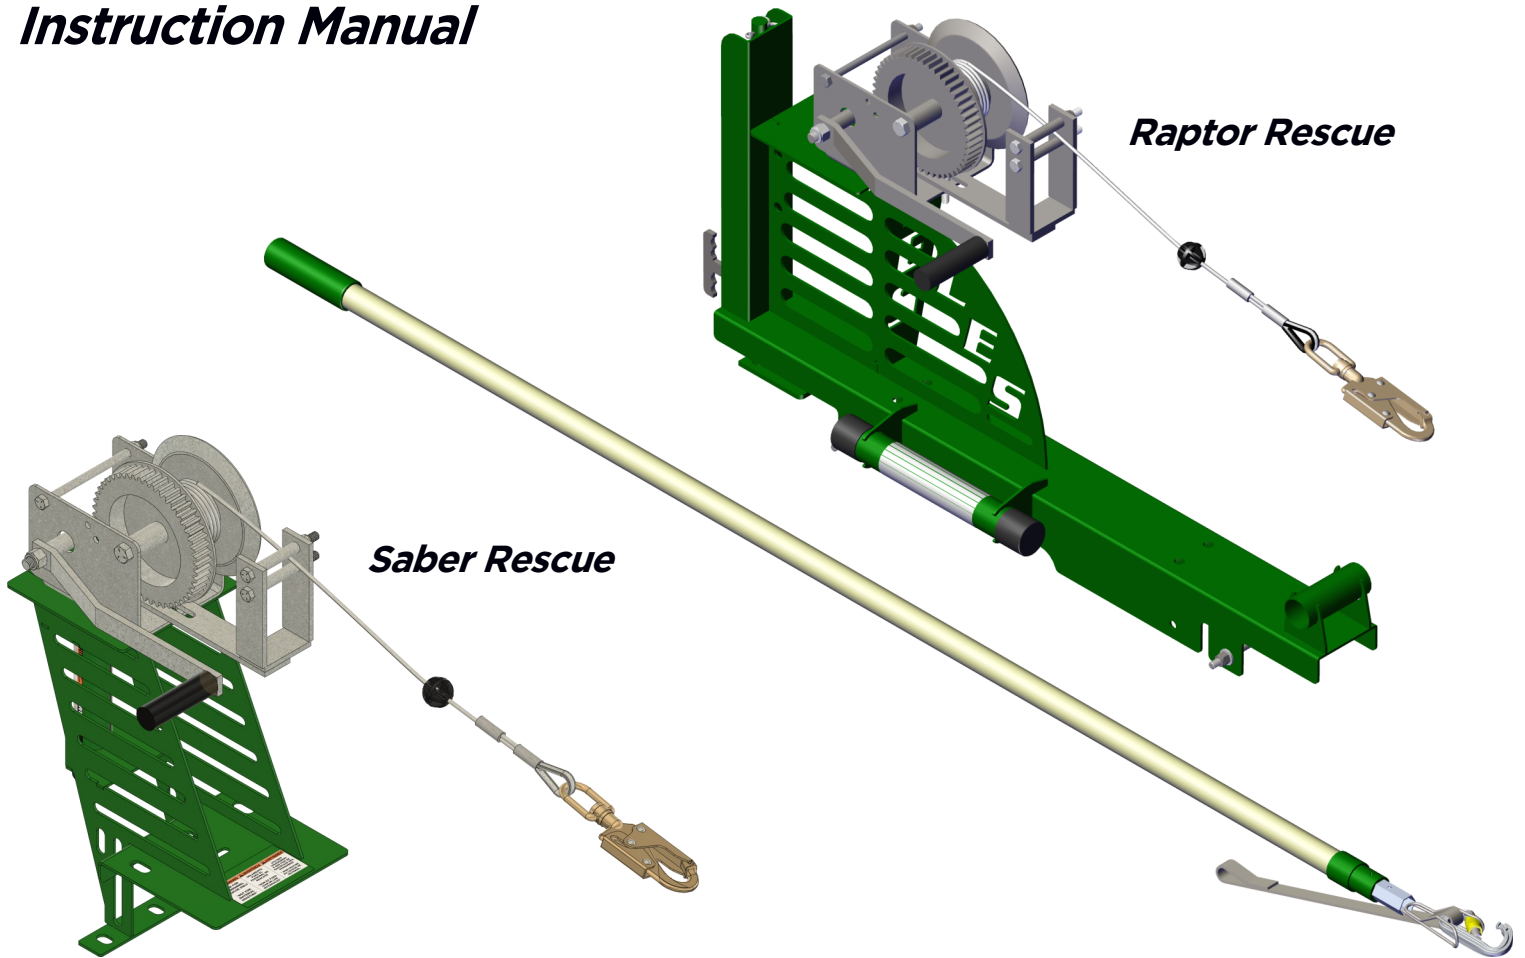

**\*WARNING\***

Serious injury or death may result if this product is used for purposes other than designed. The manufacturer provides the following instructions for the use and care of this equipment. It is the responsibility of the purchaser to understand and convey explicit instruction to each user. The AES Manufacturing/Leading Edge Safety Personnel Rescue Retrieval Systems comply with the requirements of the Federal Occupational Safety and Health Administration (OSHA) when set up and used according to the manufacturers' instructions.

LIT ID: RMS-IM-24.0123

# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

E  
N  
G  
L  
I  
S  
H

## TABLE OF CONTENTS

### INTRODUCTION

Models	3
Parts List	4

### INSTALLATION

TRIREX & R2000 MODELS	9
SABER MODEL	11
R1000 MODELS (2015-2011)	13
R1000 MODELS (2009-prior)	15
STINGER MODELS	17
Standards & Requirements	19
Applications	19
Definitions	19
Use & Limitations	19
General Safety	23
Before Each Use	23
Inspection & Maintenance Log	24

# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

E  
N  
G  
L  
I  
S  
H


***LEADING EDGE SAFETY, LLC***  
**PERSONNEL RESCUE RETRIEVAL SYSTEMS Instruction Manual**

Published by Leading Edge Safety, LLC  
North Kansas City, MO

Copyright © 2024 by Leading Edge Safety, LLC  
PRINTED IN THE UNITED STATES OF AMERICA

# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

ENGLISH

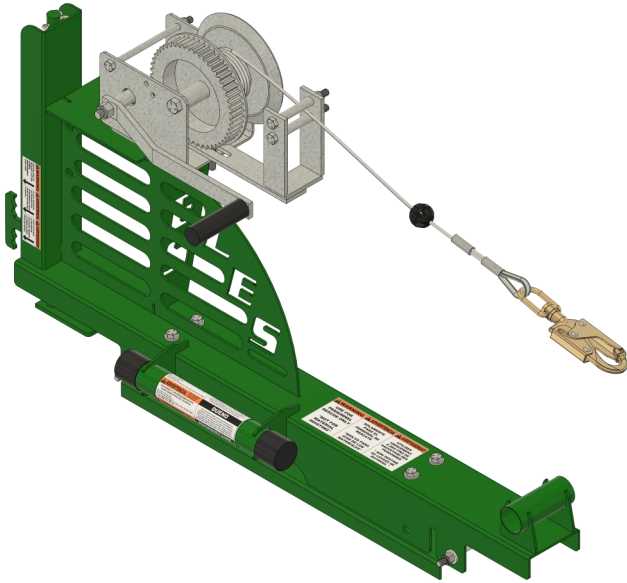

## ***RAPTOR RESCUE***

***RMS-000-16***

**PERSONNEL RESCUE RETRIEVAL SYSTEM**

**MODEL# RMS-000-16**

- 100' GALVANIZED STEEL CABLE
- RAISING & LOWER CAPABILITY
- FRICTION BRAKE PREVENTS FREE-WHEELING UNDER LOAD
- INCLUDES RETRIEVAL POLE
- COMPATIBLE WITH TRIEX, R2000, STINGER, & R1000 MOBILE FALL CART MODELS


## ***SABER RESCUE***

***RMS-SBR-0000-23***

**PERSONNEL RESCUE RETRIEVAL SYSTEM**

**MODEL# RMS-SBR-0000-23**

- 100' GALVANIZED STEEL CABLE
- RAISING & LOWER CAPABILITY
- FRICTION BRAKE PREVENTS FREE-WHEELING UNDER LOAD
- INCLUDES RETRIEVAL POLE
- COMPATIBLE WITH SABER MOBILE FALL CART MODELS

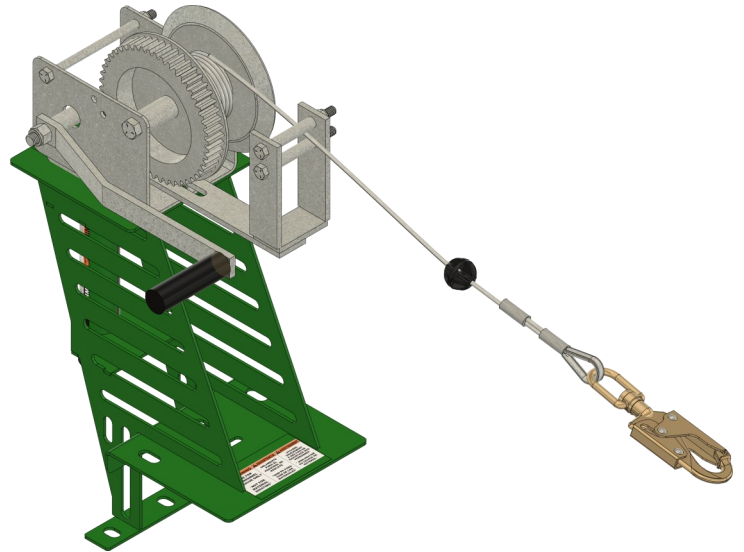

## ***RESCUE POLE***

***RPCC-12***

**TELESCOPING RETRIEVAL POLE WITH CARABINER & CLIP**

**MODEL# RPCC-12**


- EXTENDS 6' - 12'
- SELF-LOCKING TWIST-LOCK CARABINER W/ TETHER



# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

E  
N  
G  
L  
I  
S  
H

1	RESCUE POLE ASSEMBLY	RPCC-12
2	SELF-LOCKING CARABINER & TETHER	RMS-CARABINER
3	HOLDING CLIP, CARABINER	RP-CLIP

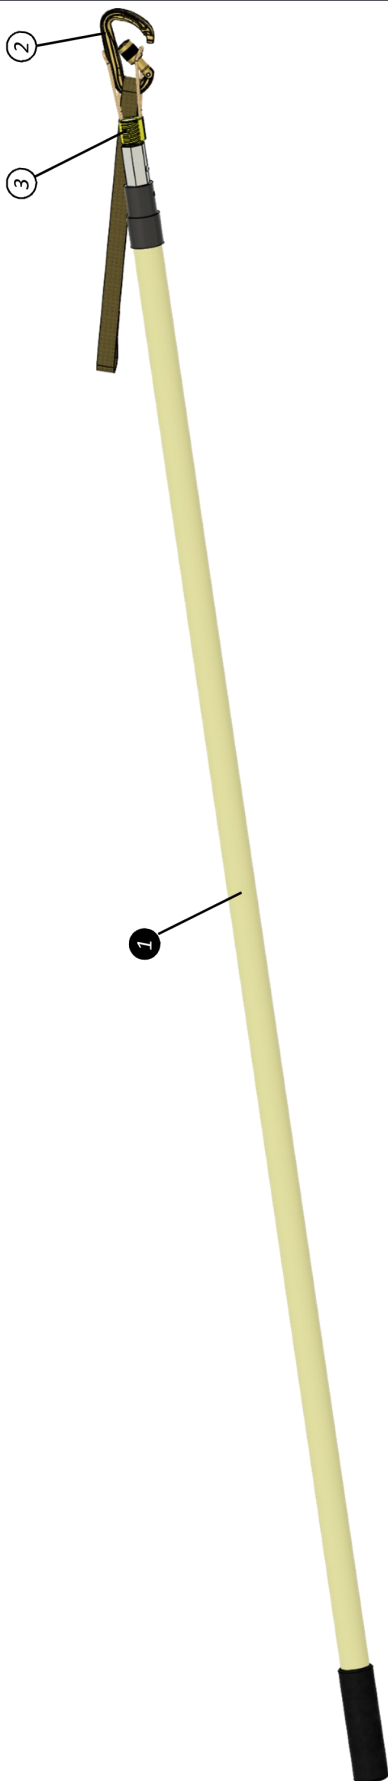


# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

E  
N  
G  
L  
I  
S  
H

## RAPTOR RESCUE RMS-000-16


1	RAPTOR RESCUE FRAME ASSEMBLY	RMS-000-12
2	WINCH ASSEMBLY	MW100G-RPT
3	STINGER ATTACHMENT PLATE	RMS-013-11
4	RESCUE ENGAGEMENT ARM LOCK	RMS-200-14
5	RESCUE TENSION HANDLE	RMS-012
6	3/8-16 x 5" HEX BOLT	B-38(_375)-16-5
7	3/8-16 x 1 1/2" HEX BOLT	B-38(_375)-16-1_5
8	3/8-16 x 1" HEX BOLT	B-38(_375)-16-1
9	3/8" FLAT WASHER	W-38
10	3/6-16 NYLON-INSERT LOCK NUT	N-NL-38(_375)-16
11	TUBE CAP	VC-1625-1500
12	3/16" x 2" COTTER PIN	CP-316-2
13	WARNING-INSTRUCTION DECAL	LAB-JB-002-09c
14	WARNING-ENGAGEMENT ARM	LAB-RMS-001-09
15	WARNING-NOT FOR HOISTING	LAB-RMS-002-09

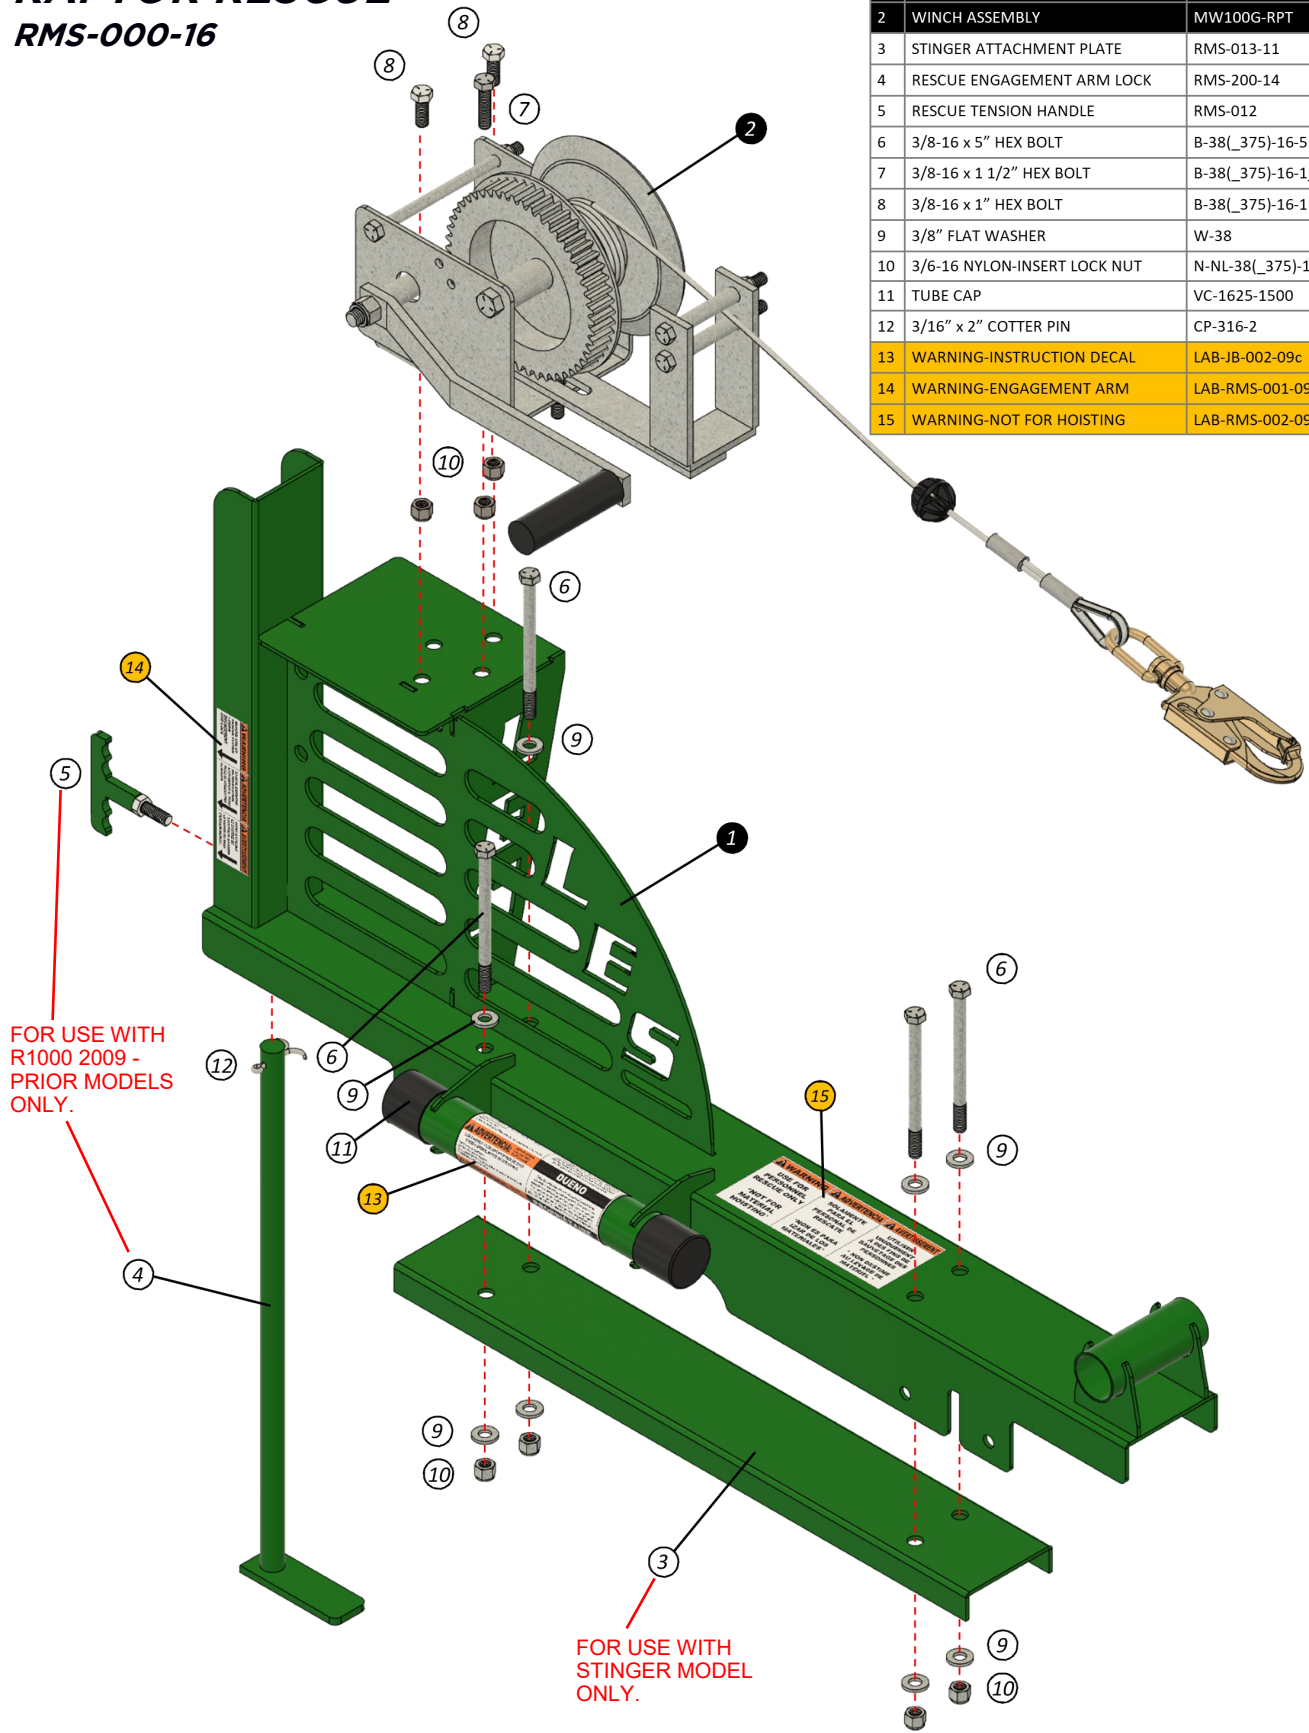

# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

ENGLISH

## RAPTOR RESCUE RMS-000-16

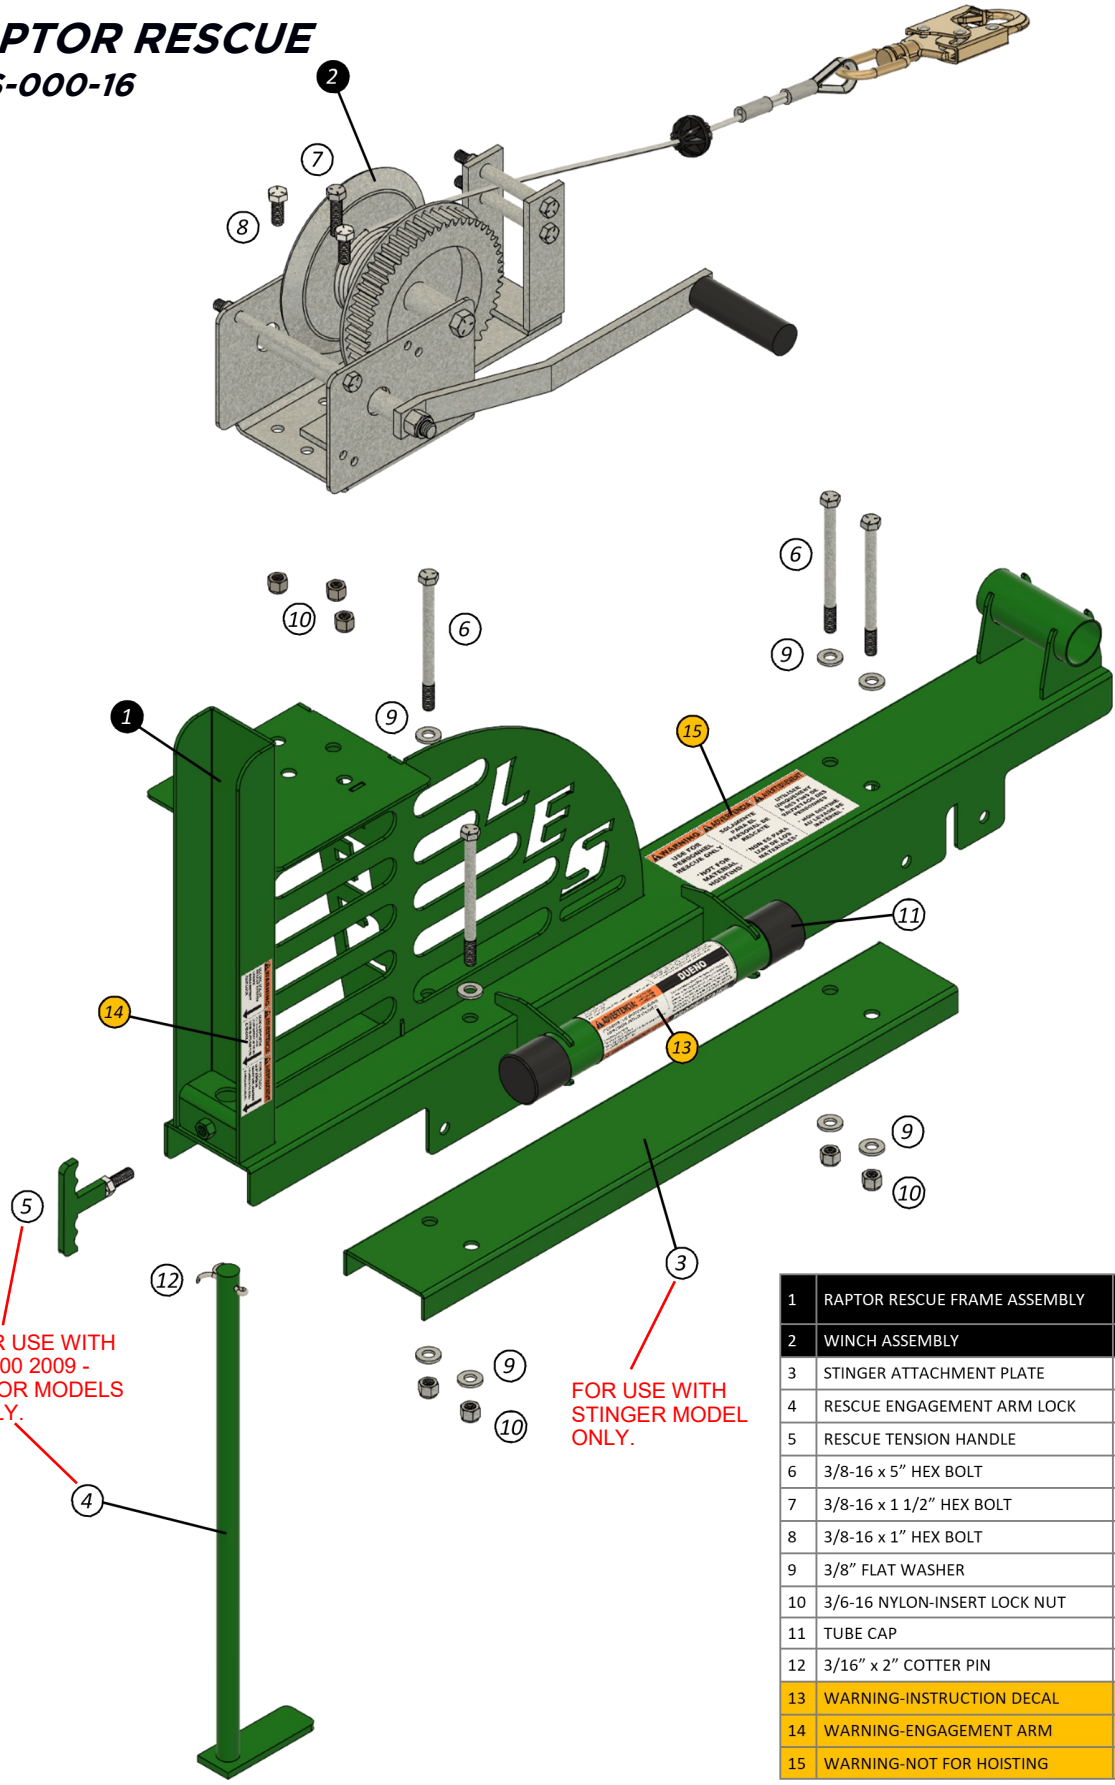


Part Number	Part Name	Part Number
1	RAPTOR RESCUE FRAME ASSEMBLY	RMS-000-12
2	WINCH ASSEMBLY	MW100G-RPT
3	STINGER ATTACHMENT PLATE	RMS-013-11
4	RESCUE ENGAGEMENT ARM LOCK	RMS-200-14
5	RESCUE TENSION HANDLE	RMS-012
6	3/8-16 x 5" HEX BOLT	B-38(_375)-16-5
7	3/8-16 x 1 1/2" HEX BOLT	B-38(_375)-16-1_5
8	3/8-16 x 1" HEX BOLT	B-38(_375)-16-1
9	3/8" FLAT WASHER	W-38
10	3/6-16 NYLON-INSERT LOCK NUT	N-NL-38(_375)-16
11	TUBE CAP	VC-1625-1500
12	3/16" x 2" COTTER PIN	CP-316-2
13	WARNING-INSTRUCTION DECAL	LAB-JB-002-09c
14	WARNING-ENGAGEMENT ARM	LAB-RMS-001-09
15	WARNING-NOT FOR HOISTING	LAB-RMS-002-09

# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

E  
N  
G  
L  
I  
S  
H

## **SABER RESCUE** **RMS-SBR-0000-23**

1A	SABER RESCUE FRAME ASSEMBLY	RMS-SBR-1000-23
2	WINCH ASSEMBLY	MW100G-RPT
9	3/8" FLAT WASHER	W-38
10	3/6-16 NYLON-INSERT LOCK NUT	N-NL-38(_375)-16
16	3/8-16 x 1" FLANGE HEAD SCREW	B-38(_375)16-01
17	3/8-16 x 1 1/2" FLANGE HEAD SCREW	B-38(_375)16-1_5
13	WARNING-INSTRUCTION DECAL	LAB-JB-002-09c
15	WARNING-NOT FOR HOISTING	LAB-RMS-002-09

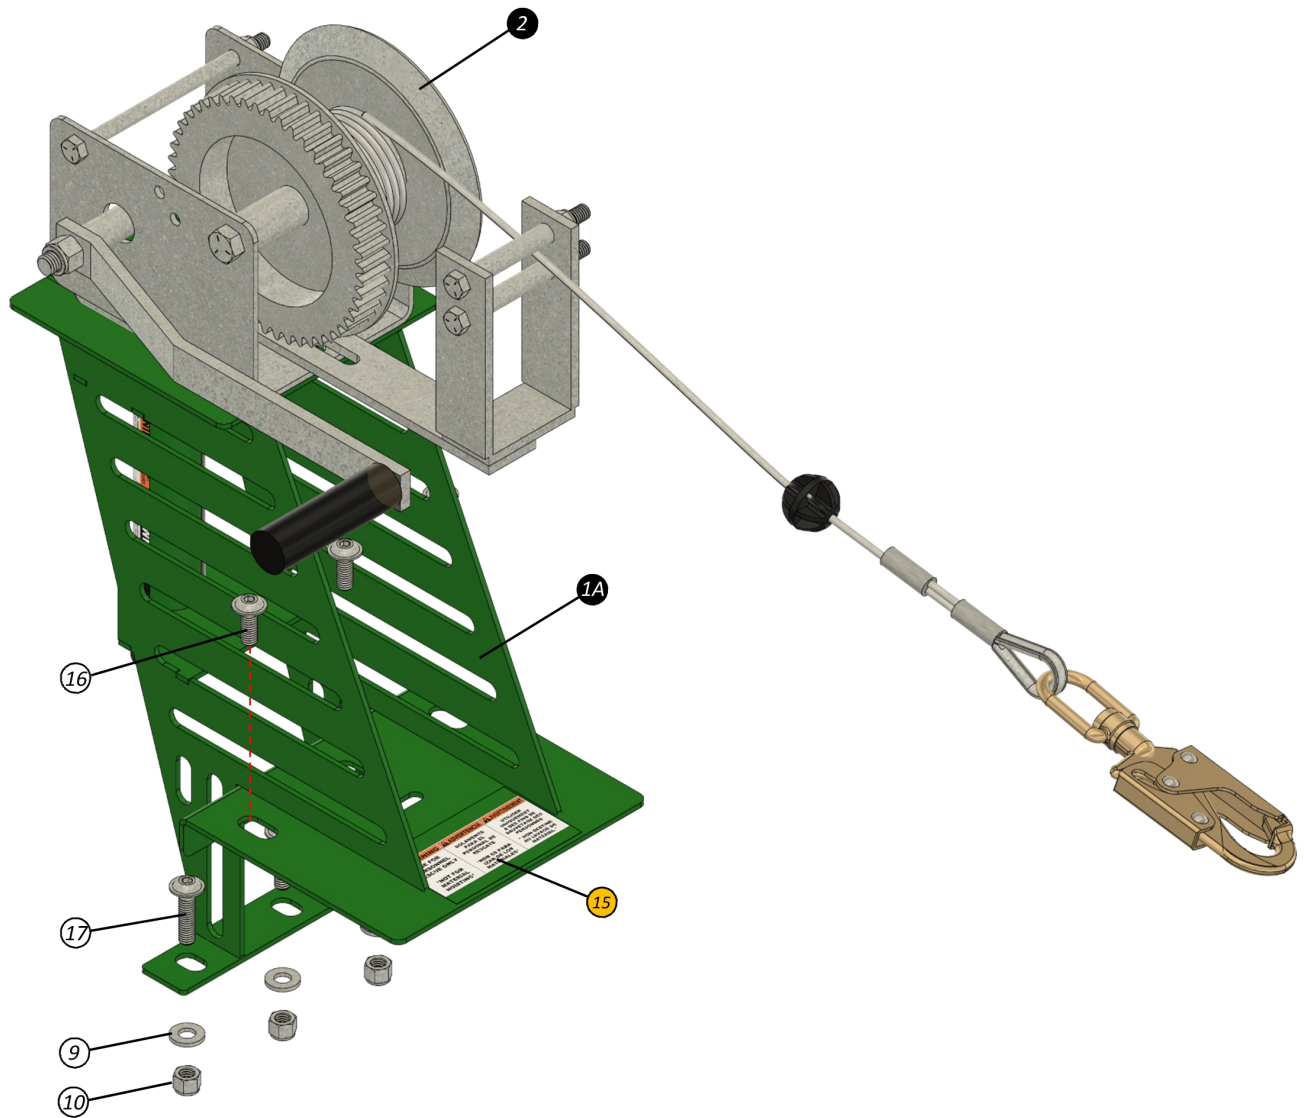




# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

ENGLISH

## SABER RESCUE RMS-SBR-0000-23

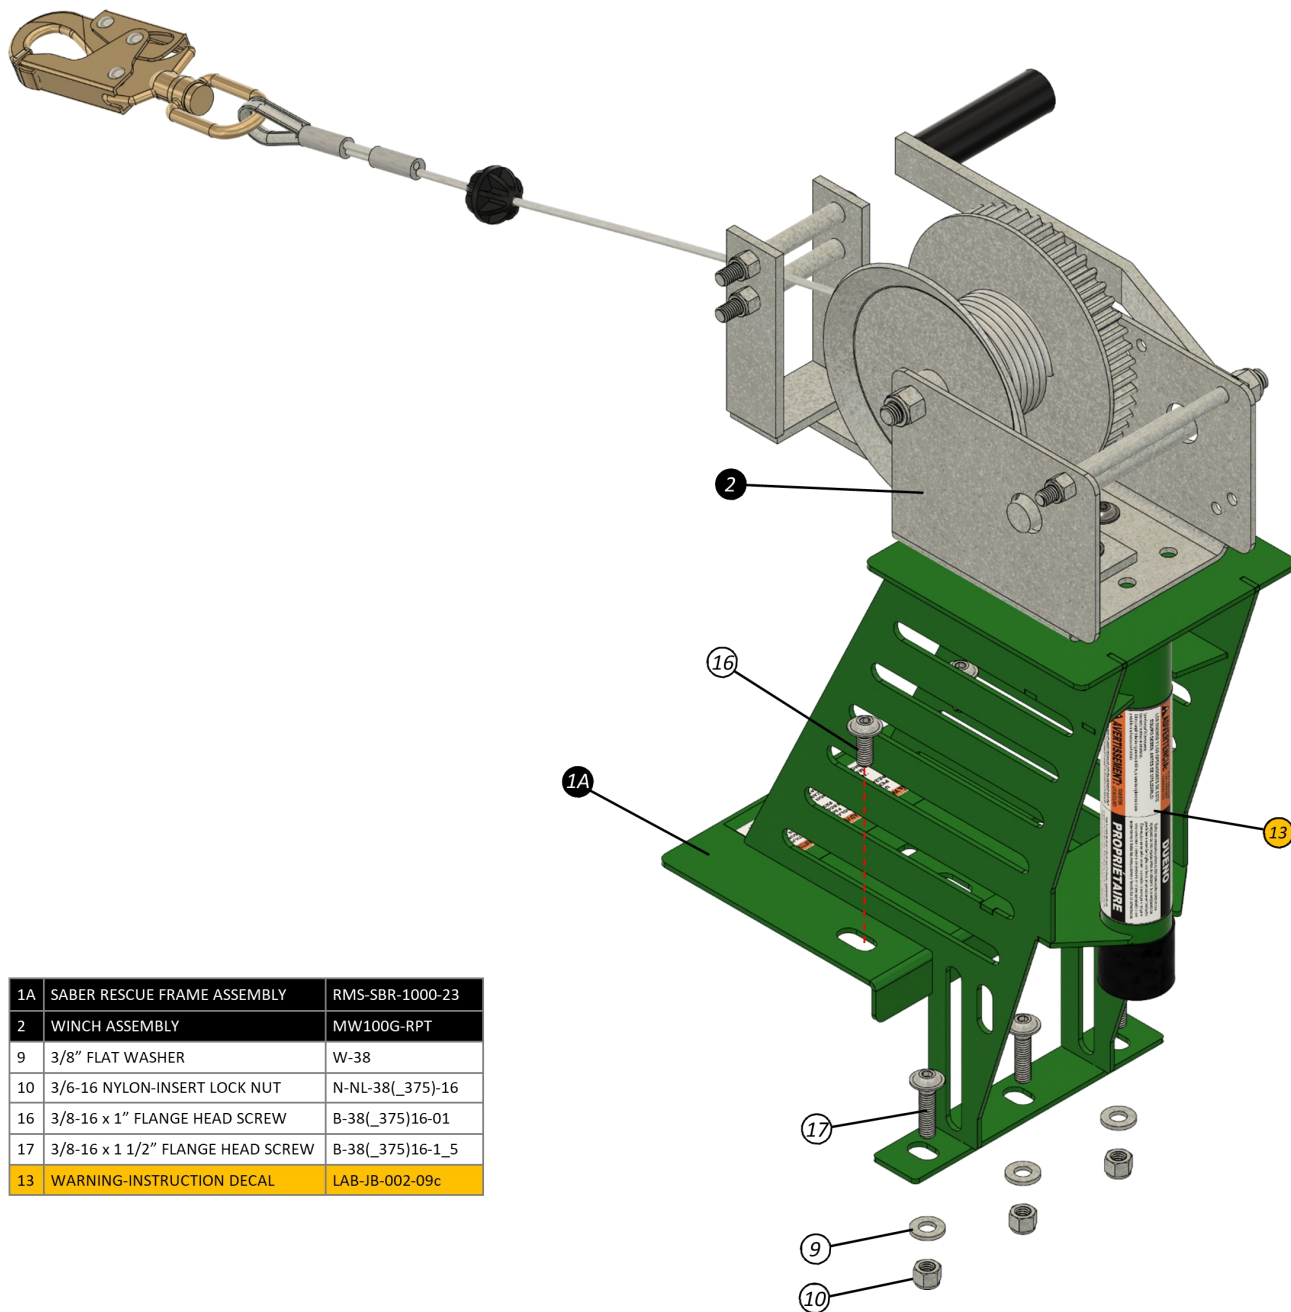



1A	SABER RESCUE FRAME ASSEMBLY	RMS-SBR-1000-23
2	WINCH ASSEMBLY	MW100G-RPT
9	3/8" FLAT WASHER	W-38
10	3/6-16 NYLON-INSERT LOCK NUT	N-NL-38(_375)-16
16	3/8-16 x 1" FLANGE HEAD SCREW	B-38(_375)16-01
17	3/8-16 x 1 1/2" FLANGE HEAD SCREW	B-38(_375)16-1_5
13	WARNING-INSTRUCTION DECAL	LAB-JB-002-09c

# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

## ALL TRIREX & R2000 MODELS

### Raptor Rescue RMS-000-16 Installation



PARTS NOT USED TO INSTALL THE RAPTOR RESCUE ON THE ABOVE MODELS ARE SHOWN IN THE PARTS DIAGRAM ON PAGES 5-6. REMAINING PARTS MAY BE DISCARDED.

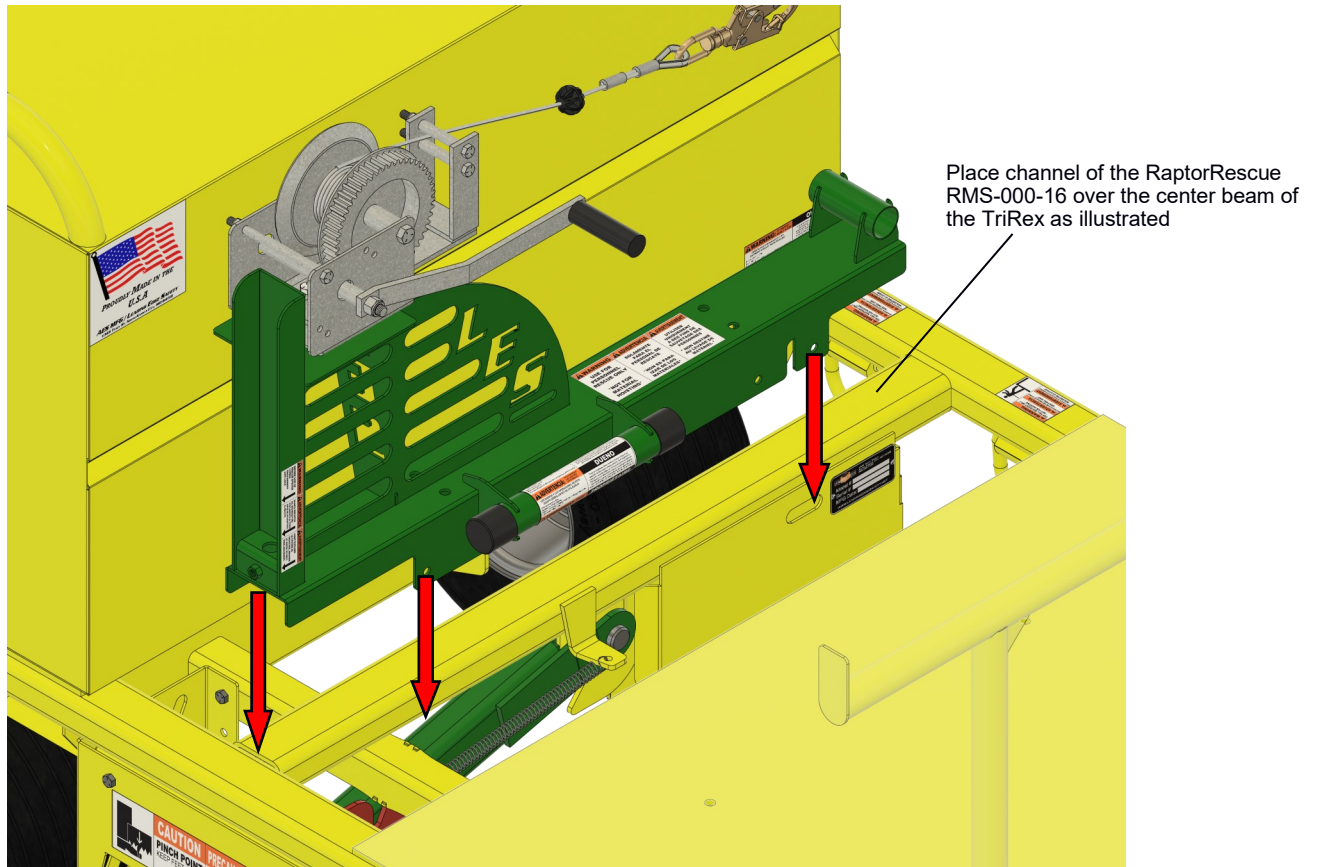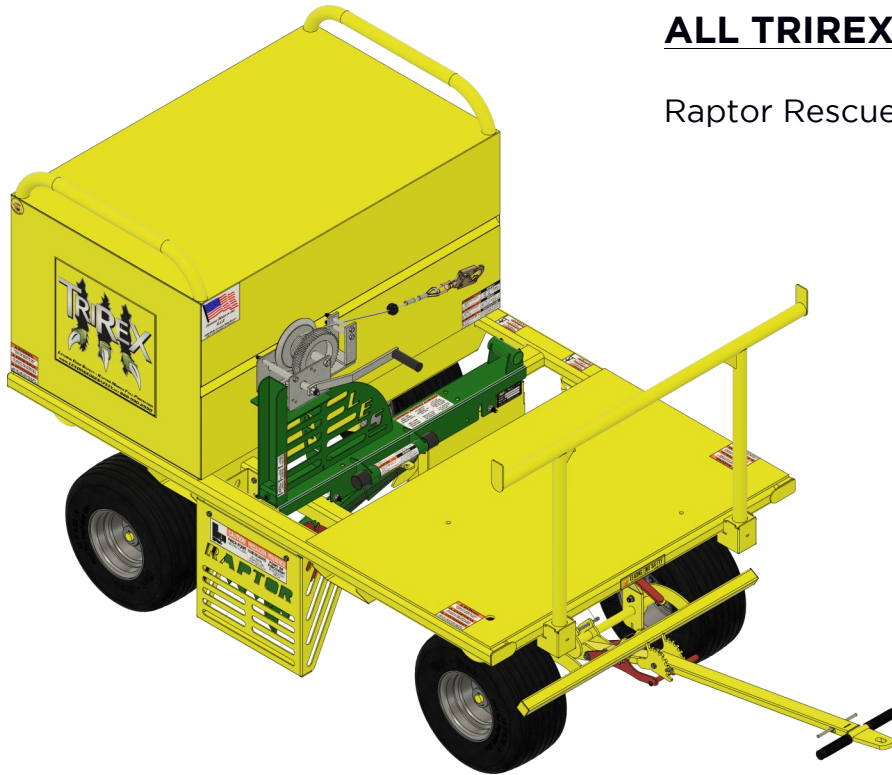

E  
N  
G  
L  
I  
S  
H

# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

ENGLISH

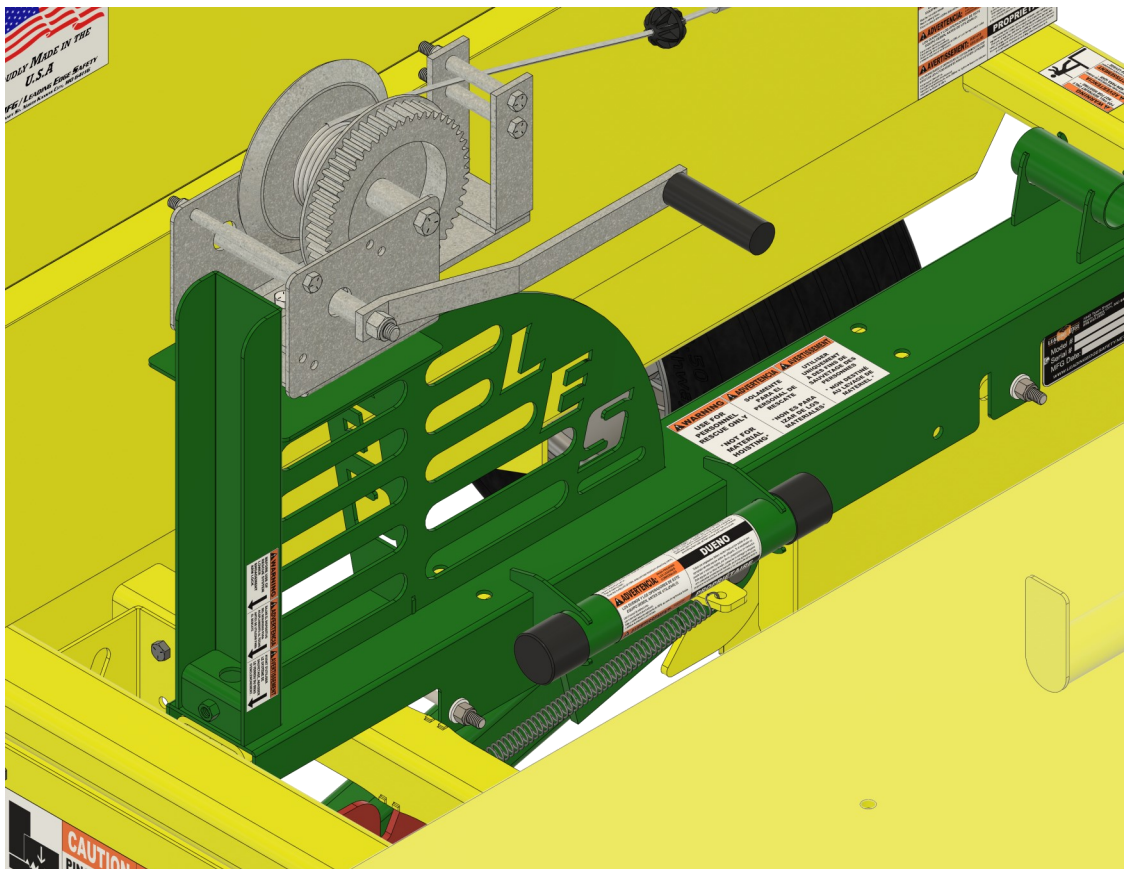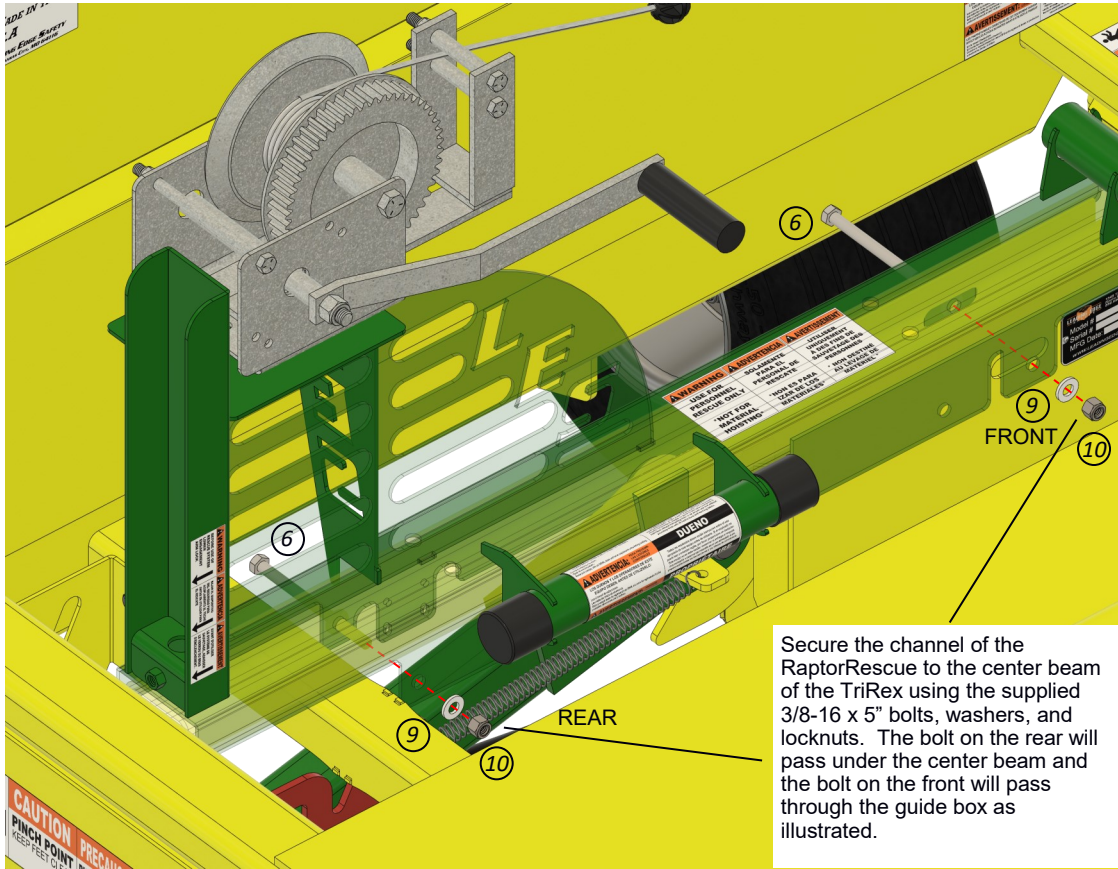


# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL



E  
N  
G  
L  
I  
S  
H

## SABER MODEL

Saber Rescue RMS-SBR-000-16  
Installation

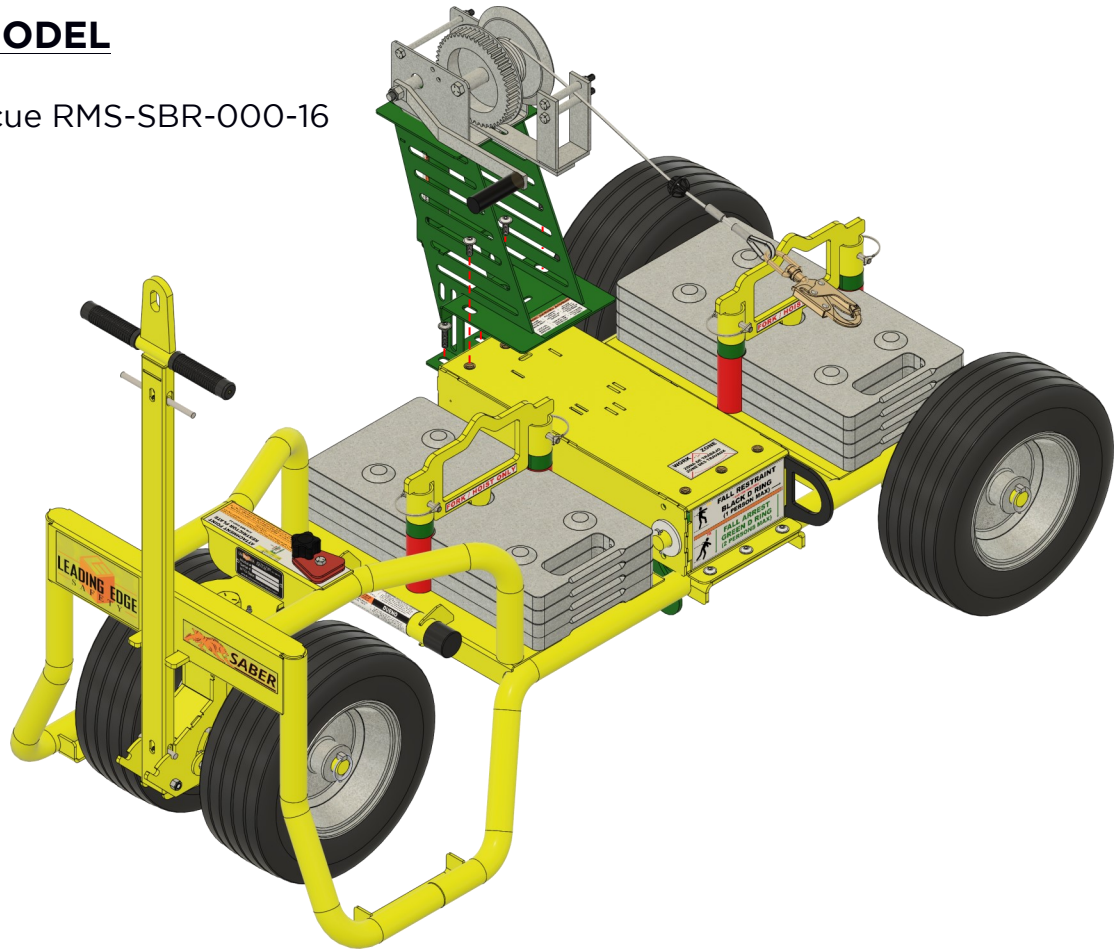


Secure Saber Rescue using six (6) bolts provided as shown in the illustrations below.

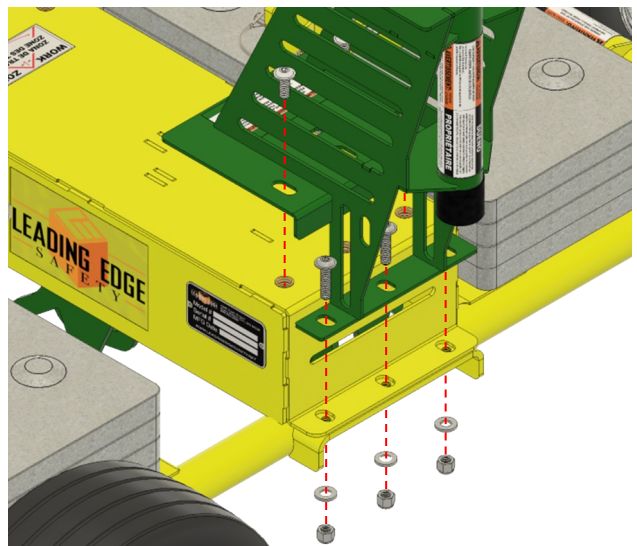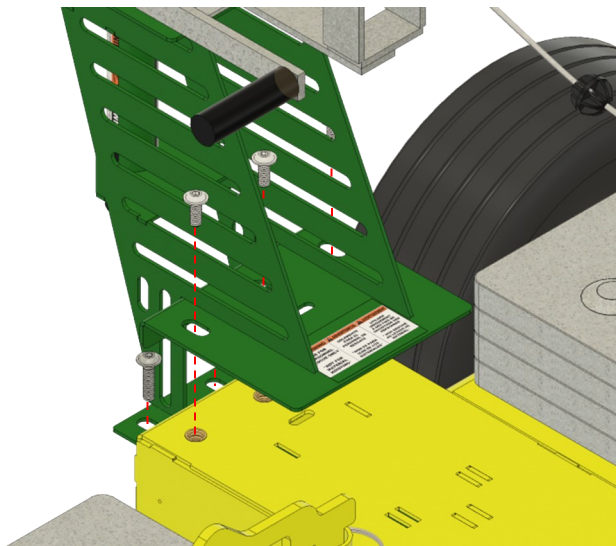

# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

E  
N  
G  
L  
I  
S  
H


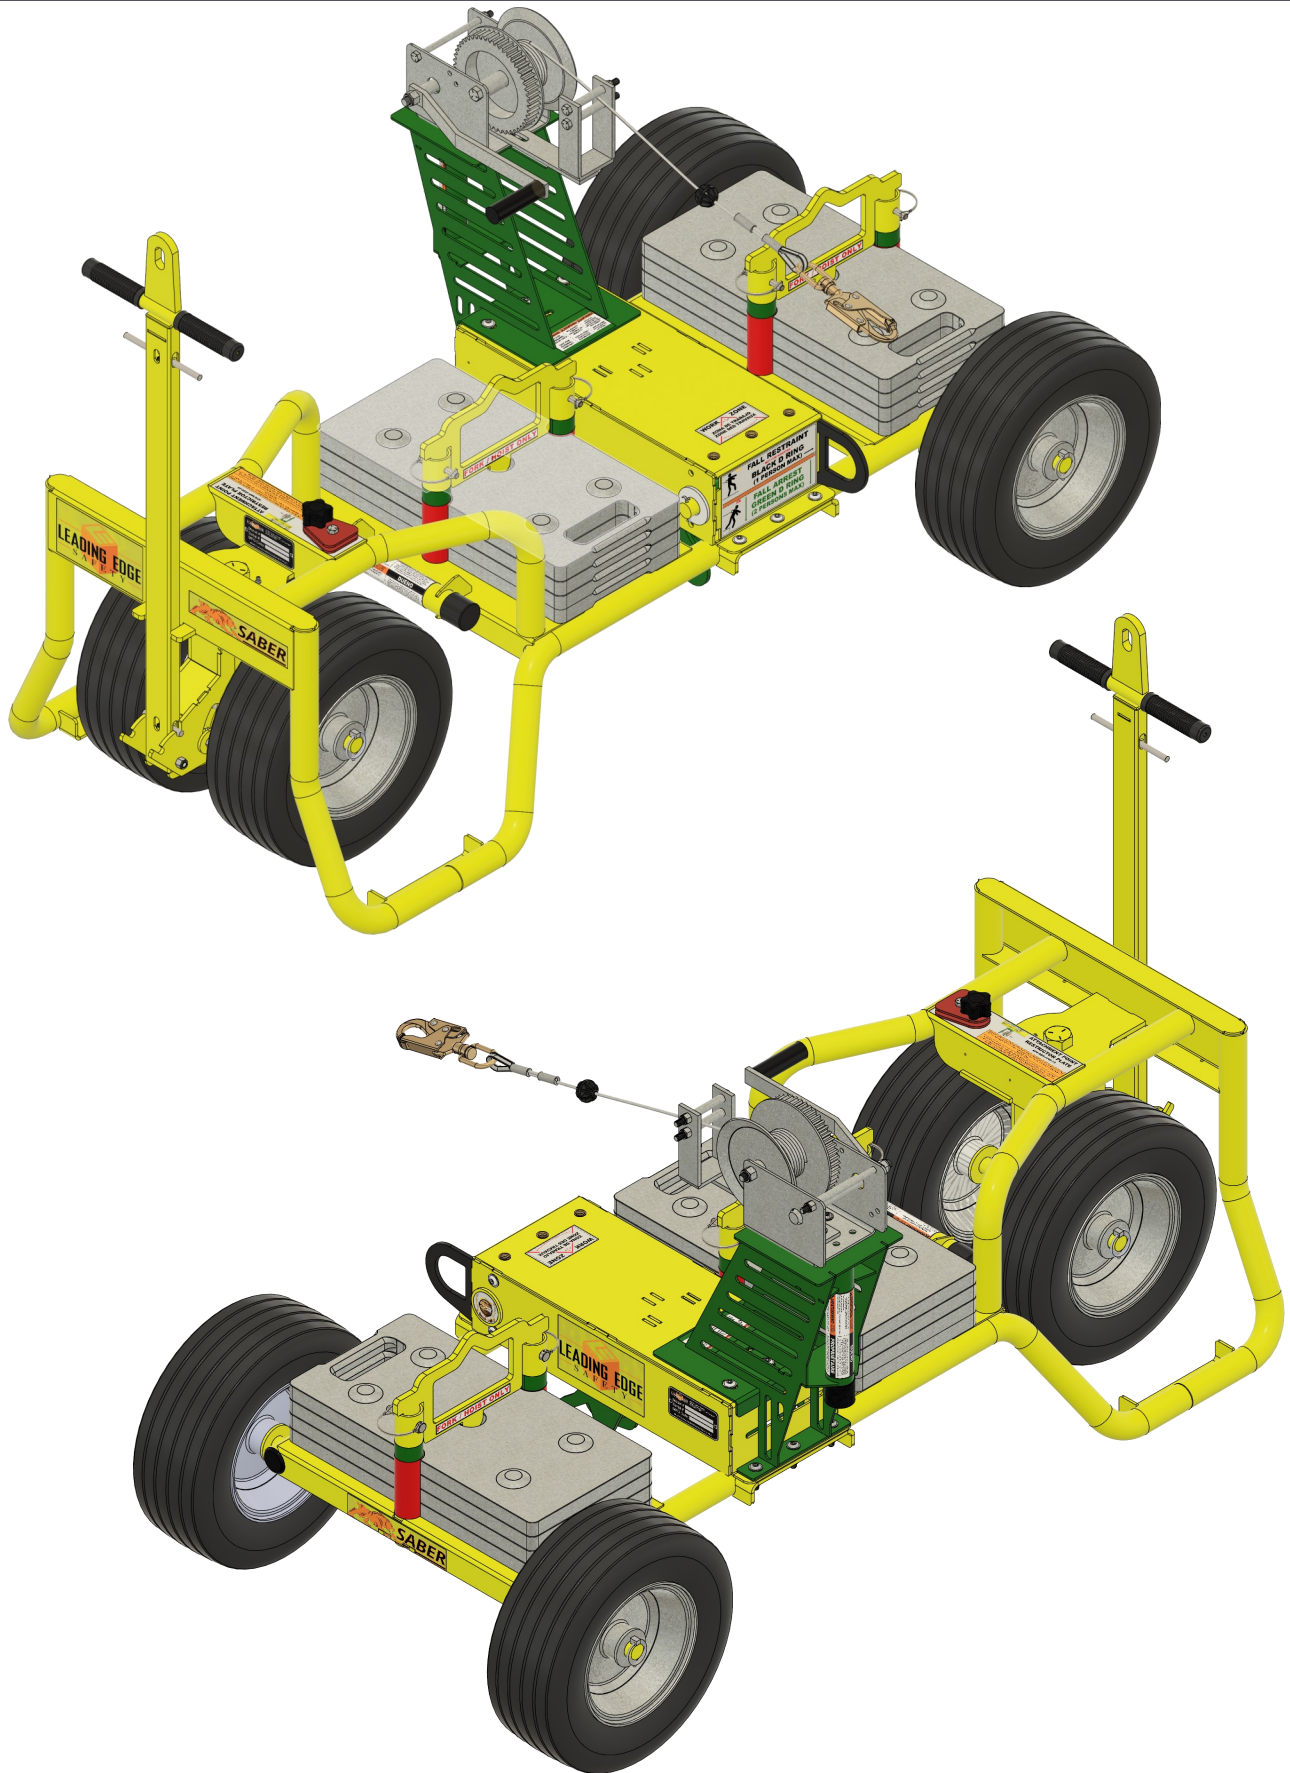


# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

## R1000 MODELS 2011 - 2015

### Raptor Rescue RMS-000-16 Installation



PARTS NOT USED TO INSTALL THE RAPTOR RESCUE ON THE ABOVE MODELS ARE SHOWN IN THE PARTS DIAGRAM ON PAGES 5-6. REMAINING PARTS MAY BE DISCARDED.

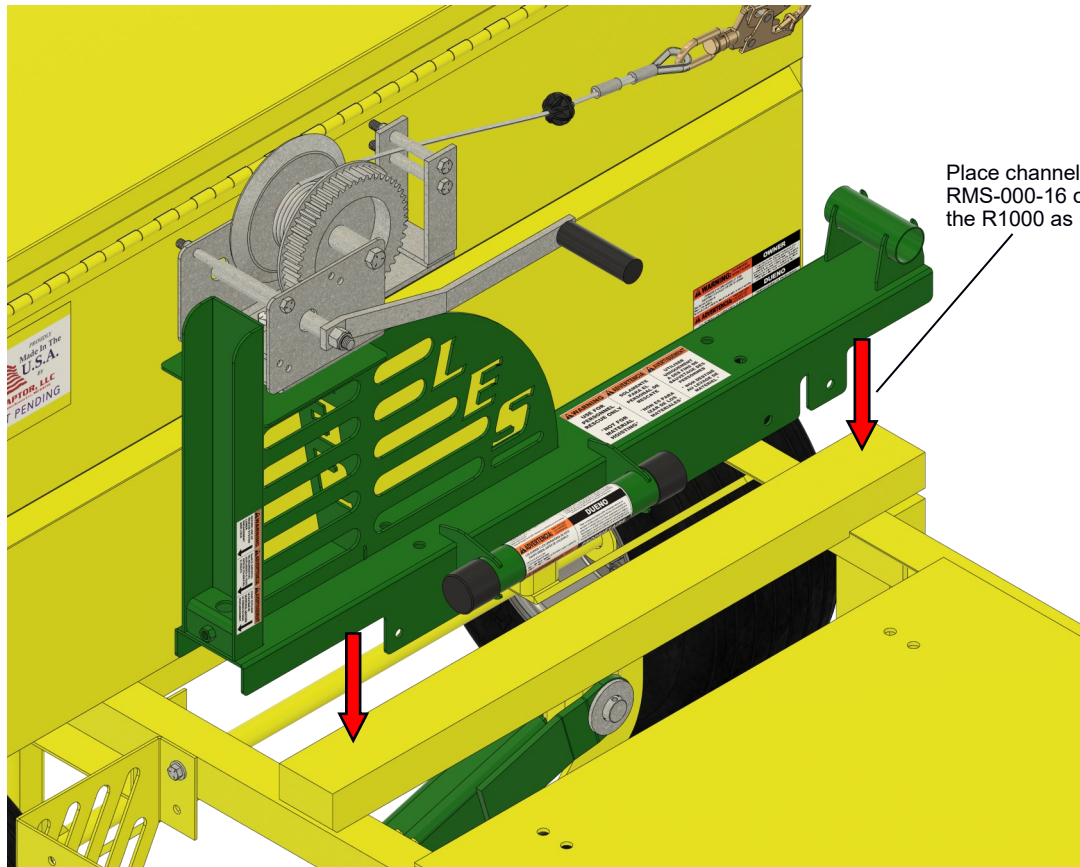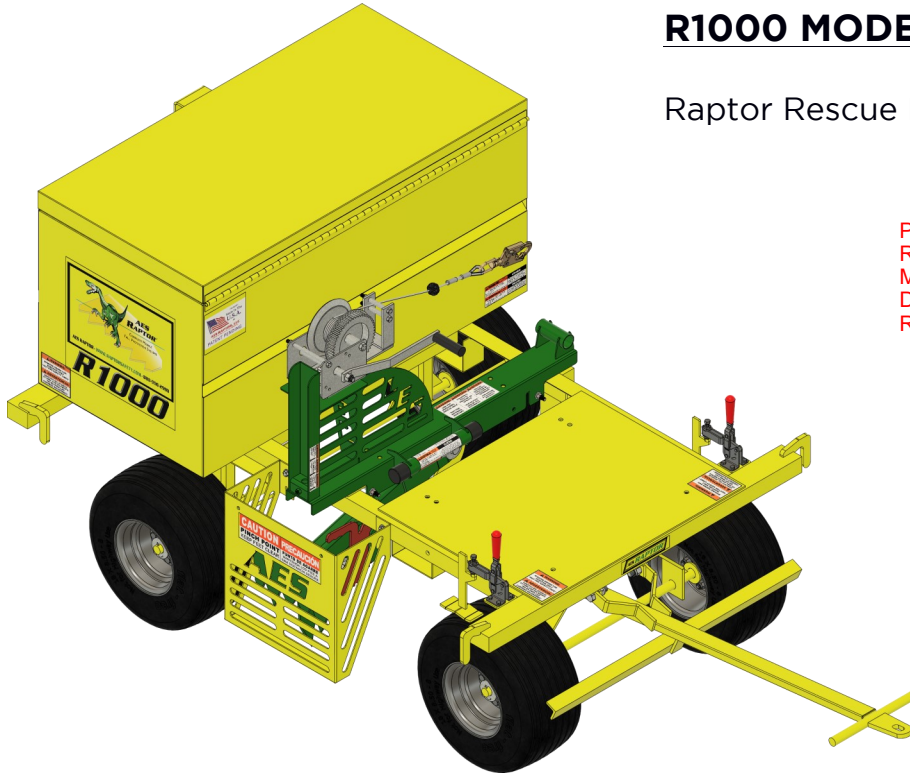

E  
N  
G  
L  
I  
S  
H

# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

ENGLISH

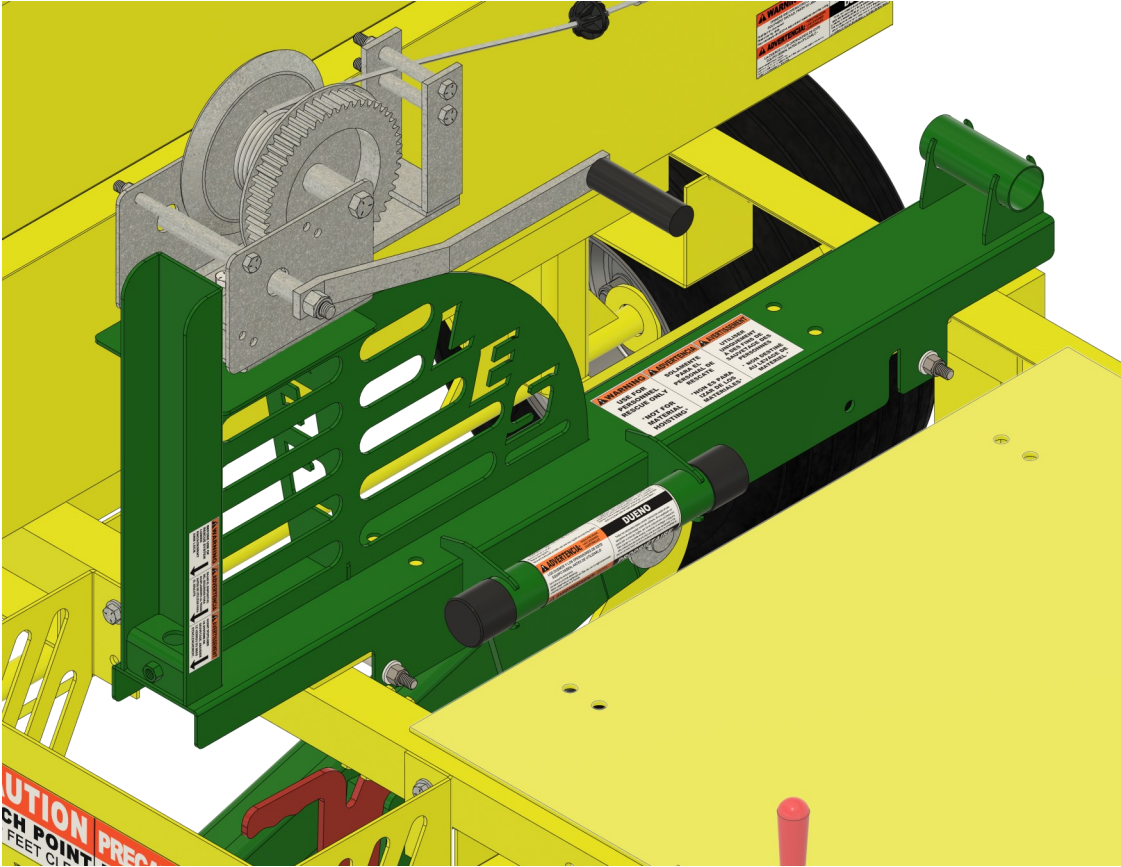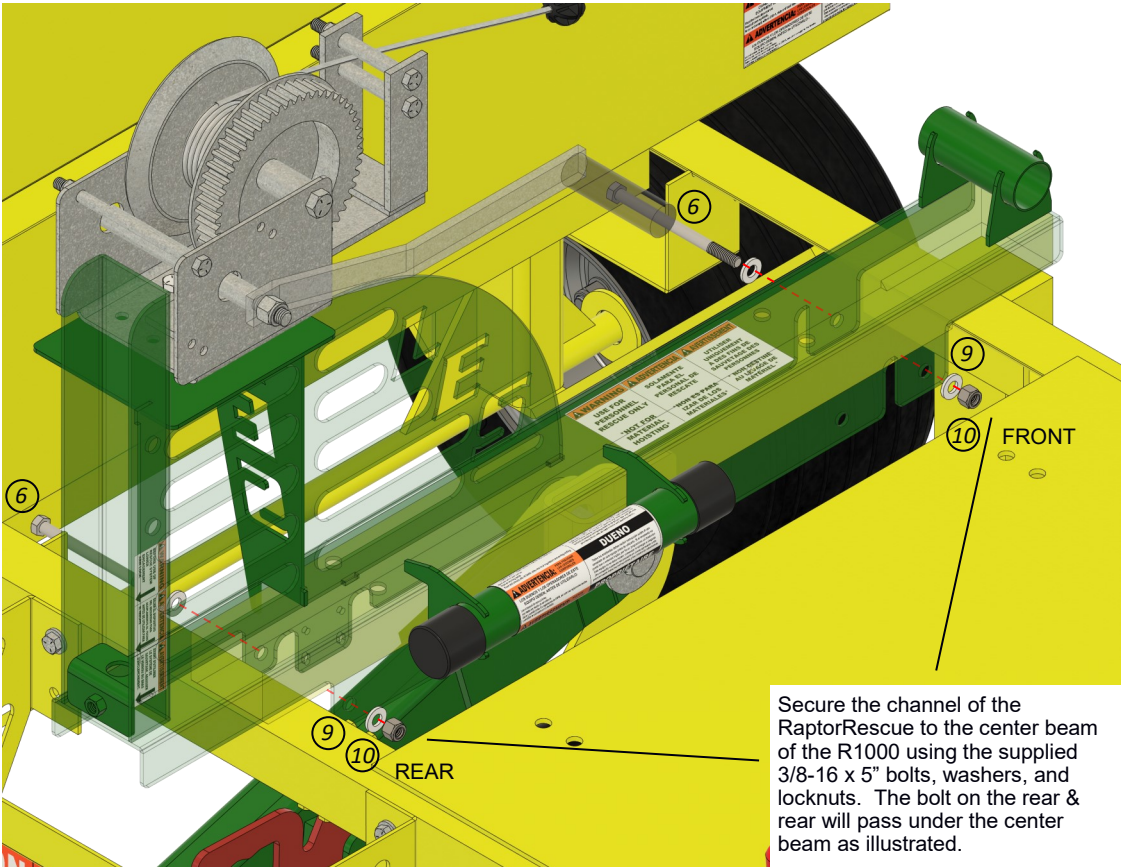


# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL


## R1000 MODELS 2009 - PRIOR

### Raptor Rescue RMS-000-16 Installation

E  
N  
G  
L  
I  
S  
H

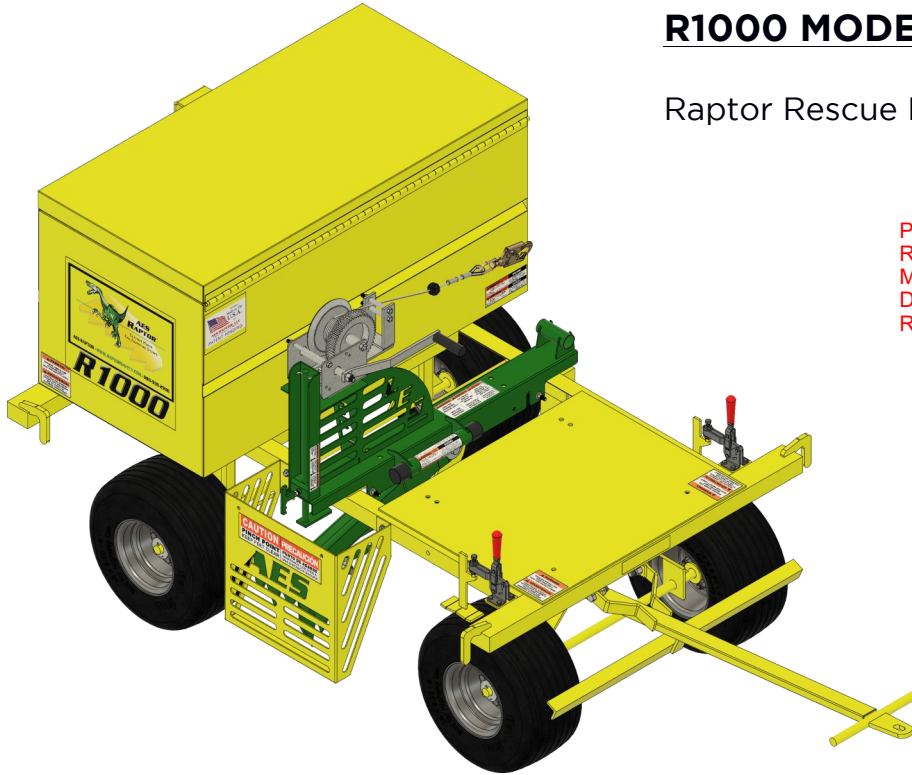


PARTS NOT USED TO INSTALL THE RAPTOR RESCUE ON THE ABOVE MODELS ARE SHOWN IN THE PARTS DIAGRAM ON PAGES 5-6. REMAINING PARTS MAY BE DISCARDED.

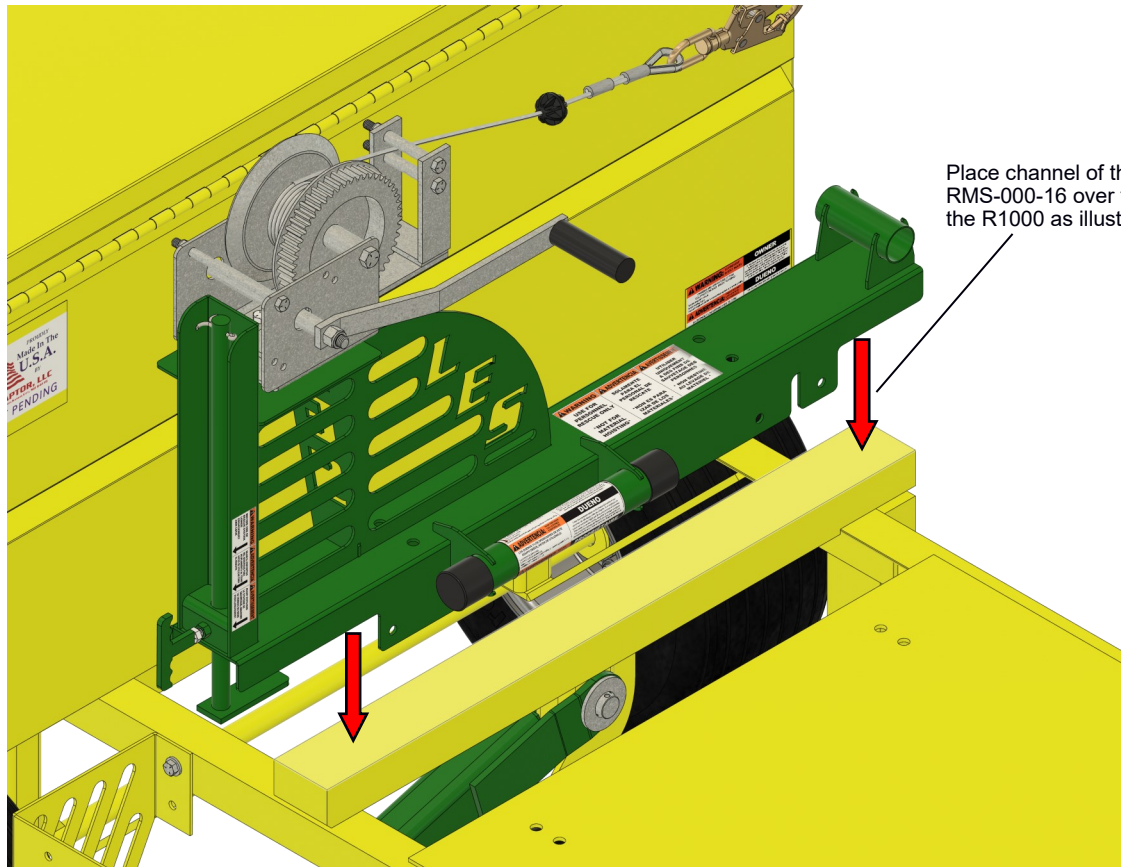


Place channel of the RaptorRescue RMS-000-16 over the center beam of the R1000 as illustrated



# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

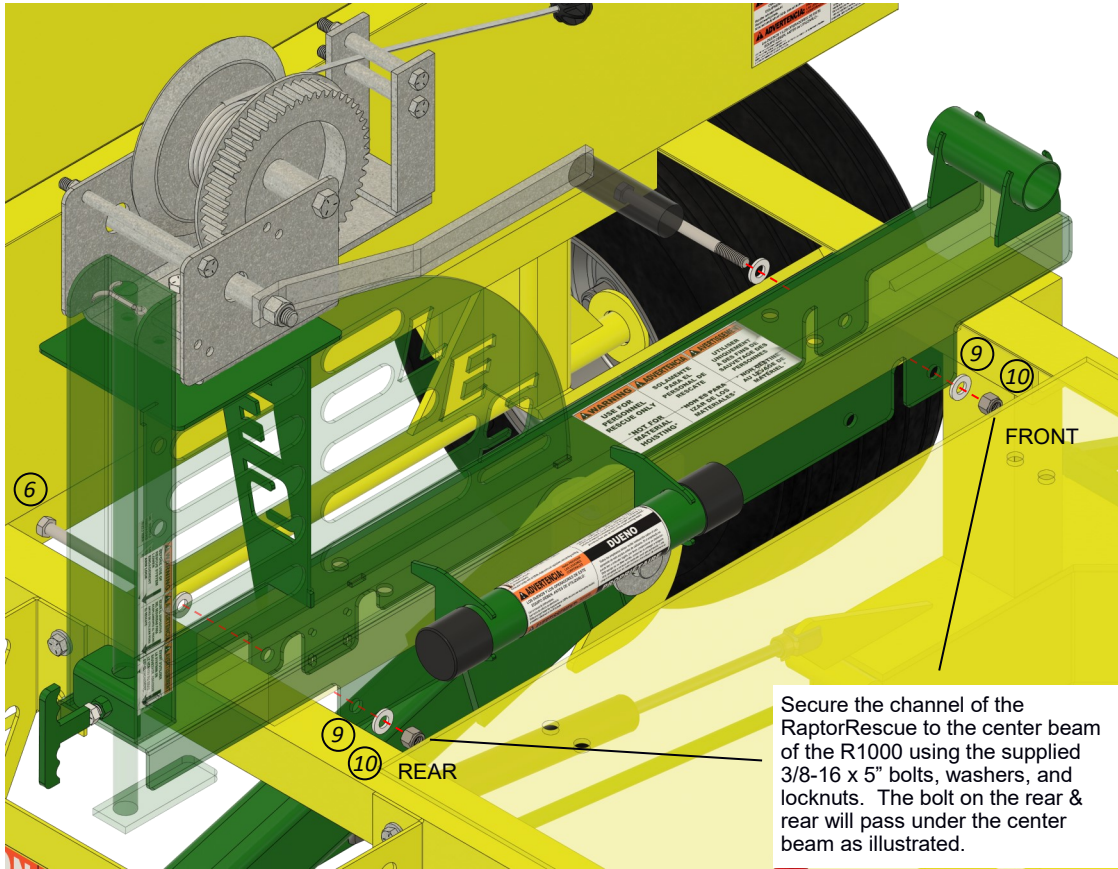

Secure the channel of the RaptorRescue to the center beam of the R1000 using the supplied 3/8-16 x 5" bolts, washers, and locknuts. The bolt on the rear & rear will pass under the center beam as illustrated.

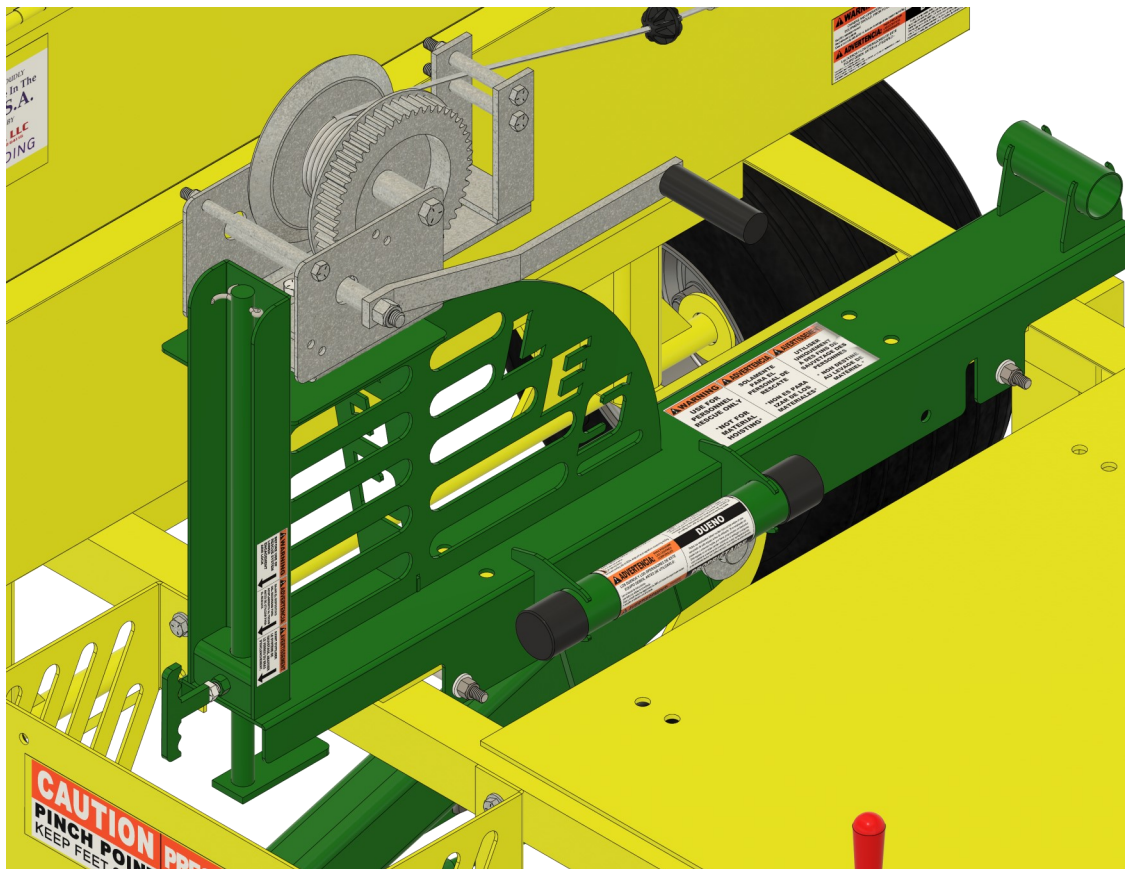


# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

E  
N  
G  
L  
I  
S  
H

## ALL STINGER MODELS

### Raptor Rescue RMS-000-16 Installation



PARTS NOT USED TO INSTALL THE RAPTOR RESCUE ON THE ABOVE MODELS ARE SHOWN IN THE PARTS DIAGRAM ON PAGES 5-6. REMAINING PARTS MAY BE DISCARDED.

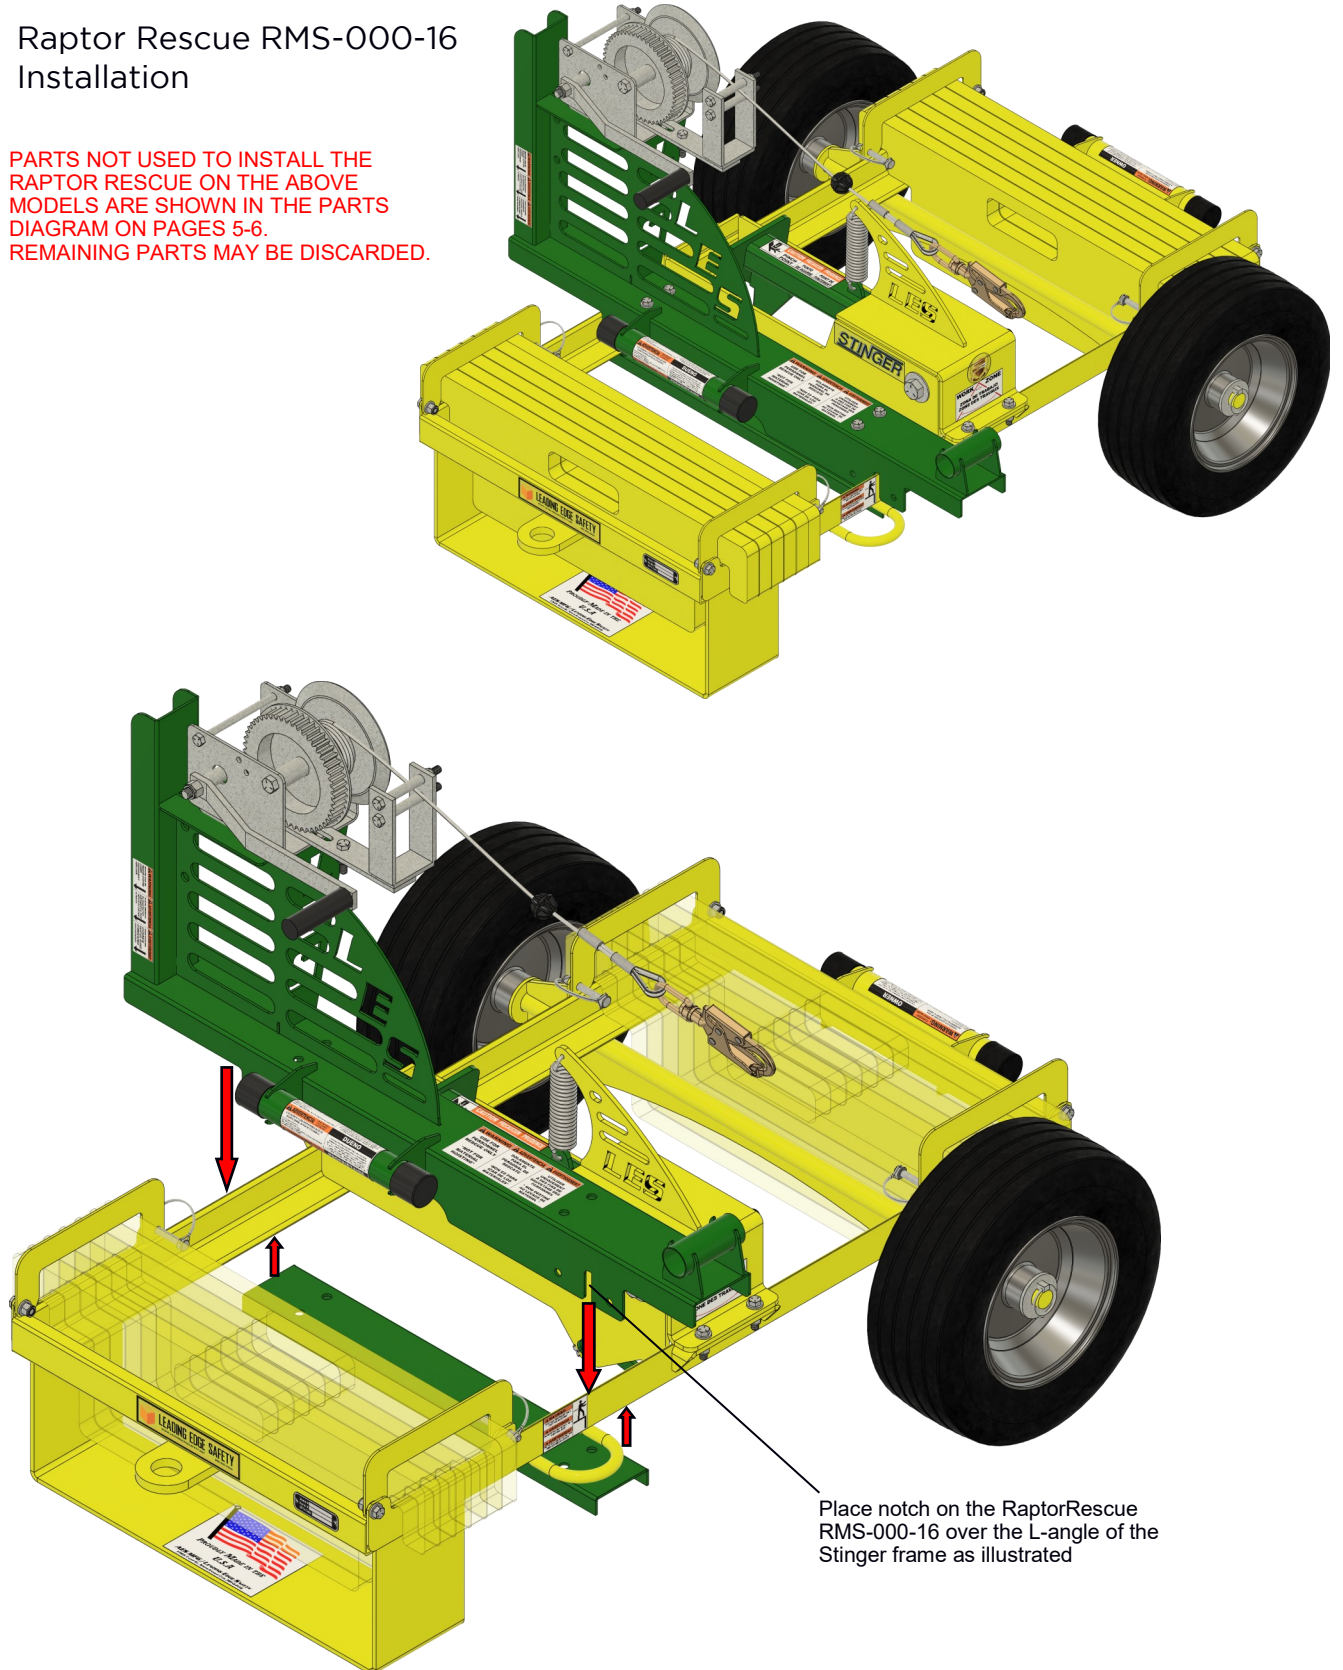

Place notch on the RaptorRescue RMS-000-16 over the L-angle of the Stinger frame as illustrated

# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

E  
N  
G  
L  
I  
S  
H

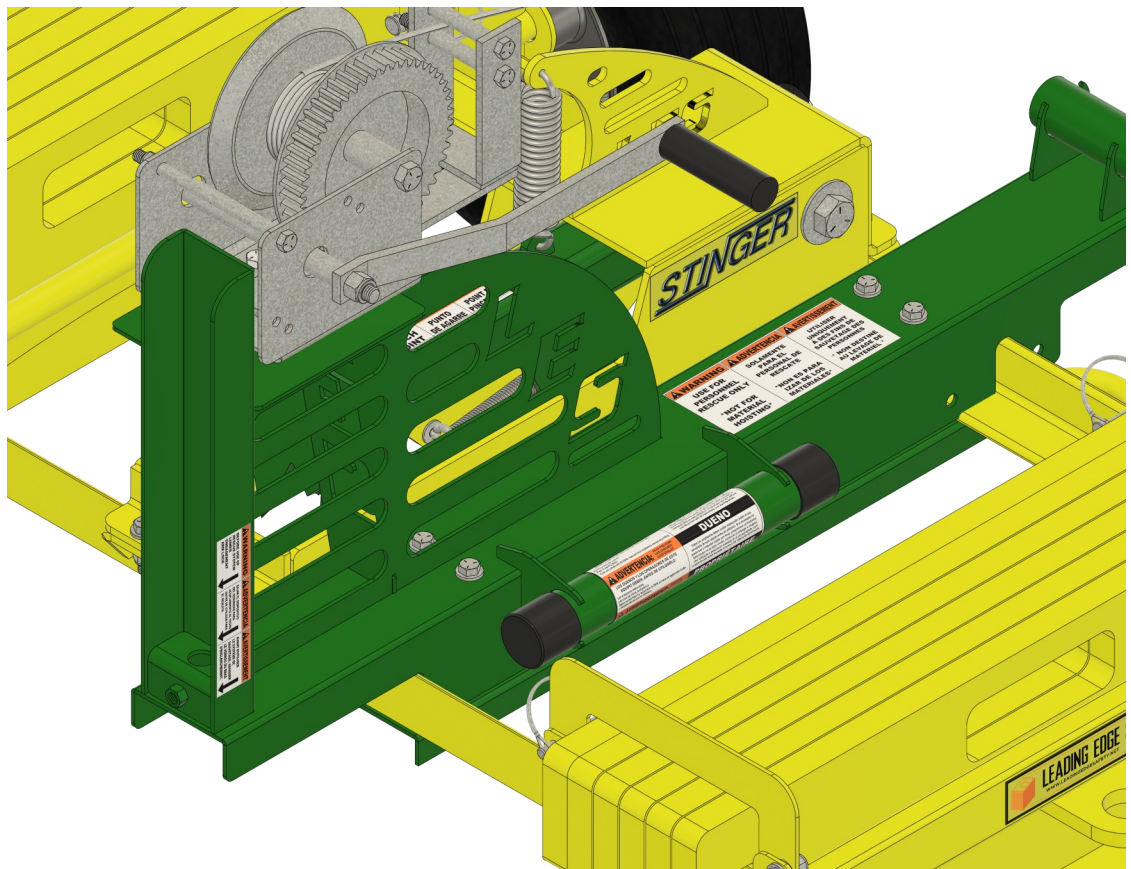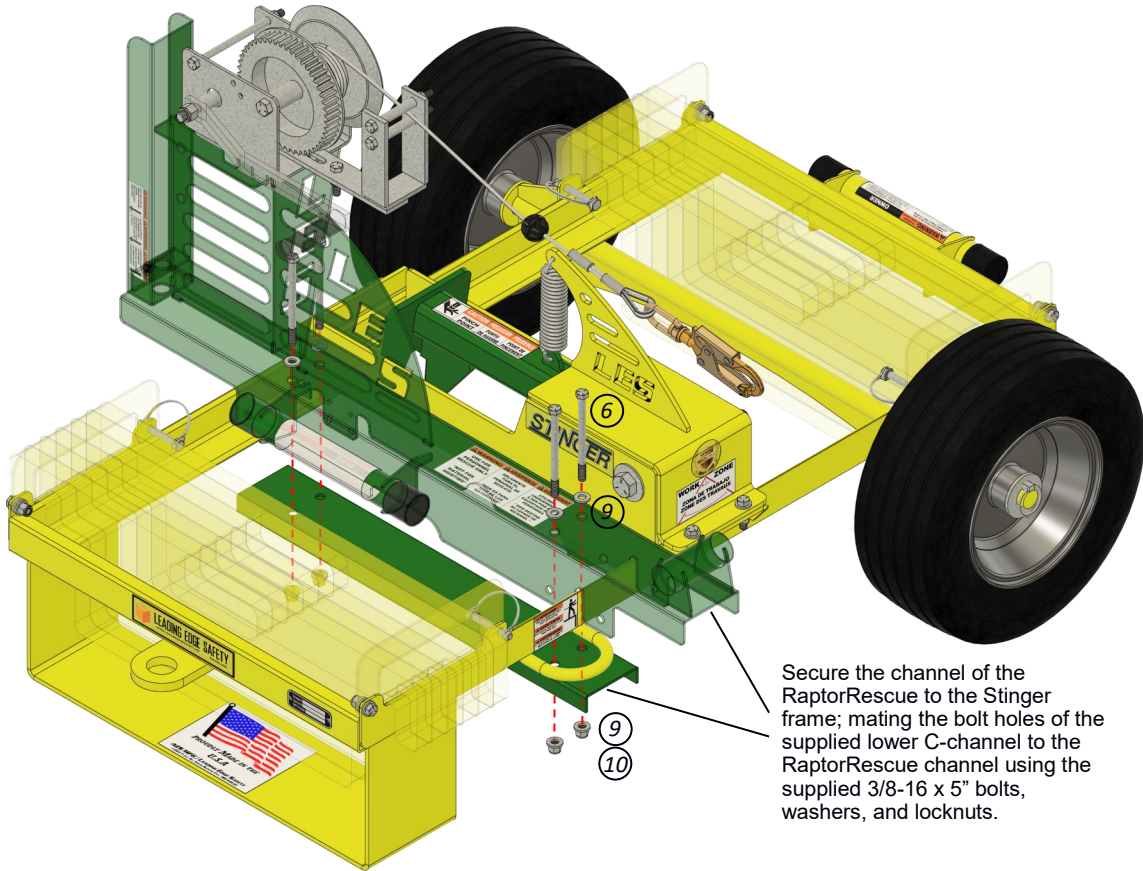

# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

## 1.0 STANDARDS AND REQUIREMENTS

- 1.1 OSHA 1910.140(c)(21) "The employer must provide for prompt rescue of each employee in the event of a fall."
- 1.2 OSHA 1926.502(d)(20) "The employer shall provide for prompt rescue of employees in the event of a fall or shall assure that employees are able to rescue themselves."

## 2.0 APPLICATIONS

2.1 Personnel Rescue Retrieval Systems, including the Raptor Rescue™ and Saber Rescue™, are designed exclusively for use with Leading Edge Safety Mobile Fall Protection Carts and shall only be used on the approved models listed below:

TRIEX R2000 SABER	STINGER R1000
-------------------------	------------------

- 2.2 Leading Edge Safety Personnel Rescue Retrieval Systems shall only be used in conjunction with approved Leading Edge Safety mobile fall protection cart and in the event of a fall and to assist with the prompt rescue of a fall victim.
- 2.3 Leading Edge Safety Personnel Rescue Retrieval Systems shall only be utilized to lower or raise no more than one person at any given time.

## 3.0 DEFINITIONS


- 3.1 **Prompt Rescue** - Rescue be performed quickly - in a time to prevent serious injury to the worker.
- 3.2 **Suspension Trauma** - also known as harness hang syndrome and orthostatic intolerance, occurs after a worker has fallen into a fall arrest harness and is suspended in a hanging position until rescue arrives. When hanging in a fall harness, the leg straps support the body's weight. During this time, the leg straps of the fall protection harness crush the femoral arteries on the inside of the legs, cutting off blood circulation. An effect which occurs when the human body is held upright without any movement for a period of time.

## 4.0 USE AND LIMITATIONS

### 4.1 Procedures for Rescue

- 4.1.1 **CALL 911 AND REPORT THE ACCIDENT BEFORE ATTEMPTING RESCUE**
- 4.1.2 Assess the situation and address any additional risks that may have been created by the fall.
- 4.1.3 Ensure personnel attempting rescue are protected from falling; utilizing an independent certified anchorage point or the fall restraint connection point on a mobile fall protection cart. **DO NOT CONNECT ADDITIONAL USERS TO THE FALL ARREST CONNECTION POINT OF THE CART.**

**IMAGE 4.1.3 - FALL RESTRAINT ATTACHMENT POINTS**

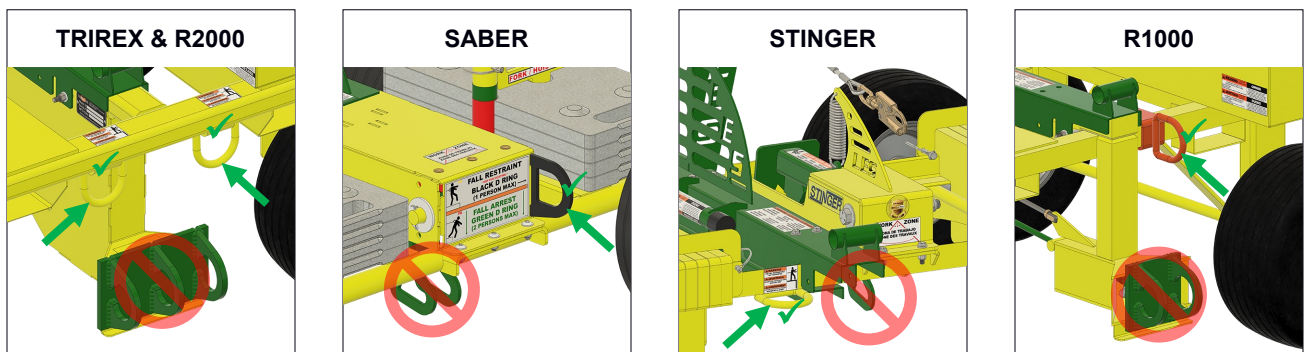


# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

4.1.4 Ensure the Engagement Arm is locked.

4.1.4.a TRIREX, R2000, SABER, STINGER, and R1000 (2011-2015 models) have a ratcheting lock system that automatically locks the claw into it's deepest point of penetration when a fall occurs.


4.1.4.b R1000 (2009 - prior models) require lowering the Rescue Engagement Arm Lock to engage the top of the claw and lock in place with the Rescue Tension Handle.

**IMAGE 4.1.4.b - R1000 ENGAGEMENT ARM LOCK**

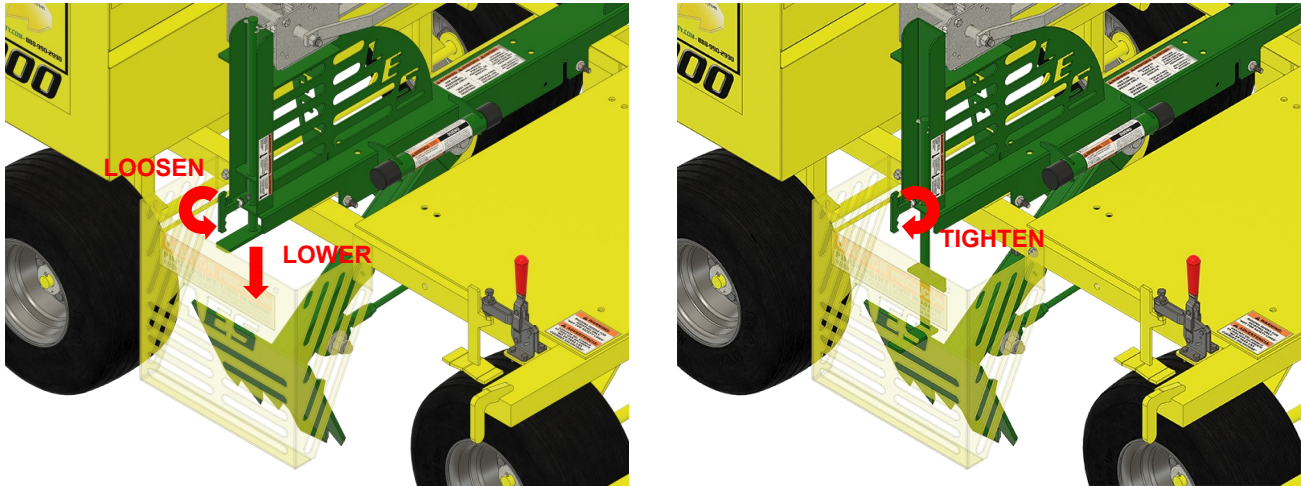

4.1.5 Release cable from the winch by turning the winch handle counterclockwise, while another worker in fall restraint keeps tension on the cable and pulls the swivel snap hook end toward the fall victim.


**IMAGE 4.1.5 - UNSPOOLING THE WINCH**

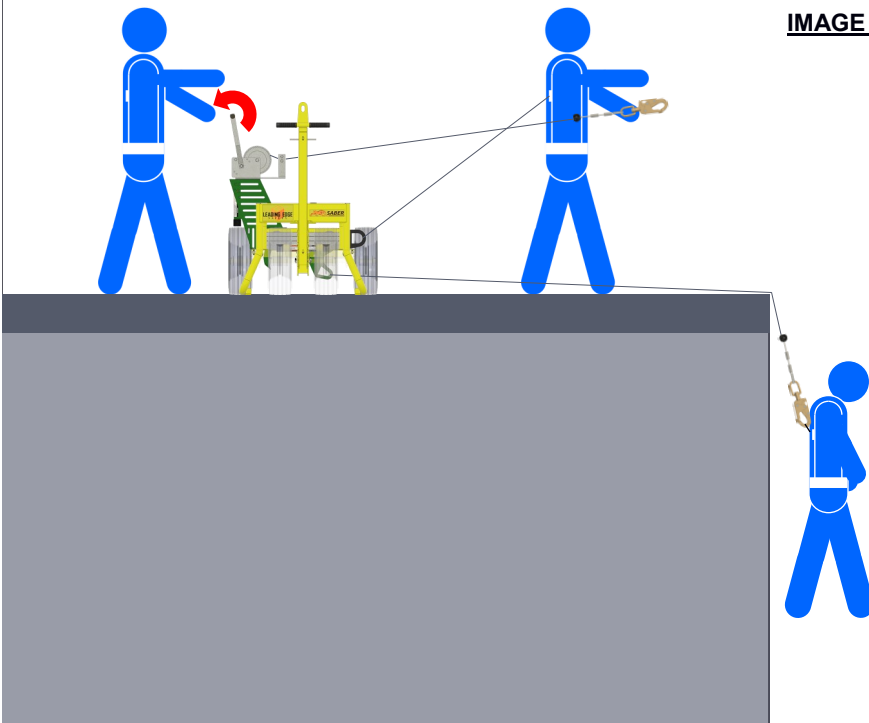

# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL


ENGLISH

**4.1.6** Secure the winch swivel snap hook to the nylon tether on the carabiner attached to the rescue pole.

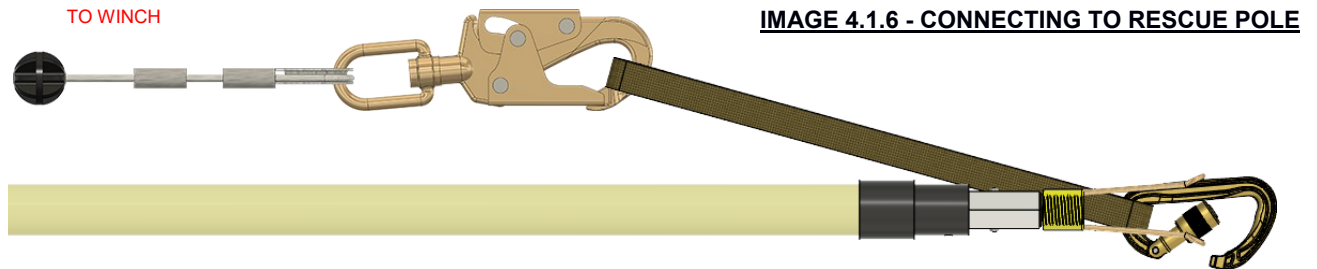


**4.1.7** Connect the rescue pole carabiner to the dorsal D-ring on the fall victim's harness. Once the carabiner is connected fall victim's dorsal D-ring, pull the rescue pole upward to release the carabiner from the rescue pole.

**IMAGE 4.1.7a**  
**CONNECTING TO FALL VICTIM**

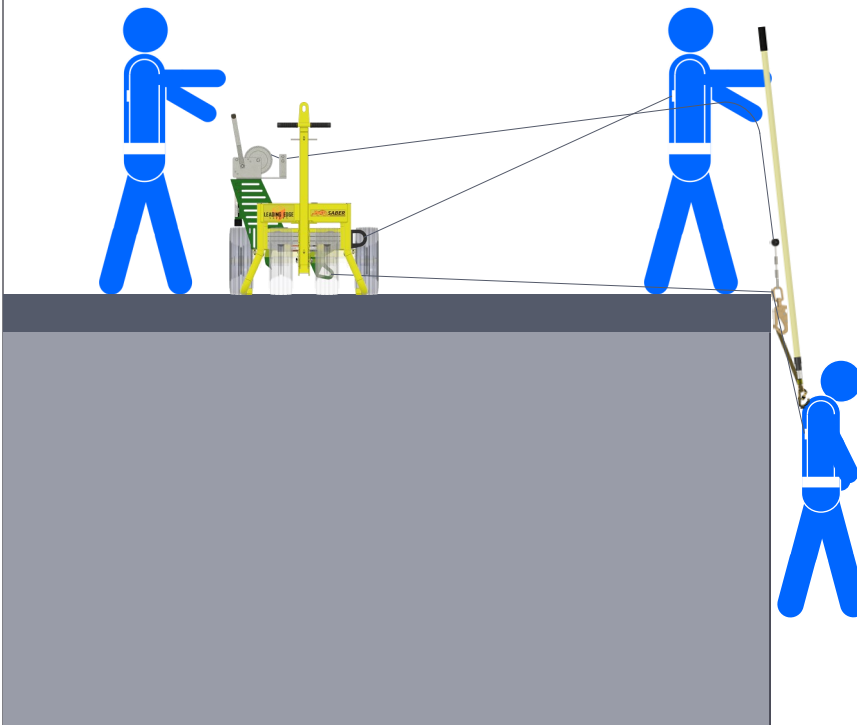


**IMAGE 4.1.7b**  
**RELEASING CARABINER**

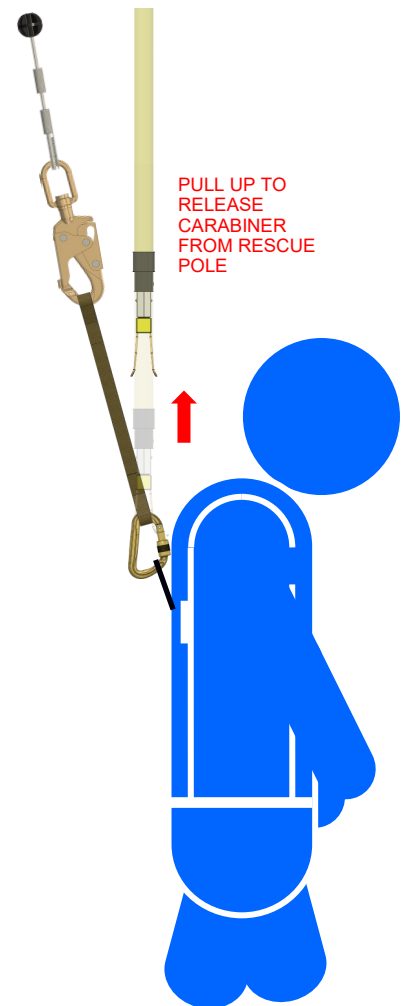


# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

**4.1.8** Turn the winch handle clockwise to take up the slack in the winch cable and raise the fall victim to the edge of the walking surface. Remove the fall arrest swivel snap hook from the fall victim's dorsal D-ring.

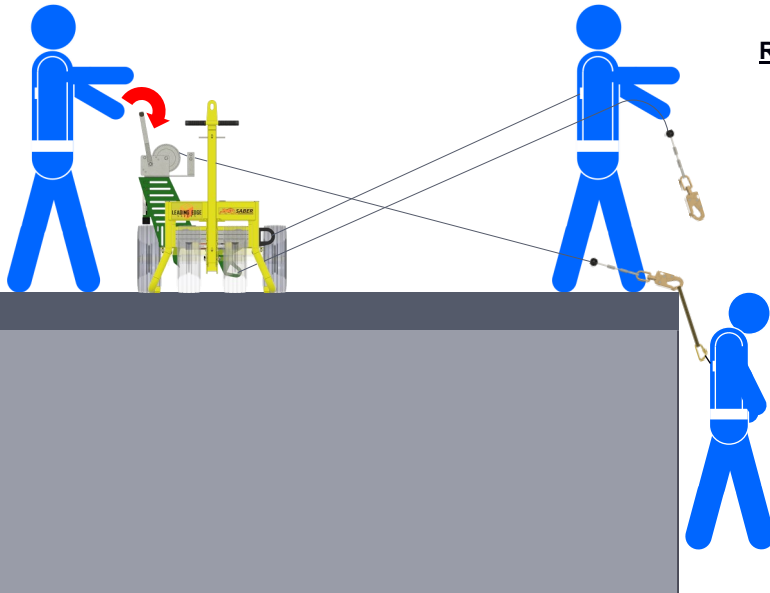


**IMAGE 4.1.8**  
**RELEASING FALL VICTIM FROM THE**  
**MOBILE FALL PROTECTION**

**4.1.9** Turn the winch handle counterclockwise to lower the fall victim safely to the ground.

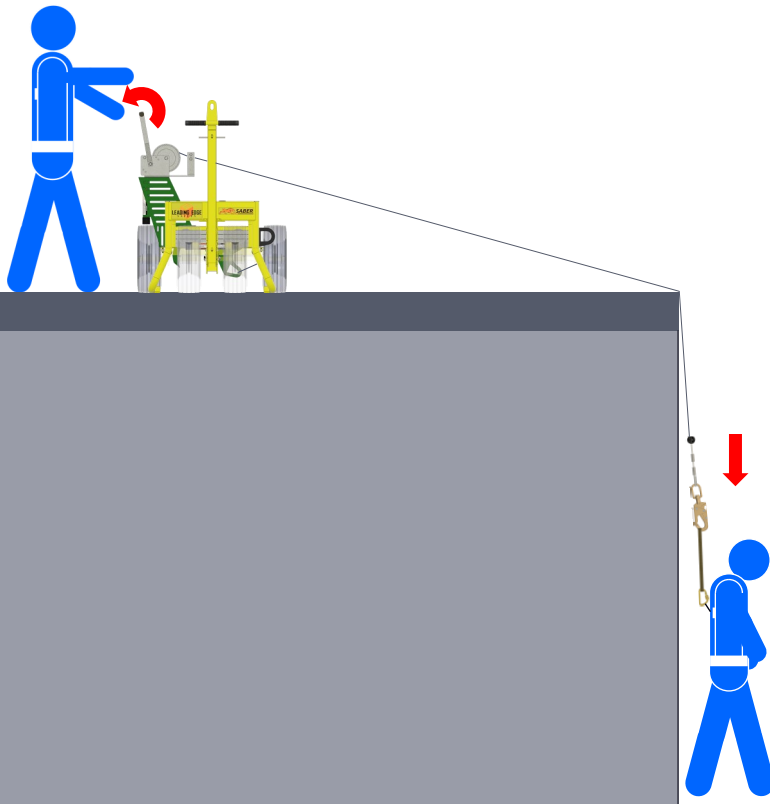

**IMAGE 4.1.9**  
**LOWERING THE FALL VICTIM**

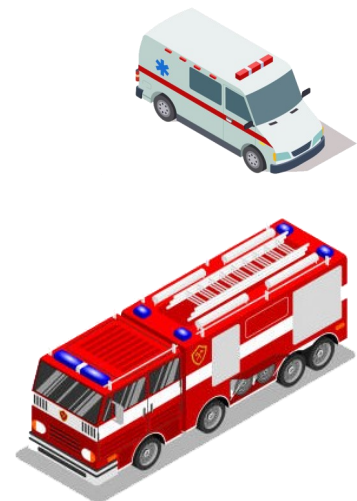

# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

## 4.2 Capacity

4.2.1 Do not exceed the working load limit of 310 lbs.

4.2.2 **FOR PERSONNEL USE ONLY.**

## 5.0 GENERAL SAFETY

- 5.1 Ensure all users have read and understand the instruction manual for both the mobile fall protection unit and the rescue system prior to use.
- 5.2 Always uses caution and common sense when operating this equipment. Additional workers may be needed to safely rescue a fall victim.
- 5.3 This equipment shall not be operated or used by persons whose ability or alertness is impaired by fatigue, intoxication, prescription or illegal drugs, or any other physical or mental cause that may expose the user or others to injury.
- 5.4 Always wear proper Personal Protective Equipment.
- 5.5 Keep hands and feet clear of moving parts.
- 5.6 Do not operate the unit while wearing baggy clothing.
- 5.7 Do not use the unit near electrical lines.
- 5.8 Do not use this equipment on wet, slippery, or icy substrates.
- 5.9 **DO NOT USE DAMAGED EQUIPMENT OR EQUIPMENT THAT HAS BEEN MODIFIED IN ANY WAY.**

## 6.0 BEFORE EACH USE

- 6.1 Before using this unit, a rescue plan and procedure in accordance with OSHA Standards must be in place to ensure prompt rescue in the event of a fall.
- 6.2 Inspect the unit for any damage. A maintenance log has been provided in the manual that may be copied and used to track inspections, damage, and repairs.
  - 6.2.1 Ensure the Personnel Rescue Retrieval System is properly secured to the Mobile Fall Cart.
  - 6.2.2 Check winch for freedom of movement by turning the winch handle in both clockwise and counterclockwise directions. A ratcheting sound will only be heard during clockwise winding.
  - 6.2.3 Check the swivel snap hook and ensure proper opening, closing, and locking of the gate.
  - 6.2.4 Check for loose, bent, or damaged parts.
  - 6.2.5 Check for corrosion on entire unit.
  - 6.2.6 Ensure all safety labels are present and fully legible. (*Reference parts list pages 5-8*)
  - 6.2.7 **DO NOT USE DAMAGED EQUIPMENT OR EQUIPMENT THAT HAS BEEN MODIFIED.**



# PERSONNEL RESCUE RETRIEVAL SYSTEMS INSTRUCTION MANUAL

E  
N  
G  
L  
I  
S  
H

## INSPECTION AND MAINTENANCE LOG

**PLEASE COPY THIS LOG, FILL IT OUT BEFORE EACH USE, AND KEEP IT IN YOUR RECORDS.**

EQUIPMENT MODEL #: \_\_\_\_\_

EQUIPMENT SERIAL #: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_

**INSPECTION DATE:** \_\_\_\_\_

Inspection Item	Corrective Action Needed?		Maintenance Performed
	Yes	No	
Properly installed and secured to mobile fall cart	Yes	No	_____
Inspected By: _____			_____
Winch operates correctly	Yes	No	_____
Inspected By: _____			_____
Swivel snap hook Opens, closes, and locks properly	Yes	No	_____
Inspected By: _____			_____
Loose, bent or damaged parts	Yes	No	_____
Inspected By: _____			_____
Corrosion on unit	Yes	No	_____
Inspected By: _____			_____
Warning labels in place & legible (ref pages 5-8)	Yes	No	_____
Inspected By: _____			_____
Other damage or modifications	Yes	No	_____
Inspected By: _____			_____



Copyright © 2024 by Leading Edge Safety, LLC  
1345 Taney, North Kansas City, MO 64116  
[www.LeadingEdgeSafety.net](http://www.LeadingEdgeSafety.net)

PRINTED IN THE UNITED STATES OF AMERICA