


USER MANUAL

Hybrid Warm and Cool Mist Humidifier
Model No: RE5LB

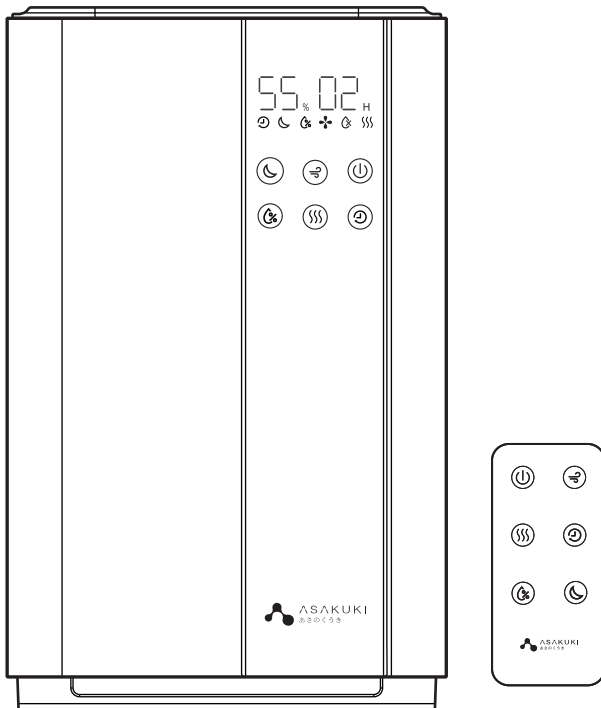


Please read carefully before use and save the instructions.
Questions or Concerns?
Please contact us: support@asakuki.com

Package

Package Contents	1
Specifications	1
Safety Information	2
Getting to Know Your Humidifier	3-4
Getting Started	5
FILLING & REFILLING	6
Using Your Humidifier	7-11
Cleaning Maintenance	12
Descaling the Humidifier	13
Troubleshooting	14
Warning & Attention	15
Customer Service	16

Package Contents

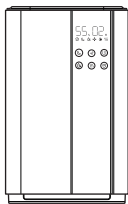


1 x Hybrid
Ultrasonic Humidifier



1 x Remote
Control



 
1 x Cleaning Brush
(Under the machine base)




1 x 3V CR2025
Battery (Pre-Installed)



1 x User Manual

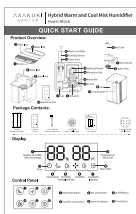

1 x Quick Start Guide

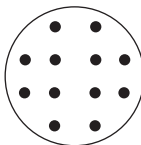

3 x Absorption Pads
(1 Pre-Installed)

Specifications

Product	HUMIDIFIER
Model Number	RESLB
Voltage	AC100-240V, 50/60Hz
Rated Power	23W (Cool Mist) /230W(Warm Mist)
Suitable Area	Bedroom/Large Room
Cool Mist Output	160-320mL/H
Warm Mist Output	220-500mL/H
Tank Capacity	5L/1.32gal
Capacity	5L
Net Weight	2.5kg/5.5lbs
Product Size	200*225*315 mm/7.8*8.9*12.4 in

SAFETY INFORMATION

To reduce the risk of fire, electric shock, or other injury, follow all instructions and safety guidelines.







General Safety

- Only use the humidifier as described in this manual.
- Place the humidifier and cord so that the humidifier will not be knocked over.
- When not in use, turn the humidifier off and disconnect from power source by removing the plug from the outlet.
- Do not overfill the water tank, as this may cause electric shock.
- Do not use the humidifier in wet environments.
- Keep the humidifier out of reach from children.
- Do not open the base or remove the water level sensor for self-servicing.
- Always unplug the humidifier from the power outlet before cleaning the humidifier.
- Always make sure the humidifier is placed on a flat, level surface before operation.
- Only fill the water tank with purified or distilled water. Never fill the water tank with any other liquids unless directed by the manual.
- Do not place the humidifier near sources of heat, such as stovetops, ovens, or radiators.
- Do not place the humidifier directly on floors, carpets, or rugs. Only place the humidifier on water-resistant surfaces.
- Do not cover the nozzles while the humidifier is on. Doing so may damage the humidifier.
- We recommend to remove the water tank from the base before moving the humidifier.
- Do not immerse the humidifier base, power cord, or plug in water.
- Do not place foreign objects into the humidifier's base or water tank.
- Do not handle the power cord or plug with wet hands. Keep the plug and power cord away from liquids.
- This humidifier has a polarized plug (oneprong is wider than the other), which fits into a polarized outlet only one way. This is a safety feature to reduce the risk of electric shock. If the plug does not fit, reverse the plug. If it still does not fit, do not use the plug in that outlet.


Caution: Risk of Leaks and Electric Shock

- Do not add essential oils, supplemental water treatment liquids, or third-party water filters into the water tank or base. This will damage the humidifier and cause leaks. Only add essential oils to the aroma pad.
- If the humidifier is damaged or is not functioning properly, stop using it and contact Customer Support immediately.


GETTING TO KNOW YOUR HUMIDIFIER

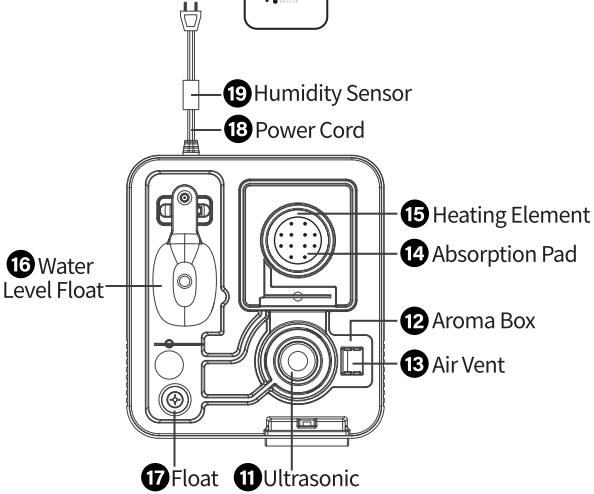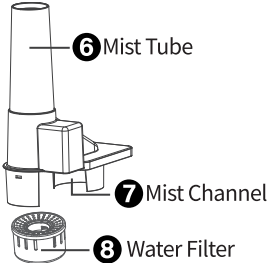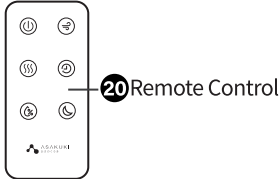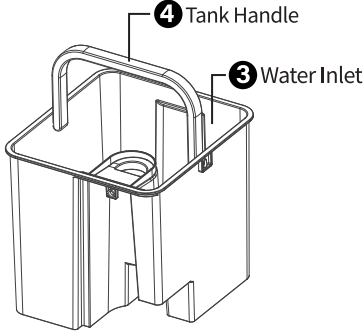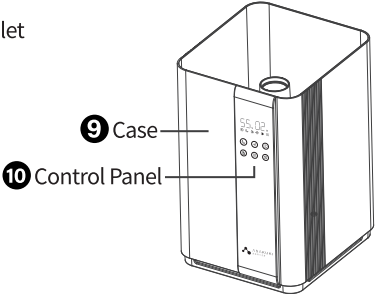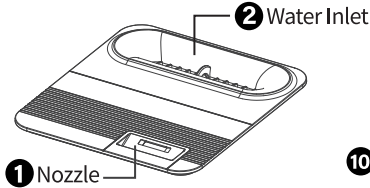


Display

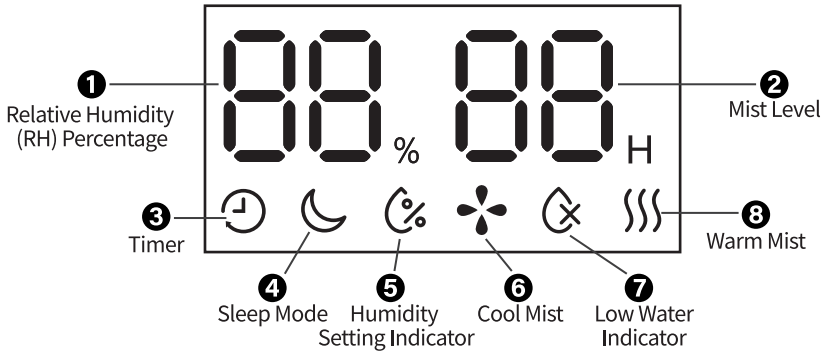

Control Panel

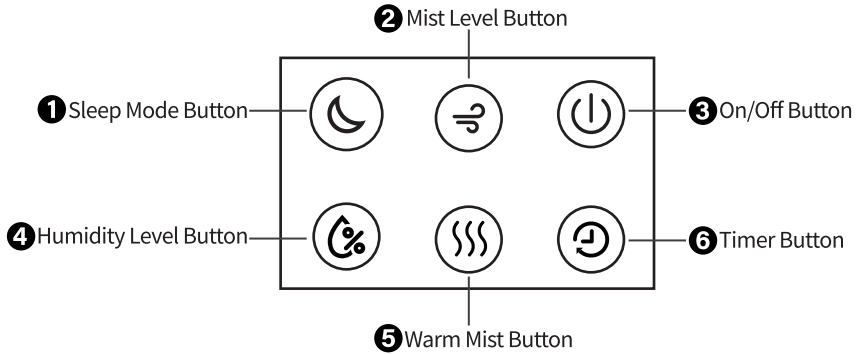

Remote Control

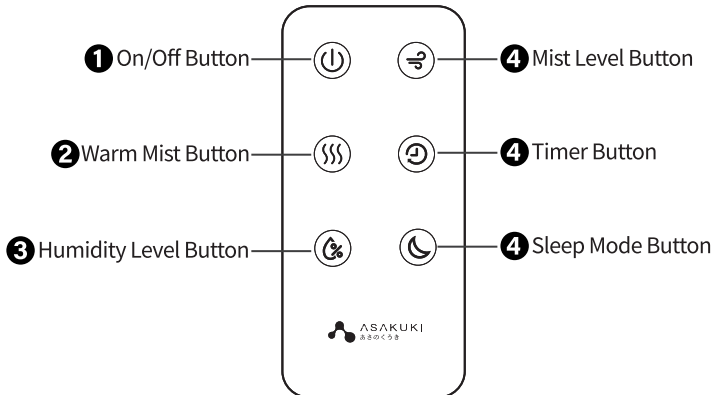

Getting Started

1. Remove all packaging.
2. Clean the water tank and water tank cover before first use.


Note: Check to make sure that the water filter, mist tube and tank cover is correctly in place. If not, take the part to secure it in place.

3. Choose a hard, flat location for the humidifier at least 12 inches / 30 cm away from any walls. The surface must be water-resistant.

• **Do not** place the humidifier directly on floors, carpets, or rugs.

4. Mist should be directed away from walls, furniture, bedding, and appliances.


NOTE: The humidity sensor is on the power cord at the back and the air intake is under the bottom of machine, keep the humidifier away from the wall will also ensure that the sensor and air intake are working properly.

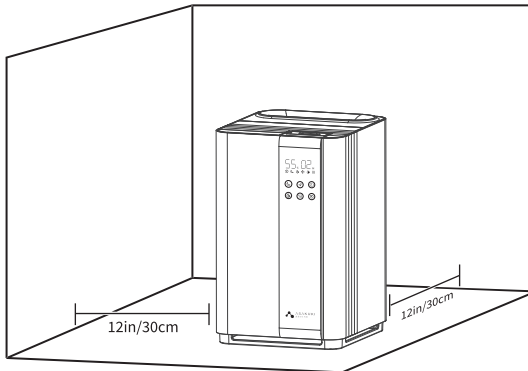

Filling&Refilling

Note: Make sure the water tank is clean before filling.








1. Remove the water tank cover.
2. Use the handle to remove the tank from the base. Fill the tank with room temperature water. Do not fill with hot water and over the max line.

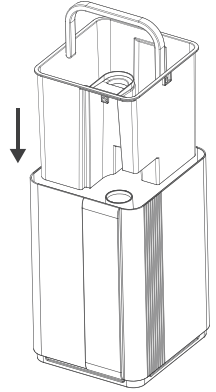

Note:

- You can only add water to the water tank, not to the air outlet, air duct, and base directly, which will cause damage to the machine.
- We recommend using purified and distilled water to fill the tank.
- Using tap water may result in a white dust (dried minerals) on surfaces.

3. Place the tank back on the base. Note that the water tank and mist tube need to be aligned, otherwise the water tank cannot be completely placed inside the machine.

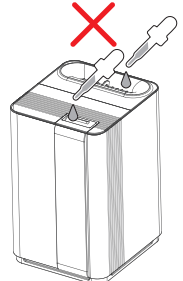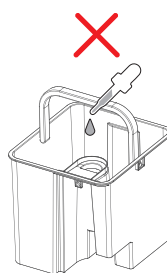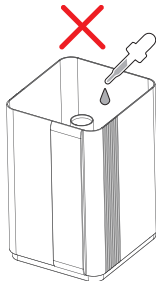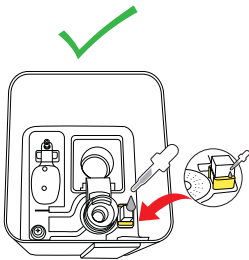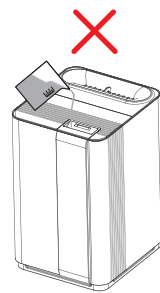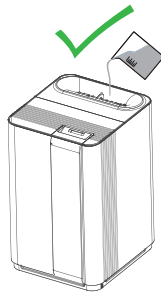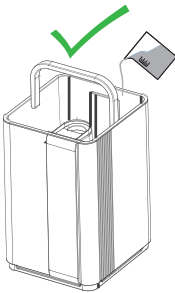

Using Your Hybrid Humidifier

1. Plug in the humidifier. The humidifier will light up, then turn off.
2. Press the mist level button to turn your humidifier on.
The humidifier will start misting.
Note: If there is no water in the tank, the display will show red low water icon, and the humidifier will turn off. Fill the water tank.
3. Press mist level button repeatedly to cycle through mist settings: Low, Medium, and High.
4. Optionally, use the buttons or the remote control to turn on warm mist, activate Sleep Mode to off the display.
5. When your room has reached your preferred humidity level, turn the humidifier to a lower setting, or turn it off. A comfortable humidity level is between 40% and 60%.
6. Press on/off button to turn your humidifier off.

NOTE:

- 1.Regarding the accumulation of water in the base of the machine, the humidifier uses ultrasonic atomizing vibration to disperse the liquid water into mist. The water tank is just a water storage tool. All are normal accumulation of water, please use it with no worries.
- 2.Regarding the accumulation of water on the desktop around the machine, it means that the humidity in the room is too high, please appropriately reduce the speed of mist.
- 3.The humidifier has warm mist function, please do not touch it during the heating process of the base.

Functions:

Note: The same controls are also on the included remote control.

⏻ On/Off Button

- Turns the humidifier on/off.

☁ Mist Level Button



- Cycles through mist level settings: low, medium and high.

🌀 Warm Mist Button

- Turns on warm mist function, as it is to heat the water to generate warm mist, touch again to turn off the warm function.

Caution:

- Since our machine heats the water to 100° boiling, there will be some noises under warm mist but it's normal. It is recommended not to use it during sleep and night, try to use it only during the day, if you think it is too noisy, please put the machine a certain distance away to use.
- Mist may be hot. Do not place your bare hands, face, or other exposed skin over the nozzles and do not touch the heating element while using warm mist.
- The humidifier may take 7-10 minutes to warm up before producing warm mist.
- The warm mist function can be used during Sleep Mode.

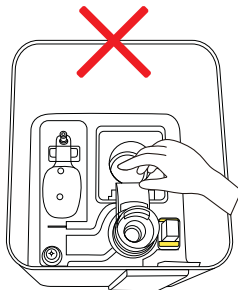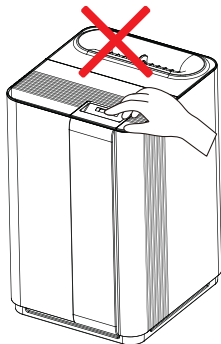

Ⓢ Humidity Level Button

- You can customize the humidity level that the humidifier will maintain. The humidifier will automatically stop misting when the room reaches the target humidity level.

1. Press repeatedly to set a humidity level between 40% and 90% Relative Humidity (RH).

2. The display will flash 5 times to confirm your selection, then return to showing the current humidity percentage in the room.

Note:

Once the humidity of the environment reaches the humidity you set, the humidifier will automatically lower the level of misting.

⌚ Timer Button

- You can set a timer between 1 and 12 hours

☾ Timer Button

- The display will turn off, and it will keep the original mist level to run. To turn the display back on, press any button except on/off button.


Remote Control

The remote control can be used to control any functions of the humidifier from a distance. It must be within 16 ft / 4.8 m of the humidifier to work.


Note:

1. Remove the plastic tab from the remote control's battery compartment before using.

2. Replace the old battery with a new 3V CR2025 battery if the power is out.

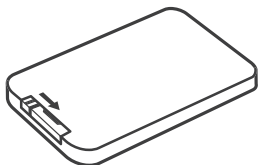

Pinch

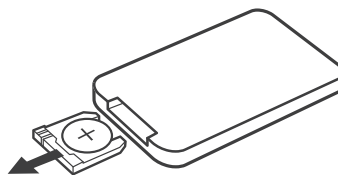

Pull out


Aromatherapy Function

Your humidifier can be used for aromatherapy.

1. Take out the yellow aromatherapy box attached to the air vent, which is at the bottom of the mist tube.
2. Put 3-5 drops of essential oils in the aroma box.
3. Place the aroma box back to the original place.
4. Turn on the humidifier. The humidifier will automatically diffuse aroma when used.


Note:

- Do not add essential oils, water treatment liquids, or third-party water filters into the water tank or base chamber. Only add essential oils to the aroma box.
- The aroma box can be cleaned and reused after diffusing essential oils

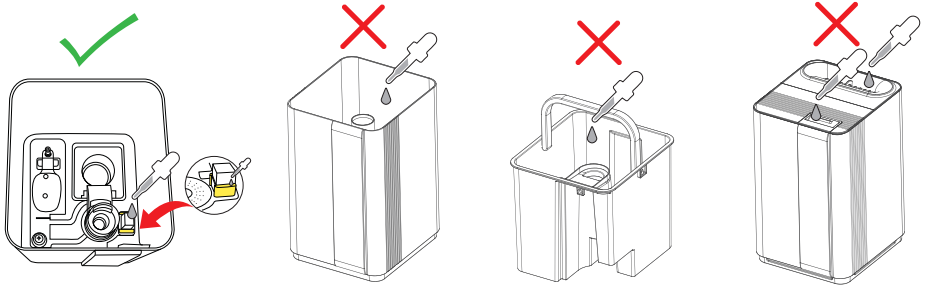

Absorption Pads

The mineral absorption pads help reduce mineral buildup (scale) inside the humidifier, especially on the heating element.

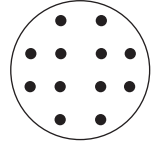

Memory Function


The humidifier will remember your settings for Mist Level, Humidity Level Warm Mist settings when turned off and will resume those settings when turned back on.

- The humidifier will not remember Sleep or Timer settings, and the display will automatically turn back on when the humidifier is turned back on.

IMPORTANT TIPS

Your humidifier must have the correct level of water in the base chamber to work properly. If there is too much water in the base chamber, the humidifier cannot create mist.

- Do not place the humidifier on an inclined surface.
- Never pour water directly into the base chamber. Only add water to the water tank. The humidifier will automatically release the correct amount of water into the base chamber.

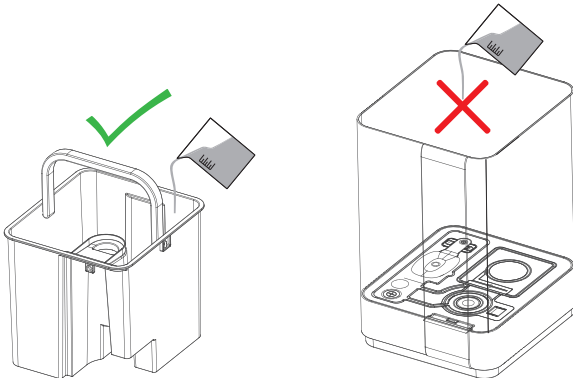

Cleaning & Maintenance

Note:

- All maintenance should be done on a water-resistant surface, such as a kitchen counter.
- Change the water daily to avoid bacteria growth.
- Use a tissue or cloth to clean the nozzles regularly.
- If not using the humidifier for 1 week or longer, do not leave water inside. Clean and dry the humidifier instead.
- Never immerse the base in water or liquid. Do not place any part of the humidifier in a dishwasher.
- Do not use detergents to clean the humidifier
- You should clean your humidifier every week, and when you're ready to store it.

1. Unplug the humidifier

2. Remove and rinse the water tank cover. Remove the water tank from the base. Pour out any water from the tank and base chamber. If you've used the warm mist setting, use caution in case the water is still hot.

3. Remove the water filter, absorption pad, and aroma box from the base.

4. Rinse all parts (except the base and machine body) with room temperature water.

Note:

- When pouring out water, hold down the float to ensure that it does not fall out of the base chamber.
- Ensure the mist tube is properly installed back to the right position.
- Avoid to let water into the air vent when pouring.

Descal the Humidifier

(Remove mineral buildup, scale, residue)

1. Remove the water tank, mist tube, water filter and absorption pad, aroma box from the base.
2. Fill the tank with 2 cups of distilled white vinegar (citric acid is ok) and 2 cups of water.
3. Replace the tank cover and swish the vinegar around the tank.
4. Place the tank on the base and soak for 15–20 minutes. Vinegar will drain into the base chamber and loosen scale (mineral buildup) in the tank and in the base chamber (including the transducer and float).
5. Remove the tank, remove the tank cover, and pour out any vinegar.
6. Place the mist tube, water filter, aroma box in a container. Fill with enough vinegar to cover them. Soak for 15–20 minutes.
7. Use a soft cloth and the included cleaning brush to remove scale from all parts.
8. Rinse all parts until any vinegar smell is completely gone.

Disinfecting the Humidifier

1. Fill the water tank with 1 teaspoon of bleach and 1 gallon of clean water. Reseal the water tank, then gently shake the water tank to ensure all of the sides are coated with the mixture.
2. Put $\frac{1}{4}$ teaspoon of bleach and 1 cup of clean water into the base.
3. Allow the solutions in both parts to sit for 30 minutes.
4. Pour out the mixtures from both the water tank and base. Rinse both parts thoroughly under clean, running water.
5. Allow the water tank and base to completely dry before reassembling the humidifier.

Troubleshooting

Problems	Causes	Solutions
Unable to turn on or abnormal shutdown	The power plug is not inserted properly	Plug in the power plug and restart
The water shortage indicator light is on	water tank is short of water	Clean the water tank and the base, and refill the water
	The water tank/mist guide pipe/is not installed properly, resulting in the failure of the launching float and the lack of water in the base	Check whether there is water in the water tank but no water in the base Check that all parts are damaged and installed correctly, reinstall and add water
	The water tank has been removed	Put the water tank back into the machine/restart the machine
There is water in the water tank to note "water shortage"	There is a object stuck on the magnetic ring float, so that the magnetic ring cannot float normally There is a object stuck on the float, so that the machine cannot be launched normally	Check whether there is any object in the sink, and take out the plastic or sponge used for packaging
Turn on the heating function but the mist is not hot	The time to turn on the warm function is not long enough	Check whether the heating function is turned on first, and then check whether the mist is hot after half an hour
No mist coming out of vent	Humidifier is not plugged in	Plug the humidifier into a powered electrical outlet
	Humidifier is not turned on	Press to turn on the humidifier
	No water in tank Water level is low	Add at least 2 cups of clean water into the Water level is low. water tank
	unit needs to cleaning	descale the inner base
Humidifier makes a loud or unusual noise	Water tank does not fit properly	Turn off and unplug the humidifier, then align the water tank cap with its matching opening in the inner chamber
	Water level is low	Add at least 2 cups of clean water into the water tank
	Resonates with the resting surface, Humidifier is not level	Place on a solid surface or on the ground
	There are objects in the PTC heating area There are objects in the PTC heating area	Clean the objects Turn off, unplug, and stop using the humidifier Contact Customer Support
Humidifier produces an unusual smell	Humidifier is new	Remove the water cap, and place the water tank in a cool, dry place for 12 hours
	Residual smell from diffusing essential oil on the aroma pad	Remove the aroma pad, rinse it under clean water, and allow it to dry
	Water is dirty, or water has been in the tank for a long time	Clean the humidifier
Water is coming out from the base	ater tank is not positioned correctly	contact customer support
Mist comes out from the other place of the tank cover	Tank cover is not closed well	Replace the tank cover correctly
Relative Humidity (RH) level displayed is incorrect	Room is larger than the effective range of the humidifier	Move the humidifier to a room that is within the effective range of 215-505ft ² (20-47 m ²)
	Relative humidity in the room is too high	If the relative humidity in the room is over 68%, set the humidifier to the lowest mist setting or turnoff the humidifier
	Moisture has built up inside of the humidity sensor	Turn off the humidifier and allow the humidity sensor to air dry before using again
	Humidity sensor is broken or defective	Contact Customer Support
White dust appears around the humidifier	Water being used has a high mineral content	Use distilled water to fill the humidifier
	Humidifier was not properly cleaned after last use	Clean the humidifier.Remember to clean the water tank at least once a month
Puddle of water forms below the base	Mist setting is too high	Switch the humidifier to a lower mist setting
	Room is not well-ventilated	Open a window to ensure proper airflow for your humidifier, or move the humidifier to a more well-ventilated room

If your problem is not listed, please contact Customer Support

Warning

- Do NOT add additives into water tank (can't add essential oil , fragrances).
 - Do not allow liquids such as water or (flammable) detergent to enter the bottom part area of the product to avoid electric shock or fire.
 - Do not immerse the product in water or any other liquid or (flammable) detergent to avoid electric shock or fire.
 - The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
 - Children being supervised not to play with the appliance.
- Instructions include details regarding filling, cleaning and descaling.
- Unplug the appliance during filling and cleaning.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
 - Children shall not play with the appliance.
 - Cleaning and user maintenance shall not be made by children without supervision.

Customer Service

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

✓ 2 Year Limited Warranty

📞 Lifetime Technical Support

✉ support@asakuki.com

🌐 www.asakuki.com

Manufacture: Chongqing ChuangHong DianZi ShangWu YouXian Gongsì

Address: 1 zhuang 11-3, jin kai da dao 1228 hao, bei bu xin qu,

Chongqing, 401120, China

WEEE-Reg.-Nr. DE 41980660



EU Responsible Person: C&E Connection E-Commerce (DE) GmbH

Address: Zum Linnegraben 20, 65933, Frankfurt am Main, Germany

Tel: +49 017 46508451

E-mail: info@ce-connection.de



UK Responsible Person: APEX CE SPECIALISTS LIMITED


Address: 89 Princess Street, Manchester, M1 4HT, UK

Contact: Wells

Tel: +441616371080

E-mail: info@apex-ce.com

Made in China

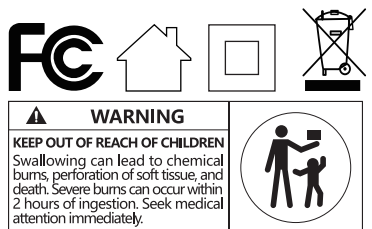



Clean the water tank every 3 days

Nettoyer le réservoir d'eau tous les trois jours

Reinigen Sie den Wassertank alle 3 Tage

-
- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
 - Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the oil diffuser down. If the oil diffuser output volume cannot be turned down, use the oil diffuser intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
 - Unplug the appliance during filling and cleaning.
 - Never leave water in the reservoir when the appliance is not in use.
 - Empty and clean the oil diffuser before storage. Clean the oil diffuser before next use.

-
- Sachez qu'un taux d'humidité élevé peut favoriser la croissance d'organismes biologiques dans l'environnement.
 - Ne laissez pas la zone autour de l'humidificateur devenir humide ou mouillée. En cas d'humidité, réduisez le volume de sortie du diffuseur d'huile. Si le volume de sortie du diffuseur d'huile ne peut pas être réduit, utilisez le diffuseur d'huile par intermittence.
 - Ne laissez pas les matériaux absorbants, tels que la moquette, les rideaux, les draperies ou les nappes, devenir humides.
 - Débranchez l'appareil durant le remplissage et le nettoyage.
 - Ne laissez jamais d'eau résiduelle dans le réservoir lorsque l'appareil n'est pas utilisé.
 - Videz et nettoyez le diffuseur d'huile avant de le ranger.
 - Le diffuseur d'huile doit être stocké sec et propre, jusqu'à sa prochaine utilisation.

- Bitte beachten Sie, dass eine hohe Luftfeuchtigkeit das Wachstum von biologischen Organismen in der Umgebung fördern kann.

- Achten Sie darauf, dass der Bereich um den Luftbefeuchter nicht feucht oder nass wird. Sollte doch Feuchtigkeit auftreten, drehen Sie die Leistung des Öldiffusors herunter. Wenn die Leistung des Öl Diffusers nicht reduziert werden kann, verwenden Sie den Öl Diffuser mit Unterbrechungen. Achten Sie darauf, dass saugfähige Materialien wie Teppiche, Gardinen, Vorhänge oder Tischdecken nicht feucht werden.
- Ziehen Sie während des Befüllens und Reinigens den Netzstecker.
- Lassen Sie niemals Wasser im Behälter stehen, wenn das Gerät nicht in Gebrauch ist.
- Entleeren und reinigen Sie den Öl Diffuser vor der Lagerung gründlich. Reinigen Sie den Öl Diffuser vor jedem Gebrauch.



Warning: Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can grow in the water reservoir and be blown in the air causing very serious health risks when the water is not renewed and the tank is not cleaned properly every 3 days.

Avertissement : des micro-organismes qui peuvent être présents dans l'eau ou bien dans l'environnement dans lequel l'appareil est utilisé ou stocké. Ils peuvent notamment se développer dans le réservoir d'eau et être projetés dans l'air en provoquant des risques sanitaires très graves. Ces phénomènes se produisent lorsque l'eau n'est pas renouvelée et que le réservoir n'est pas nettoyé correctement tous les trois jours.

Warnung: Mikroorganismen, können im Wasser oder in der Umgebung, in der das Gerät benutzt oder gelagert wird, vorhanden sein. Diese können im Wasserbehälter wachsen und in die Luft geblasen werden, was zu ernsthaften Gesundheitsrisiken führen kann, wenn das Wasser nicht erneuert und der Behälter nicht alle 3 Tage ordnungsgemäß gereinigt wird.