



## SELECTING PROPANE

If you want to start your generator using propane, follow steps 1-3, then continue with the remaining steps 4-8 below.

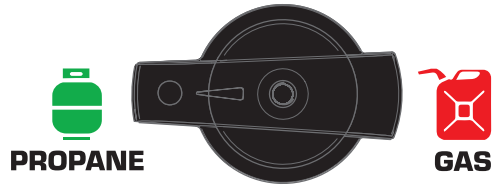


**Step 1:** Turn the fuel selection knob to PROPANE.

**Step 2:** Connect the included propane line to the generator inlet located on the panel.

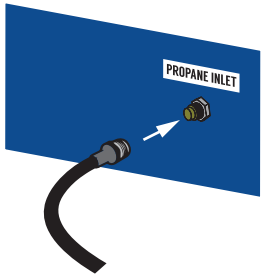


**Step 3:** Connect the included propane line to the propane tank.

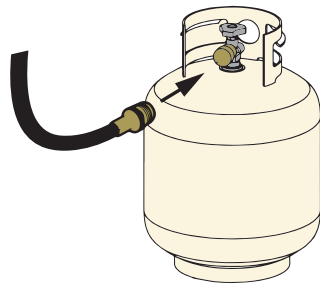

OR


## SELECTING GASOLINE

If you want to start your generator using gas, follow steps 1-3, then continue with the remaining steps 4-8 below.

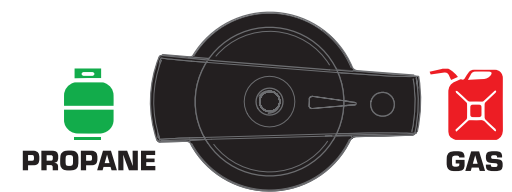


**Step 1:** Turn the fuel selection knob to GAS.

**Step 2:** Check the generator for gasoline. Add as needed.

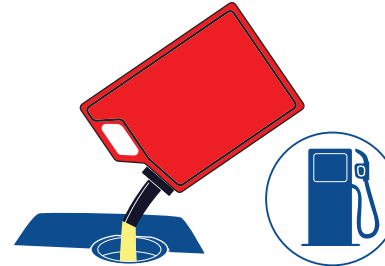


**Step 3:** Turn fuel valve on by rotating valve counter clockwise.

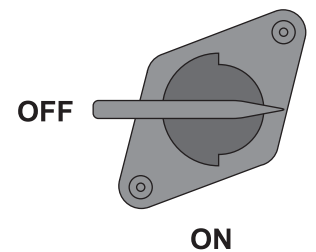


## CONTINUE STARTUP STEPS WITH EITHER FUEL


**Step 4:** Switch the main breaker to OFF.

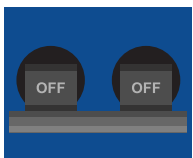

**Step 5:** Switch the battery switch to ON.

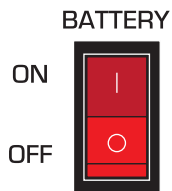


**Step 6:** Switch the idle control switch to OFF.

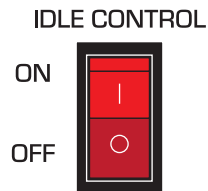

**Step 7:** Move the choke lever to the CLOSED position.




**Step 8:** Flip the switch up to the "START" Position. When the engine starts, allow the engine switch to return to the "RUN" position.

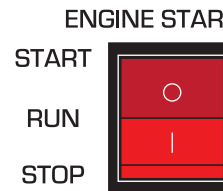

**Step 9:** Move the choke lever to the OPEN position.




**Step 10:** Once the generator is running, turn the main breaker to ON and plug devices in.

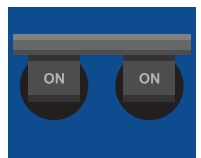

## ASSEMBLING YOUR GENERATOR

**Step 1:** Remove the generator from the box and flip it over, so you can see the underside of the generator.

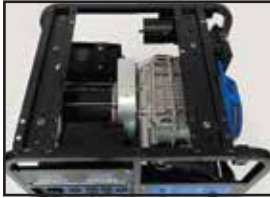

**Step 2:** Remove the shipping brace using the included wrenches. Braces can be discarded.



**Step 3:** Secure the support legs to the frame with the provided lock nuts.



**Step 4:** Place the smallest washer onto the axle. Insert axle through the frame and secure with the provided nut.



**Step 5:** Place one of the large washers onto the axles.



**Step 6:** Place the wheels onto the axles.



**Step 7:** Place a large washer on the axle.



**Step 8:** Place the cotter pin through the hole in the end of the axle and bend it out to secure the wheel.



**Step 9:** Attach the handles to the brackets on the frame using the provided bolts and nuts.



**Step 10:** Flip the generator over and sit it on its wheels.



**Step 11:** Remove the battery cover.



**Step 12:** Connect the battery terminal.



**Step 13:** Replace the battery cover.



**Step 14:** Add oil to the generator.



*Note: The following set of instructions are a list of simplified steps to operate your generator. These steps are covered in greater detail within the product manual along with safety warnings, guidelines for maintaining your generator, and details about your generator's warranty.*

*We strongly recommend after assembling your generator you read the entire product manual to ensure you understand how to operate your generator properly and safely.*