 


WHAT'S INCLUDED

- Venty Fan
- Charging Cable
- Protective Case
- Fan User Manual

FAN DESIGN

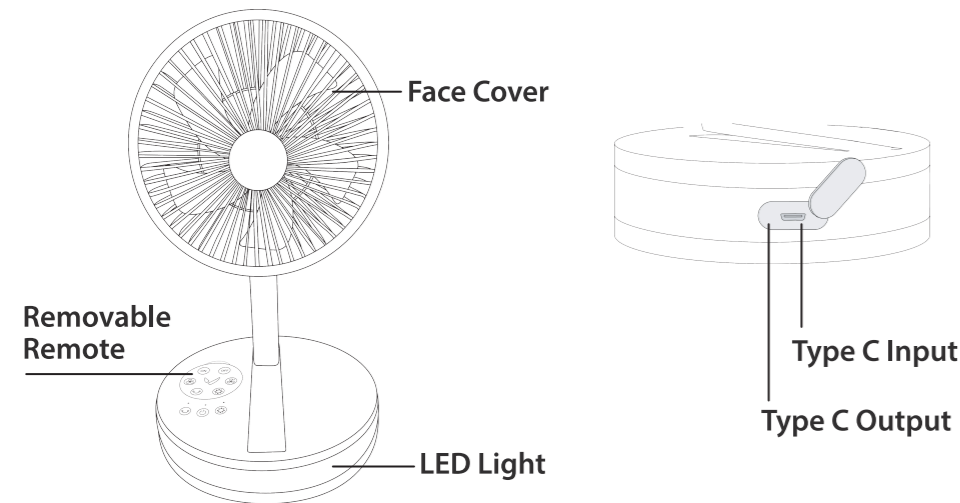

CONTACT SUPPORT

 
For support, email us at ventyfan@gmail.com
www.ventyfan.com

READ ME!

CHARGING TIPS

1

INCLUDED ARE
TWO TYPES OF CABLES
(usb-a or usb-c)

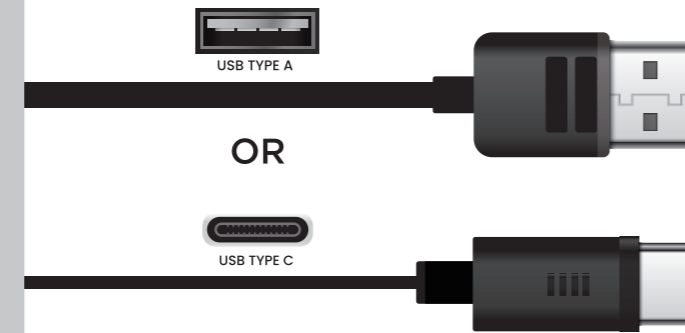

2


PLUG CABLE INTO
YOUR APPLE OR ANDROID
PHONE CHARGING BLOCK

Single port! Don't use multi ports.




3

PLUG INTO
WALL SOCKET

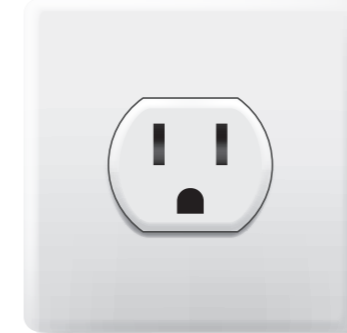

AVOID USING THESE!

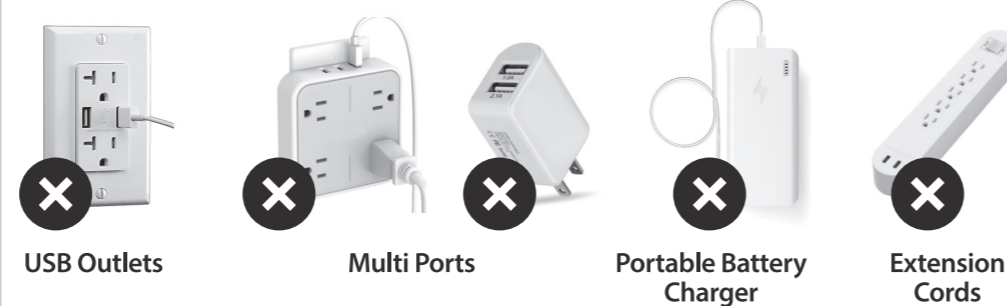

VENTY has a super strong battery and these methods do not work well at charging large batteries.

CHARGING THE FAN

- The lithium ion battery can be used 24+ hours depending on which features are used.
- The battery can take up to 8 hours to fully charge. The charging light will illuminate white while charging and will turn off when fully charged.
- Make sure you are charging directly into a head that is plugged into the wall. Do not use a multi port or extension cord.

USING THE FAN TO CHARGE YOUR DEVICE

The port also acts as an output to charge your mobile phone or tablet.


CHECKING BATTERY LEVEL

To check how much battery is left, long press the power button on the console. 1, 2 or 3 lights will light up to represent how much juice is left in the battery.

ADJUSTING FAN

ADJUSTING THE FAN HEIGHT


To adjust the height of the fan, simply pinch the back of the fan where the extension rod meets the face plate. Adjust up or down to the desired height.

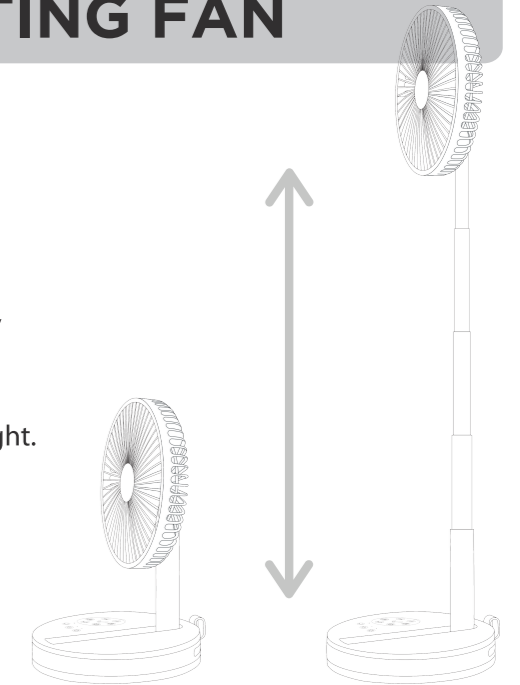

FOLDING FUNCTION


OPENING THE FAN

To open the Venty fan, gently pull at the head of the fan towards the back of the unit. Here there is a little clip that locks the head in place. Next, tilt the fan back so that the extension rod is fully set in place. Extend the rod up or down to the desired height.

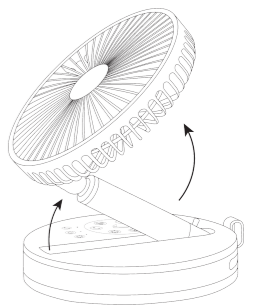

CLOSING THE FAN

To close the Venty fan, first ensure that the extending rod is fully pushed down to the lowest position. Tilt the head backwards, and push it back to click into place.

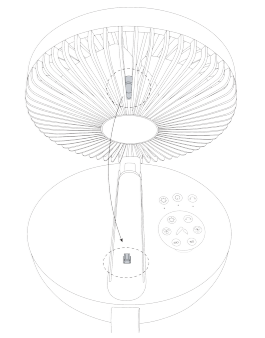

TROUBLESHOOTING

REMOTE PAIRING

1. On the console, hit the light button once.
2. On the console, HOLD the oscillation button until you see the lights blink.
3. On the remote, press the "on" button once.

MY POWER LIGHT IS BLINKING

Your Venty needs to be charged. Check the first page on charging instructions.

THE CHARGING LIGHT HASN'T TURNED OFF

It can take up to 8-9 hours to fully charge. Keep it plugged in.

FAQ

CAN I USE VENTY WHILE IT'S CHARGING?

Yes! But if the battery is completely drained you may need to charge it a bit before turning on.

WHY IS THE POWER BUTTON BLINKING?

This means the battery is near dead and you need to charge it up.

HOW CAN I SEE HOW MUCH BATTERY IS REMAINING?

Long press the power button on the console. It will illuminate 1, 2 or 3 lights representing how much battery life is left.


WHAT IS THE BATTERY USED IN THE REMOTE?







If you need to replace the battery remote, it is a CR2032 found in most local stores.

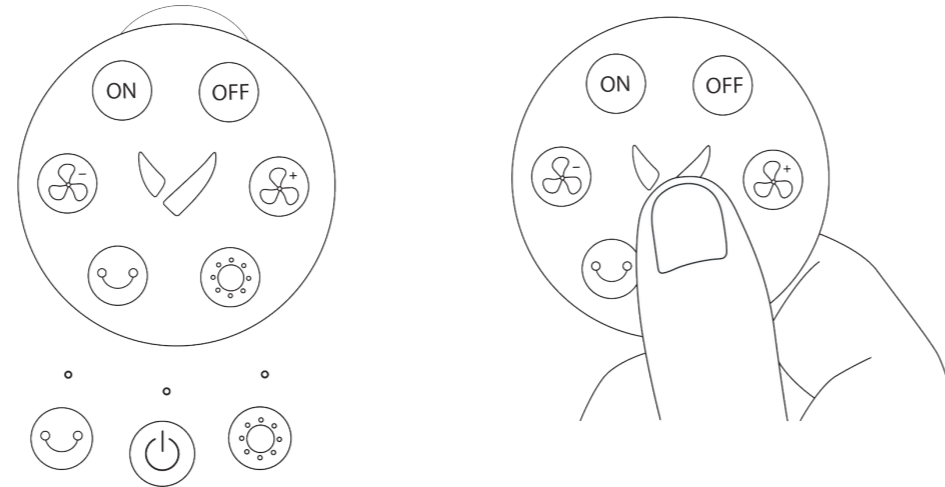WHY IS THE BATTERY ONLY LASTING X HOURS?


You are likely not charging correctly. Check the charging instructions and make sure you're not using a multiport charging head, extension cords, or USB directly into a computer. None of these will work well.

CONTROL FEATURES



-  **POWER ON:** Turn Venty on by a long press of the ON button.
-  **POWER OFF:** Turn Venty off by a long press of the OFF button
-  **SPEED INCREASE:** 4 speeds are accessible from the remote, or by pressing the power button.
-  **SPEED DECREASE:** 4 speeds are accessible from the remote, or by press the power button.
-  **LIGHT SETTING:** 3 modes of light can be accessed by pressing the button on the control panel, or via remote control.
-  **OSCILLATION:** Press to allow the fan to oscillate airflow.

OPENING THE FACEPLATE

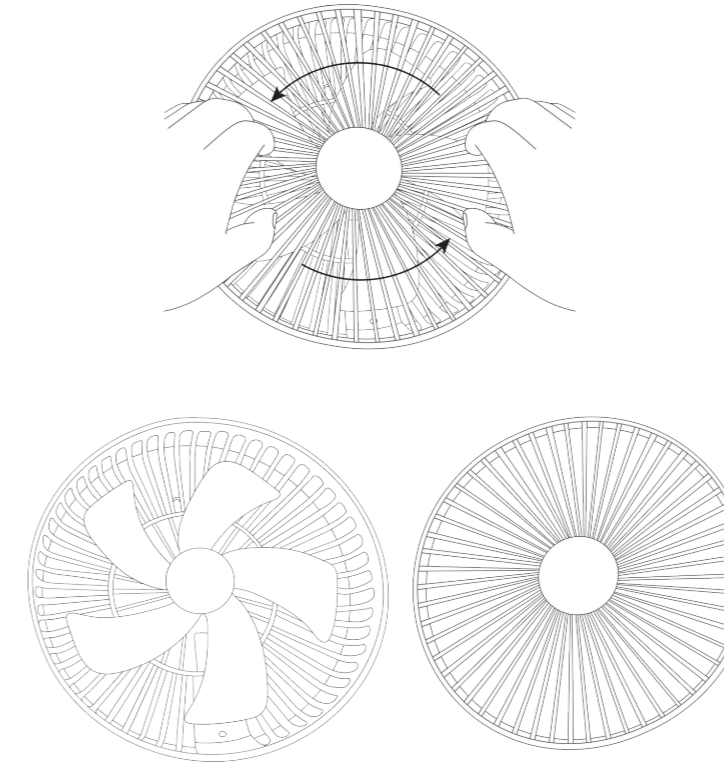


REMOVING THE FACEPLATE

To clean the Venty fan, you can remove the faceplate by twisting the interior plate counterclockwise. Do not try to take the head off, only the face plate.

Once removed, you can use a damp rag to remove any dust built up on the fan blades.

Do not try to remove the fan blade and never submerge in water. The faceplate can be put back in place by turning clockwise.

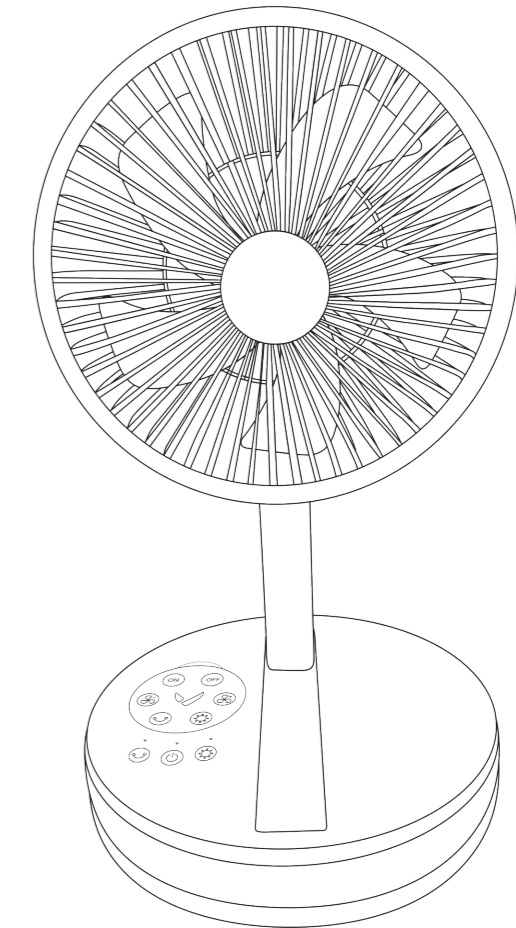

FAN USER MANUAL