

PROGRAMMING FOR DL1N

1. Make sure the scale is **OFF**. Remove the indicator head from the pole if it is attached. On the back of the indicator head where the wiring plugs in there is a metal plate with a brass sealing bolt holding it. Remove the brass bolt. Under the metal plate is a calibration switch.
2. Press and hold the calibration switch and then press the **“ON/OFF”** key.
3. The display will do a self test then alternately flash the version number and **“CAL”** three times and then will show **“C-0”**.
4. The **“TARE”** key advances through the **“C”** settings upward while the **“HOLD”** key will go down.
5. Once you toggle to **“C-4”** press the **“ZERO”** key. The digit that is flashing can be changed using the **“HOLD”** key. The **“TARE”** key selects which digit to change. The **“ZERO”** key advances through the **“C-4”** settings. Once all the settings are complete the display will go back to **“C-4”**.

	150LB	300LB	60KG	150KG
C-4-1	45	45	01	01
C-4-2	60	68	60	68
C-4-3	03	03	03	03
C-4-4	88	88	88	88
C-4-5	80	80	80	80
C-4-6	00	00	00	00

6. If the scale needs to be calibrated follow the calibration procedure or use the **“HOLD”** key to go to **“C-0”** and press the **“ZERO”** key. The display will do a self test then count up and go into the weigh mode.