



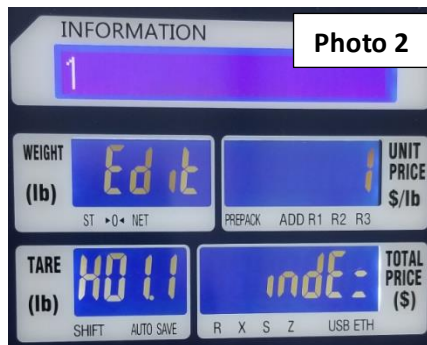

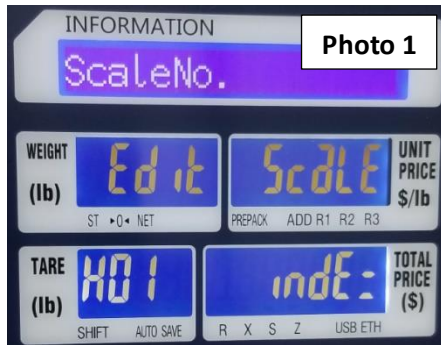








# IP Address set up on DLP-300 scale








1. Press and hold  key. Same time, press "1" - "1" - "2". Release  key. Photo 1.
2. Press  key. Enter the scale #. (I put "1"). Press "1" and . Photo 2.
3. Press  and press . Photo 3.
4. Enter the scale IP address. (I put 192.168.1.51). Press "192" -  - "168" -  - "1" -  - "51" - .
5. Press  key.

## \*\*\* SET UP FOR WIRELESS NETWORK \*\*\*

DLP-300 scale has two different IP address for wired network and wireless network. So, if you want to use DLP-300 under wireless network, you have to do the following instruction.




Please do above #1 and #2 to set up scale #. If you already set up the scale #, then go to next #3.

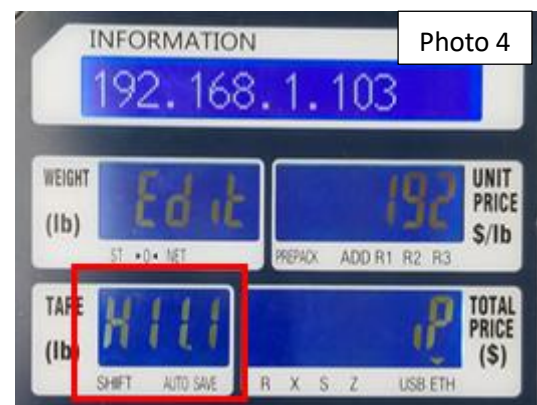

3. Press hold  key. Same time, "1" - "1" - "2". Release  key. Photo 1.
4. Press  until you see "WIFI IP". And press . Photo 4.






5. Enter the scale IP address. (I put 192.168.1.103).



Press "192" -  - "168" -  - "1" -  - "103" - .


6. Press  until you see "SSID". And then, press  or  key.




7. Press  key to find the right WIFI SSID name. if you find the right WIFI SSID, press . The display will show "SSID." See Photo 5.

8. Press . The display will show "WIFI Password." See Photo 6. Press  key to enter WIFI password.

9. Press . The display will show "WIFI INFR." This section is regarding WEP setting. Skip to the next part unless you have a specific WEP setting. See Photo 7.


10. Press  key to enter to "Auth Mode." See photo 9. Press , and the display will show the default setting "7 (WPA2PSK)." See Photo 8.

11. Press  key. And, turn scale off and turn it on.

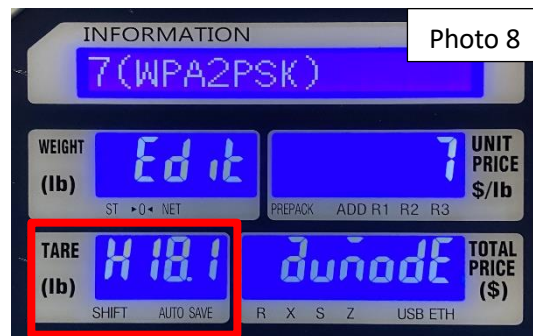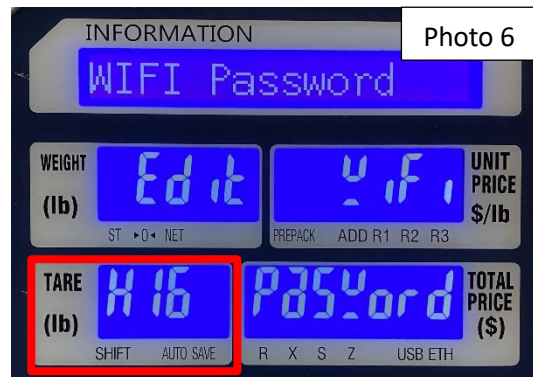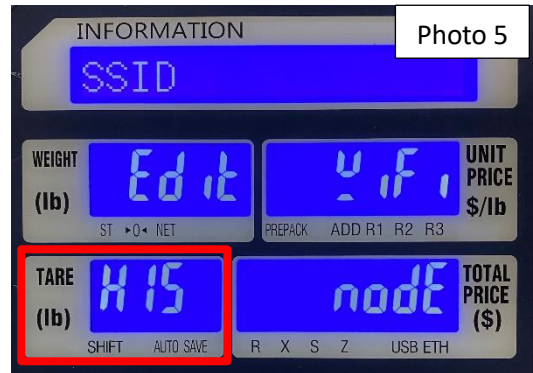

**How to know your scale in your network or not?**

1. Go to Window – Search – CDM. Do ping with scale IP address.

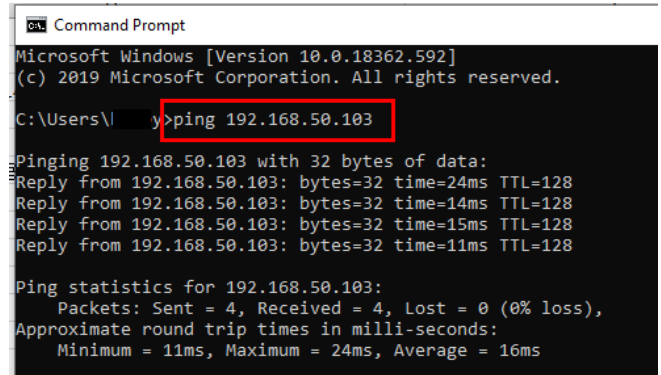

\*\*\*\*\*

**Thank you for choosing the DLP-300 scale.**

**Please visit our website, <http://www.VisionTechShop.com> for useful technical information. You can find:**

- 1. XDB Manager Software, Owner's Manual, XDB Manager Software Manual, and Quick Reference.**
- 2. Technical support and operational videos.**
- 3. Answers to frequently asked questions from our customers.**

**If you have any questions, please visit our website, or feel free to contact us.**

**Text/Call: 1-201-970-8897**

**Email: [GoUSAPos@gmail.com](mailto:GoUSAPos@gmail.com)**

\*\*\*\*\*