
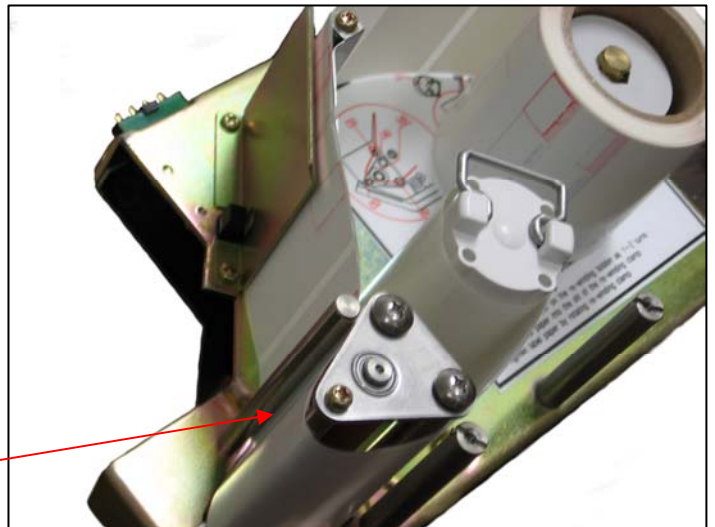


LS-100 Proper Label Installation

1. Press **SET**, enter the Password*, and then press **PRINT**.
*Note: The default password is **0 0 0 0**.
2. Press **7 1** and the Total Price Display will show the current *Adjust Number* which should be between 20 and 30; 25 is the nominal value.
3. Press **2 5 PRINT 2** the *Label Format Setting* will appear in the Total Price Display.
4. For **LST-8010** labels press **3 3 PRINT**; for other labels, see your Owner's Manual. Do **NOT** proceed until you have entered the correct *Label Format Setting*.
5. Press **4** if the scale gives a double-beep then go to **Step 7** otherwise press **1 PRINT**.
6. Press **5** if the scale gives a double-beep then go to **Step 7** otherwise press **2 PRINT**.
7. Make sure that the labels are installed correctly.

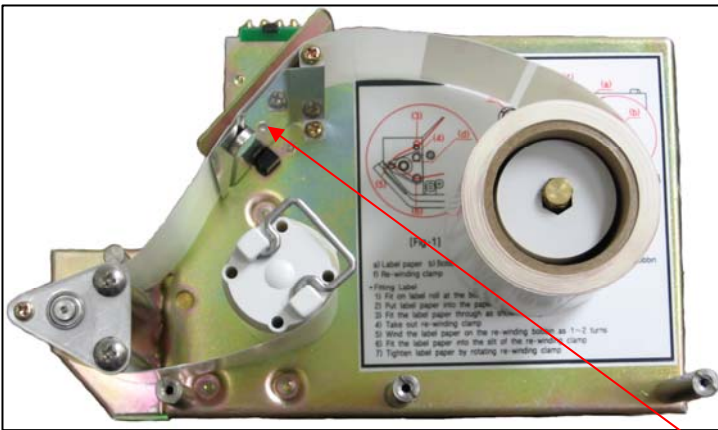

These are 2 key points in properly threading the label.

8. Press **8 1**.
9. In **Step 10** the scale will feed and print several labels. You must remove these quickly as they come out but do NOT yank them out; always remove the printed labels by pulling towards you (the front of the scale) and not to the side.
10. Press **7** (If no labels came out you may need to press **7** again.)
11. Check the values on the LCD Display. The values need to be between 70 and 110.
12. If the **Gap value** is not within range, press **SAVE** and go back to **Step 10** or go to **Step 13**.*
*Note: You may need to repeat this step more than once.
13. Press **SAVE ESC ESC ESC SET**.
14. Press **FEED** and print out some labels. If you do not get the results you desire, you may need to have the scale serviced.

If further problems persist, please contact the Atron Systems Service Department at 973-227-8882.