

## CALIBRATION FOR THE PB SERIES

### FULL CAPACITY CALIBRATION

1. Turn the scale off. Remove the battery cover and battery. There is a metal plate with two sealing screws in the battery compartment.
2. Remove the two screws and metal plate. Under the metal plate is a momentary switch. Hold the switch down and turn on the scale.
3. The display will show "**onE**" then "**CAL 1**".
4. The "**Tare**" key advances through the "**C**" settings upward while the "**Unit/Print**" key will go down. The "**Zero**" key enters into the cal mode option. If doing a percent calibration proceed to percent calibration below.
5. Before doing the calibration the middle up/down value has to be known. To do this go to "**CAL 10**" by pressing the "**Unit/Print**" key twice. Press the "**Zero**" key to enter into the setting. First is "**UNIT**" then a number. The number represents the unit of calibration. 1 is for LBS and 0 is for KG.
6. Press the "**Zero**" key and the display will show "**CAPA**" and then the scales capacity. Press the "**Zero**" key and the display will show "**nId**". This is the middle up/down weight to be used in the calibration. This value **CANNOT** be set to 0. Input a value to use that is 1/3 of the scales maximum capacity by using the "**Tare**" and "**Unit/Print**" keys. Make note of this value and keep pressing the "**Zero**" key to get back to "**CAL 10**".
7. Press the "**Unit/Print**" key until the display shows "**CAL 3**". Press the "**Zero**" key to enter into calibration.
8. The display will show "**2ErO**". Nothing on the platter press the "**Zero**" key. The display will show raw internal counts and then display "**IdUP**". Place the weight on the platter that was noted in step 6.
9. Press the "**Zero**" key. The display will show internal counts and then "**FULL**". Add weights so that the full capacity weight of the scale is on the platter and press the "**ZERO**" key.
10. The display will show internal counts and then display "**Iddn**". Remove the weight used in step 9 and leave the weight used in step 8 press the "**Zero**" key. The display will show internal counts and then go back to "**CAL 3**". Remove the weight from the platter.
11. Turn the scale off and back on.

### PER CENT OF WEIGHT CALIBRATION

1. Follow steps 1 through 4.
2. Press the "**Tare**" key to advance to "**C-7**". Press the "**ZERO**" key and the display will show "**PE 05**". Only increments of 10% can be used. Use the "**Unit/Print**" key to select the percent of weight being used.
3. Once the percent is set press the "**Zero**" key.

4. The display will show "**2ErO**". With the platter on the scale and nothing on the platter press the "**Zero**" key. The display will show internal counts and then display "**P5PAn**".
5. Put the per cent of weight on the platter that was specified in step 2. Press the "**Zero**" key. The display will show internal counts and then go back to "**CAL 7**". Remove the weight from the platter. Turn the scale off and back on.

(NOTE: For the PB-500lb model Only when changing **Cal 10** from kg to lbs it must first be calibrated at full capacity in **Cal 3** before percent calibration can be performed. )