

CALIBRATION MODE SETTINGS FOR PB SERIES

1. Make sure the scale is off. Open the battery compartment on the bottom of the scale. Remove the battery.
2. Remove the two sealing bolts and the calibration plate. Under the plate is the calibration switch.
3. Press and hold the switch while turning the scale on. The display will show “**ONE**” and then “**CAL 1**” then release the calibration switch.
4. The “**TARE**” key advances through the cal settings whereas the “**UNIT/PRINT**” key goes down. The “**ZERO**” key enters the cal setting.
5. Press the tare key three times until the display shows “**CAL 4**”. Press the “**ZERO**” key to enter the setting mode. The “**TARE**” key selects the digit to be changed and the “**UNIT/PRINT**” key changes the selected digit. The “**ZERO**” key saves the change and moves to the next setting.

C41	bC
C43	23 lb/kg switchable
	22 lb only
	21 kg only

6. When the settings are done press the “**ZERO**” key once more and the display will go back to “**CAL 4**”.
7. Turn the scale off and then back on.