

## CHANGING THE TYPE SETTING FOR THE SW-RS

1. With the scale turned off hold the “**ZERO**” key and turn the scale on.
2. When “**U SEt**” appears release the “**ZERO**” key. Press the “**ZERO**” key and the display will show “**tyP X**”, where X is the current type setting. Use the “**TARE**” key to select the type to be used.

TYPE	DESCRIPTION
0	Most POS, ECR's and some TEC POS systems
1	Not available
2	Sharp ER-Axxx, ER-A450T, Newer Sanyo ECR's using RS-232 and others
3	Not available
4	CRS, NCR2170, Samsung ER-5100,5115, CASIO and many other ECR's
5	NCI general, Samsung ER-5100,5115, CASIO and most POS software
6	Samsung ER-670
7	Not available

3. Press the “**ZERO**” and the display will show “**AP X**”, X being the time for the scale to auto power off. 60,30,10, or oF can be selected with the “**TARE**” key.
4. Once the selection is made press the “**ZERO**” {pressing the “**ZERO**” key again bypasses the count up} key the scale will count up and go to the weigh mode.