



Mode	Description
CONT	data send continues
ST1	Send data one time, when stable
STC	Send data continuously, when stable
ASK	Command R: read data Command T: Tare Command Z: Zero