

TVP Calibration Manual

1. Turn on the scale. Press and hold “TARE” key while the scale conducts self-test. Display will show “Pn”. Default PIN is 0000 and therefore, press 0 four times and then press “TARE” key to confirm. This will lead to entering the parameter settings and “menu unit kg” will be shown on display.
2. Press “UNIT” key to determine which weight unit – kg or lb – will be used for calibration.
3. Press “TARE” key to confirm the weight unit and display will show “FO CAL”. At this time, press the calibration switch located at the bottom of the scale to allow changes in the parameter settings – the screw may have to be removed in order to access the calibration switch.
4. Remove any items on the scale and make sure that the “STABLE” indication is shown on the display.
5. Press “TARE” key to confirm and display will show “UnLoAd”.
6. Press “TARE” key to confirm and display will show “CAP LoAd XX”.
7. If necessary, press “M+” key to select the calibration weight value and then place the calibration weight on the scale.
8. Press “TARE” key to confirm when display will show “PASS”
9. Remove calibration weight from the platform and press “ZERO” key to go back to normal weighing mode.

NOTE: if display shows any error or incorrect value, please repeat the procedure again.

