

TVP Series Quick Start Guide


1. Connect the TVP series scale and DLP-50 label printer with their corresponding power adapters. The power adapter for the DLP-50 or DEP-50 has a **white label** attached to the cord. **Do not swap the power adapters.**




2. Connect both devices with the RS-232 cable.



- Before printing, place an object on scale and print. The object must weigh more than the minimum capacity printed on the side of the TVP-B

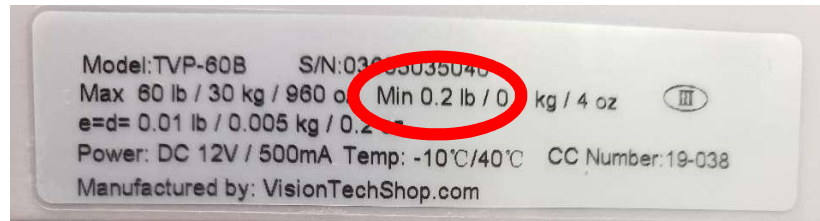



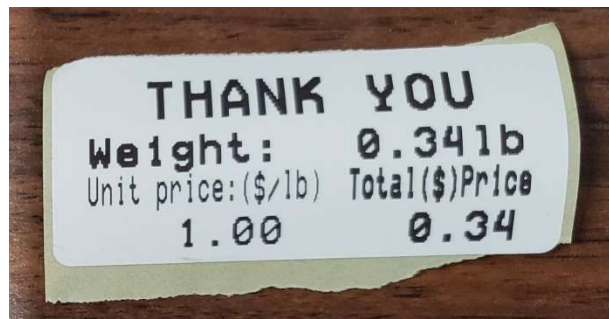



- Enter the unit price of object. Afterwards, press **M+** to print.



Scale Parameter Settings

Accessing the Menu

- Turn on the scale. Press and hold  key during the self-test.
Display will show “Pn” briefly PIN is activated. Press the PIN number to get into the parameter menu.
- The default PIN number is “0000”
- Press numeric key 0 four times, display will be shown **Pn - - - -**
- Press  key to confirm, it will enter into the parameter settings and will to show “**menu unit kg**”.
- Navigate through the menu using the  and  keys, select menu “F11 rS232” using the  key, to escape the menu, press .
- The following graph indicates the display and function of each menu within “F11 rS232”:

F11 rS232	ModE	PC-100	Protocol Type: CAS
		printr	The scale RS232 protocol will be determined by the Baud & Pr settings
		EP50	accumulation function enable, and press M+ key to send data to receipt printer
		lp50 (default)	accumulation function enable, and press M+ key to send data to label printer
		POS	Protocol Type: POS
		oFF	RS232 function disable
		Cont	Continues data transmission
		StC	Stable data sending continues

		toledo	Protocol Type 1: Toledo
		nciecr	Protocol Type 2: NCI-ECR
		ncigen	Protocol Type 3: NCI-General
		tec	Protocol Type 4: TEC
		easy	Protocol Type 5: Easy Weigh
	Baud (default: 9600)		Set baud rate to(1200/2400/4800/ 9600 /19200/38 400/115200)
	Pr	8n1 (default)	8 data bits, no verify, 1 stop bit
		7E1	7 data bits, Even verify, 1 stop bit
		7o1	7 data bits, Odd verify, 1 stop bit



7. Press **UNIT** key to choose "kg", "lb" or "oz" unit in normal weighing mode, capacity will be show in kg, lb or oz values.

Scan the QR code for a video tutorial



If you have more questions, please contact us anytime at:

GoUSAp0s@gmail.com or

www.VisionTechShop.com

1.201.679.7793