 
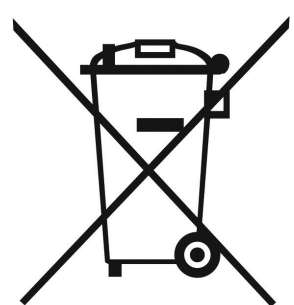 


VYTRONIX

PET01 CYLINDER VACUUM CLEANER INSTRUCTION MANUAL

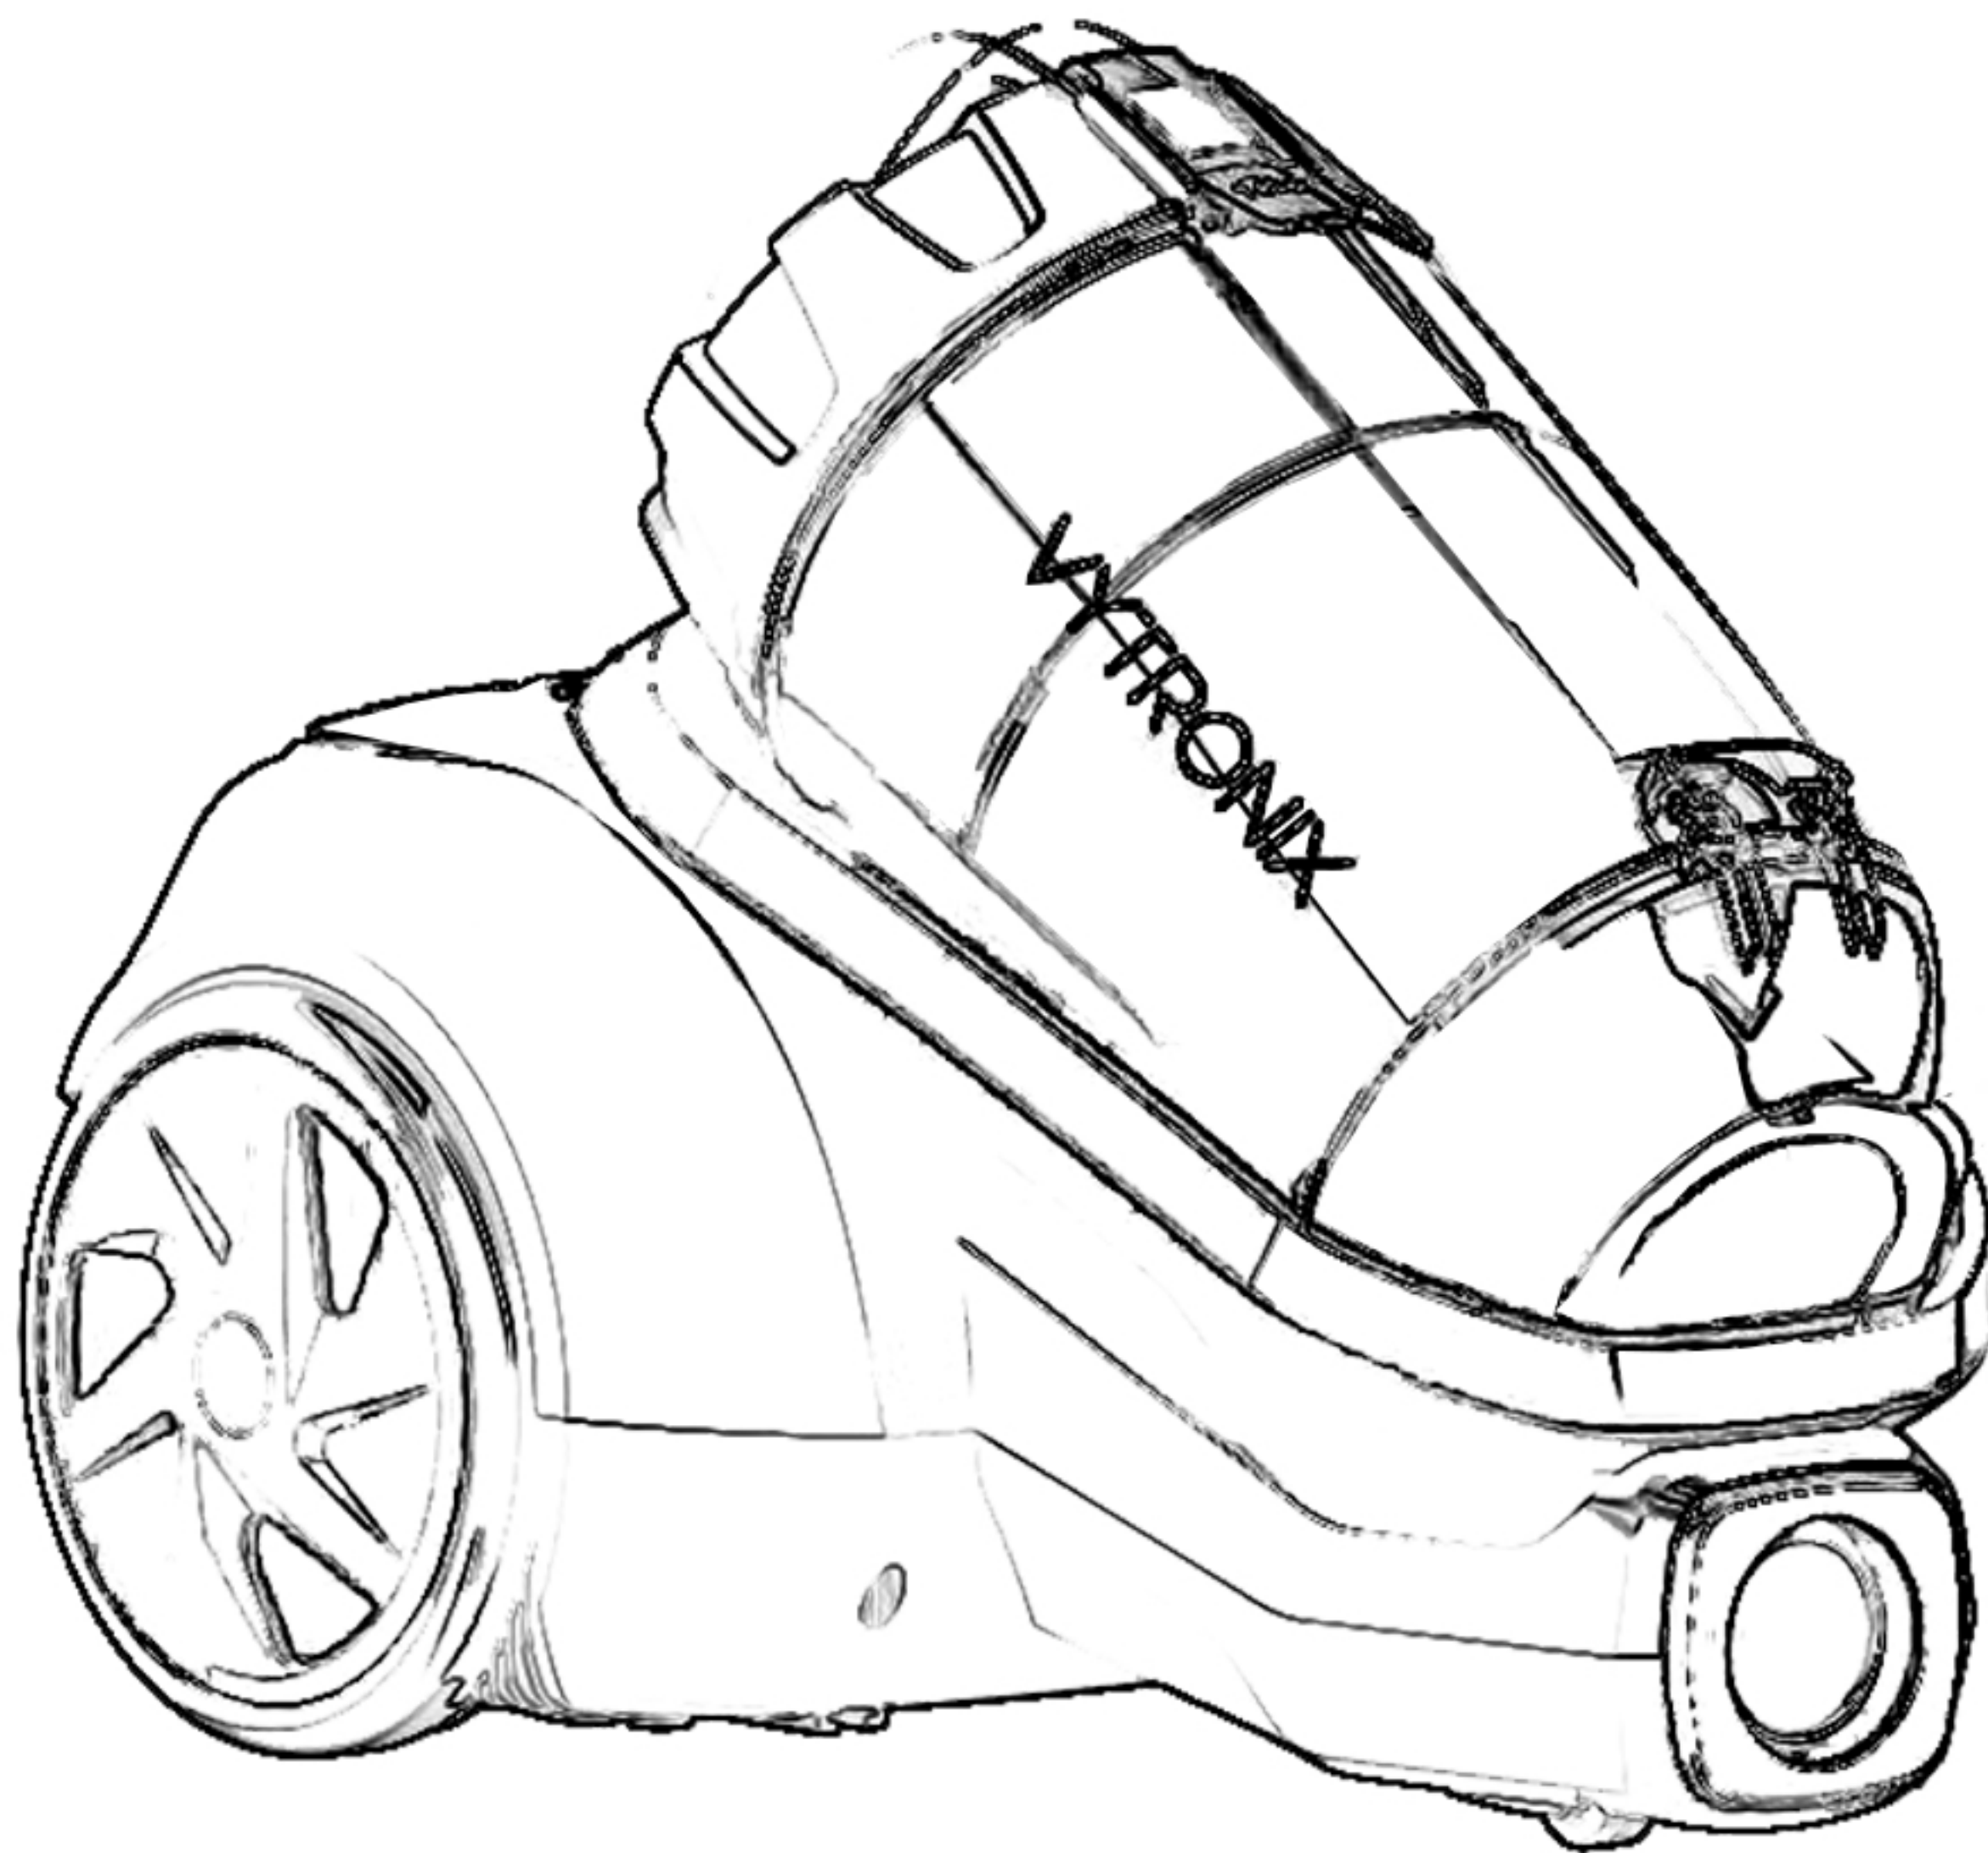

Disposing of your Product

Once any electrical product is no longer functional it should be disposed of in the appropriate way to cause minimal environmental impact. In accordance with regulations this product cannot be disposed of with domestic waste, please contact Vytronix UK Ltd to ensure appropriate disposal.

For more information or to purchase Parts & Accessories please visit www.vytronix.com

www.vytronix.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precaution should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE)


WARNING- To reduce the risk of fire, electric shock, or injury:

1. Do not leave vacuum cleaner unattended when plugged in. Unplug from outlet when not in use and before servicing.
2. To reduce the risk of electric shock, do not use outdoors or on wet surfaces
3. Use only as described in this manual. Use only manufactures recommend attachments.
4. Do not use if the cord or plug is damaged. If vacuum cleaner is not working correctly, has been dropped, damaged, left outdoors, or dropped into water, contact a service center.
5. Do not pull or carry this vacuum cleaner by the power cord, or use the power cord as a handle, or pull the power cord around corners, sharp edges or close a door over the power cable or run over the power cord with the vacuum cleaner. Keep cord away from heated surfaces.
6. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
7. Do not handle plug or vacuum cleaner with wet hands.
8. Do not put any object into opening where the main hose is pushed into.
9. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
10. Turn all controls off before unplugging.
11. Use extra care when cleaning/using on stairs.
12. Do not use to pick up any type of liquid, or use in the vicinity of flammable liquids.
13. Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
14. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
15. Do not use without dust bag and/or filter in place.
16. If the supply cord is damaged, it must be replaced by the manufacturer.
17. This appliance is not intended for use by persons (including children under the age of 8 years old) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
18. Children should not be allowed to play with the appliance, it is not a toy.

KEEP THESE INSTRUCTIONS IN A SAFE PLACE !

Don't forget to register for your 12 month guarantee at www.vytronix.com
using product code brandnew-vytronix-pet01

COMPONENTS AND EQUIPMENT

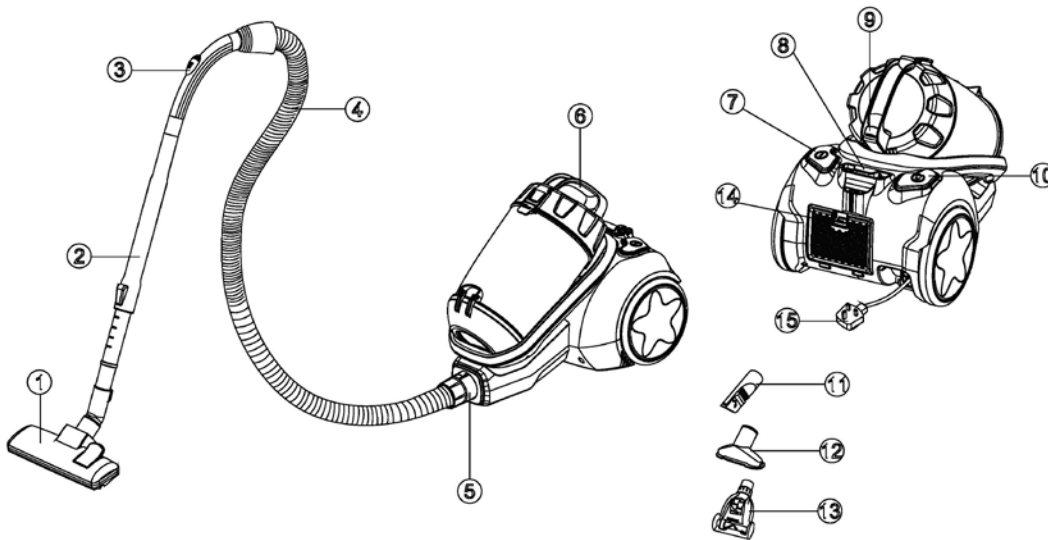


1. Floor nozzle
2. Telescopic extension tube
3. Manual suction control
4. Suction hose
5. Suction hose connection
6. Carrying handle
7. ON/OFF button
8. Power adjustment slider
9. Bin release button
10. Cord rewind button
11. 2 in 1 crevice nozzle / dusting brush
12. Upholstery nozzle
13. Pet nozzle
14. Exhaust grill and filter
15. Mains cable & plug

Don't forget to register for your 12 month guarantee at www.vytronix.com
using product code brandnew-vytronix-PET01


TAKING CARE USING YOUR CLEANER

Switch off the vacuum cleaner immediately if the air intakes, the floor brushes or the telescopes tube becomes blocked. Before starting the vacuum cleaner up again remove the substance causing the blockage:

 
1. Never use the vacuum cleaner in the immediate vicinity of fires or radiators or any other appliance emitting heat. Do not suck up hot objects such as cigarette ends or ashes.

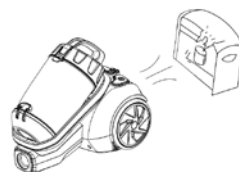

 
2. Only place the plug in the socket when your hands are dry.

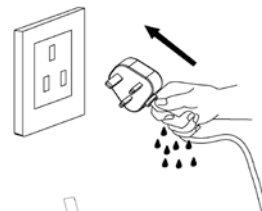

3. Please remove large or sharp objects from the floor before using the vacuum cleaner to avoid any possible damage to it.

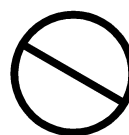

4. Do not pull by the mains cable when pulling out the plug.

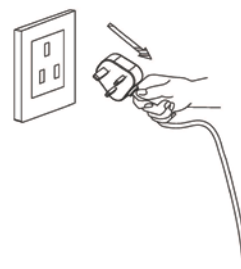

USE


Vacuum cleaning

1. Before using the vacuum cleaner first pull out a sufficient length of mains cable and plug into the mains socket. The yellow mark on the mains cable is the maximum length that must not be exceeded.

To switch on the device press the foot pedal button  on the casing with your foot.

2. To rewind the mains cable, press the button 


Hold the cable with one hand and guide the cable to ensure that it does not whip causing damage.

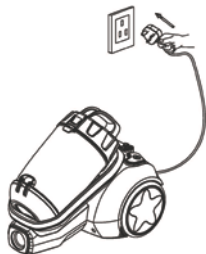

Don't forget to register for your 12 month guarantee at www.vytronix.com
using product code brandnew-vytronix-pet01

PREPARING THE VACUUM CLEANER


1. Fit the hose on the vacuum cleaner by inserting the rotating hose connection into the vacuum cleaner until you hear a click. To remove the hose, press the buttons at the side of the hose connection and pull it out.

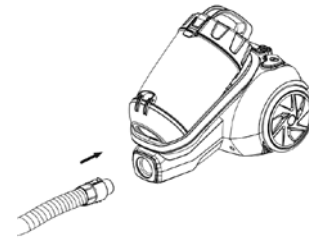

2. Assembling the telescopic extension tube and accessories


2.1: Fit the extension tube onto the other end of the hose.

2.2: Fit the floor brush onto the extension tube.

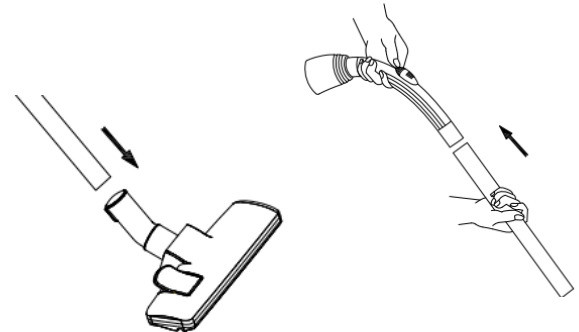


Floor Nozzle

The floor nozzle has two settings. When cleaning hard surfaces (parquet flooring, flooring tiles, etc.), the nozzle brushes should be extended. When cleaning carpets and mats, the brushes should be retracted into the nozzle. Press the brush change button to switch between the two settings.

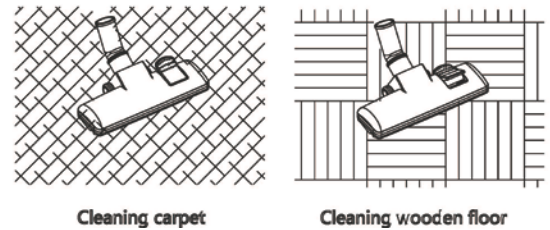



Crevice nozzle/dusting brush

For radiators, corners, skirting, etc.

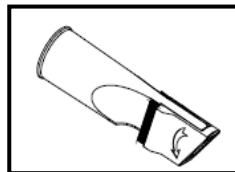

Upholstery nozzle

For furniture, curtains, drapes, etc.

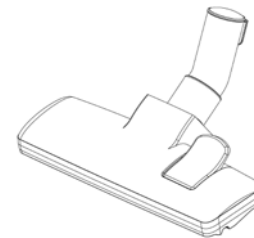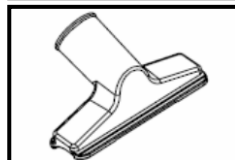

IMPORTANT INFORMATION

This Vacuum Cleaner is fitted with an internal safety thermal cut out.

The Vacuum Cleaner will switch off automatically when it overheats.

The Vacuum Cleaner may overheat if the filters are clogged, the hose is blocked or the dust tank is full.

If the Vacuum Cleaner cuts out, empty the dust tank, remove any blockages and clean the filter out before using again.

The Vacuum Cleaner will need 30-60 minutes to cool down.

TRANSPORT AND STORAGE

1. You can lift and carry the vacuum cleaner using the carrying handle. Never pull or lift the vacuum cleaner by the cord.
2. Before putting the vacuum away, switch off the socket, unplug, and press the cord rewind button until the cord is fully rewound.
3. To save space, the vacuum can be stored upright on its end cover. The telescopic tube can be hung on the vacuum cleaner by inserting the parking fixture into the vertical parking holder.

Don't forget to register for your 12 month guarantee at www.vytronix.com
using product code brandnew-vytronix-pet01

CLEANING




Clean the vacuum cleaner by wiping it with a damp cloth ensuring it is dry before using again. You must not use any form of strong, solvent or abrasive cleaning agent.

TAKING CARE OF YOUR VACUUM CLEANER

EMPTYING THE DUST CONTAINER



Empty the dust container when the dirt has reached the "MAX" mark on the dust container or the suction power has reduced during use.

1. Switch off the vacuum cleaner and disconnect the plug from the mains.
To do this always pull on the plug and not on the cable.
2. Release the dust container by pressing down the release button (Fig 1).
3. Lift the dust container forwards out of the cylinder vacuum cleaner. (Fig 2)
4. When emptying the dust container, hold it low over a dustbin.
5. Press the open button (Fig3), the base opens and the dust falls into the dustbin.
6. Carefully tap the container to loosen any remaining dirt/dust
7. Close the base and replace the container back onto the cleaner.

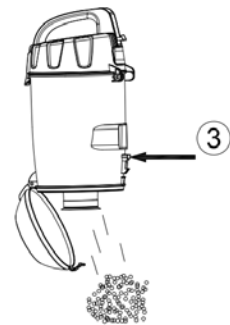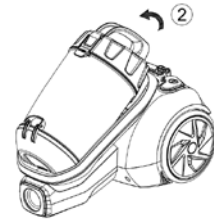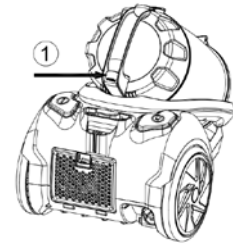

CLEANING THE MOTOR FILTER

1. Turn off and unplug cleaner.
2. Remove the dust container.
3. Open the dust container cover and take the motor filter out.
4. Hold the motor filter over a dustbin. For a rough clean, gently tap the filter over a dustbin.
5. Place protective motor filter back into its receptacle.
6. Close the lid until you hear it clicks into place.
7. Place the dust container onto the cylinder vacuum cleaner.
8. Check whether the dust container is securely seated.

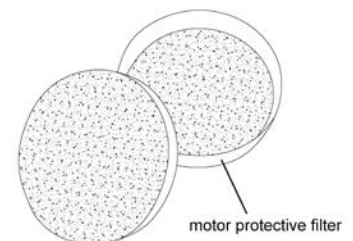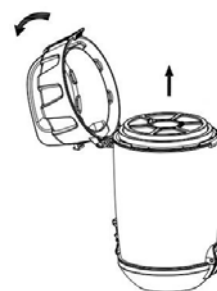


IMPORTANT! Never use the vacuum cleaner without a motor filter.

Don't forget to register for your 12 month guarantee at www.vytronix.com
using product code brandnew-vytronix-pet01

HOW TO CLEAN THE DUST CONTAINER


1. Release the filter lock and take out the motor filter.
2. Take out the plastic dust filter.
3. Use a soft brush to clean the plastic dust filter then rinse it with clean water, dry it thoroughly before placing it back.

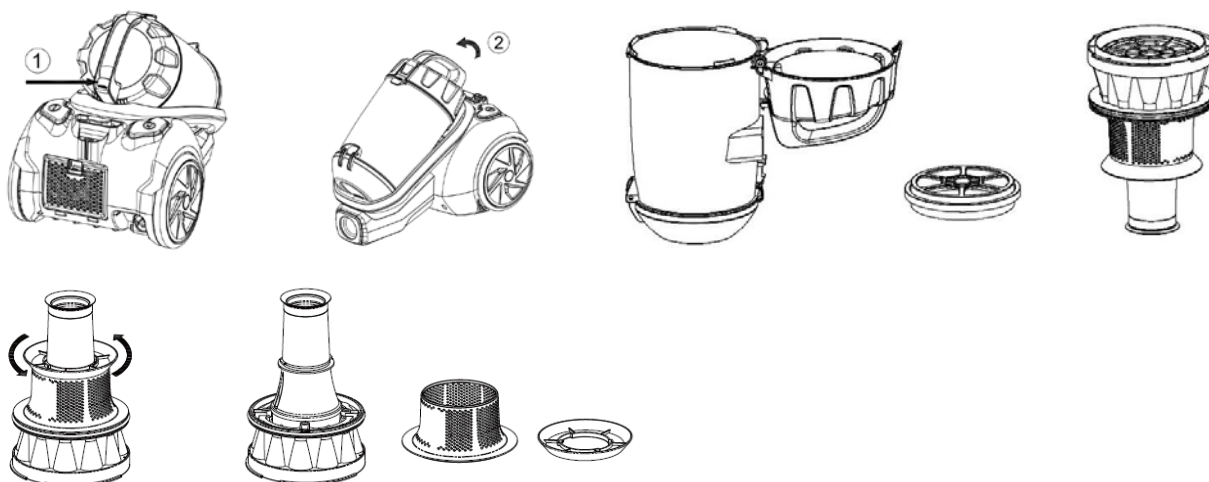

CLEANING THE EXHAUST AIR FILTER

The exhaust air filter cleans the air a final time before it leaves the vacuum cleaner. You can clean the exhaust air filter as follows:

1. Switch off the vacuum cleaner and disconnect the plug from the mains. To do this always pull on the plug and not on the cable.
2. Open the exhaust filter cover.
3. Brush or tap the HEPA filter over a bin.
4. Put the exhaust air filter back into place.
5. Close the exhaust filter cover.

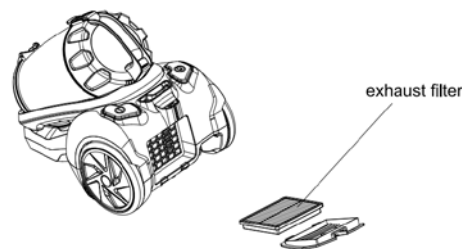

IMPORTANT! If any of the filters are heavily soiled they (especially the black foam filter) they can be rinsed in water but if you do this you must allow them to dry for **24 hours** before reusing the cleaner.

PLEASE NOTE

All the above instructions are very important if you are experiencing a lack of suction or poor pick up when using your vacuum cleaner. These symptoms are a clear indication that your filter system requires cleaning, if you follow the simple steps above you will maintain a constant strong suction/pickup.

IMPORTANT – never use your vacuum cleaner without the filters fitted.

Don't forget to register for your 12 month guarantee at www.vytronix.com
using product code brandnew-vytronix-pet01

VYTRONIX

Register your warranty at www.vytronix.com