



User Manual

# Table of Contents

In the Box ▶	3
Quick Start Instructions ▶	3
Getting Started ▶	4
iDevices Connected App ▶	4
Battery Replacement >	4
Powering On & Off ▶	5
Connecting >	5
Mounting >	6
Probe Use >	7
Probe Wrap Use 🕨	8
Using the iGrill <sub>mini</sub> ▶	9
Smart LED ▶	9
Proximity Sensor ▶	9
Custom & Preset Alarms ▶	10
Renaming Probes >	11
Timer Tool ▶	11
Globe Tool ▶	12
Graph Tool >	12
Problem Solving ►	13
Frequently Asked Questions >	15
Disclaimer >	15
Regulations >	15

## In the Box

Inside your iGrill<sub>mini</sub> box, you will find:

- 1 iGrill<sub>mini</sub>
- 1 Coin Cell Battery (Installed)
- 1 Meat Probe
- 1 Colored Probe Indicator
- 1 Probe Wrap
- 1 Optional Magnetic Disc
- Quick Start Guide

## **Quick Start Instructions**

- Download the iDevices Connected app from the App Store<sup>SM</sup> and launch it from your iPhone<sup>®</sup> (4S and later), iPad<sup>®</sup> (3rd generation and later), iPad mini<sup>™</sup> (all generations), or iPod touch<sup>®</sup> (5th generation and later).
- Enable Bluetooth® on your smart device under 'Settings'.
- Separate the  $iGrill_{mini}$  from its base by firmly holding the base with one hand and gently pulling the  $iGrill_{mini}$  top upwards with the other hand.
- On the underside of the iGrill<sub>mini</sub>, remove the battery door by twisting it counter-clockwise. Remove the battery pull tab. Ensure the battery is in place and replace the battery door.
- Clip the iGrill<sub>mini</sub> top back into its base.
- Plug the Meat Probe into the probe port of the iGrill<sub>mini</sub>.
- Press the power button located at the center of the faceplate for two seconds. The display will light up, indicating the iGrill<sub>mini</sub> has powered on.



- Open the iDevices Connected app to connect to your iGrill<sub>mini</sub>. Tap on the iDevices logo in the gray toolbar at the top of the app. Select your iGrill<sub>mini</sub> from the device manager.
- You are ready to use your iGrill in in.

# **Getting Started**

## iDevices Connected App

The iDevices Connected app provides all of the functionality and customization you'll need to get the most out of your iGrill<sub>mini</sub>. The iDevices Connected app is compatible with the following devices:

- iPhone (4S and later)
- iPad (3rd generation and later)
- iPad mini (all generations)
- iPod touch (5th generation and later)

You must be running iOS 7+ on your smart device to use the iDevices Connected app. Please visit the App Store<sup>SM</sup> to download the free iDevices Connected app.

Once you've downloaded the app, you'll have access to links for instructional videos, step-by-step instructions and FAQ's for troubleshooting.

## **Battery Replacement**

To replace your  $iGrill_{mini}$  battery, follow these steps:

- Separate the  $iGrill_{mini}$  from its base by firmly holding the base with one hand and gently pull the  $iGrill_{mini}$  top upwards with the other hand.
- On the underside of the iGrill<sub>mini</sub>, remove the battery door by twisting it counter-clockwise
- Replace the battery with a CR2032 coin cell battery (available at local drugstores in the specialty battery section).



• Ensure the battery is in place and replace the battery door.

## Powering On & Off

To turn on the  $iGrill_{mini}$ , follow these steps:

- Press the power button located at the center of the faceplate.
- The Smart LED will blink blue while waiting for pairing.

To turn off the iGrill<sub>mini</sub>, follow these steps:

- Press and hold down the power button located in the center of the faceplate for three seconds.
- The Smart LED will illuminate solid white and will then turn off.

#### Auto Shut-Off:

- The iGrill<sub>mini</sub> will stay powered on for five minutes before automatically turning off if there is no probe installed and it is not paired to a smart device.
- The iGrill<sub>mini</sub> will stay powered on for eight hours before automatically turning off if not paired to a smart device and the probe is installed.
- The i $Grill_{mini}$  will stay powered on until the battery is depleted if it is paired with a smart device, even if there is no probe installed.

## Connecting

To connect your  $iGrill_{mini}$  to your iPhone, iPad or iPod touch, follow these steps:

- Open Settings
- Tap Bluetooth
- Set Bluetooth to On
- While turned on, place your iGrill<sub>mini</sub> next to your smart device and open the iDevices Connected app. Your smart device will automatically recognize any available iDevices products and display them in the device manager. You can view your device manager by tapping the iDevices logo at the top of the app.



• Select your  $iGrill_{mini}$  from the device manager. You will then be sent a pairing request. Once you accept, your smart device will pair with the  $iGrill_{mini}$  and you are ready to configure your settings and start cooking!

To connect an additional i $Grill_{mini}$  (or other iDevices product) to your iPhone, iPad or iPod touch follow these steps:

- While turned on, place your  $iGrill_{mini}$  (or other iDevices product) next to your smart device and open the iDevices Connected app.
- Tap on the gray bar located at the top of the screen to expose the device manager. Select the product you would like to pair with from the device manager. Your smart device will display a pairing request. Once accepted, your smart device will pair with the additional product and you are ready to configure your settings and start cooking!

## Mounting

- The i $Grill_{mini}$ 's base is magnetic for convenient positioning on a cool portion of your grill, smoker or other magnetic surfaces.
- The iGrill<sub>mini</sub> can be taken out of its base, rotated 180° and set back into its base for two different viewing angles.
- The iGrill<sub>mini</sub> comes with an optional magnetic disc with an adhesive on one side. This allows the iGrill<sub>mini</sub> to magnetically mount on a non-magnetic surface. The magnetic disc has a protective cover on its face to protect it from being scratched.

To mount your magnetic disc, please follow the below steps:

- Clean the surface thoroughly where the magnetic disc will be adhered to ensure proper bonding.
- Remove the protective film covering the adhesive on the magnetic disc.
- Adhere the magnetic disc to your desired surface.
- Let the magnetic disc bond to the surface for at least 6-12 hours before mounting your  $iGrill_{mini}$  to the disc.
- Place your iGrill<sub>mini</sub> on the magnetic disc.



#### NOTE

The magnetic base is not designed to withstand high heat and it must be placed on a cool surface. If the surface is too hot to touch, it is too hot for the  $iGrill_{mini}$  base!

#### **Probe Use**

- Meat Probe Acceptable Temperature Range: -22°F to 572°F (-30°C to 300°C)
- Pro Meat Probe and Pro Ambient Temperature Probe Acceptable Temperature Range (sold on iDevicesinc.com): -22°F to 700°F (-30°C to 371°C)
- The Meat Probe should always be inserted into the center of the item being cooked for an accurate temperature reading.
- When using a standard Meat Probe, be sure to route the probe wire where it will not be exposed to flames or temperatures exceeding 572° (300°C).
- The Pro Ambient Probe should be clipped between two grates inside the oven. Ensure that the tip of the probe does not touch the grates.
- The probe wrap allows for convenient storage of your probe and is magnetic so that it can be stored under your iGrill<sub>mini</sub> when not in use.

#### **NOTE**

The colored probe indicator is for visual identification of the probe within the app and cosmetic purposes only. It is not designed for heat safety.

The probe should be cleaned by hand with a dishcloth, standard dishwashing soap and warm water. The probe is not dishwasher safe. Take precaution not to get the probe's wiring wet.



#### NOTE

Be sure to avoid water exposure to the probes' wiring as well as the area where the probes' wiring meets the probe. The probe is not waterproof and damage may result from water exposure. The probe should never be submersed in water.

Temperatures below -22°F or above 572°F (-30°C or above 300°C) will not display in the iDevices Connected app and will cause the probe to disappear from connection.

## Probe Wrap Use

To wrap your probe:

- Hold the probe wrap so that the clip segment is on the bottom left and the iDevices logo is legible in the center of the probe wrap.
- Snap the probe into the probe wrap's clip, ensuring that the probe's body follows the contour of the probe wrap and leaves a ½ inch gap between the probe and the wire channel of the probe wrap. The tip of the probe should be pointed downward.
- Wrap your probe's wire clockwise around the probe wrap.
- When you reach the adapter end of the probe wire, it can be inserted into the probe wrap's wire channel to secure the wrapping.



# Using the iGrill mini

#### **Smart LED**

The Smart LED allows the i $\operatorname{Grill}_{\min}$  to display the connected probe temperature reading through the use of color. Below is a list of all of the light combinations you will see on the Smart LED and their associated meanings:

#### Connection

- Solid White: Powering off or reset complete
- Solid Blue: Confirms pairing of new device
- Blinking Blue: Awaiting pairing or no alarm set

#### **Peak Preset**

- Solid Green: Initial temperature
- Solid Yellow: Target temperature is 15° F away
- Solid Orange: Target temperature is 5° F away
- Blinking Red: Target temperature reached
- Solid Red: Target temperature reached and alarm acknowledged

#### Range Preset

- Solid Green: Temperature inside range
- Blinking Red: Temperature outside range

## **Proximity Sensor**

The use of Bluetooth® Smart allows the  $iGrill_{mini}$  to sense when a paired smart device moves in or out of range. The  $iGrill_{mini}$  will automatically wake and sleep at the below distances to conserve power:

- Sleep ~ 30 feet away
- Wake ~ 5 feet away



#### **Custom & Preset Alarms**

### Manage iPhone, iPad or iPod touch alarms:

If you are having issues hearing the alarms from the iDevices Connected app, try these steps.

- Open Settings on your smart device
- Tap "Notification Center"
- Choose the iDevices Connected app and make sure to enable notifications, including "Sounds" and "Alerts".

#### **NOTE**

Make sure the volume setting for your phone is properly set. If your sounds are off or set at a low setting, you may not hear the alarm properly.

### Manage iDevices Connected app alarms:

Within the app, tap "Set Preset" to the right of a connected probe's running temperature. This will bring you to your "Choose Preset" options.

#### **Preset Alarms:**

The iDevices Connected app offers preset alarms for many types of meats and cooking temperatures. Tapping a preset alarm will set it. You can also create your own custom preset alarm for any desired temperature. There are two different types of presets:

- Peak: Alarm will sound when probe temperature reaches set peak temperature.
- Range: Alarm will sound when probe temperature is above the high temperature or below the low temperature.

### Creating a custom preset alarm:

- Tap "Set Preset"
- Tap "Create New"



- Name your preset
- Set temperature(s)
- Tap "Save"

#### **NOTE**

Your custom preset will be saved in the "My Peak Presets" and "My Range Presets" sections of the alarm screen.

The iDevices Connected app will not display temperatures below -22° (-30°C) or above 572°F (300°C).

When your target temperature has been reached, the  $iGrill_{mini}$  will blink red and the iDevices Connected app alarm will alert you with a notification.

When a temperature reading goes outside your target range, the  $iGrill_{mini}$ 's Smart LED will turn red and the iDevices Connected app alarm will alert you.

## **Renaming Probes**

A probe can be renamed by tapping on the "Probe #" to the left of the running temperature, then:

- Naming your probe under "Probe Name"
- Choose a probe color from the "Probe Color Indicator" if needed
- Tap "Save" when done

### **Timer Tool**

The timer tool allows users to set up timers. An alert will appear when the timer runs out.

#### Create a new timer:

- Under "More" located at the bottom of the screen, tap "Timers"
- Tap "Create New" to create a new timer



- Add a timer title
- Set desired time length using scroll wheels
- Tap "Save" in the top right corner of the app. Start the timer by sliding it on in the Timers menu.

### Globe Tool

The globe tool will show other users of the iDevices Connected app. Tapping on a pin will display a user-posted message and picture\*. Take a look at what other cooks around the world have made to ignite ideas for your next cooking adventure!

\* You will only show up on the Globe if you share via Facebook.

## **Graph Tool**

The iDevices Connected app's Graph Tool illustrates the temperature progression over time for your probe as you cook.

Tap on the graph to get a more detailed look of your cook. Below the graph, tap "More". You will see options to export the graph as a CSV file or clear the history of the graph.

Clearing the history of the graph removes all data related to your cook.



## **Problem Solving**

The following information covers some of the most common troubleshooting issues with the  $\operatorname{iGrill}_{\min}$ . If you need further assistance, please review the  $\operatorname{iGrill}_{\min}$  FAQ page at idevicesinc.com/support or contact a member of our Customer Support Team at support@idevicesinc.com.

### My iGrill<sub>mini</sub> won't turn on.

If your  $iGrill_{mini}$  is brand new, please be sure to remove the plastic tab located in the battery compartment so that the battery can come into contact with the power terminals. If this does not resolve the issue or if your  $iGrill_{mini}$  is not brand new, please try replacing the battery with a single brand new CR2032 coin cell battery (available at local drugstores in the specialty battery section).

If you are still unable to turn on your  $iGrill_{mini}$ , please contact our Customer Support Team for further assistance by emailing support@idevicesinc.com.

## I'm having difficulty pairing my i $\operatorname{Grill}_{mini}$ with my i $\operatorname{Phone}$ , i $\operatorname{Pad}$ or i $\operatorname{Pod}$ touch.

If the  $iGrill_{mini}$  appears in your Bluetooth settings with the status "Not Connected", follow these steps from your Bluetooth settings menu:

- Tap the blue (i) to the right of the iGrill<sub>mini</sub> device name.
- Select the option "Forget this Device".
- Turn Bluetooth OFF on your smart device.
- Completely shut down your smart device.
- Separate the  $iGrill_{mini}$  from its base by firmly holding the base with one hand and gently pull the  $iGrill_{mini}$  top upwards with the other hand.
- While still powered on remove the  $iGrill_{mini}$  battery cover and press the reset button down with a pin until the light ring illuminates white.



- Replace the battery cover, ensuring the battery is in place.
- Power up your smart device and turn Bluetooth back on.
- Tap on the iDevices logo in the gray toolbar at the top of the app. Select your iGrill<sub>mini</sub> from the device manager. Your smart device will pair with the iGrill<sub>mini</sub> and you are ready to configure your settings and start cooking!

If you do not see the  $iGrill_{mini}$  in your Bluetooth® settings, please ensure that you are using the iDevices Connected app. If you experience further problems, please contact our Customer Support Team for further assistance.

I'm experiencing a problem with the iDevices Connected App

The iDevices Connected app requires iOS 7.0 or higher to operate.

If you are experiencing a problem with the iDevices Connected app, please try following the steps below to resolve any potential problems on the device-side:

- Make sure the  $iGrill_{mini}$  is paired with your smart device via Bluetooth and a temperature probe is plugged into the unit.
- Tap the Home button on the smart device.
- From the Home screen, double tap the Home button again. This will zoom out of the home screen and display any/all previously running apps on your smart device.
- Swipe to locate the "iDevices Connected" app.
- Swipe the "iDevices Connected" app image upward to close the existing session.
- Tap the Home button on your smart device to close the Multitasking Bar.
- Re-open the iDevices Connected app by tapping the app icon on the Home screen.

If you are still experiencing a problem after completing these steps, please contact our Customer Support Team for further assistance.



# Frequently Asked Questions

I don't have a device with which to pair my  $iGrill_{mini}$ , can I still use it?

No, the  $iGrill_{mini}$  does not have a screen to display its temperature readings and requires the use of the iDevices Connected app and a compatible Bluetooth Smart device.

I'm frozen on my home screen when I attempt to enter the iDevices Connected app.

Go to your iPhone, iPad or iPod touch home screen and double-click your home button. Close your open apps by swiping each app towards the top of the smart device. Make sure to close the iDevices Connected app. This will allow you to re-launch the app correctly.

## Disclaimer

The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Children should be supervised and instructed not to play with the appliance.

For detailed instructions regarding the iDevices Connected app, please download the iDevices Connected app User Manual from the iDevices website www.idevicesinc.com.

## Regulations

#### **FCC COMPLIANCE STATEMENT:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device



must accept any interference received, including interference that may cause undesired operation.

#### **INFORMATION TO USER:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the distance between the equipment and the receiver
- Connect the equipment to outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

### Canada – Industry Canada (IC)

This device complies with Industry Canada license-exempt RSS Standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme avec Industrie Canada exempts de licence standard RSS (s). Son fonctionnement est soumis aux deux conditions suivantes:

(1) cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interference, y compris celles pouvant causer un mauvais fonctionnement de l'appereil.

