



DISC LOCK INSTRUCTIONS

 
120 DECIBELS ALARM

The alarm is loud and has a decibel rating of 120. Please avoid placing the lock next to your ears when the alarm is activated. The extremely loud sound can damage your hearing.

ALARM DISC LOCK ZS6, ZD6, ZDL-001, ZDL-006

INSTALL BATTERY

1. Insert the key and rotate clockwise to unlock.
 2. Remove the component lid by loosening the set screw inside the disc's slide.
 3. Take out the battery compartment.
 4. Open the waterproof lid.
 5. Install the CR2 lithium battery.
 6. Reassemble the parts.
- ※ Make sure the waterproof lid is firmly closed to ensure that waterproofing is not affected.

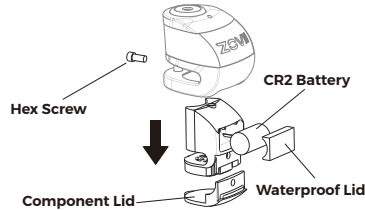

LOCKING WITH ALARM ACTIVATED

1. Install disc lock on the brake disc.
2. Push down the key barrel halfway and listen for 1 short beep. Then, continue to push down the key barrel until it clicks into place.
3. After 5 seconds, the siren will sound a single long beep to indicate the alarm is activated.
4. If the lock is hit or vibrated, the siren will emit five rapid beeps as a warning.
 - ※ If no further movement is detected within 15 seconds, the alarm will rearm automatically.
 - ※ If movement continues, the siren will burst out a 120dB alarm for 15 seconds.
5. The cycle repeats until no movement is detected.



ALARM ON Single beep



ALARM OFF Double beeps



 
LOCKING WITH ALARM DEACTIVATED

1. Push down the key barrel halfway and listen for 2 short beeps. Then, continue to push down the key barrel until it clicks into place. The alarm function is deactivated.

ALARM DISC LOCK ZD10, ZD10S, ZD15S

INSTALL BATTERY

1. Insert the key and rotate clockwise to unlock.
 2. Remove the component lid by loosening the set screw inside the disc's slide.
 3. Take out the battery compartment.
 4. Open the waterproof lid.
 5. Install the CR2 lithium battery.
 6. Reassemble the parts.
- ※ Make sure the waterproof lid is firmly closed to ensure that waterproofing is not affected.

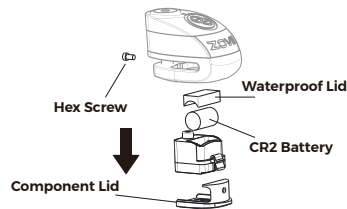

LOCKING WITH ALARM ACTIVATED

1. Install disc lock on the brake disc.
2. Insert the key into the key barrel, ensuring the pin is vertically aligned with the pin hole. Then, push down the locking pin and rotate anti-clockwise to lock. Listen for 1 short beep.
3. After 5 seconds, the siren will sound a single long beep to indicate the alarm is activated.
4. If the lock is hit or vibrated, the siren will emit five rapid beeps as a warning.
 - ※ If no further movement is detected within 15 seconds, the alarm will rearm automatically.
 - ※ If movement continues, the siren will burst out a 120dB alarm for 15 seconds.
5. The cycle repeats until no movement is detected.



ALARM ON Single beep



ALARM OFF Double beeps



 
LOCKING WITH ALARM DEACTIVATED

1. Insert the key into the key barrel, ensuring the pin is vertically aligned with the pin hole. Then, push down the locking pin and rotate anti-clockwise to lock. Listen for 2 short beeps. The alarm function is deactivated.

DISC LOCK ZK6, ZV6, ZDL-004

HOW TO LOCK


1. Install disc lock on the brake disc.
2. Push down the key barrel to lock.
3. To unlock, insert the key into the key barrel and rotate clockwise.

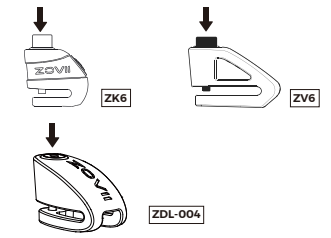

DISC LOCK ZV10, ZVS14, ZDL-005

HOW TO LOCK

 1. Install disc lock on the brake disc.
2. Insert the key into the key barrel, ensuring the pin is vertically aligned with the pin hole. Then, push down the locking pin and rotate anti-clockwise to lock.
3. To unlock, insert the key into the key barrel and rotate clockwise.

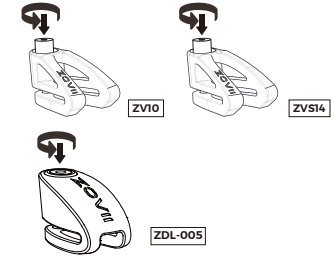

BATTERY LIFE

CR2 Lithium Battery

The typical life span of a CR2 lithium battery is approximately 8-12 months. However, frequent triggering or extreme temperatures could shorten battery life.

KEY REGISTRATION & REPLACEMENT

Key Registration Before First Use:

1. Locate your keycode:
 - ※ For standard models: Find the 2-letter + 6-digit code on the key tag next to the physical key.
 - ※ For tagless models: The keycode is laser-etched on the side of the physical key.
2. Register your key at: www.zoviitech.com

Replacement Keys:

- ※ Available for order through the Zovii website.
- ※ You must provide your registered keycode.
- ※ Visit: www.zoviitech.com.



TROUBLE SHOOTING

1. Alarm not working - Check the battery and ensure your lock is in alarm mode.
2. Lock making a constant sound - Replace the battery.
3. Alarm ringing continuously, broke off, and gave a beep warning sound - Replace the battery.
4. Alarm module is damaged - The alarm module is replaceable. Please contact your local authorized dealers for details.

WARRANTY

Coverage:

Zovii provides a one-year manufacturer's warranty valid from the date of purchase, covering:

- ※ Electronic module failures from non-man-made causes.
- ※ Mechanical part failures from non-man-made causes.

Exclusions:

This warranty does not cover:

- ※ Surface damage or cosmetic imperfections.
- ※ Damage caused by misuse, accidents, or unauthorized modifications.

Claims Process:

For full warranty service or additional details:

1. Visit our warranty details at www.zoviitech.com.
2. Contact your local authorized dealer.

Notes:

- ※ Proof of purchase required for all warranty claims.
- ※ Warranty applies only to original purchaser.

CUSTOMER CARE

Email us at info@zoviitech.com if you have any questions about the lock product.