

# USER'S MANUAL

3.5 / 6.5 CU FT - SPH / SPR SERIES BLASTERS





### **WARNING**

These products and equipment are not under any circumstances to be used with sand or silica products of any type and use of such materials will void any warranty. Also, as with the use of any product or equipment you must be sure to use the proper safety equipment and to properly train your employees in the use of any equipment or products. The manufacturer, wholesaler and distributor assume no responsibility arising from the failure to use proper safety equipment or the failure to properly train employees in the use of products and equipment.



### **WARNING**

**INCLUDES** 

### **Read Manual**

Failure to read, understand & follow **all** safety and operation procedures in this manual can cause serious injury or death. Manuals that are lost, incomplete, or damaged must be replaced immediately.

Manual P/N: PB-MAS001



# & USING THIS MANUAL &

Thank you for your purchase of a Pirate Brand® SPH or SPR Series Blaster. It is important to note that all Pirate Brand® blasting equipment is designed to be safe when used properly, however, misuse of any abrasive blasting equipment is dangerous and can result in the severe injury or death of the operator and others in the vicinity of the blasting equipment. In order to protect yourself and those around you, read and follow all sections of this manual & warning labels located on the blasting equipment.

#### **Definition Of Terms Used In This Manual**

Abrasive: A granular material used for blasting the surface of an object. Also referred to as "Media."

Blow-down: The automatic or manual release of air from a pressurized vessel. Also referred to as "Depressurize."

Control Handle: A required device that allows the blaster to be remotely started and stopped.

<u>Depressurize</u>: The automatic or manual release of air from a pressurized vessel. Also known as "Blow-down".

<u>Pressure Hold System</u>: Any blasting system in which the Pressure Vessel remains pressurized when the control handle is released. Also known as a Manual Blow-down System.

<u>Pressure Release System</u>: Any blasting system in which the Pressure Vessel is automatically depressurized when the control handle is released. Also known as an Automatic Blow-down System.

<u>Pressure Vessel</u>: The enclosed area of the blaster in which abrasive is contained and filled with pressurized air when blasting.

<u>Pressurize</u>: To fill the pressure vessel with compressed air.

<u>Properly Trained</u>: A person who can be considered "properly trained" must have successfully completed a sandblasting training course that focuses on the safe operation of stationary or portable abrasive blasters in the 1.5 - 20 cu. ft. capacity range. They must also have read and understood this manual in its entirety.

<u>Silica</u>: A hazardous substance which is contained in many naturally occurring abrasives. Dust produced by blasting with abrasives containing silica can cause respiratory disease. Do not use abrasive containing silica under any circumstance, even when respiratory protective equipment is being used.

#### Safety Symbols

The safety symbols shown below exist for the safety and protection of the operator and those in the vicinity of the Abrasive Blaster. The descriptions below explain how they are used in relation to the blasting equipment.



OF



WARNING: This symbol calls attention to a potentially hazardous situation that could result in serious injury or death if the instructions associated with the symbol are not followed. The warning triangle will be displayed throughout the manual to denote instructions to which special attention should be paid.



OR



DANGER: This symbol calls attention to a potentially hazardous situation that <u>WILL</u> result in serious injury or death if the instructions associated with the symbol are not followed. The warning triangle will be displayed throughout the manual to denote instructions to which special attention should be paid.



# **A WARNING A**

- All persons who will be operating or will be in the vicinity of the Abrasive Blaster during its operation must receive proper training on how to safely operate the equipment and be informed of the potential hazards involved. In addition to proper training, all persons who will be operating or will be in the vicinity of the Abrasive Blaster during its operation must read, understand and follow all procedures described in the user's manual. For replacement manuals, please contact your distributor or visit www.pirate-brand.com.
- Respiratory protection is mandatory for all persons operating or located in the vicinity of the Abrasive Blaster. Follow all OSHA and NIOSH requirements for breathing equipment and supplied air standards.
- Pressurized Vessels contain large amounts of stored energy and can cause severe injury or death if safety procedures are not followed. <u>Never</u> perform maintenance or attempt to open a Pressure Vessel for any reason while it is Pressurized. <u>Always</u> Depressurize and properly disconnect equipment from its air source before performing any maintenance. <u>Do not</u> modify, grind or weld on the pressure vessel for any reason. Doing so will void the ASME certification. <u>Do not</u> use damaged pressure vessels.
- The use of proper remote control systems (commonly referred to as Deadman controls) are required when using abrasive blasters. **Never** operate the Abrasive Blaster without remote controls. **Never** use bleeder type control handles, such as Clemco® or A-BEC® style handles, with SPH or SPR series blasters as they can cause a hazardous situation where the blaster will not shut off when the handle is released.
- All persons who will be operating or will be in the vicinity of the Abrasive Blaster during its operation must protect themselves with the proper safety equipment and use of common sense. Safety equipment including but not limited to Hearing, Eye, Body and Lung protection are required. Abrasive blasters and the objects being blasted can be heavy and can lead to severe injury or death if they fall over. Always follow all safety requirements of OSHA and NIOSH.
- Use only Genuine Pirate Brand® replacement parts when performing maintenance on the Abrasive Blaster. **Do not** modify the equipment for any reason. Use of modified or non-Pirate Brand® parts can cause an unsafe situation and will void your warranty.
- <u>Never</u> use malfunctioning or damaged equipment. Before each use, inspect the Abrasive Blaster for proper function.
- Supply only cool, dry, compressed air that is free of debris to the Abrasive Blaster. Moisture or debris that reaches the remote control system can cause an unsafe situation. **Do not** supply compressed air to the blaster that exceeds 150 psi.
- <u>Do not</u> use abrasive blasters in areas that could be considered a hazardous location as described in the National Electric Code NFPA 70, Article 500. <u>Never</u> use the Abrasive Blaster in wet environments. <u>Always</u> connect electrically controlled abrasive blasters to a Ground Fault Circuit Interrupter (GFCI).




# \* TABLE OF CONTENTS \*

Using This Manual	2
Definition Of Terms	
Safety Symbols	
WARNINGS	
Safety Label Information	
How SPR Systems Work	
How SHORT CYCLE Systems Work	
How SPH Systems Work	
Door Interlock Kit Instructions	
OPERATING PROCEDURES	
Set-Up 10 Before You Blast 11 Blasting 12	
MAINTENANCE PROCEDURES	
TROUBLESHOOTING	
Warranty	
Pressure Vessel Parts Lists	
Pipe String Parts Lists	
Control Handle Parts Lists	
Valve Parts Lists	
Blasting Set-Up	52
Available Accessories	54
Blasting Charts	56
Distributed By:	Contact Info: For manual updates visit the Pirate Brand® website at:
	WWW.PIRATE-BRAND.COM



# & WARNING LABEL LOCATIONS &

- 1 Explosion Hazard (X2)
- 2 Severing Hazard (X2)
- 3 Read Manual
- 4 Crush Hazard
- 5 Exhaust Hazard
- 6 Breathing Hazard
- 7 Hearing Hazard
- 8 Eve Hazard
- 9 Pressurized Hose
- 10 Spray Hazard
- 11 WARNING Label
- 12 Made In USA
- 13 Series Label
- 14 Inlet Label
- 15 Outlet Label
- 16 12VDC Label
- 17 Drain Label
- 18 Pirate Brand® Label

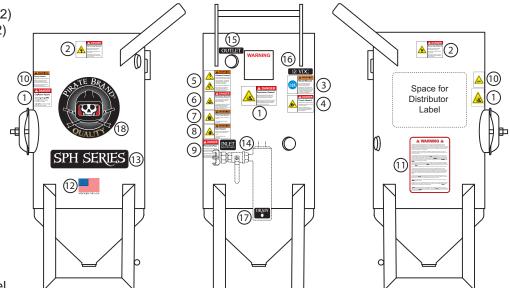



### Labels must be replaced when they are no longer readable!

Replacement Label Pack P/N: PB-LPS001







### Instructions For Installing Replacement Label Pack

- 1. Completely remove old label and clean area thoroughly before applying new label.
- 2. Apply replacement labels in locations as described above or as close as possible if area is obstructed
- 3. Exhaust Hazard Label (#5) Is only to be used with SPR & Short-Cycle Series Abrasive Blasters. **DO NOT** apply to SPH Series Abrasive Blasters.
- 4. 12 VDC Label (#16) is only to be used on electric remote controlled systems. **DO NOT** apply label to systems with pneumatic remote controls.
- 5. Choose correct Series Label (#13), **DO NOT** apply both series labels. "SPR Series" labels are for pressure release systems, "SPH Series" labels are for Pressure Hold systems.


# \* HOW SPR SYSTEMS WORK \*

# (PRESSURE RELEASE)

**WARNING**: This section of the manual is designed to give you a general understanding of how the Abrasive Blaster functions. **All** sections of this manual must be read and understood before operating the equipment.

#### **ADDING ABRASIVE**

Abrasive is added through the hole in the top of the Abrasive Blaster where the Pop-up and its seat are located. When abrasive is added, it flows down through the hole, around the Pop-up, and down to the bottom of the pressure vessel where it will exit through the Metering Valve when blasting is started.

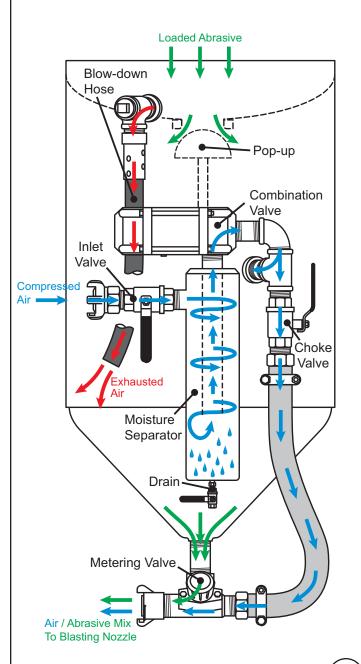


#### **PRESSURIZATION**

When a compressed air source (such as an air-compressor) is connected to the inlet of the Abrasive Blaster and the Inlet Valve is opened. compressed air flows through the Moisture Separator and reaches the Combination Valve where it is stopped. When the control handle is activated, the Combination Valve pinches the Blow-down Hose and air flows through the Combination Valve into the pressure vessel causing the Pop-up (located internally) to seal against its seat. The pressure vessel is now sealed and pressurized. Air will also continue past the Choke Valve to the Metering Valve where it is mixed with abrasive. The mixture of compressed air will now exit the Abrasive Blaster through a blast hose and nozzle connected to the coupling on the Metering Valve and blasting begins. It is important to note that in SPR abrasive blasters equipped with MPV Metering Valves, some abrasive will collect at the base of the valve causing the blast hose to pulsate and spray abrasive erratically for a short time when blasting is started. This is normal and will not hurt the Abrasive Blaster.

#### **DEPRESSURIZATION (BLOW-DOWN)**

 When the control handle is released in a pressure release (SPR) system, the Combination Valve automatically closes stopping the flow of compressed air and releasing the Blow-down Hose. The compressed air remaining in the pressure vessel is released through the Blow-down Hose and blasting ends.





# \* HOW SHORT CYCLE SYSTEMS WORK \* (REMOTE BLOW-DOWN)



**WARNING**: This section of the manual is designed to give you a general understanding of how the Abrasive Blaster functions. **All** sections of this manual must be read and understood before operating the equipment.

#### **ADDING ABRASIVE**

Abrasive is added through the hole in the top of the Abrasive Blaster where the Pop-up and its seat are located. When abrasive is added, it flows down through the hole, around the Pop-up, and down to the bottom of the pressure vessel where it will exit through the Metering Valve when blasting is started.

#### PRESSURIZATION / DEPRESSURIZATION (BLOW-DOWN)

Short Cycle systems feature a Remote Blow-Down Palm Button which is used to pressurize/depressurize the Abrasive Blaster.

 
When a compressed air source (such as an air-compressor) is connected to the inlet of the Abrasive Blaster and the Inlet Valve is opened, compressed air flows through the Moisture Separator (if equipped) and reaches the Combination Valve where it is stopped. When the Blow-Down Palm Button is pulled out, the Combination Valve pinches the Blow-down Hose and air flows through the Combination Valve into


the pressure vessel causing the Pop-up (located internally) to seal against its seat. The pressure vessel is now sealed, pressurized and ready to blast

When the Blow-Down Palm Button is pressed, the Combination Valve automatically closes stopping the flow of compressed air and releasing the Blow-Down Hose. The compressed air remaining in the pressure vessel is released through the Blow-down Hose and the Abrasive Blaster is depressurized.

#### **BLASTING**

Blasting can only take place in Short Cycle systems when the Blow-Down Palm Button is in the pulled position. When the control handle is activated, the Automatic Air Valve and Metering Valve open allowing compressed air & abrasive to flow and mix. The mixture of compressed air and abrasive will now exit the Abrasive Blaster through a blast hose and nozzle connected to the coupling on the Metering Valve and blasting begins.



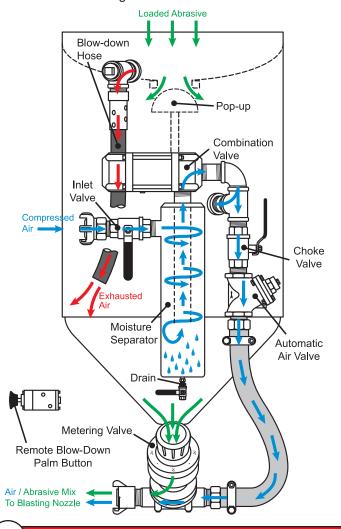



# & HOW SPH SYSTEMS WORK &

(PRESSURE HOLD)

**WARNING**: This section of the manual is designed to give you a general understanding of how the Abrasive Blaster functions. **All** sections of this manual must be read and understood before operating the equipment.

#### **ADDING ABRASIVE**

 
Abrasive is added through the hole in the top of the Abrasive Blaster where the Pop-up and its seat are located. When abrasive is added, it flows down through the hole, around the Pop-up and, down to the bottom of the pressure vessel where it will exit through the Metering Valve when blasting is started.


#### **PRESSURIZATION**

Before pressurization can take place in a pressure hold system, the Blow-down Valve must be closed. Then, when a compressed air source (such as an air-compressor) is connected to the inlet of the Abrasive Blaster and the Inlet Valve is opened, compressed air can flow through the Moisture Separator and into the pressure vessel causing the Pop-up (located internally) to seal against its seat allowing the pressure vessel to become pressurized. When the control handle is activated, the Auto Air Valve and Metering Valve open allowing compressed air & abrasive to flow and mix. The mixture of compressed air and abrasive will now exit the Abrasive Blaster through a blast hose and nozzle connected to the coupling on the Metering Valve and blasting begins.

#### **DEPRESSURIZATION (BLOW-DOWN)**

When the control handle is released in a pressure hold (SPH) system, the pressure vessel remains filled with compressed air. The compressed air remaining in the pressure vessel is released when the inlet valve is manually closed and the blow-down valve is manually opened.



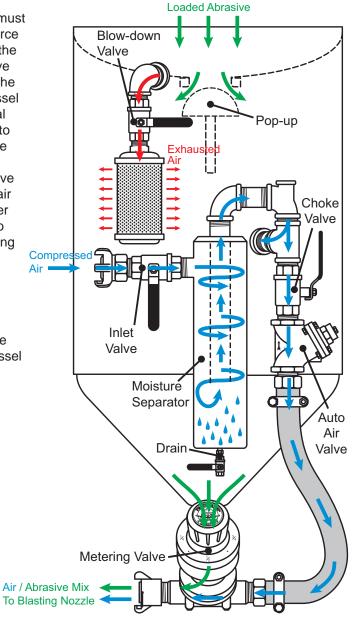



# 2 DOOR INTERLOCK KITS 2




**WARNING**: It is important when installing a door interlock kit that it is installed at the proper position on the abrasive blaster control system. Use the diagrams on this page when installing a door interlock system.


### **Pressure Release Systems**

#### **Pneumatic Controls**


Note: Pressure release systems with pneumatic controls will require the addition of a 90 micron strainer. Part Number - 888-2301-90290PB

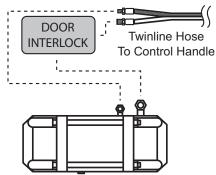


#### **Electric Controls**

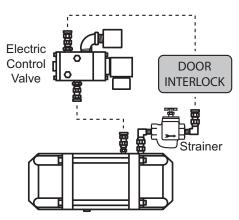

### **Short Cycle Systems**

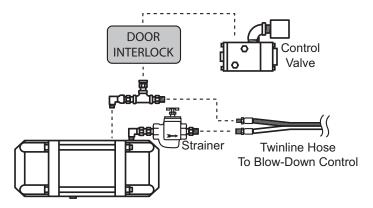

### **Pressure Hold Systems**

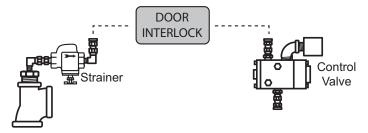



# OPERATING PROCEDURES



**WARNING**: The Procedures provided in the Operating Procedures section of the manual are designed to provide basic information on how to safely operate the features of Pirate Brand® SPH/SPR Series Abrasive Blasters. Only personnel thoroughly trained in abrasive blasting should operate the Abrasive Blaster.

### **SETTING-UP THE BLASTER**

#### INSPECT PRESSURE VESSEL

When you receive your Abrasive Blaster, remove the Handway Assembly and check for foreign items that may have fallen into the Abrasive Blaster through the Pop-up opening. Remove any foreign materials and reinstall the Handway Assembly.



**DANGER**: Never perform any maintenance or attempt to open the Abrasive Blaster in any way while it is pressurized. The violent release of compressed air and propelled objects will cause serious injury or death.

# SECURE BLOW-DOWN HOSE (STATIONARY BLASTERS)

The longer Blow-down Hose used on stationary Abrasive Blasters must be secured to a stationary surface before using the Abrasive Blaster. If not secured the Blow-down Hose will whip around violently when exhausting. Choose an appropriate location to direct exhausted air that is not near personnel.



**DANGER**: Blow-down hoses that extend more than 12" from the Combination Valve must be secured to a stationary surface to prevent injury.

#### **RE-TIGHTEN HANDWAY ASSEMBLY**

After the Abrasive Blaster has been pressurized for the first time, tighten the nut on the Handway Assembly. Tightening the nut on the Handway Assembly should also be done any time after the handway has been removed for maintenance before and after the next pressurization.




**DANGER**: Never perform any maintenance or attempt to open the Abrasive Blaster in any way while it is pressurized. The violent release of compressed air and propelled objects will cause serious injury or death.

#### **PURGE AIR SUPPLY HOSE**

Before connecting the Air Supply Hose to the Abrasive Blaster, purge the hose of any moisture or foreign debris. Standing water or moisture in the air line will cause degraded performance of the Abrasive Blaster. Air supplied to the Abrasive Blaster must be clean, dry and cool.

#### **ADJUST UMBRELLA (IF EQUIPPED)**

On stationary abrasive blasters equipped with an Umbrella, adjust the Umbrella so there is a 1/4" gap between the bottom of the Umbrella and the abrasive heaped around the Pop-up entry. Start with the umbrella at a height of about 2" and pour your abrasive of choice onto the center of the umbrella. Keep adding abrasive until a mound forms over the umbrella and around the opening and the abrasive starts falling into the pressure vessel. Measure the distance between the bottom of the umbrella and the mound forming around the Pop-up opening and lower the umbrella so a 1/4" gap is achieved. Different abrasives require different heights, so readjust as needed.

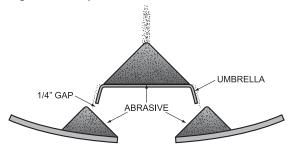



**DANGER:** Never reach into the Pop-up opening while filling the Abrasive Blaster. It can close without warning causing severe injury or death.

#### ATTACH REMOTE CONTROL HANDLE

Attach the Remote Control Handle to the Blast Hose near the Nozzle with hose clamps or heavy wire ties. Form a loop of Twinline/Control Cord that comes 6" away from the Blast Hose, runs 6" parallel to the Blast Hose, and comes 6" back to the Blast Hose. Using duct tape, attach the Twinline/Control Cord to the Blast Hose where the loop ends by wrapping the tape around the Twinline/Control Cord twice and then around the Blast Hose. This creates a strain-relief attachment and is only necessary on the first connection near the Control Handle. Starting from the Nozzle end of the Blast Hose, attach the Twinline/Control Cord to the blast hose by wrapping duct tape around both every 3 feet.





# OPERATING PROCEDURES BEFORE YOU BLAST

#### PRE-BLAST CHECK

Before each use of the Abrasive Blaster, it must be checked to ensure it is in a safe condition to be used. Closely examine all components of the Abrasive Blaster for signs of excessive wear, worn out seals and hoses, or damaged components. If any component of the Abrasive Blaster is found to be damaged or worn, it must be replaced before blasting.



**WARNING**: Never use an Abrasive Blaster if any components are damaged or worn. Damaged or worn parts must be replaced before use.

#### **ADDING ABRASIVE**

Before filling the Abrasive Blaster, make sure the inlet valve is closed and the pressure vessel is in a depressurized state. Abrasive is added by pouring it into the top of the Abrasive Blaster where it can flow around the Pop-up and into the pressure vessel. Do not overfill the Abrasive Blaster. Do not allow foreign materials to enter the Abrasive Blaster. It is recommended that a screen be used to prevent foreign objects from entering the Abrasive Blaster.



**DANGER**: Never reach into the Pop-up opening while filling the Abrasive Blaster. It can close without warning causing severe injury or death.



**WARNING**: Pirate Brand® Abrasive Blasters may not be used with abrasives containing silica. Never use abrasives containing silica.



 
**WARNING**: Never fill the abrasive blaster with the inlet valve in the open position. Always close the inlet valve before filling.



**WARNING**: Electrically conductive abrasives may not be used with the abrasive blasters using Electric Remote Control Systems without changing to sealed strain relief connectors.



**WARNING**: Never attempt to move or transport the Abrasive Blaster when it contains Abrasive.



See page 11 for diagram of blaster components

#### **REMOTE CONTROL SYSTEM**

Abrasive Blasters must use a Remote Control System (commonly known as deadman) to start and stop abrasive blasting. Remote Control Systems can be electric or pneumatic.

Electric: Connect the Remote Control Handle to the Abrasive Blaster's female twist-lock connector. Connect a 12 VDC power source (12V Battery or Optional 120 VAC to 12 VDC converter) to the Abrasive Blaster's male twist-lock connector.

Pneumatic: Connect the Remote Control twinline hose to the Abrasive Blaster using the supplied threaded or quick-disconnect fittings. The twinline hose is supplied with different size fittings on each of the 2 lines to prevent them from being connected to the Abrasive Blaster incorrectly. Do not modify or reverse these fittings. It is not recommended that Pneumatic Remote Control Systems are used when the Blast Hose length will be longer than 100 feet.



**WARNING**: Never operate the Abrasive Blaster without a Remote Control System.



WARNING: Never use bleeder type Remote Control Handles such as Clemco® or A-BEC® style handles with Pirate-Brand® SPH/SPR Series equipment as they may cause the Abrasive Blaster to start without warning or to not stop the Abrasive Blaster when released.



**WARNING**: Never reverse or modify pneumatic Remote Control twinline hose fittings.



**DANGER**: Always use caution around electric sources to avoid electric shock. Do not operate electrical remote controlled Abrasive Blasters in wet or other hazardous environments

#### CONNECTING HOSES

Before connecting hoses to the Abrasive Blaster, make sure the Inlet Valve is closed and the compressed air supply is shut off. Connect the hose coming from the compressed air supply to the inlet on the Abrasive Blaster and secure with safety clips. Connect the blast hose to the coupling on the Metering Valve at the base of the Abrasive Blaster and secure with safety clips or mechanics/safety wire when using BIG GUN couplings.



WARNING: Always use safety devices like clips and whip-checks (safety cables) at hose connections. BIG GUN couplings require the use of safety/mechanics wire for proper securing.



# OPERATING PROCEDURES BLASTING

#### PRESSURIZING THE ABRASIVE BLASTER

Before pressurizing the Abrasive Blaster make sure the following conditions occur:

- <u>All</u> "BEFORE YOU BLAST" procedures have been followed.
- The Inlet Valve is closed.
- The Blow-down Valve is closed (SPH systems only).
- The Remote Control Handle is released.
- All hose connections are secure and have a safety clip or safety/mechanics wire installed.
- The Abrasive Blaster is set up in a safe and level location where all people in the vicinity are aware of its presence.
- All necessary safety equipment is present and being worn by all people in the vicinity of the Abrasive Blaster.
- Only personnel who have been thoroughly trained and have read and understand the manual are in the vicinity of the Abrasive Blaster

When these conditions are met, turn on the compressed air source and open the Inlet Valve on the Abrasive Blaster. The Abrasive Blaster is now ready to begin blasting.



**DANGER**: Never perform any maintenance or attempt to open the Abrasive Blaster in any way while it is pressurized. The violent release of compressed air and propelled objects will cause serious injury or death.



**DANGER**: Never supply compressed air exceeding 150 PSI (10.3 BAR) to the Abrasive Blaster.



**WARNING**: Blast Hose may kick back when Remote Control Handle is activated. Be prepared and brace yourself for kick back. Blasters with MPV Metering Valves will normally kick back erratically for a short time when started.



WARNING: All those who will be in the area while blasting is to occur must be properly trained, read the manual, and be wearing safety equipment to protect from the hazards described by the WARNING and DANGER labels located on the Abrasive Blaster. If any labels are worn or missing they must be replaced.



**WARNING**: 100 PSI Minimum. Failure to provide a constant air supply of at least 100 PSI can cause excessive wear to multiple components and the control system to operate improperly.

#### **USING THE ABRASIVE BLASTER**

After pressurizing the Abrasive Blaster, it is ready to begin blasting. Press safety button or push down safety flap and squeeze the Remote Control Handle to start the flow of abrasive and compressed air. Adjustments to the air/abrasive mixture can be made by turning the handle on the Metering Valve. There will be a delay between a change made at the Metering Valve and what comes out of the Nozzle depending on the length of Blast Hose being used. Adjustments to the Metering Valve can only be made when Abrasive Blaster is not in operation.

To stop the flow of compressed air and abrasive, release the Remote Control Handle and blasting will stop after a short time. How long it takes for blasting to stop will depend on the length of Blast Hose being used. On Pressure Release (SPR) Abrasive Blasters, the pressure vessel will automatically exhaust through the Blow-Down Hose causing a rush of compressed air that can propel any loose objects, debris or spilled abrasive at nearby personnel. For this reason, personnel must not be located near a Pressure Release (SPR) Abrasive Blaster when blasting is taking place.



**DANGER**: Airborne particles produced by abrasive blasting can cause respiratory disease. All persons operating or located near the blasting site must wear approved NIOSH / OSHA approved breathing equipment. Never use abrasive containing silica.



**DANGER**: Never stand near a Pressure Release (SPR) Abrasive Blaster when it is in operation. The release of the Remote Control handle will cause a sudden and violent release of compressed air from the exhaust hose without warning. Only Adjust the Metering Valve after the Abrasive Blaster has completely depressurized.



**WARNING**: Only personnel thoroughly trained in abrasive blasting should operate the Abrasive Blaster. This manual only provides basic information on how to safely operate the features of Pirate Brand® SPH/SPR Series Abrasive Blasters.



**WARNING**: Never point the blast Nozzle at yourself, other people, or the Abrasive Blaster.



**WARNING**: The Choke Valve must be completely open when blasting or damage to equipment will occur.



# PERATING PROCEDURES BLASTING

#### DRAINING THE MOISTURE SEPARATOR

During blasting, the Moisture Separator must be periodically drained. The best way to accomplish this is to leave the drain valve slightly open all the time so it constantly leaks air and forces moisture out.



**WARNING**: The Abrasive Blaster must be supplied with clean, cool, dry compressed air in order to function properly. The included Moisture Separator on the Abrasive Blaster may not be sufficient to achieve this depending on the quality of the air being supplied.

#### SHUTTING DOWN THE ABRASIVE BLASTER

When blasting is complete, the Abrasive Blaster will need to be shut down. Make sure the Remote Control Handle is released then close the Inlet Valve. Non Short-Cycle Pressure Release (SPR) Abrasive Blasters will already be depressurized. To depressurize Short-Cycle blasters, activate the remote mounted blow-down button. To depressurize Pressure Hold (SPH) Abrasive Blasters, slowly open the Blow-down Valve to allow the compressed air stored in the Abrasive Blaster to escape.




**WARNING**: Never operate a Pressure Hold (SPH) Abrasive Blaster without a muffler on the Blow-down valve. Without the muffler, the sudden release of compressed air can cause severe injury.


#### **DISCONNECTING AIR SUPPLY HOSE**

After the Abrasive Blaster has been depressurized, and the Inlet Valve has been closed, the Compressed Air Supply Hose may still contain pressure which must be released before disconnecting the hose. To do this shut off the compressed air at its source, and open the Drain Valve on the Abrasive Blaster. Slowly open the inlet valve on the Abrasive Blaster. The compressed air stored in the Compressed Air Supply Hose can now escape through the Drain Valve. When you no longer hear air escaping through the drain valve, squeeze the Compressed Air Supply Hose to confirm the absence of compressed air. After confirming the absence of compressed air in the Compressed Air Supply Hose it is ready to be disconnected.



**DANGER**: Never disconnect any compressed air supply hose without first performing the "DISCONNECTING AIR SUPPLY HOSE" procedure described above. Failure to do so can cause the hose to blow off violently injuring or killing nearby people.

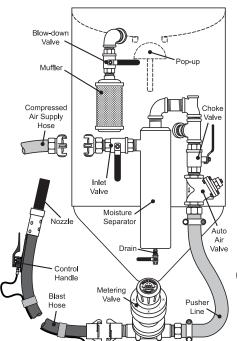

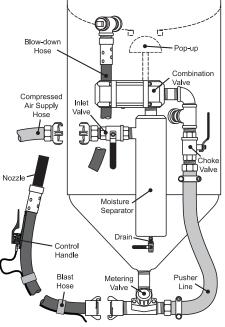



# & MAINTENANCE PROCEDURES &

### **Maintenance Schedule**



**DANGER**: Never perform any maintenance or attempt to open the Abrasive Blaster in any way while it is pressurized. The violent release of compressed air and propelled objects will cause serious injury or death.



**WARNING**: Maintenance procedures are to be performed by experienced qualified personnel only. Failure to perform maintenance procedures correctly at the intervals specified below can lead to performance problems and equipment failure, and will void the equipment warranty.

	Procedure to be Performed	Maintenance Interval
1	Inspect Personal Protective Equipment (PPE)  Including but not limited to: Respirators, Airline Filters, Carbon-Monoxide Monitors, Hearing Protection, Eye Protection, Foot Protection, Protective Clothing & Gloves.  Reference www.osha.gov 29 CFR 1910.132 - General Requirements (PPE) 29 CFR 1910.133 - Eye (PPE) 29 CFR 1910.134 - Respiratory (PPE) 29 CFR 1910.136 - Feet (PPE) 29 CFR 1910.138 - Protective Clothing & Gloves (PPE) 26 CFR 1926.101 - Hearing (PPE)	Every 8 Hours Of Use
2	Inspect Remote Control Handles and Control Hose/Cord	Every 8 Hours Of Use
3	Inspect Blast Hose, Couplings & Gaskets	Every 8 Hours Of Use
4	Inspect Blasting Nozzle	Every 8 Hours Of Use
5	Inspect Air Hose, Couplings & Gaskets	Every 8 Hours Of Use
6	Inspect & Clean Blow-down Muffler (If Equipped)	Every 40 Hours Of Use
7	Inspect Blow-down Hose Assembly (If Equipped)	Every 200 Hours Of Use
8	Inspect Pop-Up & Pop-Up Gasket	Every 200 Hours Of Use
9	Service Metering Valve	Every 600 Hours Of Use
10	Service Auto Air Valve (If Equipped)	Every 600 Hours Of Use
11	Service Combination Valve (If Equipped)	Every 600 Hours Of Use
12	Service Control Valve(s) (If Equipped)	Every 600 Hours Of Use

Descriptions of maintenance procedures referenced in this table are located on the next page.



# MAINTENANCE PROCEDURES &

### **Procedure Details**

#### 1. Inspect Personal Protective Equipment (PPE)

Inspect ALL Personal Protective Equipment (PPE) for proper fit, condition & operation as designed. Replace, repair, or be fitted as needed.

#### 2. Inspect Remote Control Handles and Control Hose/Cord

#### **Pneumatic Remote Control Systems:**

Inspect Control Handle for damage making sure the Safety Flap/Lever Lock/Button is in good working order and replace or repair as needed. Inspect twinline hoses and replace if leaks, areas that show abrasion, or soft spots are found.

#### **Electric Remote Control Systems:**

Inspect Control Handle for damage making sure the Safety Flap/Lever Lock/Button is in good working order and replace or repair as needed. Inspect control cord and replace if damaged plug ends, areas that show abrasion, exposed wires, or cracks are found.

#### 3. Inspect Blast Hose, Couplings & Gaskets

Inspect Blast Hose for leaks, abrasion & soft spots, and replace as needed. Inspect couplings for damage, leaks & wear, and replace as needed. Inspect coupling gaskets for leaks & wear, and replace as needed. Always use safety clips & whip checks (safety cables) at Blast Hose connections. BIG GUN couplings require the use of safety/mechanics wire for proper securing.

#### 4. Inspect Blasting Nozzle

Inspect the Blasting Nozzle for wear and proper bore diameter. Replace the Blasting Nozzle when the bore diameter has worn to 1/16" wider than its original diameter. Example: replace a #5 nozzle (5/16" bore) when the bore reaches 3/8"

#### 5. Inspect Air Hose, Couplings & Gaskets

Inspect Air Hose for leaks, abrasion & soft spots, and replace as needed. Inspect couplings for damage, leaks & wear, and replace as needed. Inspect coupling gaskets for leaks & wear, and replace as needed. Always use safety clips & whip checks (safety cables) at Air Hose connections.

#### 6. Inspect & Clean Blow-down Muffler

Remove the Blow-down muffler, turn it upside-down and tap on a hard surface to free trapped debris. If muffler is clogged and can't be cleaned out sufficiently, it must be replaced.

#### 7. Inspect Blow-down Hose Assembly

Remove & inspect the Blow-down Hose assembly. If leaks or soft spots are found, it must be replaced.

#### 8. Inspect Pop-Up & Pop-Up Gasket

Inspect the Pop-Up & Pop-Up Gasket for wear and replace as necessary.

#### 9. Service Metering Valve

Disassemble, clean & inspect the Metering Valve for proper operation and worn components. Replace any worn components found. Lubricate APV & APVII valves with anti-seize before reassembling.

#### 10. Service Auto Air Valve

Disassemble, clean & inspect for proper operation and worn components. Replace any worn components found. Lubricate with anti-seize before reassembling.

#### 11. Service Combination Valve

Disassemble, clean & inspect for proper operation and worn components. Replace any worn components found. Lubricate with anti-seize before reassembling.

#### 12. Service Control Valve(s)

Disassemble, clean & inspect for proper operation and worn components. Replace any worn components found. Lubricate with anti-seize before reassembling.



# \* TROUBLESHOOTING \*

### **Performance Related Issues**



**DANGER**: Never attempt to open the Abrasive Blaster in any way while it is pressurized. Use extreme caution when performing troubleshooting procedures that involve pressurizing the Abrasive Blaster. Troubleshooting procedures are to be performed by experienced qualified personnel only.

#### NO ABRASIVE FLOW WHEN BLASTING (AIR ONLY)

Possible Causes:

- 1. The Abrasive Blaster is empty or has no Abrasive in it.
- 2. The Union-end Ball Valve above the Metering Valve is closed (if equipped).
- 3. Abrasive cut-off function is engaged halting the flow of abrasive (if equipped).
- **4.** The Metering Valve is closed or has not been adjusted properly. If the Metering Valve is an APV or APVII and you are concerned the valve is not opening, the following test can be performed:

Close the Metering Valve fully by turning the knob clockwise until it stops, then turn the knob counter-clockwise about 9 full turns. Close the Union-end Ball Valve above the Metering Valve (if equipped). Close the Choke Valve, then depress the control handle and check to see if the knob is hard to turn or if it will not turn at all. If the knob is hard to turn or will not turn at all then the Metering Valve is opening properly. Lastly, release the control handle and open the Choke Valve and Union-end Ball Valve located above the Metering Valve if equipped.

**5. There is an obstruction in the Metering Valve.** To clear the obstruction for both APV series and MPV series Metering Valves, perform the following procedure:

Turn the knob on the Metering Valve clockwise until it stops and then turn the knob counter-clockwise 9 full turns to open it completely. Depress the control handle and have a second qualified person close the choke valve for 2 seconds, and then open it again immediately. This will push minor obstructions such as a small amount of wet abrasive, a piece of paper from a bag, or bridged paint chips through the Metering Valve and out the Nozzle. Readjust the Metering Valve back to the desired setting for blasting, and check to see if the obstruction has been cleared.

If there is still an obstruction and your Abrasive Blaster is equipped with a Union-end Ball Valve above the Metering Valve, close the Union-end Ball Valve and depressurize the Abrasive Blaster. Remove the Metering Valve by loosening the union on the Union-end Ball Valve. With the Metering Valve removed and the Abrasive Blaster depressurized, open the Union-end Ball Valve slowly to see if a steady stream of abrasive falls out. If you do not see a steady stream of abrasive there is a large obstruction such as a large piece of paper from a bag of abrasive. If your Abrasive Blaster is not equipped with a Union-end Ball Valve, then you must depressurize the Abrasive Blaster, remove the pusher line, and remove the Metering Valve to check for a steady stream of abrasive. If abrasive flows, wait until the Abrasive Blaster is empty before reinstalling the Metering Valve

If you have determined there is a large obstruction, then the obstruction must be removed from inside the Pressure Vessel. To do this, make sure the Abrasive Blaster is depressurized and remove the Handway Assembly. Scoop or vacuum out all the abrasive from inside the pressure vessel and remove the obstruction. Reinstall the Handway Assembly and Metering Valve and tighten them securely, then Refill the Abrasive Blaster.

- It is recommended that a screen be used to prevent foreign objects from entering the Abrasive Blaster and causing an obstruction.
- **6.** The Abrasive Blaster has wet abrasive in it. The wet abrasive must be removed by depressurizing the Abrasive Blaster, removing the Handway Assembly, and scooping or vacuuming it out.

Dry abrasive must always be used. Clean, cool, dry air must be supplied to the Abrasive Blaster in order to prevent the abrasive from getting wet. For Abrasive Blasters being used outside, it is recommended that a lid be used to keep water from entering the Abrasive Blaster.

## ABRASIVE STREAM IS TOO HEAVY OR THROBBING WHEN BLASTING

Possible Causes:

Note: SPR Systems may throb temporarily when starting up if abrasive has collected in blast hose from previous use. This is normal and requires no action to correct.

- 1. Choke Valve is partially closed. Never run the Abrasive Blaster with the Choke Valve in any other position except fully open or damage to the Abrasive Blaster will occur.
- 2. The Metering Valve needs to be adjusted.

#### LOW PRESSURE AT THE NOZZLE

Possible Causes:

- 1. Air compressor is the wrong size (too small) or the load button has not been pushed or turned on. (100 PSI Minimum)
- 2. Nozzle is worn out and the compressor cannot keep up with the increased demand.
- 3. Air supply hose to the blast machine is too small.
- 4. There is a hole in the blast hose.
- 5. Pop-up is not sealing properly.
- 6. Handway Assembly is leaking.
- 7. Dirty or clogged Auto Air Valve Vent (if equipped).
- 8. Diaphragm in Auto Air Valve is damaged, defective, or worn out (if equipped). To test, put your thumb over the vent. If any air is coming out with the control handle depressed, the diaphragm must be replaced.
- 9. Choke Valve is partially closed. Never run the Abrasive Blaster with the Choke Valve in any other position except fully open or damage to the Abrasive Blaster will occur.
- 10. Abrasive Metering Valve is open too far.
- 11. Obstruction in Nozzle.
- 12. Regulator needs adjustment (if equipped).

## ABRASIVE BLASTER WILL NOT TURN ON OR IS SLOW TO TURN ON

Possible Causes:

- 1. Air compressor is the wrong size (too small) or the load button has not been pushed or turned on. (100 PSI Minimum)
- 2. Nozzle is worn out and the compressor cannot keep up with the increased demand.
- 3. Air supply hose to the blast machine is too small.
- 4. Control hoses and/or fittings are leaking.
- 5. 90 micron strainer clogged (if equipped)
- 6. Obstruction in Nozzle.
- 7. Dirty or clogged Auto Air Valve Vent (if equipped).
- 8. The Pneumatic Control Handle is damaged, defective or worn out (if equipped).
- 9. The Electric Control Handle is damaged, defective or worn out (if equipped).
- 10. The Electric Control Coil(s) are defective (if equipped).
- 11. Power Source (battery or AC-DC converter) is not providing sufficient power to open electric control valves (if equipped).
- 12. The Electric Control Cord is damaged, defective or worn out (if equipped).
- 13. Control Valve stuck or in need of service due to lack of lubrication, or is damaged, defective or worn out (if equipped).
- 14. Diaphragm in Auto Air Valve is damaged, defective, or worn out (if equipped). To test, put your thumb over the vent. If any air is coming out with the control handle depressed, the diaphragm must be replaced.



# \* TROUBLESHOOTING \*

# **Operational Related Issues**



**DANGER**: Never attempt to open the Abrasive Blaster in any way while it is pressurized. Use extreme caution when performing troubleshooting procedures that involve pressurizing the Abrasive Blaster. Troubleshooting procedures are to be performed by experienced qualified personnel only.

## BLAST MACHINE TURNS ON ACCIDENTALLY OR WITHOUT WARNING

Possible Causes:

- 1. The safety flap, lever or lock button on the Control Handle is damaged or missing.
- 2. The lower rod seal in the Combination Valve is damaged, defective, or worn out (if equipped). To test to see if this is the problem, first turn on the air supply to the pot making sure the Blast Hose is being held tight to control it if it starts blasting. Without squeezing the Control Handle, have someone who is not holding the Blast Hose remove the small side (1/8") of the Twinline Control Hose from the Combination Valve. There should not be any air coming out of the Combination Valve where the Twinline was just removed. If there is air, then depressurize the Abrasive Blaster and check the Combination Valve lower rod seal and lower rod guide "O"-ring to make sure they are not damaged, defective or worn out. Also check to see if the Combination Valve lower rod guide has been installed backwards.
- 3. The Pneumatic Control Handle is damaged, defective or worn out (if equipped).
- 4. A bleeder type control handle has been installed.



**WARNING:** Never use bleeder type Remote Control Handles such as Clemco® or A-BEC® style handles with Pirate-Brand® SPH/SPR as they may cause the Abrasive Blaster to start without warning or to not stop the Abrasive Blaster when released.

- 5. The Electric Control Handle is damaged, defective or worn out (if equipped).
- 6. The Electric Control Cord is damaged, defective or worn out (if equipped).
- 7. "O"-ring on the shaft of the Auto Air Valve is damaged, defective or worn out (if equipped).

# BLAST MACHINE IS SLOW TO TURN OFF OR WILL NOT TURN OFF WHEN CONTROL HANDLE IS RELEASED

Possible Causes:

1. A bleeder type control handle has been installed.



WARNING: Never use bleeder type Remote Control Handles such as Clemco® or A-BEC® style handles with Pirate-Brand® SPH/SPR as they may cause the Abrasive Blaster to start without warning or to not stop the Abrasive Blaster when released.

- 2. The Pneumatic Control Handle is damaged, defective or worn out (if equipped).
- 3. The Electric Control Handle is damaged, defective or worn out (if equipped).
- 4. The Electric Control Cord is damaged, defective or worn out (if equipped).
- 5. The Control Valve is stuck or in need of service due to lack of lubrication, or is damaged, defective or worn out (if equipped)

- 6. The lower rod seal in the Combination Valve is damaged, defective, worn out, or has been installed backwards (if equipped)
- 7. The lower rod guide in the Combination Valve has been installed backwards (if equipped).
- 8. The lower rod guide "O"-ring in the Combination Valve is damaged, defective or missing (if equipped).

To test to see if items 6, 7 or 8 are the problem, first turn on the air supply to the pot making sure the Blast Hose is being held tight to control it if it starts blasting. Without squeezing the Control Handle, have someone who is <u>not</u> holding the Blast Hose remove the small side (1/8") of the Twinline Control Hose from the Combination Valve. There should not be any air coming out of the Combination Valve where the Twinline was just removed. If there is air, then depressurize the Abrasive Blaster and check the Combination Valve lower rod seal and lower rod guide "O"-ring to make sure they are not damaged, defective or worn out. Also check to see if the Combination Valve lower rod guide has been installed backwards.

- 9. The Combination Valve Plug Assembly is not seating properly because it is damaged, defective or worn out (if equipped).
- 10. The Combination Valve Spring is damaged or defective (if equipped).
- 11. Blow-down Muffler is clogged slowing the release of air.

# ABRASIVE BLASTER AIR BLAST STOPS BUT ABRASIVE KEEPS FLOWING WHEN CONTROL HANDLE IS RELEASED (SYSTEMS WITH APV SERIES METERING VALVES ONLY)

Possible Causes:

- 1. The Urethane Seat (black) in the Metering Valve is damaged, defective or worn out.
- 2. The Urethane Sleeve (black) in the Metering Valve is damaged, defective, or worn out.
- 3. The Plunger (tungsten carbide) in the Metering Valve is damaged, defective, or worn out.
- 4. Foreign material is stuck between the Plunger and the Seat in the Metering Valve.
- 5. The Metering Valve Spring is damaged, defective, or worn out.

# BLAST MACHINE ABRASIVE STOPS BUT AIR BLAST WILL NOT SHUT OFF WHEN CONTROL HANDLE IS RELEASED

Possible Causes:

- 1. Auto Air Valve Seat is damaged, defective, or worn out.
- 2. Auto Air Valve Disc is damaged, defective, or worn out.
- 3. "O"-ring on the Auto Air Valve Shaft is damaged, defective or
- 4. Auto Air Valve Spring is damaged, defective, or worn out.

# WARRANTY


#### LIMITATION OF WARRANTIES AND REMEDIES.

MANUFACTURER WARRANTS THE PRODUCTS IT MANUFACTURES TO BE FREE OF DEFECTS IN MATERIAL AND WORKMANSHIP FOR A PERIOD OF NINETY (90) DAYS FROM THE DATE OF INVOICE. THIS WARRANTY IS EX-TENDED ONLY TO THE BUYER WHO PURCHASES THE PRODUCTS DIRECTLY FROM THE MANUFACTURER OR ITS AUTHORIZED DISTRIBUTORS. THE PUR-CHASER'S EXCLUSIVE REMEDY ARISING FROM ITS PURCHASE OR USE OF THE PRODUCTS SHALL BE STRICTLY LIMITED TO THE REPAIR OR REPLACE-MENT OF THE PRODUCTS, AT THE DISCRETION OF THE MANUFACTURER, AND ALL WARRANTY CLAIMS OR REQUESTS MUST BE MADE IN WRITING TO THE MANUFACTURER WITHIN THIRTY (30) DAYS AFTER FAILURE OF THE PRODUCT. ALL OBLIGATIONS OR LIABILITIES OF MANUFACTURER OR SELL-ER FOR DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE PROD-UCTS AND USE OR PERFORMANCE OF THE PRODUCTS, EXCEPT AS EX-PRESSLY PROVIDED HEREIN, ARE FULLY DISCLAIMED AND EXCLUDED, AND NO SELLER OR DISTRIBUTOR HAS ANY AUTHORITY TO MAKE ANY WARRAN-TY OR ASSUME ANY LIABILITY ON BEHALF OF THE MANUFACTURER IN CON-NECTION WITH THE SALE OF THE PRODUCTS EXCEPT AS STATED HEREIN.

AS A CONDITION OF THE PURCHASE, PURCHASER AGREES THAT MANUFACTURER AND SELLER SHALL NOT, UNDER ANY CIRCUMSTANCES, BE LIABLE FOR ANY COST OF FREIGHT, SHIPPING OR TRANSPORTATION, LABOR, SPECIAL CHARGES, NORMAL MAINTENANCE SERVICES, LOST OPERATING TIME, LOSS OF USE, LOST PROFITS, LOSS OF GOODWILL, CONSEQUENTIAL DAMAGES, PUNITIVE OR EXEMPLARY DAMAGES, OR OTHER DAMAGES OR LOSS. OTHER THAN AS DESCRIBED HEREIN, MAN-UFACTURER AND SELLER MAKE NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. WITH RESPECT TO THE PRODUCTS. AND SPECIFICALLY DIS-CLAIM ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICU-LAR PURPOSE, OR OTHER WARRANTY. PURCHASER ASSUMES ALL RISK AND LIABILITY RESULTING FROM THE USE OF THE PRODUCTS. PURCHAS-ER FURTHER AGREES AS A CONDITION OF THE SALE AND USE OF THE PRODUCTS. THAT ANY DAMAGES OR RISK OF LOSS OTHER THAN AS DE-SCRIBED HEREIN ABOVE, SHALL BE THE EXCLUSIVE RESPONSIBILITY OF THE PURCHASER AND NOT THE MANUFACTURER OR SELLER. MANUFAC-TURER AND SELLER SHALL NOT BE LIABLE FOR ANY DAMAGES INCURRED BY ANY PERSON AS A RESULT OF MISUSE, IMPROPER INSTALLATION, IM-PROPER APPLICATION, IMPROPER OPERATION OF THE PRODUCTS, NOR-MAL WEAR AND TEAR, ALTERATIONS OR MODIFICATIONS MADE TO THE PRODUCTS, OR ACCIDENT. THE USE OF REPLACEMENT PARTS NOT PRO-VIDED OR AUTHORIZED BY THE MANUFACTURER VOIDS ALL WARRANTIES.



# RESSURE VESSEL PARTS LISTS &

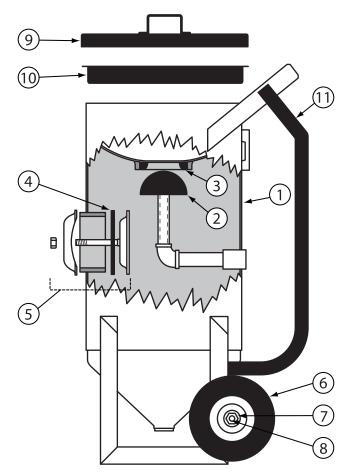


_										
	3.5 Portable Abrasive Blaster									
1	888-1011-00303PB	VESSEL, PORTABLE, 3.5 CU. FT. (100 LITERS), 150 PSI (10.3 BAR), 90° CONE BOTTOM, 9" CLEARANCE, 18" DIA, INCLUDES HANDWAY ASSEMBLY, WHEELS, POP-UP & POP-UP GASKET								
2	888-2100-010PB	POP-UP W/STEM URETHANE, LARGE								
3	888-2100-011PB	POP-UP GASKET URETHANE, LARGE								
4	888-7000-00106PB	GASKET, HANDWAY, 6" x 8"								
5	888-7000-00111PB	HANDWAY CRAB ASSY 6" x 8"								
6	888-7046-003PB	WHEEL & TIRE, 3 BAG POT								
7	888-7019-519PB	NUT, NYLOCK, 3/4" UNC								
8	888-7040-003PB	AXLE, 3/4" x 22", 1 BAG, 3 BAG & 1600 M								
9	888-5010-030PB	LID, 18" DIA, W/HANDLE, POWDER COATED BLACK								
10	888-5011-030PB	SCREEN, LOW PROFILE, 18" (1/4" MESH), POWDER COATED BLACK								
11	888-7002-003PB	LOADING SKID / VALVE GUARD 3 BAG, POWDER COATED BLACK								

	6.5 Portable Abrasive Blaster									
1	888-1011-00603PB	VESSEL, PORTABLE, 6.5 CU. FT. (185 LITERS), 150 PSI (10.3 BAR), 90° CONE BOTTOM, 9° CLEARANCE, 24° DIA, INCLUDES HANDWAY ASSEMBLY, WHEELS, POP-UP & POP-UP GASKET								
2	888-2100-010PB	POP-UP W/STEM URETHANE, LARGE								
3	888-2100-011PB	POP-UP GASKET URETHANE, LARGE								
4	888-7000-00106PB	GASKET, HANDWAY, 6" x 8"								
5	888-7000-00111PB	HANDWAY CRAB ASSY 6" x 8"								
6	888-120-4270PB	WHEEL & TIRE, 16" X 4" BLACK								
7	888-7019-527PB	NUT, NYLOCK, 1" UNC								
8	888-7040-006PB	AXLE 1" x 33", 6 - 10 BAG POT								
9	888-5010-060PB	LID, 24" DIA, W/HANDLE, POWDER COATED BLACK								
10	888-5011-060PB	SCREEN, LOW PROFILE, 24" (1/4" MESH), POWDER COATED BLACK								
11	888-7002-006PB	LOADING SKID / VALVE GUARD 6 BAG, POWDER COATED BLACK								

	6.5 Stationary Abrasive Blaster									
1	888-0430-00000PB	VESSEL, STATIONARY, 6.5 CU FT (185 LITERS), 150 PSI (10.3 BAR), 90°CONE BOTTOM, 13°CLEARANCE, 54°OAH INCLUDES: 9°SPIDER, HANDWAY ASSEMBLY, POP-UP & POP-UP GASKET								
2	888-2100-010PB	POP-UP W/STEM URETHANE, LARGE								
3	888-2100-01104PB	POP-UP GASKET 3 & 6 BAG SKIRTED								
4	888-7000-00106PB	GASKET, HANDWAY, 6" x 8"								
5	888-7000-00111PB	HANDWAY CRAB ASSY 6" x 8"								
9	888-5010-060PB	LID, 24" DIA, W/HANDLE, POWDER COATED BLACK								



**SPR SERIES - Pneumatic Controls** 

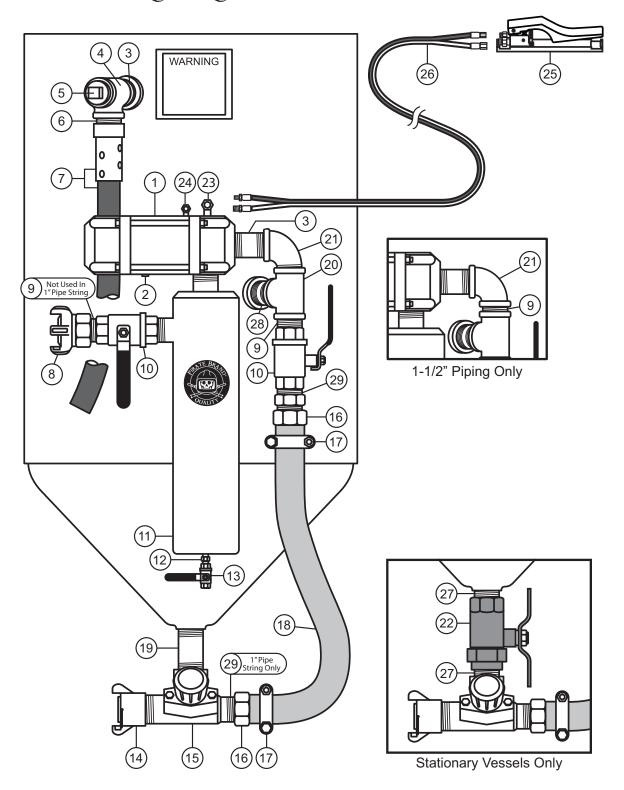



# & PIPE STRING PARTS LISTS &

# **SPR SERIES - Pneumatic Controls**

3   888-3029-10711PB   19PPLE, TBE, GALV, 1-114" x 3"   19PPLE,		1" P	IPE STRING		1-1/4" PIPE STRING			1-1/2" PIPE STRING		
3   888-3028-1071PPB   NPPLE, TBE, GALV, 1-14" x 3"   3   888-3028-1071PPB   NPPLE, TBE, GALV, 1-14" x 3"   888-3011-107PB   TEE, GALV, 1-14" x 1"   14"   14"   15"	1*	888-2223-000PB	VALVE, COMBINATION, COMPLETE							
B88-3029-1071PB   NPPLE, TBE, GALV, 1-14" x 3"   B88-3029-1071PB   NPPLE, TBE, GALV, 1-14" x 10-150   B88-3029-1071PB   NPPLE, TBE, GALV	2	888-2014-300PB	VENT, 1/8"							
B88-901-107PB   PIEC GALV, 1-14"   PIEC GALV, 1-1	3	888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 3"			3	888-3029-10714PB	NIPPLE, TBE, GALV, 1-1/4" x 4" (BIG GUN)		
B88-3028-10798P								888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 3"	
888-3029-10799PB   NPPLE, TBE, GALV, 1-14" x CLOSED   S0000WN HOSE ASSY, 18" (1-6 BAC)   S0000WN HOSE ASSY, 18" (1-6 BA	4	888-3011-107PB	TEE, GALV, 1-1/4"							
Reserved	5	888-3014-107PB	PIPE PLUG, GALV, 1-1/4"							
Bab	6	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED							
BB								888-4115-005PB	BLOWDOWN HOSE ASSY, 18" (1-6 BAG)	
8	7	888-4115-005PB	BLOWDOWN HOSE ASSY, 18" (1-6 BAG	)			7	888-4115-00503PB	BLOWDOWN HOSE ASSY, 3/4" x 3'	
B								888-4115-00510PB	BLOWDOWN HOSE ASSY, 3/4" x 10'	
Number   Male NPT								888-4115-00515PB	BLOWDOWN HOSE ASSY, 3/4" x 15'	
VB100   SALL VALVE, FULL PORT, 1" NPT	8	UM-100		8	UF-125		8	UF-150	AIR HOSE COUPLINGS, 4 LUG, 1-1/2" FEMALE NPT	
B88-1200-006PB-P   MOISTURE TRAP 1" (1"M INLET x 1- 14"M OUTLET; 10% EFFICIENT @ 150 CFM POWDER COATED BLACK   110 CFM POWDE	9	888-3029-10699PB	NIPPLE, TBE, GALV, 1" x CLOSED	9	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED	9	888-3029-10899PB	NIPPLE, TBE, GALV, 1-1/2" x CLOSED	
11   888-1200-0069B-P   Power of the control of t	10	VB100	BALL VALVE, FULL PORT, 1" NPT	10	VB125	BALL VALVE, FULL PORT, 1-1/4" NPT	10	VB150	BALL VALVE, FULL PORT, 1-1/2" NPT	
CFM) POWDER COATED BLACK   150 CFM) POWDER COATED BLACK   888-1200-008PB-   MOISTURE TRAP 1-1/2" (1-1/2")   151 CFM) POWDER COATED BLACK   888-1200-008PB-   12 (1-1/2")   151 CFM) POWDER COATED BLACK   150 CFM POWDER COATED BLACK	11	999 1200 006DB D		11	888 1200 007PR P		11	888-1200-009PB-P	MOISTURE TRAP, <b>BIG GUN</b> , 1-1/2" (1-1/2"M INLET x 1-1/4"M OUTLET, 350 CFM, POWDER COATED BLACK)	
13		000*1200*000F B*F			000-1200-007F B-F		1115	888-1200-008PB-P	MOISTURE TRAP 1-1/2" (1-1/2"M INLET x 1-1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK	
14 SB-34R THD QUICK COUPLING, IRON, 1-1/2"  15 888-2125-106PB VALVE, MANUAL PLUNGER, 1", WURETHANE SLEEVE 15' 888-2125-107PB WURETHANE SLEEVE 15' 888-2125-108PB VALVE, MANUAL PLUNGER, 1-1/4", WURETHANE SLEEVE 16 888-4205-108PB HOSE, INSERT SWIVEL, 1", INCLUDES GASKET 16 888-4205-108PB HOSE, SWIVEL GASKET, 1" 888-4205-107PB HOSE, INSERT SWIVEL, 1-1/4", INCLUDES GASKET 17' 888-4235-006PB HOSE, SWIVEL GASKET, 1" 888-4205-107PB HOSE, INSERT SWIVEL GASKET, 1-1/4", INCLUDES GASKET 17' 888-4235-006PB HOSE, CLAMP, DOUBLE BOLT, 1" 17 888-4235-006PB HOSE, CLAMP, DOUBLE BOLT, 1-1/4" 17 888-4235-006PB HOSE, CLAMP, DOUBLE BOLT, 1-1/4" 17 888-4235-006PB HOSE, CLAMP, DOUBLE BOLT, 1-1/4" 17 888-4235-006PB HOSE, AIR, RED, NOMINAL 1" ID x 1-1-1/4" 2" 18 88-3028-10714PB NIPPLE, HEAVY WALL, TBE, SCHEDULE 80, 1-1/4" x 4" 2" 20 888-3013-10706PB TEE, GALV, 1-1/4" x 1" x 1-1/4" 20 888-3011-107PB TEE, GALV, 1-1/4" 21 888-3038-10807PB ELBOW, STREET, 90", GALV, 1-1/4" 22 888-203-000PB SWIVEL 90", 1/4"MNPT x 1/4"F 888-4235-000PB SWIVEL 90", 1/4"MNPT x 1/4"F 888-233-000PB SWIVEL 90", 1/4"MNPT x 1/4"F 888-2	12	888-3031-31202PB	NIPPLE, HEX 1/4"MNPT x 1/4" MNPT		•					
14 SB-2-IR IND COLOR COUPLING, IRON, 1-1/2*  15 888-2125-106PB VALVE, MANUAL PLUNGER, 1*, WURETHANE SLEEVE	13	VB025	BALL VALVE, FULL PORT, 1/4" NPT							
15   888-2125-109PB   W/URETHANE SLEEVE   15   888-2125-109PB   W/URETHANE SLEEVE   15   888-2125-109PB   W/URETHANE SLEEVE   16   888-4205-108PB   HOSE, INSERT SWIVEL, 1", INCLUDES GASKET   16   888-4205-108PB   HOSE, INSERT SWIVEL, 1", INCLUDES GASKET   16   888-4205-108PB   HOSE, INSERT SWIVEL, 1-1/2", INCLUDES GASKET   16   888-4205-108PB   HOSE, SWIVEL GASKET, 1-1/2"   888-4205-108PB   HOSE, SWIVEL GASKET, 1-1/2"   888-4235-006PB   HOSE, CLAMP, DOUBLE BOLT, 1"   17   888-4235-007PB   HOSE, SWIVEL GASKET, 1-1/4"   17   888-4235-008PB   HOSE, SWIVEL GASKET, 1-1/2"   18   112-0110   HOSE, AIR, RED, NOMINAL 1" ID x 1   1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0114   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0114   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/2" X 2-3/32" OD, WP 250 PSI, PER FOOT   18   112-0114   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD,	14	SB-2-IR	THD QUICK COUPLING, IRON, 1-1/2"				14	SB-3X-AL	THD QUICK COUPLING, ALUMINUM, 1-1/2", FULL PORT	
16   888-4205-1089PB   HOSE, SWIVEL GASKET   16   888-4205-1079PB   HOSE, SWIVEL GASKET, 1-1/2*   17   888-4235-008PB   HOSE, SWIVEL GASKET, 1-1/2*   18   888-4235-008PB   HOSE, CLAMP, DOUBLE BOLT, 1*   17   888-4235-007PB   HOSE, CLAMP, DOUBLE BOLT, 1*   17   888-4235-007PB   HOSE, CLAMP, DOUBLE BOLT, 1-1/4*   18   112-0110   HOSE, AIR, RED, NOMINAL 1* ID X* 1   1/2* OD, WP 300 PSI, PER FOOT   18   112-0114   HOSE, AIR, RED, NOMINAL 1* ID X* 1   1/2* OD, WP 300 PSI, PER FOOT   18   112-0114   HOSE, AIR, RED, NOMINAL 1* ID X* 1   1/2* OD, WP 300 PSI, PER FOOT   18   112-0114   HOSE, AIR, RED, NOMINAL 1* ID X* 1   1/2* OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1* ID X* 1   1/2* OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1* ID X* 1   1/2* OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1* ID X* 1   1/2* OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1* ID X* 1   1/2* OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1* ID X* 1   1/2* OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1* ID X* 1   1/2* OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1* ID X* 1   1/2* OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1* ID X* 1   1/2* OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1* ID X* 1   1/2* OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1* ID X* 1   1/2* ID X* 1   1/2	15*	888-2125-106PB		15*	888-2125-107PB		15*	888-2125-108PB	VALVE, MANUAL PLUNGER, 1-1/2", W/URETHANE SLEEVE	
17   888-4235-006PB   HOSE, CLAMP, DOUBLE BOLT, 1"   17   888-4235-007PB   HOSE, CLAMP, DOUBLE BOLT, 1-1/4"   17   888-4235-008PB   HOSE, CLAMP, DOUBLE BOLT, 1-1/4"   18   112-0110   HOSE, AIR, RED, NOMINAL 1-1/4"   DX   1/2" OD, WP 300 PSI, PER FOOT   18   112-0114   HOSE, AIR, RED, NOMINAL 1-1/4"   DX   1-5/1/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4"   DX   1-5/1/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4"   DX   1-5/1/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4"   DX   1-5/1/64" OD, WP 250 PSI, PER FOOT   18   112-0112   HOSE, AIR, RED, NOMINAL 1-1/4"   DX   1-5/1/64" OD, WP 250 PSI, PER FOOT   18   DX   DX   DX   DX   DX   DX   DX   D	16	888-4205-106PB		16	888-4205-107PB		16	888-4205-108PB	HOSE, INSERT SWIVEL, 1-1/2", INCLUDES GASKET	
18		888-4205-10699PB	HOSE, SWIVEL GASKET, 1"	1	888-4205-10799PB	HOSE, SWIVEL GASKET, 1-1/4"	1	888-4205-10899PB	HOSE, SWIVEL GASKET, 1-1/2"	
172-010	17	888-4235-006PB	HOSE, CLAMP, DOUBLE BOLT, 1"	17	888-4235-007PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/4"	17	888-4235-008PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/2"	
TEE, GALV, 1-1/4" x 1" x 1-1/4"   20   888-3013-10706PB   TEE, GALV, 1-1/4" x 1" x 1-1/4"   20   888-3011-107PB   TEE, GALV, 1-1/4"   20   888-3038-10807PB   TEE, GALV, 1-1/2" x 1-1/4"   21   888-3010-10807PB   TEE, GALV, 1-1/2" x 1-1/4"   21   888-3010-10807PB   TEE, GALV, 1-1/2" x 1-1/4"   21   888-3010-10807PB   TEE, GALV, 1-1/2" x 1-1/4" x 1-1/4"   21   888-3010-10807PB   TEE, GALV, 1-1/4" x 1-1/4"   21   888-3010-10807PB   TEE, GALV, 1-1/2" x 1-1/4" x 1-1/4"   21   888-3010-10807PB   TEE, GALV, 1-1/4" x 1-1/4" x 1-1/4"   21   888-3010-10807PB   TEE, GALV, 1-1/4" x 1-1/4"   21   888-3010-10807PB   TEE,	18	112-0100		18	112-0114		18	112-0112	HOSE, AIR, RED, NOMINAL 1-1/2" ID x 2-3/32" OD, WP 250 PSI, PER FOOT	
1-1/4"   20   20   20   20   20   20   20   2	19	888-3028-10714PB	NIPPLE, HEAVY WALL, TBE, SCHEDULE	80,	1-1/4" x 4"				•	
1/4"   21   22   368-3010-10307F   1/4"   22   368-3010-10307F   1/4"   23   368-3010-10307F   368-3	20	888-3013-10706PB	TEE, GALV, 1-1/4" x 1" x 1-1/4"	20	888-3011-107PB	TEE, GALV, 1-1/4"	20	888-3038-10807PB	TEE REDUCING, GALV, 1-1/2" x 1-1/2" x 1-1/4"	
23 888-4203-50000PB SWIVEL 90°, 1/4"MNPT x 1/4"F  24 888-4203-50000PB SWIVEL 90°, 1/8"MNPT X 1/8"F  25** 888-2263-001PB HANDLE, CONTROL, PNEUMATIC #2  26 200-055 HOSE, TWINLINE CONTROL, ASSEMBLY, YELYYEL W/BLACK STRIP, NOMINAL 3/16" ID x 55'  27 888-3028-10799PB NIPPLE, HEAVY WALL, TBE, SCHEDULE 80, 1-1/4" x CLOSED  28 888-3028-10711PB NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4" x 3"  29 888-3028-10711PB NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4" x 3"  20 888-3028-10711PB NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4" x 3"  20 888-3028-10711PB NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4" x 3"  20 888-3028-10711PB NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4" x 3"	21	888-3006-107PB	ELBOW, STREET, 90*, GALV, 1-1/4"	•			21	888-3010-10807PB	ELBOW, REDUCING, GALV, 1-1/2" x 1-1/4"	
24   888-4203-50000PB   SWIVEL 90*, 1/8*MNPT X 1/8*F	22	_	STATIONARY VESSELS ONLY				22	888-2408-907PB	BALL VALVE, UNION END, 1-1/4"	
25**   888-2263-001PB	23	888-4203-50202PB	SWIVEL 90°, 1/4"MNPT x 1/4"F				•		•	
26   200-055   HOSE, TWINLINE CONTROL, ASSEMBLY, YEL/YEL W/BLACK STRIP, NOMINAL 3/16" ID x 55"	24	888-4203-50000PB	SWIVEL 90°, 1/8"MNPT X 1/8"F							
MANUE, CONTROL, PNEUMATIC	25**	888-2263-001PB	HANDLE, CONTROL, PNEUMATIC #2							
27   888-3028-10799PB   NIPPLE, HEAVY WALL, TBE, SCHEDULE 80, 1-1/4" x CLOSED	∠5**	888-2263-000PB	HANDLE, CONTROL, PNEUMATIC							
28 888-3028-10711PB NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4" x 3"   888-3028-10711PB NIPPLE, TB	26	200-055	HOSE, TWINLINE CONTROL, ASSEMBL	Y, YE	L/YEL W/BLACK STRIF	P, NOMINAL 3/16" ID x 55'				
28 888-3028-10711PB NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4* x 3" 1/4" x 4" (BIG GUN)  NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4* x 3" 888-3028-10711PB NIPPLE, TBE, SCHEDULE 80, G 1/4" x 3" 1/	27	888-3028-10799PB	NIPPLE, HEAVY WALL, TBE, SCHEDULE	E 80,	1-1/4" x CLOSED					
888-3028-10711PB NIPPLE, TBE, SCHEDULE 80, G	28	888-3028 1071100	NIPPLE TRE SCHEDULE 90 CALV 4.4	/A" ~ ·	<b>3</b> "		20	888-3028-10714PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4" x 4" (BIG GUN)	
29 888-3031-30606PB HEX NIPPLE, 1" x 1" 29 888-3031-30707PB HEX NIPPLE, 1-1/4" x 1-1/4" 29 888-3031-30808PB HEX NIPPLE, 1-1/2" x 1-1/2"	20	000-3020-107 TIPB	INIT LE, IDE, SCHEDULE OU, GALV, I-I	,+ X.	9		20	888-3028-10711PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4" x 3"	
	29	888-3031-30606PB	HEX NIPPLE, 1" x 1"	29	888-3031-30707PB	HEX NIPPLE, 1-1/4" x 1-1/4"	29	888-3031-30808PB	HEX NIPPLE, 1-1/2" x 1-1/2"	

<sup>\*</sup> See "Valve Parts Lists" Section for detailed parts list.




<sup>\*\*</sup> See "Control Handle Parts Lists" Section for detailed parts list.

# THE BRADE

# PIPE STRING PARTS LISTS &

SPR SERIES - Electric Controls

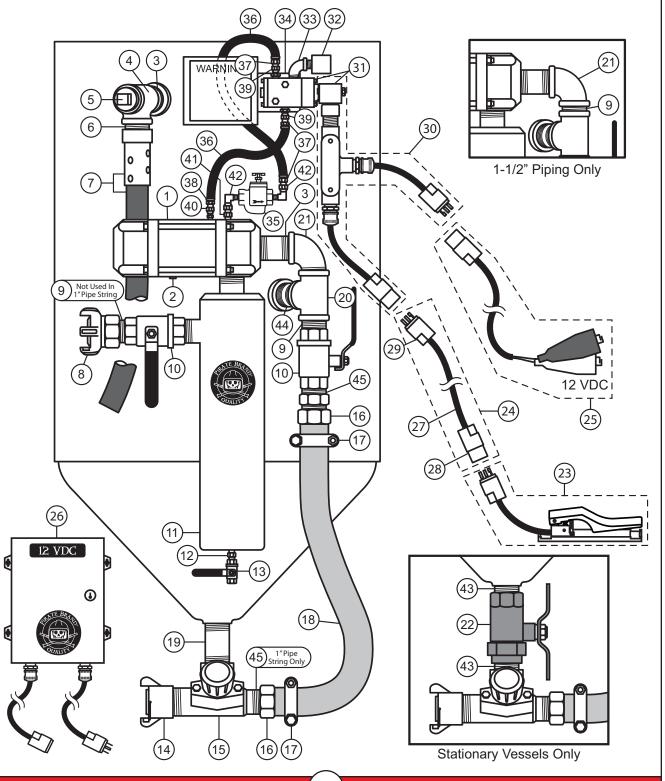



# **SPR SERIES - Electric Controls**


1" PIPE STRING			1-1/4" PIPE STRING				1-1/2" PIPE STRING		
1*	888-2223-000PB	VALVE, COMBINATION, COMPLETE							
2	888-2014-300PB	VENT, 1/8"							
3	888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 3"				3	888-3029-10714PB 888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 4" (BIG GUN) NIPPLE, TBE, GALV, 1-1/4" x 3"	
4	888-3011-107PB	TEE, GALV, 1-1/4"						J	
5	888-3014-107PB	PIPE PLUG, GALV, 1-1/4"							
6	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED							
		, , , , , , , , , , , , , , , , , , , ,					888-4115-005PB	BLOWDOWN HOSE ASSY, 18" (1-6 BAG)	
7	888-4115-005PB	BLOWDOWN HOSE ASSY, 18" (1-6 BAG	)			7	888-4115-00503PB 888-4115-00510PB 888-4115-00515PB	BLOWDOWN HOSE ASSY, 3/4" x 3' BLOWDOWN HOSE ASSY, 3/4" x 10' BLOWDOWN HOSE ASSY, 3/4" x 15'	
8	UM-100	AIR HOSE COUPLINGS, 2 LUG, 1" MALE NPT	8	UF-125	AIR HOSE COUPLINGS, 4 LUG, 1-1/4" FEMALE NPT	8	UF-150	AIR HOSE COUPLINGS, 4 LUG, 1-1/2" FEMALE NPT	
9	888-3029-10699PB	NIPPLE, TBE, GALV, 1" x CLOSED	9	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED	9	888-3029-10899PB	NIPPLE, TBE, GALV, 1-1/2" x CLOSED	
10	VB100	BALL VALVE, FULL PORT, 1" NPT	10	VB125	BALL VALVE, FULL PORT, 1-1/4" NPT	10	VB150	BALL VALVE, FULL PORT, 1-1/2" NPT	
11	888-1200-006PB-P	MOISTURE TRAP 1" (1"M INLET x 1- 1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK	11	888-1200-007PB-P	MOISTURE TRAP 1-1/4" (1-1/4"M INLET x 1-1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK	11	888-1200-009PB-P 888-1200-008PB-P	MOISTURE TRAP, BIG GUN, 1-1/2" (1- 1/2"M INLET x 1-1/4"M OUTLET, 350 CFM, POWDER COATED BLACK)  MOISTURE TRAP 1-1/2" (1-1/2"M INLET x 1-1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK	
								130 CFM) FOW DER COATED BEACK	
12	888-3031-31202PB	NIPPLE, HEX 1/4"MNPT x 1/4" MNPT							
13	VB025	BALL VALVE, FULL PORT, 1/4" NPT							
14	SB-2-IR	THD QUICK COUPLING, IRON, 1-1/2"			1	14	SB-3X-AL	THD QUICK COUPLING, ALUMINUM, 1- 1/2", FULL PORT	
15*	888-2125-106PB	VALVE, MANUAL PLUNGER, 1", W/URETHANE SLEEVE	15*	888-2125-107PB	VALVE, MANUAL PLUNGER, 1-1/4", W/URETHANE SLEEVE	15*	888-2125-108PB	VALVE, MANUAL PLUNGER, 1-1/2", W/URETHANE SLEEVE	
16	888-4205-106PB	HOSE, INSERT SWIVEL, 1", INCLUDES GASKET	16	888-4205-107PB	HOSE, INSERT SWIVEL, 1-1/4", INCLUDES GASKET	16	888-4205-108PB	HOSE, INSERT SWIVEL, 1-1/2", INCLUDES GASKET	
	888-4205-10699PB	HOSE, SWIVEL GASKET, 1"	L.	888-4205-10799PB	HOSE, SWIVEL GASKET, 1-1/4"		888-4205-10899PB	HOSE, SWIVEL GASKET, 1-1/2"	
17	888-4235-006PB	HOSE, CLAMP, DOUBLE BOLT, 1"	17	888-4235-007PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/4"	17	888-4235-008PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/2"	
18	112-0100	HOSE, AIR, RED, NOMINAL 1" ID x1- 1/2" OD, WP 300 PSI, PER FOOT	18	112-0114	HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT	18	112-0112	HOSE, AIR, RED, NOMINAL 1-1/2" ID x	
					1-51/64 OD, WP 250 PSI, PER POOT			2-3/32" OD, WP 250 PSI, PER FOOT	
19	888-3028-10714PB	NIPPLE, HEAVY WALL, TBE, SCHEDULE	80,	1-1/4" x 4"					
20	888-3013-10706PB	TEE, GALV, 1-1/4" x 1" x 1-1/4"	20	888-3011-107PB	TEE, GALV, 1-1/4"	20	888-3038-10807PB	TEE REDUCING, GALV, 1-1/2" x 1-1/2" x 1-1/4"	
21	888-3006-107PB	ELBOW, STREET, 90*, GALV, 1-1/4"  STATIONARY VESSELS ONLY				21	888-3010-10807PB	ELBOW, REDUCING, GALV, 1-1/2" x 1- 1/4"	
22	888-2263-40101PB	HANDLE, CONTROL, ELECTRIC #2 W/PI	шс			22	888-2408-907PB	BALL VALVE, UNION END, 1-1/4"	
23**		HANDLE, CONTROL, ELECTRIC #2 W/PI							
23	888-2263-40001PB 888-2263-40102PB			D CONNECTOR (DEOL	JIRED WHEN USING STEEL ABRASIVES)				
24	888-7073-055PB	EXTN CORD W/CONNECTOR, 55', 3 PRO			SINED WHEN OSING STEEL ABINASIVES)				
25	888-7072-012PB	POWER CORD, 25' 12VDC, 3-LUG	JIVO,	, Z WIILL					
26	PB-SMP3WP	POWER SUPPLY, 120AC INPUT, 12VDC	@ 2	5 AMP OLITPLIT					
27	10-203	CONTROL CORD, 16.2, 2 WIRE (PER FT	_						
28	888-7109-300PB	ELECTRIC CONNECTOR, FEMALE, TWI	_	OCK, 3 PRONG			PEATURING T	THE	
29	888-7109-301PB	ELECTRIC CONNECTOR, MALE, TWIST					DIA	MY YAY	
30	888-7112-000PB	JUNCTION TEE ASSEMBLY, SMALL & B			OUTLET		DIC	T CT IN	
П	888-2229-100PB	VALVE, CONTROL, ELECTRIC, 12VDC		( )			~4	0011	
31	888-2229-10099PB	VALVE, CONTROL, REPAIR KIT, ELECTI	RIC,	HEAVY DUTY			196	FULL FLOW SYSTEM	
32	888-2013-402PB	DUST ELIMINATOR, 1/4" MNPT					1		
33	888-3006-102PB	ELBOW, STREET, 90°, GALV, 1/4"						(50 PSI	
34	888-7033-002PB	BRACKET, CONTROL VALVE					0 10		
35	888-2301-90290PB	STRAINER, BRZ 1/4" 90 MICRON							
36	888-4101-002PB HOSE, AIR, INSTA-GRIP, BLACK, NOMINAL 1/4" ID, 300 PSI, PER FOOT						(1)		
37	888-4200-30202PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT							
38	888-4200-30200PB	HOSE, PUSH-ON INSERT 1/4" x 1/8" NPT	Γ						
39	888-4201-50202PB	STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F							
40	888-4201-50000PB	STRAIGHT SWIVEL, 1/8" MNPT X 1/8" F							
41	888-3031-30202PB	HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST							
42	888-4203-50202PB	SWIVEL 90°, 1/4"MNPT x 1/4"F							
43	888-3028-10799PB	NIPPLE, HEAVY WALL, TBE, SCHEDULE	80,	1-1/4" x CLOSED					
44	888-3028-10711PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1-1,	4" x	3"		44	888-3028-10714PB 888-3028-10711PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4" x 4" (BIG GUN)  NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4" x 3"	
45	888-3031-30606PB	HEX NIPPLE, 1" x 1"	45	888-3031-30707PB	HEX NIPPLE, 1-1/4" x 1-1/4"	45	888-3031-30808PB	HEX NIPPLE, 1-1/2" x 1-1/2"	

<sup>\*</sup> See "Valve Parts Lists" Section for detailed parts list.

<sup>\*\*</sup> See "Control Handle Parts Lists" Section for detailed parts list.



**SPR SERIES - Pneumatic Abrasive Cut-Off** 

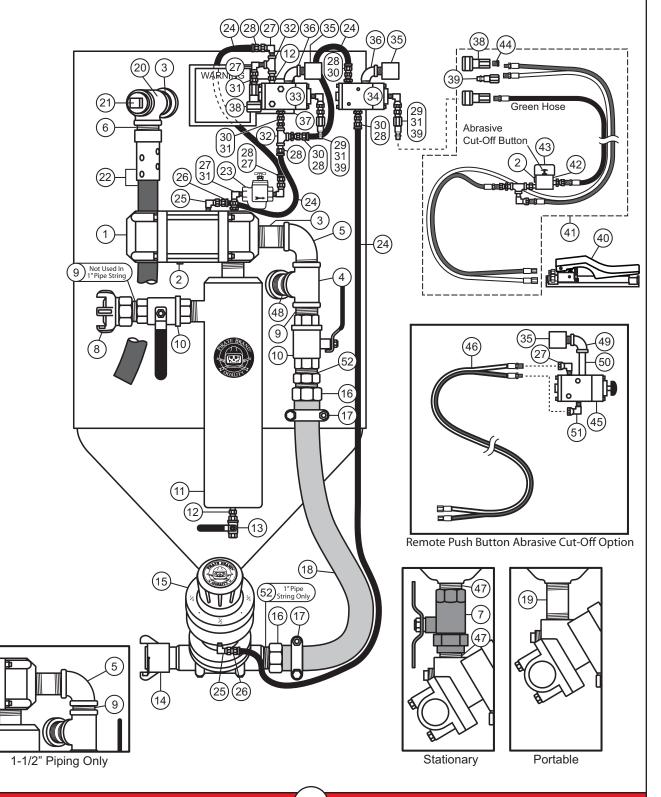




# **SPR SERIES - Pneumatic Abrasive Cut-Off**

	1" P	IPE STRING		1-1/4"	PIPE STRING		1-1/2"	PIPE STRING
1*	888-2223-000PB	VALVE, COMBINATION, COMPLETE						
2	888-2014-300PB	VENT, 1/8"						
3	888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 3"				3	888-3029-10714PB 888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 4" (BIG GUN) NIPPLE, TBE, GALV, 1-1/4" x 3"
4	888-3013-10706PB	TEE, GALV, 1-1/4" x 1" x 1-1/4"	4	888-3011-107PB	TEE, GALV, 1-1/4"	4	888-3038-10807PB	TEE REDUCING, GALV, 1-1/2" x 1-1/2" x 1-1/4"
5	888-3006-107PB	ELBOW, STREET, 90*, GALV, 1-1/4"				5	888-3010-10807PB	ELBOW, REDUCING, GALV, 1-1/2" x 1-1/4"
6	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED						
7	888-2408-907PB	BALL VALVE, UNION END, 1-1/4"						
8	UM-100	AIR HOSE COUPLINGS, 2 LUG, 1" MALE NPT	8	UF-125	AIR HOSE COUPLINGS, 4 LUG, 1-1/4" FEMALE NPT	8	UF-150	AIR HOSE COUPLINGS, 4 LUG, 1-1/2" FEMALE NPT
9	888-3029-10699PB	NIPPLE, TBE, GALV, 1" x CLOSED	9	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED	9	888-3029-10899PB	NIPPLE, TBE, GALV, 1-1/2" x CLOSED
10	VB100	BALL VALVE, FULL PORT, 1" NPT	10	VB125	BALL VALVE, FULL PORT, 1-1/4" NPT	10	VB150	BALL VALVE, FULL PORT, 1-1/2" NPT
11	888-1200-006PB-P	MOISTURE TRAP 1" (1"M INLET x 1- 1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK	11	888-1200-007PB-P	MOISTURE TRAP 1-1/4" (1-1/4"M INLET x 1-1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK	11	888-1200-009PB-P	MOISTURE TRAP, BIG GUN, 1-1/2" (1- 1/2"M INLET x 1-1/4"M OUTLET, 350 CFM, POWDER COATED BLACK) MOISTURE TRAP 1-1/2" (1-1/2"M INLET x 1-1/4"M OUTLET, 90%
							888-1200-008PB-P	EFFICIENT @ 150 CFM) POWDER COATED BLACK
12	888-3031-31202PB VB025	NIPPLE, HEX 1/4"MNPT x 1/4" MNPT BALL VALVE, FULL PORT, 1/4" NPT						
13	V DU25	DALL VALVE, FULL PURT, 1/4 NPT	_		T .	_		TUD OLUCK COLID BIG ALLBARITE
14	SB-2-IR	THD QUICK COUPLING, IRON, 1-1/2"	14	SB-1S-IR	THRD CPLG, STD NPS, IRON, 1-1/4"	14	SB-3X-AL	THD QUICK COUPLING, ALUMINUM, 1- 1/2", FULL PORT
15*	888-2148-006PB	APV II, 1" W/SOLID TUNGSTEN CARBIDE SLEEVE	15*	888-2148-007PB	APV II, 1-1/4" W/SOLID TUNGSTEN CARBIDE SLEEVE	15*	888-2148-008PB 888-2149-008PB	APV II, 1-1/2" W/SOLID TUNGSTEN CARBIDE SLEEVE
	888-2149-006PB	APV, 1", W/TC SLEEVE		888-2149-007PB	APV, 1-1/4, W/TC SLEEV	4		APV, 1-1/2", W/TC SLEEVE
40	888-2149-106PB 888-4205-106PB	APV, 1", W/URETHANE SLEEVE  HOSE, INSERT SWIVEL, 1", INCLUDES GASKET	40	888-2149-107PB 888-4205-107PB	APV, 1-1/4", W/URETHANE SLEEVE HOSE, INSERT SWIVEL, 1-1/4", INCLUDES GASKET	40	888-2149-108PB 888-4205-108PB	APV, 1-1/2", W/URETHANE SLEEVE HOSE, INSERT SWIVEL, 1-1/2", INCLUDES GASKET
16	000 4005 4000000		16	000 4005 4070000		16	200 4005 4000000	
17	888-4205-10699PB 888-4235-006PB	HOSE, SWIVEL GASKET, 1" HOSE, CLAMP, DOUBLE BOLT, 1"	17	888-4205-10799PB 888-4235-007PB	HOSE, SWIVEL GASKET, 1-1/4" HOSE, CLAMP, DOUBLE BOLT, 1-1/4"	17	888-4205-10899PB 888-4235-008PB	HOSE, SWIVEL GASKET, 1-1/2" HOSE, CLAMP, DOUBLE BOLT, 1-1/2"
H		HOSE, CLAMP, DOUBLE BOLT, T	-		HOSE, AIR, RED, NOMINAL 1-1/4" ID x	Ë		HOSE, AIR, RED, NOMINAL 1-1/2" ID x
18 19	112-0100 888-3028-10711PB	1/2" OD, WP 300 PSI, PER FOOT  NIPPLE, HEAVY WALL, TBE, SCHEDUL	18	112-0114	1-51/64" OD, WP 250 PSI, PER FOOT	18	112-0112	2-3/32" OD, WP 250 PSI, PER FOOT
20	888-3011-107PB	TEE, GALV, 1-1/4"	E 0U	, I-1/4 X 3				
21	888-3014-107PB	PIPE PLUG, GALV, 1-1/4"						
П							888-4115-005PB	BLOWDOWN HOSE ASSY, 18" (1-6 BAG)
22	888-4115-005PB	BLOWDOWN HOSE ASSY, 18" (1-6 BAC	S)			22	888-4115-00503PB 888-4115-00510PB 888-4115-00515PB	BLOWDOWN HOSE ASSY, 3/4" x 3' BLOWDOWN HOSE ASSY, 3/4" x 10' BLOWDOWN HOSE ASSY, 3/4" x 15'
23	888-2301-90290PB	STRAINER, BRZ 1/4" 90 MICRON				<u> </u>	000-4113-003131 B	BEOWDOWN TIOSE AGG1, SI4 X 13
24	888-4101-002PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMI	NAL	1/4" ID, 300 PSI, PER F	TOOT			
25	888-4203-50000PB	SWIVEL 90°, 1/8"MNPT X 1/8"F						
26	888-4200-30200PB	HOSE, PUSH-ON INSERT 1/4" x 1/8" NP	T					
27	888-4203-50202PB	SWIVEL 90°, 1/4"MNPT x 1/4"F						
28	888-4200-30202PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP	T					
29 30	888-4203-50002PB 888-4201-50202PB	SWIVEL 90°, 1/8" MNPT x 1/4" F						
31	888-4201-50202PB 888-3031-30202PB	STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST					FEATURING	The
32	888-3011-102PB	TEE, GALV, 1/4"					- I DI	COLENA
П	888-2229-000PB	VALVE, CONTROL, PNEUMATIC					DI	U CHIME
33	888-2229-00099PB	VALVE, CONTROL, PNEUMATIC, REPA						COIL
34	888-2229-010PB	VALVE, CONTROL, PNEUMATIC (NORM	IALL	Y OPEN)			16	FULL FLOW SYSTEM
35	888-2013-402PB	DUST ELIMINATOR, 1/4" MNPT					an	11 11 11
36	888-3006-102PB	ELBOW, STREET, 90°, GALV, 1/4"					700	150 PSI (6)
37	888-7033-002PB	BRACKET, CONTROL VALVE					0 10	
38 39	888-4224-30102PB 888-4224-30002PB	BRASS SOCKET, 1/4" PLUG, 1/4"					-	
П	888-4224-30002PB 888-2263-001PB	HANDLE, CONTROL, PNEUMATIC #2					6	
40**	888-2263-000PB	HANDLE, CONTROL, PNEUMATIC						
41	888-4100-50102PB	HOSE, TWINLINE ASSY 55' ACO W/ABF	RASI	VE CUTOFF SWITCH				
42	888-2025-010PB	VALVE, ABRASIVE CUTOFF (PNEU)						
43	888-2025-10001PB	TOGGLE SWITCH GUARD						
44	888-3026-50200PB	BUSHING, PLATED 1/4" x 1/8"NPT			· · · · · · · · · · · · · · · · · · ·			
45	888-2229-301PB	VALVE, CONTROL, KNOB OPERATED			DUTY			
40	888-2229-30199PB 888-4100-301PB	VALVE, CONTROL, KNOB OPERATED : HOSE, TWINLINE CONTROL, ASSEMBL						
46 47	888-4100-301PB 888-3028-10799PB	NIPPLE, HEAVY WALL, TBE, SCHEDUL	_		IF, NOMINAL 3/10 ID X 25			
48	888-3028-10711PB	NIPPLE, REAVY WALL, I BE, SCHEDUL NIPPLE, TBE, SCHEDULE 80, GALV, 1-				48	888-3028-10714PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4" x 4" (BIG GUN)
						I	888-3028-10711PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1- 1/4" x 3"
49	888-3000-102PB	ELBOW, GALV, 90°, 1/4"				<u> </u>		n- 40
50	888-3029-10209PB	NIPPLE, TBE, GALV, 1/4" x 2"						
51	888-4203-50200PB	SWIVEL 90°, 1/4" MNPT x 1/8" F						
52	888-3031-30606PB	HEX NIPPLE, 1" x 1"	52	888-3031-30707PB	HEX NIPPLE, 1-1/4" x 1-1/4"	52	888-3031-30808PB	HEX NIPPLE, 1-1/2" x 1-1/2"
_						-		

<sup>\*</sup> See "Valve Parts Lists" Section for detailed parts list.

<sup>\*\*</sup> See "Control Handle Parts Lists" Section for detailed parts list.

**SPR SERIES - Electric Abrasive Cut-Off** 

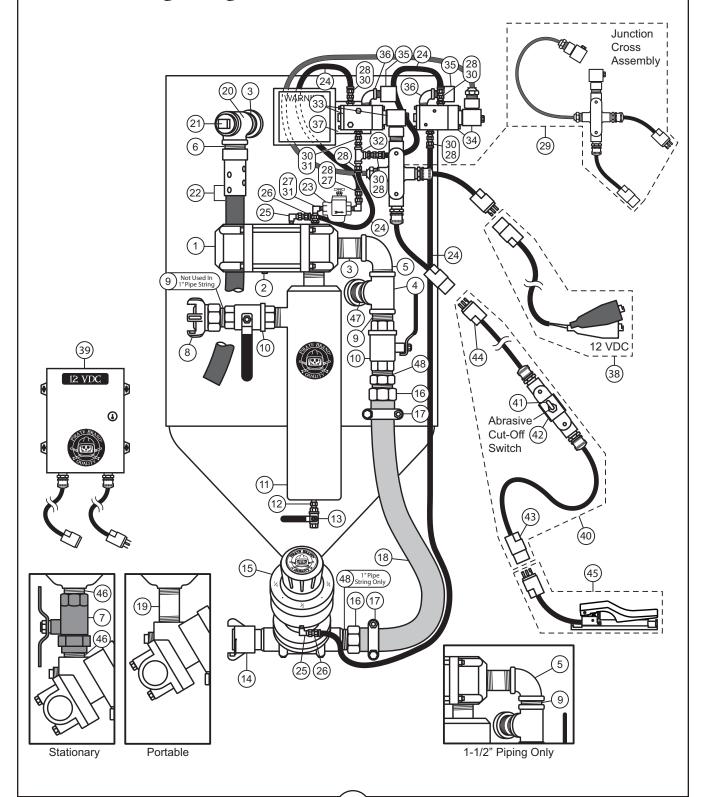



# **SPR SERIES - Electric Abrasive Cut-Off**


	1" PI	PE STRING		1-1/4"	PIPE STRING		1-1/2"	PIPE STRING
1*	888-2223-000PB	VALVE, COMBINATION, COMPLETE				_		
2	888-2014-300PB	VENT, 1/8"						
3		NIPPLE, TBE, GALV, 1-1/4" x 3"				3	888-3029-10714PB 888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 4" (BIG GUN) NIPPLE, TBE, GALV, 1-1/4" x 3"
4	888-3013-10706PB	TEE, GALV, 1-1/4" x 1" x 1-1/4"	4	888-3011-107PB	TEE, GALV, 1-1/4"	4	888-3038-10807PB	TEE REDUCING, GALV, 1-1/2" x 1-1/2" x 1-1/4"
5	888-3006-107PB	ELBOW, STREET, 90*, GALV, 1-1/4"				5	888-3010-10807PB	ELBOW, REDUCING, GALV, 1-1/2" x 1- 1/4"
6	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED						
7	888-2408-907PB	BALL VALVE, UNION END, 1-1/4"						
8	UM-100	AIR HOSE COUPLINGS, 2 LUG, 1" MALE NPT	8	UF-125	AIR HOSE COUPLINGS, 4 LUG, 1-1/4" FEMALE NPT	8	UF-150	AIR HOSE COUPLINGS, 4 LUG, 1-1/2" FEMALE NPT
9	888-3029-10699PB	NIPPLE, TBE, GALV, 1" x CLOSED	9	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED	9	888-3029-10899PB	NIPPLE, TBE, GALV, 1-1/2" x CLOSED
10	VB100 888-1200-006PB-P	BALL VALVE, FULL PORT, 1" NPT  MOISTURE TRAP 1" (1"M INLET x 1- 1/4"M OUTLET, 90% EFFICIENT @ 150	10	VB125	BALL VALVE, FULL PORT, 1-1/4" NPT  MOISTURE TRAP 1-1/4" (1-1/4"M INLET x 1-1/4"M OUTLET, 90% EFFICIENT @	10	VB150 888-1200-009PB-P	BALL VALVE, FULL PORT, 1-1/2" NPT  MOISTURE TRAP, <b>BIG GUN</b> , 1-1/2" (1- 1/2"M INLET x 1-1/4"M OUTLET, 350  CFM, POWDER COATED BLACK)
		CFM) POWDER COATED BLACK		000*1200*007FB*F	150 CFM) POWDER COATED BLACK		888-1200-008PB-P	MOISTURE TRAP 1-1/2" (1-1/2"M INLET x 1-1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK
12	888-3031-31202PB	NIPPLE, HEX 1/4"MNPT x 1/4" MNPT						
13	VB025	BALL VALVE, FULL PORT, 1/4" NPT				_		
14	SB-2-IR	THD QUICK COUPLING, IRON, 1-1/2"	14	SB-1S-IR	THRD CPLG, STD NPS, IRON, 1-1/4"	14	SB-3X-AL	THD QUICK COUPLING, ALUMINUM, 1-1/2", FULL PORT
15*	888-2148-006PB	APV II, 1" W/SOLID TUNGSTEN CARBIDE SLEEVE	15*	888-2148-007PB	APV II, 1-1/4" W/SOLID TUNGSTEN CARBIDE SLEEVE	15*	888-2148-008PB	APV II, 1-1/2" W/SOLID TUNGSTEN CARBIDE SLEEVE
l	888-2149-006PB	APV, 1", W/TC SLEEVE		888-2149-007PB	APV, 1-1/4, W/TC SLEEV		888-2149-008PB	APV, 1-1/2", W/TC SLEEVE
Н	888-2149-106PB	APV, 1", W/URETHANE SLEEVE		888-2149-107PB	APV, 1-1/4", W/URETHANE SLEEVE		888-2149-108PB	APV, 1-1/2", W/URETHANE SLEEVE
16	888-4205-106PB	HOSE, INSERT SWIVEL, 1", INCLUDES GASKET	16	888-4205-107PB	HOSE, INSERT SWIVEL, 1-1/4", INCLUDES GASKET	16	888-4205-108PB	HOSE, INSERT SWIVEL, 1-1/2", INCLUDES GASKET
17	888-4205-10699PB	HOSE, SWIVEL GASKET, 1"	17	888-4205-10799PB	HOSE, SWIVEL GASKET, 1-1/4"	17	888-4205-10899PB	HOSE, SWIVEL GASKET, 1-1/2"
17	888-4235-006PB	HOSE, CLAMP, DOUBLE BOLT, 1"	17	888-4235-007PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/4"	17	888-4235-008PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/2"
18	112-0100	HOSE, AIR, RED, NOMINAL 1" ID x 1- 1/2" OD, WP 300 PSI, PER FOOT NIPPLE, HEAVY WALL, TBE, SCHEDULE	18	112-0114	HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT	18	112-0112	HOSE, AIR, RED, NOMINAL 1-1/2" ID x 2-3/32" OD, WP 250 PSI, PER FOOT
19 20	888-3028-10711PB 888-3011-107PB	TEE, GALV. 1-1/4"	ου,	I-1/4 X 3				
21	888-3014-107PB	PIPE PLUG, GALV, 1-1/4"						
21	000-3014-1071 B	1 II E 1 200, OAEV, 1-114					888-4115-005PB	BLOWDOWN HOSE ASSY, 18" (1-6
22	888-4115-005PB	BLOWDOWN HOSE ASSY, 18" (1-6 BAG				22	888-4115-00503PB 888-4115-00510PB	BLOWDOWN HOSE ASSY, 3/4" x 3' BLOWDOWN HOSE ASSY, 3/4" x 10'
							888-4115-00515PB	BLOWDOWN HOSE ASSY, 3/4" x 15'
23	888-2301-90290PB	STRAINER, BRZ 1/4" 90 MICRON						
24	888-4101-002PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN	AL 1	4" ID, 300 PSI, PER FC	ОТ			
25	888-4203-50000PB	SWIVEL 90°, 1/8"MNPT X 1/8"F						
26	888-4200-30200PB	HOSE, PUSH-ON INSERT 1/4" x 1/8" NPT						
27	888-4203-50202PB	SWIVEL 90°, 1/4"MNPT x 1/4"F						
28 29	888-4200-30202PB 888-7112-00002PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT JUNCTION CROSS ASSEMBLY, SMALL	DIII	V DI ASTEDS 12VDC	ACO (1) OUTLET			
30	888-4201-50202PB	STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F		IN DEMOTERS, 12VDC,	, (1) 001221			
31	888-3031-30202PB	HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST					FEATURE	NG THE
32	888-3011-102PB	TEE, GALV, 1/4"					1 (2)	CYTAX
П	888-2229-100PB	VALVE, CONTROL, ELECTRIC, 12VDC					D	UTIM
33	888-2229-10099PB	VALVE, CONTROL, REPAIR KIT, ELECT	RIC, I	HEAVY D				2011
34	888-2229-600PB	VALVE, CONTROL, ELECTRIC, 12VDC (I	IOR	MALLY OPEN)			4	FULL PLOW SYSTEM
35	888-2013-402PB	DUST ELIMINATOR, 1/4" MNPT					di	( ( ( ) )
36	888-3006-102PB	ELBOW, STREET, 90°, GALV, 1/4"						ISO PSI
37	888-7033-002PB	BRACKET, CONTROL VALVE					0 00	
38		POWER CORD, 25' 12VDC, 3-LUG	_				1	
39	PB-SMP3WP	POWER SUPPLY, 120AC INPUT, 12VDC			LAGOSHOLV SSL O SECTION STATE			W 00
40	888-7075-055PB	EXTENSION CORD W/CONNECTORS & ABRA CUTOFF SWITCH (ELEC)	ABR/	ASIVE CUTOFF SWITCH	H ASSEMBLY, 55', 3-PRONG, 3-WIRE			
41	888-2025-10002PB	ABRA CUTOFF SWITCH (ELEC) TOGGLE SWITCH GUARD						
42 43	888-2025-10001PB 888-7109-300PB	ELECTRIC CONNECTOR, FEMALE, TWIS	T.1.5	OCK 3 PRONG				
44	888-7109-300PB 888-7109-301PB	ELECTRIC CONNECTOR, FEMALE, TWIST-						
H	888-2263-40101PB	HANDLE, CONTROL, ELECTRIC #2 W/PL		.,				
45**	888-2263-40001PB	HANDLE, CONTROL, ELECTRIC #2 W/PL	-					
[ ]	888-2263-40102PB			D CONNECTOR (RFO)	JIRED WHEN USING STEEL ABRASIVES)			
46	888-3028-10799PB	NIPPLE, HEAVY WALL, TBE, SCHEDULE			312272337420)			
47		NIPPLE, TBE, SCHEDULE 80, GALV, 1-1,				47	888-3028-10714PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4" x 4" (BIG GUN) NIPPLE, TBE, SCHEDULE 80, GALV, 1-
48	888-3031-30606PB	HEX NIPPLE, 1" x 1"	48	888-3031-30707PR	HEX NIPPLE, 1-1/4" x 1-1/4"	48	888-3028-10711PB 888-3031-30808PB	1/4" x 3"  HEX NIPPLE, 1-1/2" x 1-1/2"
لت ا		,			1			

<sup>\*</sup> See "Valve Parts Lists" Section for detailed parts list.

<sup>\*\*</sup> See "Control Handle Parts Lists" Section for detailed parts list.

# PIPE STRING PARTS LISTS &

SPR SERIES - Electric Remote Switch Abrasive Cut-Off

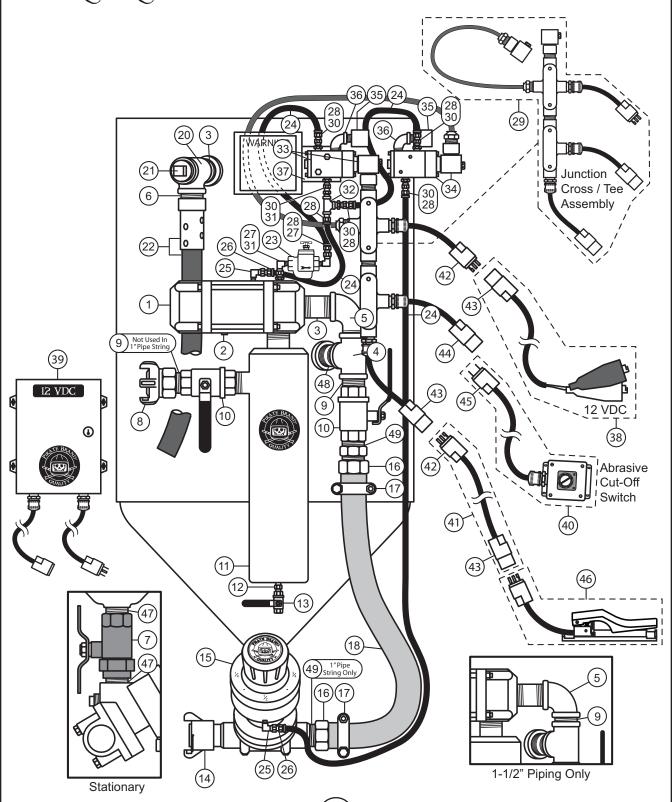



## SPR SERIES - Electric Remote Switch Abrasive Cut-Off


	1" P	IPE STRING		1-1/4"	PIPE STRING		1-1/2"	PIPE STRING
1*	888-2223-000PB	VALVE, COMBINATION, COMPLETE		, .	2 0		,_	2 0
2	888-2223-000PB 888-2014-300PB	VENT. 1/8"						
H	000-2014-3001 B	V2.11, 110					I	NIPPLE, TBE, GALV, 1-1/4" x 4" (BIG
3	888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 3"				3	888-3029-10714PB	GUN)
							888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 3"
								TEE REDUCING, GALV, 1-1/2" x 1-1/2" x
4	888-3013-10706PB	TEE, GALV, 1-1/4" x 1" x 1-1/4"	4	888-3011-107PB	TEE, GALV, 1-1/4"	4	888-3038-10807PB	1-1/4"
5	888-3006-107PB	ELBOW, STREET, 90*, GALV, 1-1/4"				5	888-3010-10807PB	ELBOW, REDUCING, GALV, 1-1/2" x 1-
ı,	000-3000-107FB					٥	000-3010-10007FB	1/4"
6	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED						
7	888-2408-907PB	BALL VALVE, UNION END, 1-1/4"	_				1	
8	UM-100	AIR HOSE COUPLINGS, 2 LUG, 1" MALE NPT	8	UF-125	AIR HOSE COUPLINGS, 4 LUG, 1-1/4" FEMALE NPT	8	UF-150	AIR HOSE COUPLINGS, 4 LUG, 1-1/2" FEMALE NPT
9	888-3029-10699PB	NIPPLE, TBE, GALV, 1" x CLOSED	9	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED	9	888-3029-10899PB	NIPPLE, TBE, GALV, 1-1/2" x CLOSED
10	VB100	BALL VALVE, FULL PORT, 1" NPT	10	VB125	BALL VALVE, FULL PORT, 1-1/4" NPT	10	VB150	BALL VALVE, FULL PORT, 1-1/2" NPT
H	VB100	BALL VALVE, FOLE FORT, FINE F	10	VB 123	BALL VALVE, I GLET GIVI, 1-174 IVI I	10	VB150	
							000 4000 000DD D	MOISTURE TRAP, BIG GUN, 1-1/2" (1-
		MOISTURE TRAP 1" (1"M INLET x 1-			MOISTURE TRAP 1-1/4" (1-1/4"M INLET		888-1200-009PB-P	1/2"M INLET x 1-1/4"M OUTLET, 350 CFM, POWDER COATED BLACK)
11	888-1200-006PB-P	1/4"M OUTLET, 90% EFFICIENT @ 150	11	888-1200-007PB-P	x 1-1/4"M OUTLET, 90% EFFICIENT @	11		,
		CFM) POWDER COATED BLACK			150 CFM) POWDER COATED BLACK			MOISTURE TRAP 1-1/2" (1-1/2"M INLET
							888-1200-008PB-P	x 1-1/4"M OUTLET, 90% EFFICIENT @
								150 CFM) POWDER COATED BLACK
12	888-3031-31202PB	NIPPLE, HEX 1/4"MNPT x 1/4" MNPT						
13	VB025	BALL VALVE, FULL PORT, 1/4" NPT						
14	SB-2-IR	THD QUICK COUPLING, IRON, 1-1/2"	14	SB-1S-IR	THRD CPLG, STD NPS, IRON, 1-1/4"	14	SB-3X-AL	THD QUICK COUPLING, ALUMINUM, 1-
Щ	",			0	,	Ë	3///12	1/2", FULL PORT
	888-2148-006PB	APV II, 1" W/SOLID TUNGSTEN		888-2148-007PB	APV II, 1-1/4" W/SOLID TUNGSTEN		888-2148-008PB	APV II, 1-1/2" W/SOLID TUNGSTEN
15*		CARBIDE SLEEVE	15*		CARBIDE SLEEVE	15*		CARBIDE SLEEVE
	888-2149-006PB	APV, 1", W/TC SLEEVE		888-2149-007PB	APV, 1-1/4, W/TC SLEEV		888-2149-008PB	APV, 1-1/2", W/TC SLEEVE
$\vdash$	888-2149-106PB	APV, 1", W/URETHANE SLEEVE		888-2149-107PB	APV, 1-1/4", W/URETHANE SLEEVE		888-2149-108PB	APV, 1-1/2", W/URETHANE SLEEVE
	888-4205-106PB	HOSE, INSERT SWIVEL, 1", INCLUDES GASKET		888-4205-107PB	HOSE, INSERT SWIVEL, 1-1/4", INCLUDES GASKET	١	888-4205-108PB	HOSE, INSERT SWIVEL, 1-1/2", INCLUDES GASKET
16	000 1005 1000BB		16	888-4205-107-99PB		16	000 4005 4000000	
17	888-4205-10699PB	HOSE, SWIVEL GASKET, 1"	47		HOSE, SWIVEL GASKET, 1-1/4" HOSE, CLAMP, DOUBLE BOLT, 1-1/4"	47	888-4205-10899PB 888-4235-008PB	HOSE, SWIVEL GASKET, 1-1/2" HOSE, CLAMP, DOUBLE BOLT, 1-1/2"
17	888-4235-006PB	HOSE, CLAMP, DOUBLE BOLT, 1"	17	888-4235-007PB		17	000-4233-UU0PB	1
18	112-0100	HOSE, AIR, RED, NOMINAL 1" ID x 1- 1/2" OD, WP 300 PSI, PER FOOT	18	112-0114	HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT	18	112-0112	HOSE, AIR, RED, NOMINAL 1-1/2" ID x 2-3/32" OD, WP 250 PSI, PER FOOT
19	888-3028-10711PB	NIPPLE, HEAVY WALL, TBE, SCHEDULE	80	1_1//" v 3"	10,01 05, 111 20010, 12111001	_		2 0,02 05, 111 200 101, 1211 1001
20	888-3011-107PB	TEE, GALV, 1-1/4"	. 00,	x o				
21	888-3014-107PB	PIPE PLUG, GALV, 1-1/4"						
	888-4115-005PB	BLOWDOWN HOSE ASSY, 18" (1-6 BAG	)					
	888-4115-00503PB	BLOWDOWN HOSE ASSY, 3/4" x 3'						
22	888-4115-00510PB	BLOWDOWN HOSE ASSY, 3/4" x 10'						
	888-4115-00515PB	BLOWDOWN HOSE ASSY, 3/4" x 15'						
23	888-2301-90290PB	STRAINER, BRZ 1/4" 90 MICRON						
24	888-4101-002PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN	IAL 1	/4" ID, 300 PSI, PER FO	ОТ			
25	888-4203-50000PB	SWIVEL 90°, 1/8"MNPT X 1/8"F						
26	888-4200-30200PB	HOSE, PUSH-ON INSERT 1/4" x 1/8" NPT						
27	888-4203-50202PB	SWIVEL 90°, 1/4"MNPT x 1/4"F						
28	888-4200-30202PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT						
29	888-7112-00004PB	JUNCTION CROSS/TEE ASSEMBLY, SM	ALL 8	& BULK BLASTERS, 12\	/DC, ACO, (1) OUTLET		PEATUR	NG THE
30	888-4201-50202PB	STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F						CYTAL
31	888-3031-30202PB	HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST					D	UGINI
32	888-3011-102PB	TEE, GALV, 1/4"						201
33	888-2229-100PB 888-2229-10099PB	VALVE, CONTROL, ELECTRIC, 12VDC	olC ,	JEAN DUTY			*	FULL FLOW SYSTEM
34	888-2229-10099PB 888-2229-600PB	VALVE, CONTROL, REPAIR KIT, ELECTI VALVE, CONTROL, ELECTRIC, 12VDC (I					A	
35	888-2229-600PB 888-2013-402PB	DUST ELIMINATOR, 1/4" MNPT	·OKI	IDELI OFEN)				ISO PSI
36	888-3006-102PB	ELBOW, STREET, 90°, GALV, 1/4"					(a) 4 (	
37	888-7033-002PB	BRACKET, CONTROL VALVE						
38	888-7072-012PB	POWER CORD, 25' 12VDC, 3-LUG					_	
39	PB-SMP3WP	POWER SUPPLY, 120AC INPUT, 12VDC	@ 2	5 AMP OUTPUT				
40	999-8400-35104PB-02	SELECTOR SWITCH OPERATOR, 25' CO	_					
41	888-7073-055PB	EXTN CORD W/CONNECTOR, 55', 3 PRO						· · · · · · · · · · · · · · · · · · ·
42	888-7109-301PB	ELECTRIC CONNECTOR, MALE, TWIST	_					
43	888-7109-300PB	ELECTRIC CONNECTOR, FEMALE, TWI						
44	10-352	FEMALE TWIST-LOCK CONNECTOR, 2	PRON	NG				
45	10-354	MALE TWIST-LOCK CONNECTOR, 2 PR						
П	888-2263-40101PB	HANDLE, CONTROL, ELECTRIC #2 W/PI	.UG					
46**	888-2263-40001PB	HANDLE, CONTROL, ELECTRIC W/PLU						
	888-2263-40102PB	HANDLE, CONTROL, ELECTRIC #2 W/SI	ALE	D CONNECTOR (REQU	IRED WHEN USING STEEL ABRASIVES)			
47	888-3028-10799PB	NIPPLE, HEAVY WALL, TBE, SCHEDULE						
П							888-3028-10714PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1-
48	888-3028-10711PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1-1,	4" x :	3"		48	000-3020-107 14PB	1/4" x 4" (BIG GUN)
"	10111110	_,,,,,,,, _				ľ	888-3028-10711PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1-
$\square$			<u> </u>		T	L		1/4" x 3"
49	888-3031-30606PB	HEX NIPPLE, 1" x 1"	49	888-3031-30707PB	HEX NIPPLE, 1-1/4" x 1-1/4"	49	888-3031-30808PB	HEX NIPPLE, 1-1/2" x 1-1/2"

<sup>\*</sup> See "Valve Parts Lists" Section for detailed parts list.

<sup>\*\*</sup> See "Control Handle Parts Lists" Section for detailed parts list.



**SHORT-CYCLE - Pneumatic Controls** 

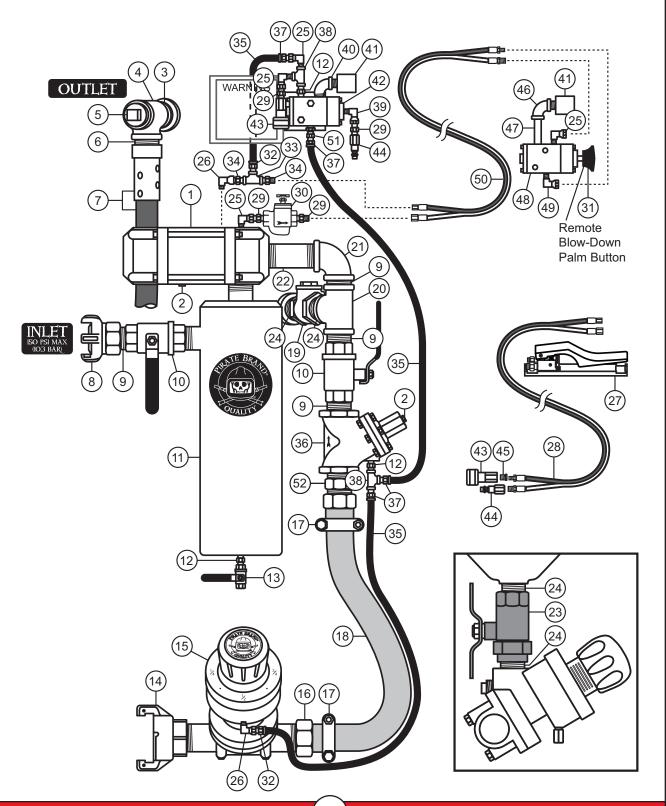



### **SHORT-CYCLE - Pneumatic Controls**


		1	
1*	888-2223-000PB	VALVE, COMBINATION, COMPLETE	
2	888-2014-300PB	VENT, 1/8"	
3	888-3029-10714PB	NIPPLE, TBE, GALV, 1-1/4" x 4"	
4	888-3011-107PB	TEE, GALV, 1-1/4"	
5	888-3014-107PB	PIPE PLUG, GALV, 1-1/4"	
6	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED	
	888-4115-005PB	BLOWDOWN HOSE ASSY, 18"	
7	888-4115-00503PB	BLOWDOWN HOSE ASSY, 3/4" x 3'	
	888-4115-00510PB	BLOWDOWN HOSE ASSY, 3/4" x 10'	
	888-4115-00515PB	BLOWDOWN HOSE ASSY, 3/4" x 15'	
8	UF-150	AIR HOSE COUPLINGS, 4 LUG, 1-1/2" FEMALE NPT	
9	888-3029-10899PB	NIPPLE, TBE, GALV, 1-1/2" x CLOSED	
10	VB150	BALL VALVE, FULL PORT, 1-1/2" NPT	
	888-1200-009PB-P	MOISTURE TRAP, <b>BIG GUN</b> , 1-1/2" (1-1/2"M INLET x 1-1/4"M OUTLET, 350 CFM, POWDER COATED	
11	888-1200-008PB-P	BLACK)	
12	888-3031-31202PB	MOISTURE TRAP 1-1/2" (1-1/2"M INLET x 1-1/4"M OUTLET, 150 CFM, POWDER COATED BLACK)  NIPPLE, HEX 1/4"MNPT x 1/4" MNPT	
-			
13	VB025	BALL VALVE, FULL PORT, 1/4" NPT	
14	SB-3X-AL	THD QUICK COUPLING, ALUMINUM, 1-1/2", FULL PORT (BIG GUN)	
-	SB-2-IR	THD QUICK COUPLING, IRON, 1-1/2"	
15*	888-2148-008PB	APV II, 1-1/2" W/SOLID TUNGSTEN CARBIDE SLEEVE	
15*	888-2149-008PB	APV, 1-1/2", W/TUNGSTEN CARBIDE SLEEVE  APV, 1-1/2", W/URETHANE SLEEVE	
-	888-2149-108PB		
16	888-4205-108PB	HOSE, INSERT SWIVEL, 1-1/2", INCLUDES GASKET	
17	888-4205-10899PB	HOSE, SWIVEL GASKET, 1-1/2"	
17 18	888-4235-008PB 112-0112	HOSE, CLAMP, DOUBLE BOLT, 1-1/2"	
$\rightarrow$		HOSE, AIR, RED, NOMINAL 1-1/2" ID x 2-3/32" OD, WP 250 PSI, PER FOOT	
19 20	888-2490-90701PB 888-3038-10807PB	CHECK VALVE, SWING 1-1/4", W/ 5/32" DIFFERENTIAL EQUALIZER HOLE	
_	888-3010-10807PB	TEE REDUCING, GALV, 1-1/2" x 1-1/4"	
21		ELBOW, REDUCING, GALV, 1-1/2" x 1-1/4"	
22	888-3029-10714PB 888-2408-907PB	NIPPLE, TBE, GALV, 1-1/4" x 4"  BALL VALVE, UNION END, 1-1/4"	
24	888-3028-10799PB	NIPPLE, HEAVY WALL, TBE, SCHEDULE 80, 1-1/4" x CLOSED	
25	888-4203-50202PB	SWIVEL 90°, 1/4"MNPT x 1/4"F	
26	888-4203-50000PB	SWIVEL 90°, 1/8"MNPT X 1/8"F	
20	888-2263-001PB	HANDLE, CONTROL, PNEUMATIC #2	
27**	888-2263-000PB	HANDLE, CONTROL, PNEUMATIC	
$\dashv$	200-055	HOSE, TWINLINE CONTROL, ASSEMBLY, YEL/YEL W/BLACK STRIP, NOMINAL 3/16" ID x 55'	
28	200-033	HOSE, TWINLINE CONTROL, ASSEMBLY, YEL/YEL W/BLACK STRIP, NOMINAL 3/16" ID x 110'	
29	888-3031-30202PB	HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST	
30	888-2301-90290PB	STRAINER, BRZ 1/4" 90 MICRON	
31	PB-30A01003	PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	
32	888-4200-30200PB	HOSE, PUSH-ON INSERT 1/4" x 1/8" NPT	
33	888-3011-100PB	TEE, GALV 1/8"	
34	888-3031-30000PB	HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST	~ 7
35	888-4101-002PB	HOSE, PUSH-ON, 1/4"	CYCLE
	888-2123-108PB-L	VALVE, AUTO AIR, 1-1/2" FULL FLOW, (NORMALLY CLOSED) (BIG GUN)	M. WILL
36*	888-2123-108PB	VALVE, AUTO AIR, 1-1/2", (NORMALLY CLOSED) (REQUIRES 888-3031-31200PB)	NO PIRATE BRAND
37	888-4200-30202PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT	
38	888-3011-102PB	TEE, GALV 1/4"	
39	888-4203-50002PB	SWIVEL 90°, 1/8"MNPT X 1/4"F	2-
40	888-3006-102PB	ELBOW, STREET, 90°, GALV, 1/4"	14-
41	888-2013-402PB	BUST SUBMINISTED AND ADDRESS OF THE PROPERTY O	
$\neg$	888-2229-000PB	VALVE, CONTROL, PNEUMATIC (NORMALLY CLOSED)	THE
42	888-2229-00099PB	VALVE, CONTROL, PNEUMATIC, REPAIR KIT, HEAVY DUTY	CITY
43	888-4224-30102PB	BRASS SOCKET, 1/4"	JUU
44	888-4224-30002PB	PLUG, 1/4"	FULL FLOW SY
45	888-3026-50200PB	BUSHING, PLATED 1/4" x 1/8"NPT	7
46	888-3000-102PB	ELBOW, GALV, 90°, 1/4"	SO Pall
47	888-3029-10209PB	NIPPLE, TBE, GALV, 1/4" x 2"	No. of the last of
.,	888-2229-301PB	VALVE, CONTROL, KNOB OPERATED 3W2P	
48	888-2229-301199PB	VALVE, CONTROL, KNOB OF EIGHTED 3W2P, REPAIR KIT, HEAVY DUTY	
49	888-4203-50200PB	SWIVEL 90°, 1/4" MNPT x 1/8" F	
50	888-4100-301PB	HOSE, TWINLINE CONTROL, ASSEMBLY, YEL/YEL W/BLACK STRIP, NOMINAL 3/16" ID x 25'	
-			
$\overline{}$			
51 52	888-4201-50202PB 888-3031-30808PB	STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F HEX NIPPLE, 1-1/2" x 1-1/2"	
_			

<sup>\*</sup> See "Valve Parts Lists" Section for detailed parts list.

<sup>\*\*</sup> See "Control Handle Parts Lists" Section for detailed parts list.



SHORT-CYCLE - Electric Controls

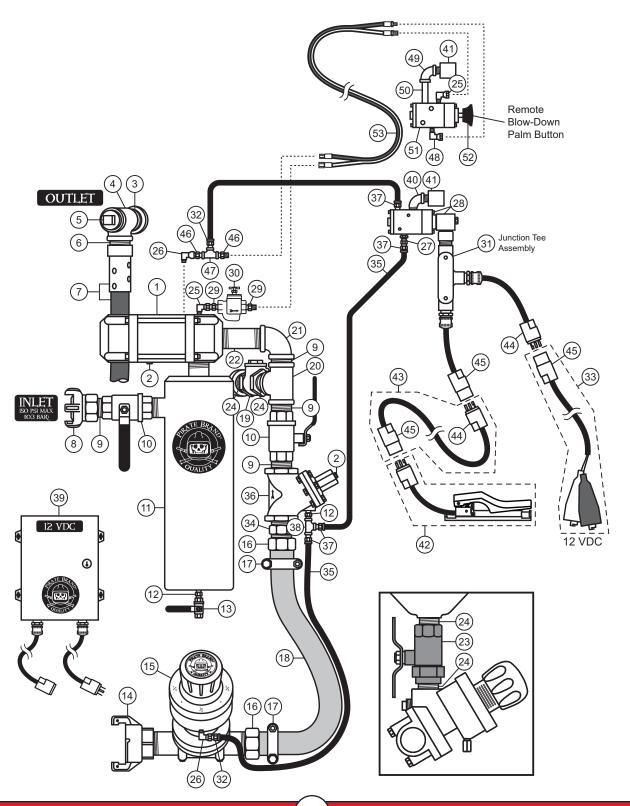



### SHORT-CYCLE - Electric Controls

1*	888-2223-000PB	VALVE, COMBINATION, COMPLETE	
2	888-2014-300PB	VENT, 1/8"	
3	888-3029-10714PB	NIPPLE, TBE, GALV, 1-1/4" x 4"	
4	888-3011-107PB	TEE, GALV, 1-1/4"	
5	888-3014-107PB	PIPE PLUG, GALV, 1-1/4"	
6	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED	
	888-4115-005PB	BLOWDOWN HOSE ASSY, 18"	
7		BLOWDOWN HOSE ASSY, 3/4" x 3'	
H	888-4115-00510PB	BLOWDOWN HOSE ASSY, 3/4" x 10'	
	888-4115-00515PB	BLOWDOWN HOSE ASSY, 3/4" x 15'	
8	UF-150 888-3029-10899PB	AIR HOSE COUPLINGS, 4 LUG, 1-1/2" FEMALE NPT	
9		NIPPLE, TBE, GALV, 1-1/2" x CLOSED	
10	VB150	BALL VALVE, FULL PORT, 1-1/2" NPT MOISTURE TRAP, BIG GUN, 1-1/2" (1-1/2"M INLET x 1-1/4"M OUTLET, 350 CFM, POWDER COATED	
11	888-1200-009PB-P	BLACK)	
li	888-1200-008PB-P	MOISTURE TRAP 1-1/2" (1-1/2"M INLET x 1-1/4"M OUTLET, 150 CFM, POWDER COATED BLACK)	
12	888-3031-31202PB	NIPPLE, HEX 1/4"MNPT x 1/4" MNPT	
13	VB025	BALL VALVE, FULL PORT, 1/4" NPT	
14	SB-3X-AL	THD QUICK COUPLING, ALUMINUM, 1-1/2", FULL PORT (BIG GUN)	
14	SB-2-IR	THD QUICK COUPLING, IRON, 1-1/2"	
ΙĪ	888-2148-008PB	APV II, 1-1/2" W/SOLID TUNGSTEN CARBIDE SLEEVE	
15*	888-2149-008PB	APV, 1-1/2", W/TUNGSTEN CARBIDE SLEEVE	
Ш	888-2149-108PB	APV, 1-1/2", W/URETHANE SLEEVE	RT-CYCLE
16	888-4205-108PB	HOSE, INSERT SWIVEL, 1-1/2", INCLUDES GASKET	G-CICLE
Ш	888-4205-10899PB	HOOL, OWIVE GACKET, 1-1/2	M SAVER BY PIRATE BRANCO
17	888-4235-008PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/2"	17'
18	112-0112	HOSE, AIR, RED, NOMINAL 1-1/2" ID x 2-3/32" OD, WP 250 PSI, PER FOOT	
19	888-2490-90701PB	CHECK VALVE, SWING 1-1/4", W/ 5/32" DIFFERENTIAL EQUALIZER HOLE	
20	888-3038-10807PB	TEE REDUCING, GALV, 1-1/2" x 1-1/2" x 1-1/4"	
21	888-3010-10807PB	ELBOW, REDUCING, GALV, 1-1/2" x 1-1/4"	
22	888-3029-10714PB	NIPPLE, TBE, GALV, 1-1/4" x 4"	ATURNG THE
23	888-2408-907PB 888-3028-10799PB	BALL VALVE, UNION END, 1-1/4"	BIG GUN
24 25	888-4203-50202PB	NIPPLE, HEAVY WALL, TBE, SCHEDULE 80, 1-1/4" x CLOSED SWIVEL 90°, 1/4"MNPT x 1/4"F	
26	888-4203-50000PB	SWIVEL 90°, 1/8"MNPT X 1/8"F	TO OOT
27	888-4201-50202PB	STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F	FULL FLOW SYSTEM
П	888-2229-100PB	VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY CLOSED)	
28	888-2229-10099PB	VALVE, CONTROL, REPAIR KIT, ELECTRIC, HEAVY DUTY	SO PSI
29	888-3031-30202PB	HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST	101
30	888-2301-90290PB	STRAINER, BRZ 1/4" 90 MICRON	
31	888-7112-000PB	JUNCTION TEE ASSEMBLY, SMALL & BULK BLASTERS 12VDC (1) OUTLET	
32	888-4200-30200PB	HOSE, PUSH-ON INSERT 1/4" x 1/8" NPT	
33	888-7072-012PB	POWER CORD, 25' 12VDC, 3-LUG	
34	888-3031-30808PB	HEX NIPPLE, 1-1/2" x 1-1/2"	
35	888-4101-002PB	HOSE, PUSH-ON, 1/4"	
36*	888-2123-108PB-L	VALVE, AUTO AIR, 1-1/2" FULL FLOW, (NORMALLY CLOSED) (BIG GUN)	
Ш	888-2123-108PB	VALVE, AUTO AIR, 1-1/2", (NORMALLY CLOSED) (REQUIRES 888-3031-31200PB)	
37	888-4200-30202PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT	
38	888-3011-102PB	TEE, GALV 1/4"	
39	PB-SMP3WP	POWER SUPPLY 120AC INPUT/12VDC @ 2.5 AMP OUTPUT, 4 CONTROL VALVE MAX LOAD	
40	888-3006-102PB	ELBOW, STREET, 90°, GALV, 1/4"	
41	888-2013-402PB	DUST ELIMINATOR, 1/4" MNPT	
	888-2263-40101PB	HANDLE, CONTROL, ELECTRIC #2 W/PLUG	
42**	888-2263-40001PB	HANDLE, CONTROL, ELECTRIC W/PLUG	
	888-2263-40102PB	HANDLE, CONTROL, ELECTRIC #2 w/SEALED CONNECTOR (REQUIRED WHEN USING STEEL ABRASIVES)	
Н	888-7073-055PB	EXTN CORD W/CONNECTOR, 55', 3 PRONG, 2 WIRE	
43	888-7073-110PB	EXTN CORD W/CONNECTOR, 35, 3 FRONG, 2 WIRE  EXTN CORD W/CONNECTOR, 110', 3 PRONG, 2 WIRE	
44	888-7109-301PB	ELECTRIC CONNECTOR, MALE, TWIST-LOCK, 3 PRONG	
45	888-7109-300PB	ELECTRIC CONNECTOR, FEMALE, TWIST-LOCK, 3 PRONG	
46	888-3031-30000PB	HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST	
47	888-3011-100PB	TEE, GALV 1/8"	
48	888-4203-50200PB	SWIVEL 90°, 1/4" MNPT x 1/8" F	
49	888-3000-102PB	ELBOW, GALV, 90°, 1/4"	
50	888-3029-10209PB	NIPPLE, TBE, GALV, 1/4" x 2"	
E4	888-2229-301PB	VALVE, CONTROL, KNOB OPERATED 3W2P	
51	888-2229-30199PB	VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY	
52	PB-30A01003	PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	
53	888-4100-301PB	HOSE, TWINLINE CONTROL, ASSEMBLY, YEL/YEL W/BLACK STRIPE, NOMINAL 3/16" ID x 25'	


<sup>\*</sup> See "Valve Parts Lists" Section for detailed parts list.

<sup>\*\*</sup> See "Control Handle Parts Lists" Section for detailed parts list.


# PIPE STRING PARTS LISTS &

### SHORT-CYCLE - Pneumatic Abrasive Cut-Off Controls

REMOTE BLOW-DOWN W/ ON HOSE ABRASIVE CUT-OFF BUTTON OPTION

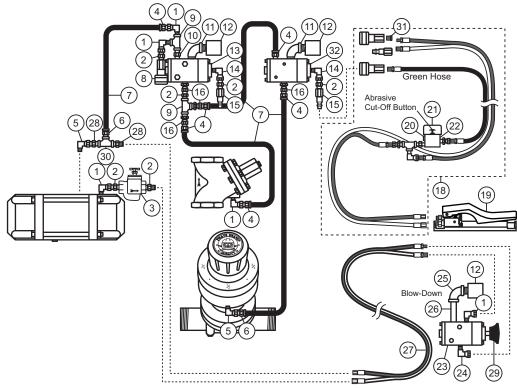

#### REMOTE BLOW-DOWN W/ REMOTE ABRASIVE CUT-OFF BUTTON OPTION

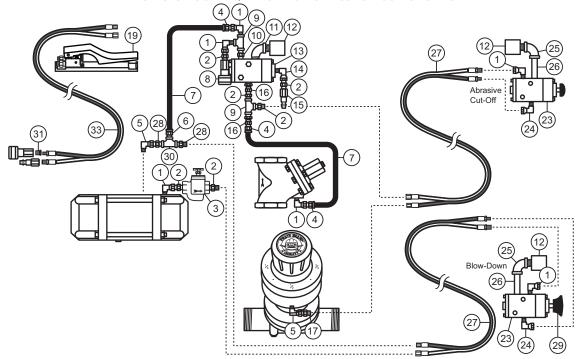



# PIPE STRING PARTS LISTS &

### SHORT-CYCLE - Pneumatic Abrasive Cut-Off Controls

1	888-4203-50202PB	SWIVEL 90°, 1/4"MNPT x 1/4"F
2	888-3031-30202PB	HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST
3	888-2301-90290PB	STRAINER, BRZ 1/4" 90 MICRON
4	888-4200-30202PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT
5	888-4203-50000PB	SWIVEL 90°, 1/8"MNPT X 1/8"F
6	888-4200-30200PB	HOSE, PUSH-ON INSERT 1/4" x 1/8" NPT
7	888-4101-002PB	HOSE, PUSH-ON, 1/4"
8	888-4224-30102PB	BRASS SOCKET, 1/4"
9	888-3011-102PB	TEE, GALV, 1/4"
10	888-3031-31202PB	NIPPLE, HEX 1/4"MNPT x 1/4" MNPT
11	888-3006-102PB	ELBOW, STREET, 90°, GALV, 1/4"
12	888-2013-402PB	DUST ELIMINATOR, 1/4" MNPT
13	888-2229-000PB	VALVE, CONTROL, PNEUMATIC (NORMALLY CLOSED)
	888-2229-00099PB	VALVE, CONTROL, PNEUMATIC, REPAIR KIT, HEAVY DUTY  SWIVEL 90°, 1/8" MNPT x 1/4" F  SHORT-CYCLE
14	888-4203-50002PB	SWIVEL 90°, 1/8" MNPT x 1/4" F
15	888-4224-30002PB	PLUG, 1/4"
16	888-4201-50202PB	STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F
17	WH42-2	1/8" HOSE UNION
18	888-4100-50102PB	HOSE, TWINLINE ASSY 55' ACO W/ABRASIVE CUTOFF SWITCH
19**	888-2263-001PB	HANDLE, CONTROL, PNEUMATIC #2
	888-2263-000PB	HANDLE, CONTROL, PNEUMATIC
20	888-2014-300PB	VENT, 1/8"
21	888-2025-10001PB	TOGGLE SWITCH GUARD
22	888-2025-010PB	VALVE, ABRASIVE CUTOFF (PNEU)
23	888-2229-301PB	VALVE, CONTROL, KNOB OPERATED 3W2P
	888-2229-30199PB	VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY
24	888-4203-50200PB	SWIVEL 90°, 1/4" MNPT x 1/8" F
25	888-3000-102PB	ELBOW, GALV, 90°, 1/4"
26	888-3029-10209PB	NIPPLE, TBE, GALV, 1/4" x 2"
27	888-4100-301PB	HOSE, TWINLINE CONTROL, ASSEMBLY, YEL/YEL W/BLACK STRIP, NOMINAL 3/16" ID x 25'
28	888-3031-30000PB	HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST
		TIEX WITTE 1/6 WITX 1/6 WIBALL 61
29	PB-30A01003	PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE
29 30		
_	PB-30A01003	PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE
30	PB-30A01003 888-3011-100PB	PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE TEE, GALV 1/8"
30	PB-30A01003 888-3011-100PB 888-3026-50200PB	PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE TEE, GALV 1/8" BUSHING, PLATED 1/4" x 1/8"NPT
30	PB-30A01003 888-3011-100PB 888-3026-50200PB 888-2229-010PB	PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE TEE, GALV 1/8" BUSHING, PLATED 1/4" x 1/8"NPT VALVE, CONTROL, PNEUMATIC (NORMALLY OPEN)


<sup>\*</sup> See "Valve Parts Lists" Section for detailed parts list.

<sup>\*\*</sup> See "Control Handle Parts Lists" Section for detailed parts list.


# PIPE STRING PARTS LISTS &

### SHORT-CYCLE - Electric Abrasive Cut-Off Controls

REMOTE BLOW-DOWN W/ ON CORD ABRASIVE CUT-OFF SWITCH OPTION

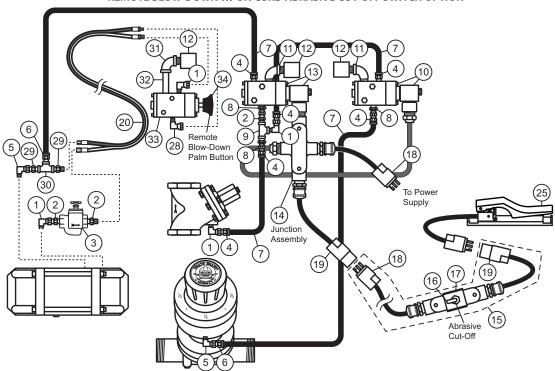

#### REMOTE BLOW-DOWN W/ REMOTE ABRASIVE CUT-OFF SWITCH OPTION

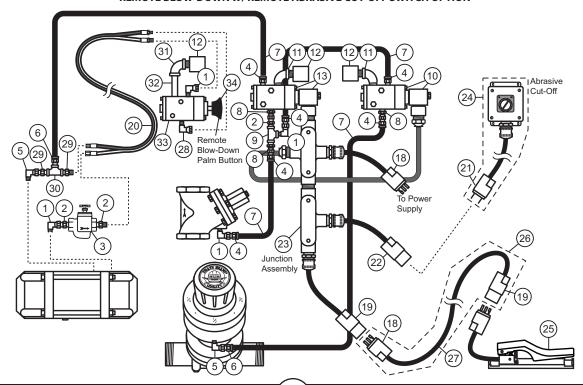



#### SHORT-CYCLE - Electric Abrasive Cut-Off Controls


16         888-2025-10002PB         ABRA CUTOFF SWITCH (ELEC)           17         888-2025-10001PB         TOGGLE SWITCH GUARD           18         888-7109-301PB         ELECTRIC CONNECTOR, MALE, TWIST-LOCK, 3 PRONG           19         888-7109-300PB         ELECTRIC CONNECTOR, FEMALE, TWIST-LOCK, 3 PRONG           20         888-4100-301PB         HOSE, TWINLINE CONTROL, ASSEMBLY, YEL/YEL W/BLACK STRIPE, NOMINAL 3/16" ID x 25           21         10-354         MALE TWIST-LOCK CONNECTOR, 2 PRONG           22         10-352         FEMALE TWIST-LOCK CONNECTOR, 2 PRONG           23         888-7112-00004PB         JUNCTION CROSS/TEE ASSEMBLY, SMALL & BULK BLASTERS, 12VDC, ACO, (1) OUTLET           24         999-8400-35104PB-02         SELECTOR SWITCH OPERATOR, 25' CORD, 2 PRONG           888-2263-40101PB         HANDLE, CONTROL, ELECTRIC #2 W/PLUG           888-2263-40001PB         HANDLE, CONTROL, ELECTRIC W/PLUG			
3	1	888-4203-50202PB	SWIVEL 90°, 1/4"MNPT x 1/4"F
4   888-4200-30202PB   HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT   5   888-4200-30200PB   SWIVEL 90", 1/8"MNPT x 1/8" NPT   7   888-4101-002PB   HOSE, PUSH-ON INSERT 1/4" x 1/8" NPT   7   888-4101-002PB   HOSE, PUSH-ON, 1/4"   888-4201-50202PB   TEE, GALV, 1/4"   888-2229-600PB   VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY OPEN)   7   888-2229-1009PB   VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY OPEN)   7   888-2229-1009PB   VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY OPEN)   7   888-2229-1009PB   VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY COPEN)   7   888-2229-1009PB   VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY CLOSED)   7   888-7075-055PB   CORD W/CONNECTORS & ABRASIVE CUTOFF SWITCH ASSEMBLY, 55', 3-PRONG, 3-WIRE   888-7075-055PB   CORD W/CONNECTORS & ABRASIVE CUTOFF SWITCH ASSEMBLY, 110', 3-PRONG, 3-WIRE   888-7109-301PB   ELECTRIC CONNECTOR, EMALE, TWIST-LOCK, 3 PRONG   888-2025-10001PB   ELECTRIC CONNECTOR, FEMALE, TWIST-LOCK, 3 PRONG   ELECTRIC CONNECTOR, FEMALE, TWIST-LOCK, 3 PRONG   ELECTRIC CONNECTOR, PEMALE, TWIST-LOCK, 3 PRONG   888-7112-00004PB   HOSE, TWINLING CONTROL, ASSEMBLY, YEL/YEL W/BLACK STRIPE, NOMINAL 3/16" ID x 25   10-352   FEMALE TWIST-LOCK CONNECTOR, 2 PRONG   888-2263-40101PB   HANDLE, CONTROL, ELECTRIC W/PLUG   888-2263-40101PB   HANDLE, CONTROL, ELECTRIC W/PLUG   888-2263-40101PB   HANDLE, CONTROL, ELECTRIC W/PLUG   888-2263-40101PB   EXTN CORD W/CONNECTOR, 55', 3 PRONG, 2 WIRE   888-703-1009PB   EXTN CORD W/CONNECTOR, 55', 3 PRONG, 2 WIRE   888-203-10009PB   EXTN CORD W/CONNECTOR, 55', 3 PRONG, 2 WIRE   888-203-10009PB   ELECTRIC CONTROL, KNOB OPERATED 3W2P	2	888-3031-30202PB	HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST
5         888-4203-50000PB         SWIVEL 90°, 1/8"MNPT X 1/8"F           6         888-4201-3020PB         HOSE, PUSH-ON INSERT 1/4" x 1/8" NPT           7         888-4201-50202PB         STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F           8         888-4201-50202PB         STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F           9         888-229-600PB         VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY OPEN)           10         888-2229-600PB         VALVE, CONTROL, REPAIR KIT, ELECTRIC, HEAVY DUTY           11         888-030-102PB         ELBOW, STREET, 90°, GALV, 1/4"           12         888-2229-1009PB         VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY CLOSED)           13         888-2229-1009PB         VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY CLOSED)           40         888-2229-1009PB         VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY CLOSED)           41         888-2229-1009PB         VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY CLOSED)           42         888-2229-1009PB         VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY CLOSED)           43         888-2229-1009PB         VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY CLOSED)           44         888-229-1009PB         VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY CLOSED)           45         888-7075-055PB         CORD WICKONNECTORS & ABRASIVE CUTOFF SWITCH ASSEMBLY, 55', 3-PRONG, 3-WIRE           46	3	888-2301-90290PB	STRAINER, BRZ 1/4" 90 MICRON
6 888-4200-30200PB HOSE, PUSH-ON INSERT 1/4" x 1/8" NPT 7 888-4101-002PB HOSE, PUSH-ON, 1/4" 8 888-4201-50202PB STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F 9 888-3011-102PB TEE, GALV, 1/4" 10 888-2229-1009PB VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY OPEN) 888-2229-1009PB VALVE, CONTROL, REPAIR KIT, ELECTRIC, HEAVY DUTY 11 888-3006-102PB ELBOW, STREET, 90", GALV, 1/4" 12 888-2219-1009PB VALVE, CONTROL, REPAIR KIT, ELECTRIC, HEAVY DUTY 13 888-2229-1009PB VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY CLOSED) 14 888-7112-0002PB JUNCTION CROSS ASSEMBLY, SMALL & BULK BLASTERS, 12VDC, ACO, (1) OUTLET 15 888-7075-055PB CORD W/CONNECTORS & ABRASIVE CUTOFF SWITCH ASSEMBLY, 55", 3-PRONG, 3-WIRE 16 888-2025-10002PB ABRA CUTOFF SWITCH (ELEC) 17 888-2025-10002PB ABRA CUTOFF SWITCH (ELEC) 18 888-7109-301PB ELECTRIC CONNECTOR, & ABRASIVE CUTOFF SWITCH ASSEMBLY, 110", 3-PRONG, 3-WIRE 19 888-7109-301PB ELECTRIC CONNECTOR, MALE, TWIST-LOCK, 3 PRONG 19 888-4100-301PB HOSE, TWINLINE CONTROL, ASSEMBLY, YELYEL W/BLACK STRIPE, NOMINAL 3/16" ID x 25 21 10-354 MALE TWIST-LOCK CONNECTOR, 2 PRONG 22 888-4100-301PB HOSE, TWINLINE CONTROL, ASSEMBLY, YELYEL W/BLACK STRIPE, NOMINAL 3/16" ID x 25 21 10-354 MALE TWIST-LOCK CONNECTOR, 2 PRONG 22 10-352 FEMALE TWIST-LOCK CONNECTOR, 2 PRONG 23 888-7112-00004PB JUNCTION CROSS/TEE ASSEMBLY, SMALL & BULK BLASTERS, 12VDC, ACO, (1) OUTLET 24 999-8400-35104PB-02 SELECTOR SWITCH OPERATOR, 25" CORD, 2 PRONG 25 888-2263-40101PB HANDLE, CONTROL, ELECTRIC #2 W/PLUG 26 888-2263-40001PB HANDLE, CONTROL, ELECTRIC #2 W/PLUG 27 10-203 CONTROL CORD, 16.2; 2 WIRE 28 888-7073-055PB EXTN CORD W/CONNECTOR, 55", 3 PRONG, 2 WIRE 29 888-203-301-30000PB EXTN CORD W/CONNECTOR, 55", 3 PRONG, 2 WIRE 29 888-3031-30000PB BEXTN CORD W/CONNECTOR, 110", 3 PRONG, 2 WIRE 29 888-3031-30000PB BEXTN CORD W/CONNECTOR, 110", 3 PRONG, 2 WIRE 29 888-3031-30000PB BEXTN CORD W/CONNECTOR, 55", 3 PRONG, 2 WIRE 29 888-3031-30000PB SWIVEL 90", 1/4" MNPT x 1/8" W/BALL ST 30 888-3031-30000PB SWIVEL 90", 1/4" MNPT x 1/8" W/BALL ST 31 888-30301-1000PB SWIVEL 90	4	888-4200-30202PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT
7       888-4101-002PB       HOSE, PUSH-ON, 1/4"         8       888-4201-50202PB       STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F         9       888-3011-102PB       TEE, GALV, 1/4"         10       888-2229-600PB       VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY OPEN)         11       888-2229-1009PB       VALVE, CONTROL, REPAIR KIT, ELECTRIC, HEAVY DUTY         12       888-2219-1009PB       VALVE, CONTROL, REPAIR KIT, ELECTRIC, HEAVY DUTY         13       888-2229-1009PB       VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY CLOSED)         14       888-2229-1009PB       VALVE, CONTROL, REPAIR KIT, ELECTRIC, HEAVY DUTY         15       888-7075-109PB       CORD W.CONNECTORS & ABRASIVE CUTOFF SWITCH ASSEMBLY, 55, 3-PRONG, 3-WIRE         16       888-7075-100PB       CORD W.CONNECTORS & ABRASIVE CUTOFF SWITCH ASSEMBLY, 110°, 3-PRONG, 3-WIRE         16       888-2025-10002PB       ABRA CUTOFF SWITCH (ELEC)         17       888-2025-10001PB       ELECTRIC CONNECTOR, & ABRASIVE CUTOFF SWITCH ASSEMBLY, 110°, 3-PRONG, 3-WIRE         18       888-7109-301PB       ELECTRIC CONNECTOR, FEMALE, TWIST-LOCK, 3 PRONG         20       888-4100-301PB       HOSE, TWINLINE CONTROL, ASSEMBLY, YEL/YEL W/BLACK STRIPE, NOMINAL 3/16" ID x25         21       10-354       MALE TWIST-LOCK CONNECTOR, 2 PRONG         22       10-352       FEMALE TWIST-LOCK	5	888-4203-50000PB	SWIVEL 90°, 1/8"MNPT X 1/8"F
888-4201-50202PB   STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F	6	888-4200-30200PB	HOSE, PUSH-ON INSERT 1/4" x 1/8" NPT
9   888-3011-102PB   TEE, GALV, 1/4"	7	888-4101-002PB	HOSE, PUSH-ON, 1/4"
888-2229-6009B	8	888-4201-50202PB	STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F
888-2229-10099PB   VALVE, CONTROL, REPAIR KIT, ELECTRIC, HEAVY DUTY	9	888-3011-102PB	TEE, GALV, 1/4"
888-2229-10099PB   VALVE, CONTROL, REPAIR KIT, ELECTRIC, HEAVY DUTY	10	888-2229-600PB	VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY OPEN)
12   888-2013-402PB	10	888-2229-10099PB	VALVE, CONTROL, REPAIR KIT, ELECTRIC, HEAVY DUTY
888-2229-1009B	11	888-3006-102PB	ELBOW, STREET, 90°, GALV, 1/4"
13   888-2229-10099PB	12	888-2013-402PB	DUST ELIMINATOR, 1/4" MNPT
888-2229-10099PB   VALVE, CONTROL, REPAIR KIT, ELECTRIC, HEAVY DUTY	12	888-2229-100PB	VALVE, CONTROL, ELECTRIC, 12VDC (NORMALLY CLOSED)
15   888-7075-055PB   CORD W/CONNECTORS & ABRASIVE CUTOFF SWITCH ASSEMBLY, 55', 3-PRONG, 3-WIRE	13	888-2229-10099PB	VALVE, CONTROL, REPAIR KIT, ELECTRIC, HEAVY DUTY
888-7075-110PB   CORD W/CONNECTORS & ABRASIVE CUTOFF SWITCH ASSEMBLY, 110', 3-PRONG, 3-WIRE	14	888-7112-00002PB	JUNCTION CROSS ASSEMBLY, SMALL & BULK BLASTERS, 12VDC, ACO, (1) OUTLET
888-7075-110PB   CORD W/CONNECTORS & ABRASIVE CUTOFF SWITCH ASSEMBLY, 110', 3-PRONG, 3-WIRE	15	888-7075-055PB	CORD W/CONNECTORS & ABRASIVE CUTOFF SWITCH ASSEMBLY, 55', 3-PRONG, 3-WIRE
17 888-2025-10001PB TOGGLE SWITCH GUARD 18 888-7109-301PB ELECTRIC CONNECTOR, MALE, TWIST-LOCK, 3 PRONG 19 888-7109-300PB ELECTRIC CONNECTOR, FEMALE, TWIST-LOCK, 3 PRONG 20 888-4100-301PB HOSE, TWINLINE CONTROL, ASSEMBLY, YEL/YEL W/BLACK STRIPE, NOMINAL 3/16" ID x 25 21 10-354 MALE TWIST-LOCK CONNECTOR, 2 PRONG 22 10-352 FEMALE TWIST-LOCK CONNECTOR, 2 PRONG 23 888-7112-00004PB JUNCTION CROSS/TEE ASSEMBLY, SMALL & BULK BLASTERS, 12VDC, ACO, (1) OUTLET 24 999-8400-35104PB-02 SELECTOR SWITCH OPERATOR, 25' CORD, 2 PRONG 25 888-2263-40101PB HANDLE, CONTROL, ELECTRIC #2 W/PLUG 26 888-2263-40102PB HANDLE, CONTROL, ELECTRIC #2 W/SEALED CONNECTOR (REQUIRED WHEN USING STEIN ABRASIVES) 27 10-203 CONTROL CORD W/CONNECTOR, 55', 3 PRONG, 2 WIRE 28 888-7073-055PB EXTN CORD W/CONNECTOR, 110', 3 PRONG, 2 WIRE 29 888-3031-30000PB HEX NIPPLE 1/8" NPT x 1/8" F 29 888-3031-30000PB HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST 30 888-3011-100PB TEE, GALV 1/8" 31 888-3029-10209PB NIPPLE, TBE, GALV, 1/4" x 2" 32 888-3029-10209PB NIPPLE, TBE, GALV, 1/4" x 2" 33 888-2229-301PPB VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY 34 PB-30A01003 PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	15	888-7075-110PB	CORD W/CONNECTORS & ABRASIVE CUTOFF SWITCH ASSEMBLY, 110', 3-PRONG, 3-WIRE
18	16	888-2025-10002PB	ABRA CUTOFF SWITCH (ELEC)
19   888-7109-300PB	17	888-2025-10001PB	TOGGLE SWITCH GUARD
20   888-4100-301PB	18	888-7109-301PB	ELECTRIC CONNECTOR, MALE, TWIST-LOCK, 3 PRONG
10-354   MALE TWIST-LOCK CONNECTOR, 2 PRONG	19	888-7109-300PB	ELECTRIC CONNECTOR, FEMALE, TWIST-LOCK, 3 PRONG
10-352   FEMALE TWIST-LOCK CONNECTOR, 2 PRONG	20	888-4100-301PB	HOSE, TWINLINE CONTROL, ASSEMBLY, YEL/YEL W/BLACK STRIPE, NOMINAL 3/16" ID x 25'
23 888-7112-00004PB JUNCTION CROSS/TEE ASSEMBLY, SMALL & BULK BLASTERS, 12VDC, ACO, (1) OUTLET 24 999-8400-35104PB-02 SELECTOR SWITCH OPERATOR, 25' CORD, 2 PRONG  888-2263-40101PB HANDLE, CONTROL, ELECTRIC #2 W/PLUG  888-2263-40001PB HANDLE, CONTROL, ELECTRIC W/PLUG  888-2263-40102PB HANDLE, CONTROL, ELECTRIC #2 W/SEALED CONNECTOR (REQUIRED WHEN USING STEE ABRASIVES)  26 888-7073-055PB EXTN CORD W/CONNECTOR, 55', 3 PRONG, 2 WIRE  888-7073-110PB EXTN CORD W/CONNECTOR, 110', 3 PRONG, 2 WIRE  27 10-203 CONTROL CORD, 16.2, 2 WIRE (PER FT)  28 888-4203-50200PB SWIVEL 90°, 1/4" MNPT x 1/8" F  29 888-3031-30000PB HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST  30 888-3011-100PB TEE, GALV 1/8"  31 888-3000-102PB ELBOW, GALV, 90°, 1/4"  32 888-3029-10209PB NIPPLE, TBE, GALV, 1/4" x 2"  888-2229-301PB VALVE, CONTROL, KNOB OPERATED 3W2P  888-2229-30199PB VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY  34 PB-30A01003 PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	21	10-354	MALE TWIST-LOCK CONNECTOR, 2 PRONG
24 999-8400-35104PB-02 SELECTOR SWITCH OPERATOR, 25' CORD, 2 PRONG  888-2263-40101PB HANDLE, CONTROL, ELECTRIC #2 W/PLUG  888-2263-40001PB HANDLE, CONTROL, ELECTRIC W/PLUG  888-2263-40102PB HANDLE, CONTROL, ELECTRIC #2 W/SEALED CONNECTOR (REQUIRED WHEN USING STER ABRASIVES)  26 888-7073-055PB EXTN CORD W/CONNECTOR, 55', 3 PRONG, 2 WIRE  888-7073-110PB EXTN CORD W/CONNECTOR, 110', 3 PRONG, 2 WIRE  27 10-203 CONTROL CORD, 16.2, 2 WIRE (PER FT)  28 888-4203-50200PB SWIVEL 90°, 1/4" MNPT x 1/8" F  29 888-3031-30000PB HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST  30 888-3011-100PB TEE, GALV 1/8"  31 888-3029-1020PB NIPPLE, TBE, GALV, 1/4" x 2"  32 888-2229-301PB VALVE, CONTROL, KNOB OPERATED 3W2P  33 888-2229-30199PB VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY  34 PB-30A01003 PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	22	10-352	FEMALE TWIST-LOCK CONNECTOR, 2 PRONG
888-2263-40101PB HANDLE, CONTROL, ELECTRIC #2 W/PLUG 888-2263-40001PB HANDLE, CONTROL, ELECTRIC W/PLUG 888-2263-40102PB HANDLE, CONTROL, ELECTRIC #2 W/SEALED CONNECTOR (REQUIRED WHEN USING STEEL ABRASIVES)  26 888-7073-055PB EXTN CORD W/CONNECTOR, 55', 3 PRONG, 2 WIRE 888-7073-110PB EXTN CORD W/CONNECTOR, 110', 3 PRONG, 2 WIRE 27 10-203 CONTROL CORD, 16.2, 2 WIRE (PER FT) 28 888-4203-50200PB SWIVEL 90°, 1/4" MNPT x 1/8" F 29 888-3031-30000PB HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST 30 888-3011-100PB TEE, GALV 1/8" 31 888-3000-102PB ELBOW, GALV, 90°, 1/4" 32 888-3029-10209PB NIPPLE, TBE, GALV, 1/4" x 2" 33 888-2229-301PB VALVE, CONTROL, KNOB OPERATED 3W2P 888-2229-30199PB VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY 34 PB-30A01003 PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	23	888-7112-00004PB	JUNCTION CROSS/TEE ASSEMBLY, SMALL & BULK BLASTERS, 12VDC, ACO, (1) OUTLET
888-2263-40001PB HANDLE, CONTROL, ELECTRIC W/PLUG  888-2263-40102PB HANDLE, CONTROL, ELECTRIC #2 W/SEALED CONNECTOR (REQUIRED WHEN USING STEEL ABRASIVES)  888-7073-055PB EXTN CORD W/CONNECTOR, 55', 3 PRONG, 2 WIRE  888-7073-110PB EXTN CORD W/CONNECTOR, 110', 3 PRONG, 2 WIRE  27 10-203 CONTROL CORD, 16.2, 2 WIRE (PER FT)  28 888-4203-50200PB SWIVEL 90°, 1/4" MNPT x 1/8" F  29 888-3031-30000PB HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST  30 888-3011-100PB TEE, GALV 1/8"  31 888-3000-102PB ELBOW, GALV, 90°, 1/4"  32 888-3029-10209PB NIPPLE, TBE, GALV, 1/4" x 2"  33 888-2229-301PB VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY  34 PB-30A01003 PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	24	999-8400-35104PB-02	SELECTOR SWITCH OPERATOR, 25' CORD, 2 PRONG
## 1888-2263-40102PB HANDLE, CONTROL, ELECTRIC #2 W/SEALED CONNECTOR (REQUIRED WHEN USING STER ABRASIVES)  ### 1888-7073-055PB EXTN CORD W/CONNECTOR, 55', 3 PRONG, 2 WIRE  ### 1888-7073-110PB EXTN CORD W/CONNECTOR, 110', 3 PRONG, 2 WIRE  ### 27		888-2263-40101PB	HANDLE, CONTROL, ELECTRIC #2 W/PLUG
HANDLE, CONTROL, ELECTRIC #2 W/SEALED CONNECTOR (REQUIRED WHEN USING STEEL ABRASIVES)	25**	888-2263-40001PB	HANDLE, CONTROL, ELECTRIC W/PLUG
26 888-7073-110PB EXTN CORD W/CONNECTOR, 110', 3 PRONG, 2 WIRE 27 10-203 CONTROL CORD, 16.2, 2 WIRE (PER FT) 28 888-4203-50200PB SWIVEL 90°, 1/4" MNPT x 1/8" F 29 888-3031-30000PB HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST 30 888-3011-100PB TEE, GALV 1/8" 31 888-3000-102PB ELBOW, GALV, 90°, 1/4" 32 888-3029-10209PB NIPPLE, TBE, GALV, 1/4" x 2" BIGGO 888-2229-301PB VALVE, CONTROL, KNOB OPERATED 3W2P 888-2229-30199PB VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY 34 PB-30A01003 PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	23	888-2263-40102PB	HANDLE, CONTROL, ELECTRIC #2 W/SEALED CONNECTOR (REQUIRED WHEN USING STEEL ABRASIVES)
888-7073-110PB EXTN CORD W/CONNECTOR, 110', 3 PRONG, 2 WIRE  27 10-203 CONTROL CORD, 16.2, 2 WIRE (PER FT)  28 888-4203-50200PB SWIVEL 90°, 1/4" MNPT x 1/8" F  29 888-3031-30000PB HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST  30 888-3011-100PB TEE, GALV 1/8"  31 888-3000-102PB ELBOW, GALV, 90°, 1/4"  32 888-3029-10209PB NIPPLE, TBE, GALV, 1/4" x 2"  3888-2229-301PB VALVE, CONTROL, KNOB OPERATED 3W2P  3888-2229-30199PB VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY  34 PB-30A01003 PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	00	888-7073-055PB	EXTN CORD W/CONNECTOR, 55', 3 PRONG, 2 WIRE
28 888-4203-50200PB SWIVEL 90°, 1/4" MINPT x 1/8" F  29 888-3031-30000PB HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST  30 888-3011-100PB TEE, GALV 1/8"  31 888-3000-102PB ELBOW, GALV, 90°, 1/4"  32 888-3029-10209PB NIPPLE, TBE, GALV, 1/4" x 2"  33 888-2229-301PB VALVE, CONTROL, KNOB OPERATED 3W2P  888-2229-30199PB VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY  34 PB-30A01003 PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	26	888-7073-110PB	
28 888-4203-50200PB SWIVEL 90°, 1/4" MINPT x 1/8" F  29 888-3031-30000PB HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST  30 888-3011-100PB TEE, GALV 1/8"  31 888-3000-102PB ELBOW, GALV, 90°, 1/4"  32 888-3029-10209PB NIPPLE, TBE, GALV, 1/4" x 2"  33 888-2229-301PB VALVE, CONTROL, KNOB OPERATED 3W2P  888-2229-30199PB VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY  34 PB-30A01003 PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	27	10-203	CONTROL CORD, 16.2, 2 WIRE (PER FT)
30 888-3011-100PB TEE, GALV 1/8" 31 888-3000-102PB ELBOW, GALV, 90°, 1/4" 32 888-3029-10209PB NIPPLE, TBE, GALV, 1/4" x 2"  33 888-2229-301PB VALVE, CONTROL, KNOB OPERATED 3W2P  888-2229-30199PB VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY  34 PB-30A01003 PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	28	888-4203-50200PB	SWIVEL 90°, 1/4" MNPT x 1/8" F
31 888-3000-102PB ELBOW, GALV, 90°, 1/4" 32 888-3029-10209PB NIPPLE, TBE, GALV, 1/4" x 2" 33 888-2229-301PB VALVE, CONTROL, KNOB OPERATED 3W2P 34 PB-30A01003 PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	29	888-3031-30000PB	HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST
32       888-3029-10209PB       NIPPLE, TBE, GALV, 1/4" x 2"       BIG GU         33       888-2229-301PB       VALVE, CONTROL, KNOB OPERATED 3W2P         888-2229-30199PB       VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY         34       PB-30A01003       PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	30	888-3011-100PB	TEE, GALV 1/8"
32       888-3029-10209PB       NIPPLE, TBE, GALV, 1/4" x 2"       BIG GU         33       888-2229-301PB       VALVE, CONTROL, KNOB OPERATED 3W2P         888-2229-30199PB       VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY         34       PB-30A01003       PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	31	888-3000-102PB	ELBOW, GALV, 90°, 1/4"
33         888-2229-30199PB         VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY           34         PB-30A01003         PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	32	888-3029-10209PB	
888-2229-30199PB VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY  34 PB-30A01003 PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE	22	888-2229-301PB	VALVE, CONTROL, KNOB OPERATED 3W2P
	<b>ა</b> ა	888-2229-30199PB	VALVE, CONTROL, KNOB OPERATED 3W2P, REPAIR KIT, HEAVY DUTY
See "Valve Parts Lists" Section for detailed parts list.	34	PB-30A01003	PALM BUTTON, BLACK, FITS 888-2229-301PB CONTROL VALVE
	Sec	e "Valve Parts Lists"	Section for detailed parts list.

<sup>\*</sup> See "Valve Parts Lists" Section for detailed parts list.

<sup>\*\*</sup> See "Control Handle Parts Lists" Section for detailed parts list.



**SPH SERIES - Pneumatic Controls** 

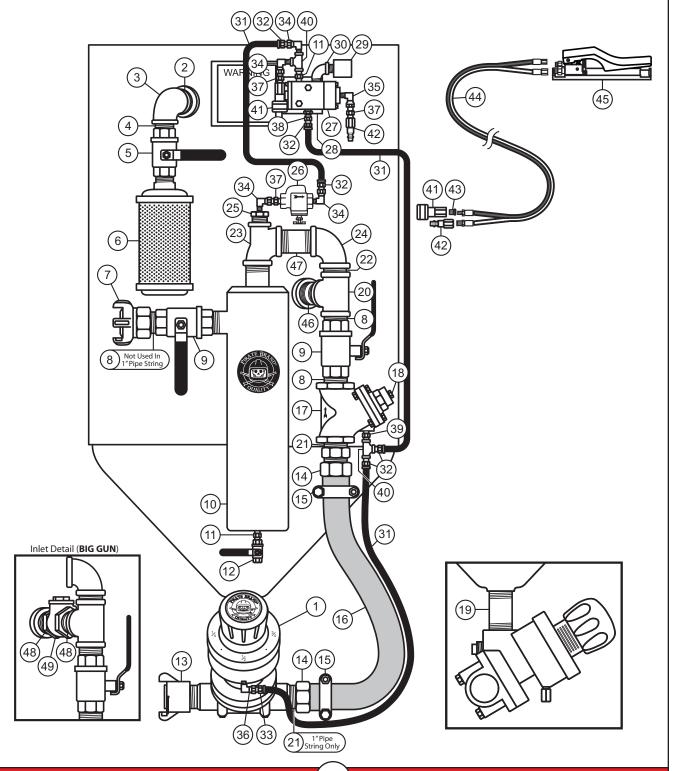



### **SPH SERIES - Pneumatic Controls**


	1" P	IPE STRING		1-1/4"	PIPE STRING		1-1/2"	PIPE STRING					
1*	888-2148-006PB	APV II, 1" W/SOLID TUNGSTEN CARBIDE SLEEVE	1*	888-2148-007PB	APV II, 1-1/4" W/SOLID TUNGSTEN CARBIDE SLEEVE	1*	888-2148-008PB	APV II, 1-1/2" W/SOLID TUNGSTEN CARBIDE SLEEVE					
l ' [	888-2149-006PB	APV, 1", W/TC SLEEVE	'	888-2149-007PB	APV, 1-1/4, W/TC SLEEV	1 ' 1	888-2149-008PB	APV, 1-1/2", W/TC SLEEVE					
$\Box$	888-2149-106PB	APV, 1", W/URETHANE SLEEVE		888-2149-107PB	APV, 1-1/4", W/URETHANE SLEEVE	Ш	888-2149-108PB	APV, 1-1/2", W/URETHANE SLEEVE					
2	888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 3"						·					
3	888-3010-10706PB												
4	888-3029-10699PB		IPPLE, TBE, GALV, 1" x CLOSED										
5	VB100	BALL VALVE, FULL PORT, 1" NPT											
6	888-2011-006PB	MUFFLER, BLOWDOWN, 1" MNPT			T								
7	UM-100	AIR HOSE COUPLINGS, 2 LUG, 1" MALE NPT	7	UF-125	AIR HOSE COUPLINGS, 4 LUG, 1-1/4" FEMALE NPT	7	SB-3X-AL	THD QUICK COUPLING, ALUMINUM, 1- 1/2", FULL PORT					
8	888-3029-10699PB	NIPPLE, TBE, GALV, 1" x CLOSED	8	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED	8	888-3029-10899PB	NIPPLE, TBE, GALV, 1-1/2" x CLOSED					
9	VB100	BALL VALVE, FULL PORT, 1" NPT	9	VB125	BALL VALVE, FULL PORT, 1-1/4" NPT	9	VB150	BALL VALVE, FULL PORT, 1-1/2" NPT					
10	888-1200-006PB-P	MOISTURE TRAP 1" (1"M INLET x 1- 1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK	10	888-1200-007PB-P	MOISTURE TRAP 1-1/4" (1-1/4"M INLET x 1-1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK	10	888-1200-009PB-P 888-1200-008PB-P	MOISTURE TRAP, BIG GUN, 1-1/2" (1- 1/2"M INLET x 1-1/4"M OUTLET, 350 CFM, POWDER COATED BLACK) MOISTURE TRAP 1-1/2" (1-1/2"M INLET x 1-1/4"M OUTLET, 90% EFFICIENT @					
								150 CFM) POWDER COATED BLACK					
11	888-3031-31202PB	NIPPLE, HEX 1/4"MNPT x 1/4" MNPT			•			•					
12	VB025	BALL VALVE, FULL PORT, 1/4" NPT											
13	SB-2-IR	THD QUICK COUPLING, IRON, 1-1/2"	13	SB-1S-IR	THRD CPLG, STD NPS, IRON, 1-1/4"	13	SB-3X-AL	THD QUICK COUPLING, ALUMINUM, 1-1/2", FULL PORT					
14	888-4205-106PB	HOSE, INSERT SWIVEL, 1", INCLUDES GASKET	14	888-4205-107PB	HOSE, INSERT SWIVEL, 1-1/4", INCLUDES GASKET	14	888-4205-108PB	HOSE, INSERT SWIVEL, 1-1/2", INCLUDES GASKET					
LI	888-4205-10699PB	HOSE, SWIVEL GASKET, 1"	_	888-4205-10799PB	HOSE, SWIVEL GASKET, 1-1/4"	Ll	888-4205-10899PB	HOSE, SWIVEL GASKET, 1-1/2"					
15	888-4235-006PB	HOSE, CLAMP, DOUBLE BOLT, 1"	15	888-4235-007PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/4"	15	888-4235-008PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/2"					
16	112-0100	HOSE, AIR, RED, NOMINAL 1" ID x 1- 1/2" OD, WP 300 PSI, PER FOOT	16	112-0114	HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT	16	112-0112	HOSE, AIR, RED, NOMINAL 1-1/2" ID x 2-3/32" OD, WP 250 PSI, PER FOOT					
17*	888-2123-106PB	VALVE, AUTO AIR, 1", (NORMALLY	17*	888-2123-107PB	VALVE, AUTO AIR, 1-1/4", (NORMALLY	17*	888-2123-108PB-L	VALVE, AUTO AIR, 1-1/2" FULL FLOW, (NORMALLY CLOSED) (BIG GUN)					
		CLOSED)			CLOSED)		888-2123-108PB	VALVE, AUTO AIR, 1-1/2", (NORMALLY CLOSED) (REQUIRES 888-3031-31200PB)					
18	888-2014-300PB	VENT, 1/8"											
19	888-3028-10711PB	NIPPLE, HEAVY WALL, TBE, SCHEDULE	80,	I-1/4" x 3"	1								
20	888-3013-10706PB	TEE, GALV, 1-1/4" x 1" x 1-1/4"	20	888-3011-107PB	TEE, GALV, 1-1/4"	20	888-3038-10807PB	TEE REDUCING, GALV, 1-1/2" x 1-1/2" x 1-1/4"					
21	888-3031-30606PB	HEX NIPPLE, 1" x 1"	21	888-3031-30707PB	HEX NIPPLE, 1-1/4" x 1-1/4"	21	888-3031-30808PB	HEX NIPPLE, 1-1/2" x 1-1/2"					
22	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED				22	888-3029-10899PB	NIPPLE, TBE, GALV, 1-1/2" x CLOSED					
23	888-3013-10705PB 888-3000-107PB	TEE, GALV, 90°, 1-1/4" x 3/4" x 1-1/4" ELBOW, GALV, 90°, 1-1/4"				24	888-3010-10807PB	ELBOW, REDUCING, GALV, 1-1/2" x 1-1/4"					
25	888-3026-10502PB	BUSHING, GALV, 3/4" x 1/4"						1/4					
26	888-2301-90290PB	STRAINER, BRZ 1/4" 90 MICRON					FEATUR	ING THE					
Н	888-2229-000PB	VALVE, CONTROL, PNEUMATIC					D	O dry					
27	888-2229-00099PB	VALVE, CONTROL, PNEUMATIC, REPAIL	RKIT	HEAVY DUTY			18	C. C. INT					
28	888-7033-002PB	BRACKET, CONTROL VALVE		,			20,						
29	888-2013-402PB	DUST ELIMINATOR, 1/4" MNPT						FULL FLOW SYSTEM					
30	888-3006-102PB	ELBOW, STREET, 90°, GALV, 1/4"											
31	888-4101-002PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN	IAL 1	4" ID, 300 PSI, PER FC	ОТ		4	1 (150 mil) (a					
32	888-4200-30202PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT					N. B.	Marie Course					
33	888-4200-30200PB	HOSE, PUSH-ON INSERT 1/4" x 1/8" NPT					(4)						
34	888-4203-50202PB	SWIVEL 90°, 1/4"MNPT x 1/4"F											
35	888-4203-50002PB	SWIVEL 90°, 1/8" MNPT x 1/4" F											
36	888-4203-50000PB	SWIVEL 90°, 1/8"MNPT X 1/8"F											
37	888-3031-30202PB	HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST											
38	888-4201-50202PB	STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F						Inner a rest comment of the second					
39	888-3031-31200PB	NIPPLE, HEX, 1/4" MNPT x 1/8" MNPT				39	888-3031-31202PB	NIPPLE, HEX, 1/4" MNPT x 1/4" MNPT					
40	888-3011-102PB	TEE, GALV, 1/4" BRASS SOCKET, 1/4"											
41	888-4224-30102PB 888-4224-30002PB	PLUG, 1/4"											
43	888-3026-50200PB	BUSHING, PLATED 1/4" x 1/8"NPT											
44	200-055	HOSE, TWINLINE CONTROL, ASSEMBL	r, YE	L/YEL W/BLACK STRIP	, NOMINAL 3/16" ID x 55'								
$\Box$	888-2263-001PB	HANDLE, CONTROL, PNEUMATIC #2			**								
45**	888-2263-000PB	HANDLE, CONTROL, PNEUMATIC											
46	888-3028-10711PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/	4" x 3	3"		46	888-3028-10711PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4" x 3"					
47	888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 3"				47	888-3029-10714PB	NIPPLE, TBE, GALV, 1-1/4" x 4" (BIG GUN)					
48		NO.	T US	FD		48	888-3029-10711PB 888-3028-10799PB	NIPPLE, TBE, GALV, 1-1/4" x 3" NIPPLE, TBE, SCHEDULE 80, GALV, 1-					
Н						Н		1/4" x CLOSE (BIG GUN)  CHECK VALVE, SWING 1-1/4", W/ 5/32"					
49		NO	ı US	En		49	888-2490-90701PB	NOT USED  49 888-2490-90701PB DIFFERENTIAL EQUALIZER HOLE (BIG GUN)					

<sup>\*</sup> See "Valve Parts Lists" Section for detailed parts list.

<sup>\*\*</sup> See "Control Handle Parts Lists" Section for detailed parts list.



SPH SERIES - Electric Controls

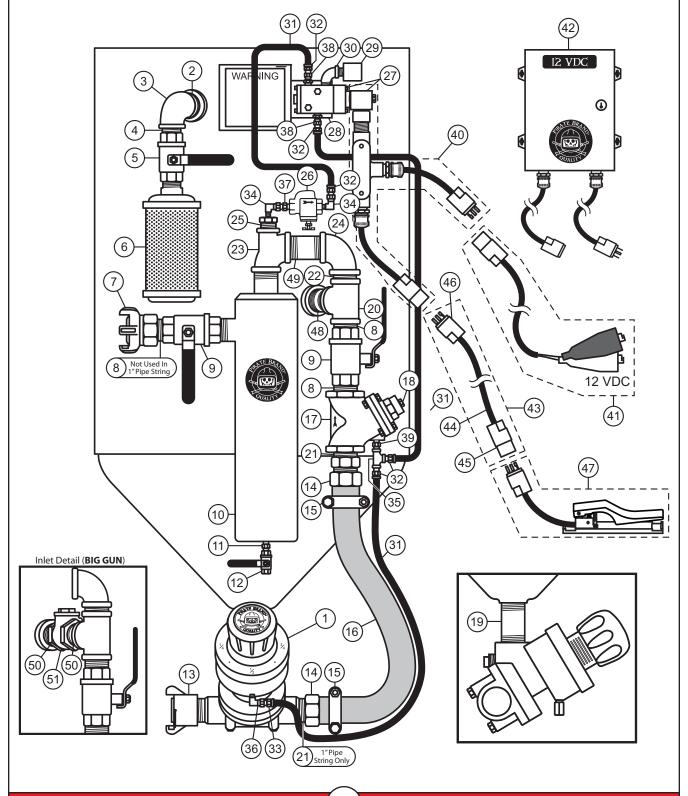



### SPH SERIES - Electric Controls


	1" P	IPE STRING		1-1/4"	PIPE STRING		1-1/2"	PIPE STRING
	888-2148-006PB	APV II, 1" W/SOLID TUNGSTEN CARBIDE SLEEVE		888-2148-007PB	APV II, 1-1/4" W/SOLID TUNGSTEN CARBIDE SLEEVE		888-2148-008PB	APV II, 1-1/2" W/SOLID TUNGSTEN CARBIDE SLEEVE
1"	888-2149-006PB	APV, 1", W/TC SLEEVE	1*	888-2149-007PB	APV, 1-1/4, W/TC SLEEV	1*	888-2149-008PB	APV, 1-1/2", W/TC SLEEVE
	888-2149-106PB	APV, 1", W/URETHANE SLEEVE		888-2149-107PB	APV, 1-1/4", W/URETHANE SLEEVE		888-2149-108PB	APV, 1-1/2", W/URETHANE SLEEVE
2	888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 3"						
3	888-3010-10706PB	ELBOW, REDUCING, GALV, 1-1/4" x 1"						
4 5	888-3029-10699PB VB100	NIPPLE, TBE, GALV, 1" x CLOSED BALL VALVE, FULL PORT, 1" NPT						
6	888-2011-006PB	MUFFLER, BLOWDOWN, 1" MNPT						
7	UM-100	AIR HOSE COUPLINGS, 2 LUG, 1" MALE NPT	7	UF-125	AIR HOSE COUPLINGS, 4 LUG, 1-1/4" FEMALE NPT	7	SB-3X-AL	THD QUICK COUPLING, ALUMINUM, 1 1/2", FULL PORT
8	888-3029-10699PB	NIPPLE, TBE, GALV, 1" x CLOSED	8	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED	8	888-3029-10899PB	NIPPLE, TBE, GALV, 1-1/2" x CLOSED
9	VB100	BALL VALVE, FULL PORT, 1" NPT	9	VB125	BALL VALVE, FULL PORT, 1-1/4" NPT	9	VB150	BALL VALVE, FULL PORT, 1-1/2" NPT
10	888-1200-006PB-P	MOISTURE TRAP 1" (1"M INLET x 1- 1/4"M OUTLET, 90% EFFICIENT @ 150	10	888-1200-007PB-P	MOISTURE TRAP 1-1/4" (1-1/4"M INLET x 1-1/4"M OUTLET, 90% EFFICIENT @	10	888-1200-009PB-P	MOISTURE TRAP, <b>BIG GUN</b> , 1-1/2" (1- 1/2"M INLET x 1-1/4"M OUTLET, 350 CFM, POWDER COATED BLACK)
		CFM) POWDER COATED BLACK			150 CFM) POWDER COATED BLACK		888-1200-008PB-P	MOISTURE TRAP 1-1/2" (1-1/2"M INLE: x 1-1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK
11	888-3031-31202PB	NIPPLE, HEX 1/4"MNPT x 1/4" MNPT						
12	VB025	BALL VALVE, FULL PORT, 1/4" NPT						
13	SB-2-IR	THD QUICK COUPLING, IRON, 1-1/2"	13	SB-1S-IR	THRD CPLG, STD NPS, IRON, 1-1/4"	13	SB-3X-AL	THD QUICK COUPLING, ALUMINUM, 1 1/2", FULL PORT
14	888-4205-106PB	HOSE, INSERT SWIVEL, 1", INCLUDES GASKET	14	888-4205-107PB	HOSE, INSERT SWIVEL, 1-1/4", INCLUDES GASKET	14	888-4205-108PB	HOSE, INSERT SWIVEL, 1-1/2", INCLUDES GASKET
_	888-4205-10699PB	HOSE, SWIVEL GASKET, 1"		888-4205-10799PB	HOSE, SWIVEL GASKET, 1-1/4"		888-4205-10899PB	HOSE, SWIVEL GASKET, 1-1/2"
15	888-4235-006PB	HOSE, CLAMP, DOUBLE BOLT, 1"	15	888-4235-007PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/4"	15	888-4235-008PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/2"
16	112-0100	HOSE, AIR, RED, NOMINAL 1" ID x 1- 1/2" OD, WP 300 PSI, PER FOOT	16	112-0114	HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT	16	112-0112	HOSE, AIR, RED, NOMINAL 1-1/2" ID x 2-3/32" OD, WP 250 PSI, PER FOOT
17*	888-2123-106PB	VALVE, AUTO AIR, 1", (NORMALLY CLOSED)	17*	888-2123-107PB	VALVE, AUTO AIR, 1-1/4", (NORMALLY CLOSED)	17*	888-2123-108PB-L	VALVE, AUTO AIR, 1-1/2" FULL FLOW, (NORMALLY CLOSED) (BIG GUN) VALVE, AUTO AIR, 1-1/2", (NORMALLY
40	000 0044 000DD	VFNT 1/8"			(SEGGEB)		888-2123-108PB	CLOSED) (REQUIRES 888-3031- 31200PR)
18 19	888-2014-300PB 888-3028-10711PB	NIPPLE, HEAVY WALL, TBE, SCHEDULI	= 00	1 1/4" > 2"				
		İ	= 00,					TEE REDUCING, GALV, 1-1/2" x 1-1/2":
20	888-3013-10706PB	TEE, GALV, 1-1/4" x 1" x 1-1/4"	20	888-3011-107PB	TEE, GALV, 1-1/4"	20	888-3038-10807PB	1-1/4"
21	888-3031-30606PB	HEX NIPPLE, 1" x 1"	21	888-3031-30707PB	HEX NIPPLE, 1-1/4" x 1-1/4"	21	888-3031-30808PB	HEX NIPPLE, 1-1/2" x 1-1/2"
22	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED				22	888-3029-10899PB	NIPPLE, TBE, GALV, 1-1/2" x CLOSED
23	888-3013-10705PB	TEE, GALV, 90°, 1-1/4" x 3/4" x 1-1/4"						ELBOW, REDUCING, GALV, 1-1/2" x 1-
24	888-3000-107PB	ELBOW, GALV, 90°, 1-1/4"				24	888-3010-10807PB	1/4"
25	888-3026-10502PB	BUSHING, GALV, 3/4" x 1/4"						
26	888-2301-90290PB	STRAINER, BRZ 1/4" 90 MICRON					FEATURING	THE
27	888-2229-100PB 888-2229-10099PB	VALVE, CONTROL, ELECTRIC, 12VDC VALVE, CONTROL, REPAIR KIT, ELECT	DIC	HEAVY DUTY			- 181	CTTAT
28	888-7033-002PB	BRACKET, CONTROL VALVE	KIC,	HEAVI DOTT			DI	G GUNE
29	888-2013-402PB	DUST ELIMINATOR, 1/4" MNPT						BULBAN
30	888-3006-102PB	ELBOW, STREET, 90°, GALV, 1/4"					*	FULL FLOW SYSTEM
31	888-4101-002PB							The same
		IOSE, AIR, INSTA-GRIP, BLACK, NOMINAL 1/4" ID, 300 PSI, PER FOOT						
32	888-4200-30202PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP	Т	/4" ID, 300 PSI, PER F	ООТ			ISO PSI
33	888-4200-30200PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP	Т	/4" ID, 300 PSI, PER F	00Т		606	(50 PS)
33 34	888-4200-30200PB 888-4203-50202PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90°, 1/4"MNPT x 1/4"F	Т	1/4" ID, 300 PSI, PER F	00Т		6	SO PSI
33 34 35	888-4200-30200PB 888-4203-50202PB 888-3011-102PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90°, 1/4"MNPT x 1/4"F TEE, GALV, 1/4"	Т	//4" ID, 300 PSI, PER F	00T			SOIS
33 34 35 36	888-4200-30200PB 888-4203-50202PB 888-3011-102PB 888-4203-50000PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90", 1/4"MNPT x 1/4"F TEE, GALV, 1/4" SWIVEL 90", 1/8"MNPT X 1/8"F	Т	//4" ID, 300 PSI, PER F	00Т			SO ISI
33 34 35 36 37	888-4200-30200PB 888-4203-50202PB 888-3011-102PB 888-4203-50000PB 888-3031-30202PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90", 1/4"MNPT x 1/4"F TEE, GALV, 1/4" SWIVEL 90", 1/8"MNPT X 1/8"F HEX NIPPLE 1/4" NPT x 1/4" WBALL ST	Т	/4" ID, 300 PSI, PER F	001			SOIS
33 34 35 36	888-4200-30200PB 888-4203-50202PB 888-3011-102PB 888-4203-50000PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90", 1/4"MNPT x 1/4"F TEE, GALV, 1/4" SWIVEL 90", 1/8"MNPT X 1/8"F	Т	/4" ID, 300 PSI, PER F	001	39	888-3031-31202PB	NIPPLE, HEX. 1/4" MNPT x 1/4" MNPT
33 34 35 36 37 38	888-4200-30200PB 888-4203-50202PB 888-3011-102PB 888-4203-50000PB 888-3031-30202PB 888-4201-50202PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90', 1/4"MNPT x 1/4" F TEE, GALV, 1/4" SWIVEL 90', 1/8"MNPT x 1/8" HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST STRAIGHT SWIVEL, 1/4"MNPT x 1/4"	Т			39	888-3031-31202PB	NIPPLE, HEX, 1/4" MNPT x 1/4" MNPT
33 34 35 36 37 38 39	888-4200-30200PB 888-4203-50202PB 888-3011-102PB 888-4203-50000PB 888-3031-30202PB 888-4201-50202PB 888-3031-31200PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90", 1/4"MNPT x 1/4" F TEE, GALV, 1/4" SWIVEL 90", 1/8"MNPT x 1/8" F HEX NIPPLE 1/4" NPT x 1/4" WIBALL ST STRAIGHT SWIVEL, 1/4"MNPT x 1/4" N	Т			39	888-3031-31202PB	NIPPLE, HEX, 1/4" MNPT x 1/4" MNPT
33 34 35 36 37 38 39 40 41 42	888-4200-30200PB 888-4203-50202PB 888-3011-102PB 888-4203-50000PB 888-3031-30202PB 888-4201-50202PB 888-3031-31200PB 888-7112-000PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90", 1/4"MNPT x 1/4"F TEE, GALV, 1/4" SWIVEL 90", 1/8"MNPT X 1/8"F HEX NIPPLE 1/4" NPT x 1/4" WBALL ST STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F NIPPLE, HEX, 1/4" MNPT x 1/8" MNPT JUNCTION TEE ASSEMBLY, SMALL &E POWER CORD, 25" 12/VDC, 3-LUG POWER SUPPLY, 1/20AC INPUT, 12/VDC	T T SULK	BLASTERS 12VDC (1)		39	888-3031-31202PB	NIPPLE, HEX, 1/4" MNPT x 1/4" MNPT
33 34 35 36 37 38 39 40 41 42 43	888-4200-30200PB 888-4203-50202PB 888-3011-102PB 888-3031-30202PB 888-3031-30202PB 888-3031-30202PB 888-3031-3020PB 888-3031-3020PB 888-7072-012PB PB-SMP/3WP 888-7073-055PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90", 1/4"MNPT x 1/4" F TEE, GALV, 1/4" SWIVEL 90", 1/8"MNPT x 1/4" WISHL EXTRACED 14" NPT x 1/4" WISHL STRAIGHT SWIVEL, 1/4"MNPT x 1/4" NIPPLE, HEX, 1/4" MNPT x 1/8" MNPT JUNCTION TEE ASSEMBLY, SMALL & E POWER CORD, 25" 12VDC, 3-LUG POWER SUPPLY, 120AC INPUT, 12VDC EXTN CORD WICONNECTOR, 55, 3 PR	T T SULK S @ 2 ONG,	BLASTERS 12VDC (1)		39	888-3031-31202PB	NIPPLE, HEX, 1/4" MNPT x 1/4" MNPT
33 34 35 36 37 38 39 40 41 42 43 44	888-4200-30200PB 888-4203-50202PB 888-3011-102PB 888-3011-102PB 888-4201-50202PB 888-3031-312002PB 888-3031-31200PB 888-7072-012PB PB-SMP3WP PB-SMP3WP 10-203	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90', 1/4"MNPT x 1/4"F TEE, GALV, 1/4" SWIVEL 90', 1/8"MNPT x 1/8"F HEK NIPPLE 1/4" NPT x 1/8"F HEK NIPPLE 1/4" NPT x 1/8" WIGALL ST STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F NIPULCT INT X 1/8" SMPT x 1/8" MNPT NIPULCT INT X 1/8" MSPT x 1/8" MNPT POWER CORD, 25" 12VDC, 3-LUG POWER SUPPLY, 1/20AC INPUT, 12VDC EXTN CORD W/CONNECTOR, 55', 3 PR CONTROL CORD, 16.2, 2 WIRE (PER FI	T T T SULK S @ 2 ONG	BLASTERS 12VDC (1) .5 AMP OUTPUT 2 WIRE		39	888-3031-31202PB	NIPPLE, HEX, 1/4" MNPT x 1/4" MNPT
33 34 35 36 36 37 38 39 40 41 42 43 44 45	888-4203-50202PB 888-4203-50202PB 888-301-102PB 888-3031-30202PB 888-3031-30202PB 888-3031-31200PB 888-3031-31200PB 888-7112-000PB 888-7112-000PB 888-7073-055PB 10-203 888-710-300PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90", 1/4"MNPT x 1/4" TEE, GALV, 1/4" SWIVEL 90", 1/8"MNPT x 1/8" HEX NIPPLE 1/4" NPT x 1/4" WIBALL ST STRAIGHT SWIVEL, 1/4"MNPT x 1/4" NIPPLE 1/4" NPT x 1/4" NIPPLE 1/4" NPT x 1/4" NIPPLE 1/4" NPT x 1/4" NIPPLE HEX, 1/4" MNPT x 1/8" MNPT JUNCTION TEE ASSEMBLY, SMALL 8 POWER CORD, 25 1/2/DC, 3-LUG POWER SUPPLY, 1/2/AC INPUT, 1/2/DC EXTN CORD WI/CONNECTOR, 55, 3 PR ELECTRIC CONNECTOR, FEMALE, TW	TTTTTTTCTCCCCCCCCCCCCCCCCCCCCCCCCCCCCC	BLASTERS 12VDC (1) 5 AMP OUTPUT 2 WIRE OCK, 3 PRONG		39	888-3031-31202PB	NIPPLE, HEX, 1/4" MNPT x 1/4" MNPT
33 34 35 36 37 38 39 40 41 42 43 44 45	888-4200-30200PB 888-4203-50202PB 888-3011-102PB 888-3031-30202PB 888-3031-30202PB 888-3031-31200PB 888-7072-012PB 988-7072-012PB 988-7073-055PB 10-203 888-7109-300PB 888-7109-301PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 80", 1/4"MNPT x 1/4" T TEE, GALV, 1/4" SWIVEL 80", 1/8"MNPT x 1/8"F HEX NIPPEL 1/4" NPT x 1/8" WIBALL ST STRAIGHT SWIVEL, 1/4" MVBALL ST STRAIGHT SWIVEL, 1/4" MNPT x 1/8" NIPPLE, HEX, 1/4" MNPT x 1/8" MNPT JUNCTION TEE ASSEMBLY, SMALL & E POWER CORD, 25' 12/DC, 3-LUG POWER CORD, 25' 12/DC, 3-LUG EXTN CORD WICONNECTOR, 55', 3 PR CONTROL CORD, 16.2, 2 WIRE (PER F) ELECTRIC CONNECTOR, FEMALE, TW ELECTRIC CONNECTOR, FEMALE, TW ELECTRIC CONNECTOR, MALE, TWIST	TTTTTTCTCCCCCCCCCCCCCCCCCCCCCCCCCCCCCC	BLASTERS 12VDC (1) 5 AMP OUTPUT 2 WIRE OCK, 3 PRONG		39	888-3031-31202PB	NIPPLE, HEX, 1/4" MNPT x 1/4" MNPT
33 34 35 36 37 38 39 40 41 42 43 44 45 46	888-4203-30200PB 888-4203-50202PB 888-3011-102PB 888-3031-30202PB 888-4203-50000PB 888-3031-31200PB 888-7112-000PB 888-7112-000PB 888-7072-012PB PB-SMP3WP 88-7073-055PB 10-203 888-7109-300PB 888-7109-301PB 888-7109-301PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90', 1/4"MNPT x 1/4"F TEE, GALV, 1/4" SWIVEL 90', 1/8"MNPT x 1/8"F HEK NIPPLE 1/4" NPT x 1/8"F HEK NIPPLE 1/4" NPT x 1/8" WIBALL ST STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F NIPPLE 1/4" NPT x 1/4" MYBALL ST STRAIGHT SWIVEL, 1/4"MNPT x 1/8" MNPT NIPPLE 1/4" ASSEMBLY 3 MNPT x 1/8" MNPT EVER CORD, 25" 12VDC, 3-LUG POWER CORD, 25" 12VDC, 3-LUG POWER SUPPLY, 120AC INPUT, 12VDC EXTN CORD WCONNECTOR, 55', 3 PR CONTROL CORD, 16.2, 2 WIRE (PER F) ELECTRIC CONNECTOR, FMALE, TWIST HANDLE, CONTROL, ELECTRIC 62" WIP	TTTTTTTTCTTTTTTTTTTTTTTTTTTTTTTTTTTTTT	BLASTERS 12VDC (1) 5 AMP OUTPUT 2 WIRE OCK, 3 PRONG		39	888-3031-31202PB	NIPPLE, HEX, 1/4" MNPT x 1/4" MNPT
33 34 35 36 37 38 39 40 41 42 43 44 45 46	888-4203-50202PB 888-4203-50202PB 888-301-102PB 888-3031-30202PB 888-3031-30202PB 888-3031-312002PB 888-3031-31200PB 888-7112-000PB 888-7112-000PB 888-7073-055PB 10-203 888-7109-300PB 888-7109-301PB 888-2263-40101PB 888-2263-40001PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90", 1/4"MNPT x 1/4"F TEE, GALV, 1/4" SWIVEL 90", 1/8"MNPT x 1/8"F HEX NIPPLE 1/4" NPT x 1/8"F NIPPLE 14" NPT x 1/8" NPDLE 1/4" W/BALL ST STRAIGHT SWIVEL, 1/4"MNPT x 1/8" NIPPLE, HEX, 1/4" MNPT x 1/8" MNPT NIPPLE, HEX, 1/4" MNPT x 1/4" MNPT NIPPLE, HEX, 1/4" MNPT NIPPLE,	BULK  @ 2 ONG, I) IST-Li LUG	BLASTERS 12VDC (1) 5 AMP OUTPUT 2 WIRE OCK, 3 PRONG K, 3 PRONG	OUTLET		888-3031-31202PB	NIPPLE, HEX, 1/4" MNPT x 1/4" MNPT
33 34 35 36 37 38 39 40 41 42 43 44	888-4203-30200PB 888-4203-50202PB 888-3011-102PB 888-3031-30202PB 888-4203-50000PB 888-3031-31200PB 888-7112-000PB 888-7112-000PB 888-7072-012PB PB-SMP3WP 88-7073-055PB 10-203 888-7109-300PB 888-7109-301PB 888-7109-301PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90", 1/4"MNPT x 1/4"F TEE, GALV, 1/4" SWIVEL 90", 1/8"MNPT x 1/8"F HEX NIPPLE 1/4" NPT x 1/8"F NIPPLE 14" NPT x 1/8" NPDLE 1/4" W/BALL ST STRAIGHT SWIVEL, 1/4"MNPT x 1/8" NIPPLE, HEX, 1/4" MNPT x 1/8" MNPT NIPPLE, HEX, 1/4" MNPT x 1/4" MNPT NIPPLE, HEX, 1/4" MNPT NIPPLE,	SULK  ( @ 2 ONG, ( ) ST-L- LUG G EALE	BLASTERS 12VDC (1) 5 AMP OUTPUT 2 WIRE OCK, 3 PRONG K, 3 PRONG			888-3031-31202PB	NIPPLE, TE, SCHEDULE 80, GALV, 1-14" x 3"
33 34 35 36 37 38 39 40 41 42 43 44 45 46 47**	888-4203-50202PB 888-4203-50202PB 888-301-102PB 888-3031-30202PB 888-3031-30202PB 888-3031-30202PB 888-3031-31200PB 888-7112-000PB 888-7112-000PB 888-7073-055PB 10-203 888-7109-300PB 888-7109-301PB 888-2263-40101PB 888-2263-40102PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90", 1/4"MNPT x 1/4"F TEE, GALV, 1/4" SWIVEL 90", 1/8"MNPT x 1/8"F HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST STRAIGHT SWIVEL, 1/4"MNPT x 1/4" NIPPLE 1/4" NPT x 1/4" W/BALL ST STRAIGHT SWIVEL, 1/4"MNPT x 1/4" NIPPLE 1/4" NPT x 1/4" M/BALL ST PUPLE, 1EX, 1/4" MNPT x 1/8" MNPT NIPPLE, 1EX, 1/4" NNPT x 1/8" MNPT NIPPLE, 1EX, 1/4" NNPT x 1/8" MNPT NIPPLE, 1EX, 1/4" NNPT NIPPLE, 1/4" NN	SULK  ( @ 2 ONG, ( ) ST-L- LUG G EALE	BLASTERS 12VDC (1) 5 AMP OUTPUT 2 WIRE OCK, 3 PRONG K, 3 PRONG	OUTLET	3)	888-3028-10711PB 888-3029-10714PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1 1/4" x 3" NIPPLE, TBE, GALV, 1-1/4" x 4" (BIG GUN)
33 34 35 36 37 38 39 40 41 42 43 44 45 46 47**	888-4203-50202PB 888-4203-50202PB 888-301-102PB 888-3031-30202PB 888-3031-30202PB 888-3031-30202PB 888-7112-000PB 888-7072-012PB PB-SMP3WP 888-7073-055PB 10-203 888-7109-300PB 888-7109-301PB 888-2263-40101PB 888-2263-40011PB 888-2263-40011PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP SWIVEL 90", 1/4"MNPT x 1/4"F TEE, GALV, 1/4" SWIVEL 90", 1/8"MNPT x 1/8"F TEE, GALV, 1/4" SWIVEL 90", 1/8"MNPT x 1/8"F HEX NIPPLE 1/4" NPT x 1/8" WIBALL ST STRAIGHT SWIVEL, 1/4"MNPT x 1/4" WIBALL ST STRAIGHT SWIVEL, 1/4"MNPT x 1/8" MNPT JUNCTION TEE ASSEMBLY, 1/4" MNPT x 1/8" MNPT ST STRAIGHT SWIVEL, 1/4" MNPT x 1/8" MNPT ST STRAIGHT SWIVEL, 1/4" MNPT x 1/8" MNPT ST	SULK  ( @ 2 ONG, ( ) ST-L- LUG G EALE	BLASTERS 12VDC (1) .5 AMP OUTPUT .2 WIRE OCK, 3 PRONG K, 3 PRONG ED CONNECTOR (REQ. 3*	OUTLET	6)	888-3028-10711PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1- 1/4" x 3" NIPPLE, TBE, GALV, 1-1/4" x 4"(BIG

<sup>\*</sup> See "Valve Parts Lists" Section for detailed parts list.

<sup>\*\*</sup> See "Control Handle Parts Lists" Section for detailed parts list.



**SPH SERIES - Pneumatic Abrasive Cut-off** 

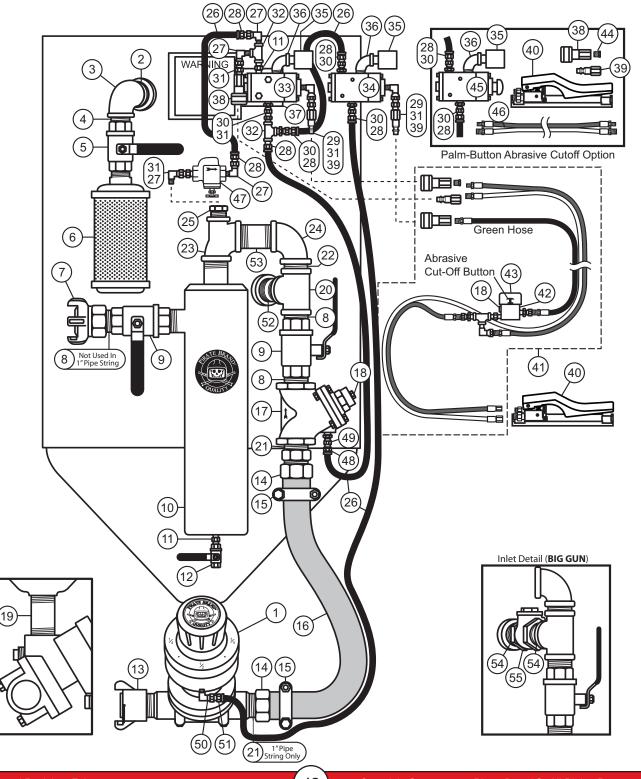



### **SPH SERIES - Pneumatic Abrasive Cut-off**


1	1" P	IPE STRING		1-1/4"	PIPE STRING		1-1/2"	PIPE STRING
П	888-2148-006PB	APV II, 1" W/SOLID TUNGSTEN CARBIDE SLEEVE		888-2148-007PB	APV II, 1-1/4" W/SOLID TUNGSTEN CARBIDE SLEEVE		888-2148-008PB	APV II, 1-1/2" W/SOLID TUNGSTEN CARBIDE SLEEVE
1*	888-2149-006PB	APV, 1", W/TC SLEEVE	1*	888-2149-007PB	APV, 1-1/4, W/TC SLEEV	1*	888-2149-008PB	APV. 1-1/2", W/TC SLEEVE
ı	888-2149-106PB	APV, 1", W/URETHANE SLEEVE		888-2149-107PB	APV, 1-1/4", W/URETHANE SLEEVE		888-2149-108PB	APV, 1-1/2", W/URETHANE SLEEVE
2	888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 3"						1
3	888-3010-10706PB	ELBOW, REDUCING, GALV, 1-1/4" x 1"						
4	888-3029-10699PB	NIPPLE, TBE, GALV, 1" x CLOSED						
5	VB100 888-2011-006PB	BALL VALVE, FULL PORT, 1" NPT MUFFLER, BLOWDOWN, 1" MNPT						
7	UM-100	AIR HOSE COUPLINGS, 2 LUG, 1"	7	UF-125	AIR HOSE COUPLINGS, 4 LUG, 1-1/4"	7	SB-3X-AL	THD QUICK COUPLING, ALUMINUM, 1-
		MALE NPT	Ť		FEMALE NPT			1/2", FULL PORT
8	888-3029-10699PB VB100	NIPPLE, TBE, GALV, 1" x CLOSED BALL VALVE, FULL PORT, 1" NPT	8	888-3029-10799PB VB125	NIPPLE, TBE, GALV, 1-1/4" x CLOSED BALL VALVE, FULL PORT, 1-1/4" NPT	8	888-3029-10899PB VB150	NIPPLE, TBE, GALV, 1-1/2" x CLOSED BALL VALVE, FULL PORT, 1-1/2" NPT
10	888-1200-006PB-P	MOISTURE TRAP 1" (1"M INLET x 1- 1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK	10	888-1200-007PB-P	MOISTURE TRAP 1-1/4" (1-1/4"M INLET x 1-1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK	10	888-1200-009PB-P	MOISTURE TRAP, BIG GUN, 1-1/2" (1- 1/2"M INLET x 1-1/4"M OUTLET, 350 CFM, POWDER COATED BLACK) MOISTURE TRAP 1-1/2" (1-1/2"M INLET
							888-1200-008PB-P	x 1-1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK
11	888-3031-31202PB VB025	NIPPLE, HEX 1/4"MNPT x 1/4" MNPT BALL VALVE, FULL PORT, 1/4" NPT						
12		BALL VALVE, FULL FORT, 1/4 NPT			I			THD QUICK COUPLING, ALUMINUM, 1-
13	SB-2-IR	THD QUICK COUPLING, IRON, 1-1/2"	13	SB-1S-IR	THRD CPLG, STD NPS, IRON, 1-1/4"	13	SB-3X-AL	1/2", FULL PORT
14	888-4205-106PB	HOSE, INSERT SWIVEL, 1", INCLUDES GASKET	14	888-4205-107PB	HOSE, INSERT SWIVEL, 1-1/4", INCLUDES GASKET	14	888-4205-108PB	HOSE, INSERT SWIVEL, 1-1/2", INCLUDES GASKET
	888-4205-10699PB	HOSE, SWIVEL GASKET, 1"	إ	888-4205-10799PB	HOSE, SWIVEL GASKET, 1-1/4"	<u> </u>	888-4205-10899PB	HOSE, SWIVEL GASKET, 1-1/2"
15	888-4235-006PB	HOSE, CLAMP, DOUBLE BOLT, 1"	15	888-4235-007PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/4"	15	888-4235-008PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/2"
16	112-0100	HOSE, AIR, RED, NOMINAL 1" ID x 1- 1/2" OD, WP 300 PSI, PER FOOT	16	112-0114	HOSE, AIR, RED, NOMINAL 1-1/4" ID x 1-51/64" OD, WP 250 PSI, PER FOOT	16	112-0112	HOSE, AIR, RED, NOMINAL 1-1/2" ID x 2-3/32" OD, WP 250 PSI, PER FOOT
17*	888-2123-106PB	VALVE, AUTO AIR, 1", (NORMALLY	17*	888-2123-107PB	VALVE, AUTO AIR, 1-1/4", (NORMALLY	17*	888-2123-108PB-L	VALVE, AUTO AIR, 1-1/2" FULL FLOW, (NORMALLY CLOSED) (BIG GUN)
		CLOSED)			CLOSED)		888-2123-108PB	VALVE, AUTO AIR, 1-1/2", (NORMALLY CLOSED) (REQUIRES 888-3031-
18	888-2014-300PB	VENT, 1/8"						31200PB)
19	888-3028-10711PB	NIPPLE, HEAVY WALL, TBE, SCHEDULE	80, 1	1-1/4" x 3"				
20	888-3013-10706PB	TEE, GALV, 1-1/4" x 1" x 1-1/4"	20	888-3011-107PB	TEE, GALV, 1-1/4"	20	888-3038-10807PB	TEE REDUCING, GALV, 1-1/2" x 1-1/2" x 1-1/2" x
21	888-3031-30606PB	HEX NIPPLE, 1" x 1"	21	888-3031-30707PB	HEX NIPPLE, 1-1/4" x 1-1/4"	21	888-3031-30808PB	HEX NIPPLE, 1-1/2" x 1-1/2"
22	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED				22	888-3029-10899PB	NIPPLE, TBE, GALV, 1-1/2" x CLOSED
23	888-3013-10705PB	TEE, GALV, 90°, 1-1/4" x 3/4" x 1-1/4"						
24	888-3000-107PB	FI ROW GALV 90° 1.1/4" 24 888.9110.1080708 ELBOW, REDUCING, GALV, 1-1/2" x 1-						ELBOW, REDUCING, GALV, 1-1/2" x 1- 1/4"
25								
25	888-3026-10502PB	BUSHING, GALV, 3/4" x 1/4"						0.4
26	888-4101-002PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN	IAL 1	/4" ID, 300 PSI, PER FC	DOT			100
26 27	888-4101-002PB 888-4203-50202PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90°, 1/4"MNPT x 1/4"F		/4" ID, 300 PSI, PER FC	ООТ			
26 27 28	888-4101-002PB 888-4203-50202PB 888-4200-30202PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90°, 1/4"MNPT x 1/4"F HOSE, PUSH-ON INSERT 1/4" x 1/4" NP		/4" ID, 300 PSI, PER FC	DOT			
26 27	888-4101-002PB 888-4203-50202PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90°, 1/4"MNPT x 1/4"F		/4" ID, 300 PSI, PER FC	DOT		FEATURNG	
26 27 28 29	888-4101-002PB 888-4203-50202PB 888-4200-30202PB 888-4203-50002PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90°, 1/4"MNPT x 1/4"F HOSE, PUSH-ON INSERT 1/4" x 1/4" NP' SWIVEL 90°, 1/8" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST		/4" ID, 300 PSI, PER FC	ООТ		PEATURNS	
26 27 28 29 30	888-4101-002PB 888-4203-50202PB 888-4200-30202PB 888-4203-50002PB 888-4201-50202PB 888-3031-30202PB 888-3011-102PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90', 14"AMPIT' x 1/4"F HOSE, PUSH-NO INSERT 1/4" x 1/4" NP' SWIVEL 90', 1/8" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4"MNPT x 1/4" FEX NIPPLE 1/4" NPT x 1/4" W/BALL ST TEE, GALV, 1/4"		/4" ID, 300 PSI, PER FC	ООТ		BIO	
26 27 28 29 30 31	888-4101-002PB 888-4203-50202PB 888-4200-30202PB 888-4203-50002PB 888-4201-50202PB 888-3031-30202PB 888-3011-102PB 888-2229-000PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90*, 14"AMPIT x 1/4" F HOSE, PUSH-ON INSERT 1/4" x 1/4" NP SWIVEL 90*, 1/8" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4"MNPT x 1/4" F HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST TEE, GALV, 1/4" VALVE, CONTROL, PNEUMATIC	r		ООТ		BIO	
26 27 28 29 30 31 32 33	888-4101-002PB 888-4203-50202PB 888-4200-30202PB 888-4203-50002PB 888-4201-5002PB 888-3011-102PB 888-3011-102PB 888-2229-000PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90°, 14"AMPT x 1/4" F HOSE, PUSH-ON INSERT 1/4" x 1/4" NP' SWIVEL 90°, 1/8" MNPT x 1/4" F STRAIGHT SWIVEL 1/4" MYBALL ST TEE, GALV, 1/4" VALVE, CONTROL, PNEUMATIC, REPAI VALVE, CONTROL, PNEUMATIC, REPAI	r R KIT	, HEAVY DUTY	ООТ		BIO	
26 27 28 29 30 31 32 33	888-4101-002PB 888-4203-50202PB 888-4200-30202PB 888-4203-50002PB 888-4201-50202PB 888-3031-30202PB 888-3011-102PB 888-2229-000PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90', 14"AMPIT' x 1/4"F HOSE, PUSH-NON INSERT 1/4" x 1/4" NP' SWIVEL 90', 1/8" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" MPT x 1/4" MPALL ST TEE, GALV, 1/4" YALVE, CONTROL, PNEUMATIC, VALVE, CONTROL, PNEUMATIC, REPAL VALVE, CONTROL, PNEUMATIC, NORM	r R KIT	, HEAVY DUTY	ООТ		BIO	
26 27 28 29 30 31 32 33	888-4101-002PB 888-4203-50202PB 888-4200-30202PB 888-4201-50002PB 888-4201-50202PB 888-3011-102PB 888-3011-102PB 888-2229-000PB 888-2229-0009PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90°, 14"AMPT x 1/4" F HOSE, PUSH-ON INSERT 1/4" x 1/4" NP' SWIVEL 90°, 1/8" MNPT x 1/4" F STRAIGHT SWIVEL 1/4" MYBALL ST TEE, GALV, 1/4" VALVE, CONTROL, PNEUMATIC, REPAI VALVE, CONTROL, PNEUMATIC, REPAI	r R KIT	, HEAVY DUTY	ТООТ		BIO	
26   27   28   29   30   31   32   33   34   35   36   37	888-4101-002PB 888-4203-50202PB 888-4203-50202PB 888-4203-50002PB 888-4201-50202PB 888-3011-0202PB 888-3011-102PB 888-2229-000PB 888-2229-010PB 888-2229-010PB 888-223-013-02PB 888-3013-02PB 888-3013-02PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90', 14"AMPIT'X 1/4"F HOSE, PUSH-NON INSERT 1/4" X 1/4" NP' SWIVEL 90', 1/8" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" MNPT x 1/4" EX NIPPLE 1/4" NPT x 1/4" WBALL ST TEE, GALV, 1/4" VALVE, CONTROL, PNEUMATIC, VALVE, CONTROL, PNEUMATIC, REPAI VALVE, CONTROL, PNEUMATIC, RORM DUST ELIMINATOR, 1/4" MNPT LEBOW, STREET, 90', GALV, 1/4" BRACKET, CONTROL VALVE	r R KIT	, HEAVY DUTY	ООТ		BIO	
26   27   28   29   30   31   32   33   34   35   36   37   38	888-4101-002PB 888-4203-50202PB 888-4203-50202PB 888-4203-50002PB 888-4201-50202PB 888-3011-102PB 888-2229-000PB 888-2229-000PB 888-2229-010PB 888-2239-010PB 888-2239-010PB 888-2239-010PB 888-2239-010PB 888-203-012PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90", 14"ANNPT x 1/4"F HOSE, PUSH-NON INSERT 1/4" x 1/4" NP SWIVEL 90", 1/8" MNPT x 1/4" F SWIVEL 90", 1/8" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" MNPT x 1/4" WISALL ST TEE, GALV, 1/4" WPEX 1/4" WPEX 1/4" WISALL ST TEE, GALV, 1/4" WISALL ST TEE, GALV, 1/4" SALVE, CONTROL, PNEUMATIC VALVE, CONTROL, PNEUMATIC (NORM DUST ELIMINATOR, 1/4" MNPEX PLEUMATIC (NORM DUST ELIMINATOR, 1/4" MNPEX PLEUMATIC (NORM DIST ELIMINATOR, 1/4" MNPEX PLEUMATIC (NORM DIST ELIMINATOR, 1/4" MNPEX PLEUMATIC (NORM DIST ELIMINATOR, 1/4" MNPEX PLEUMATIC (NATURE T) 90", GALV, 1/4" BRACKET, CONTROL VALVE BRACKET, CONTROL VALVE	r R KIT	, HEAVY DUTY	рот		BIO	
26 27 28 29 30 31 32 33 - 34 35 36 37 38 39	888-4101-002PB 888-4203-5002PB 888-4203-5002PB 888-4203-5002PB 888-3013-3002PB 888-3013-3002PB 888-3011-102PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-2239-002PB 888-2239-002PB 888-2239-002PB 888-2239-002PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90", 14"AMPT x 1/4" F HOSE, PUSH-NON INSERT 1/4" x 1/4" NP' SWIVEL 90", 1/8" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" MNPT x 1/4" W/BALL ST TEE, GALV, 1/4" V/ALVE, CONTROL, PNEUMATIC, VALVE, CONTROL, PNEUMATIC, REPAI VALVE, CONTROL, PNEUMATIC, (NORM DUST ELIMINATOR, 1/4" MNPT ELBOW, STREET, 90", GALV, 1/4" BRACKET, CONTROL VALVE BRASS SOCKET, 1/4" PLUG, 1/4"	r R KIT	, HEAVY DUTY	рот		BIO	
26   27   28   29   30   31   32   33   34   35   36   37   38	888-4101-002PB 888-4203-5002PB 888-4203-5002PB 888-4203-5002PB 888-4203-5002PB 888-3031-3002PB 888-3031-3002PB 888-3031-3002PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-3031-3002PB 888-4224-30002PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90', 14"AMPIT'X 1/4"F HOSE, PUSH-NON INSERT 1/4" X 1/4" NP' SWIVEL 90', 1/8" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" MPT x 1/4" F X 174" F X 174	r R KIT	, HEAVY DUTY	ООТ		BIO	
26 27 28 29 30 31 32 33 - 34 35 36 37 38 39	888-4101-002PB 888-4203-5002PB 888-4203-5002PB 888-4203-5002PB 888-3013-3002PB 888-3013-3002PB 888-3011-102PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-2239-002PB 888-2239-002PB 888-2239-002PB 888-2239-002PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90", 14"AMPT x 1/4" F HOSE, PUSH-NON INSERT 1/4" x 1/4" NP' SWIVEL 90", 1/8" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" MNPT x 1/4" W/BALL ST TEE, GALV, 1/4" V/ALVE, CONTROL, PNEUMATIC, VALVE, CONTROL, PNEUMATIC, REPAI VALVE, CONTROL, PNEUMATIC, (NORM DUST ELIMINATOR, 1/4" MNPT ELBOW, STREET, 90", GALV, 1/4" BRACKET, CONTROL VALVE BRASS SOCKET, 1/4" PLUG, 1/4"	R KIT	, HEAVY DUTY OPEN)	ТООТ		BIO	
26 27 28 29 30 31 32 33 - 35 36 37 38 39 440**	888-4101-002PB 888-4203-5002PB 888-4209-3002PB 888-4209-3002PB 888-4201-5002PB 888-3013-3002PB 888-3013-3002PB 888-3013-3002PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-2239-000PB 888-2239-000PB 888-2239-000PB 888-2239-000PB 888-2239-000PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90", 14"AMPIP 1x 1/4"F HOSE, PUSH-NON INSERT 1/4" x 1/4" NP' SWIVEL 90", 1/8" MINPT x 1/4" F STRAIGHT SWIVEL 90", 1/8" MINPT x 1/4" F HEX NIPPLE 1/4" NPT x 1/4" WIBALL ST TEE, GALV, 1/4"  VALVE, CONTROL, PNEUMATIC VALVE, CONTROL, PNEUMATIC NORM DUST ELIMINATOR, 1/4" MINATOR, 1/4"	R KIT	, HEAVY DUTY OPEN)	рот		BIO	
26 27 28 29 30 31 32 33 34 35 36 37 38 39 40***-	888-4101-002PB 888-4203-5002PB 888-4209-3002PB 888-4209-3002PB 888-4209-3002PB 888-4201-5002PB 888-3013-3002PB 888-3013-3002PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-2239-000PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90°, 14"AMPIP x 1/4"F HOSE, PUSH-NON INSERT 1/4" x 1/4" NP' HOSE, PUSH-NON INSERT 1/4" x 1/4" NP' SWIVEL 90°, 1/8" MINPT x 1/4" F STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F STRAIGHT SWIVEL, 1/4"MNPT x 1/4" WIBALL ST TEE, GALV, 1/4" WORLL ST TEE, GALV, 1/4" WORLL ST TEE, GALV, 1/4" WORLL ST TEE, GALV, 1/4" DALVE, CONTROL, PNEUMATIC NORM DUST ELIMINATOR, 1/4" MINTOR, 1/4" HANDLE, CONTROL, PNEUMATIC #2 HANDLE, CONTROL, PNEUMATIC #3 HANDLE, CONTROL, PNEUMATIC #4 HANDLE, CONTROL, P	R KIT	, HEAVY DUTY OPEN)	ООТ		BIO	
26 27 28 29 30 31 32 33 34 35 36 37 38 39 40***	888-403-5002P8 888-4203-5002P8 888-4203-5002P8 888-4203-5002P8 888-4203-50002P8 888-3013-3002P8 888-3013-3002P8 888-3011-102P8 888-3023-50009P8 888-2229-000P8 888-2229-000P8 888-2229-000P8 888-2229-000P8 888-2229-000P8 888-223-0002P8 888-223-0002P8 888-303-002P8 888-4224-30102P8 888-4224-30102P8 888-4224-30102P8 888-4224-30102P8 888-2253-001P8 888-2253-001P8 888-2255-101P8 888-2255-101P8	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90", 14"AMPIT x 1/4" F HOSE, PUSH-ON INSERT 1/4" x 1/4" NP' SWIVEL 90", 1/8" MNPT x 1/4" F STRAIGHT SWIVEL, 1/8" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" NPT x 1/4" WIBALL ST TEE, GALV, 1/4" VALVE, CONTROL, PNEUMATIC, REPAI VALVE, CONTROL, PNEUMATIC, REPAI VALVE, CONTROL, PNEUMATIC, ROPAI VALVE, CONTROL, PNEUMATIC, (NORM DUST ELIMINATOR, 1/4" MNPT ELBOW, STREET, 90", GALV, 1/4" BRACKET, CONTROL VALVE BRASS SOCKET, 1/4" PLUG, 1/4" HANDLE, CONTROL, PNEUMATIC #2 HANDLE, CONTROL, PNEUMATIC #2 HANDLE, CONTROL, PNEUMATIC #2 HANDLE, CONTROL, PNEUMATIC #2 HOSE, TWINILINE ASSY 55 ACO WIABR VALVE, ABRASIVE CUTOFF (PNEU) TOGGLE SWITCH GUARD BUSHING, PLATED 1/4" x 1/8"NPT	T R KIT ALLY	, HEAVY DUTY OPEN)	ООТ		BIO	
26 27 28 29 30 31 32 33 34 35 36 37 38 39 40***-	888-4101-002PB 888-4203-50020PB 888-4200-30020PB 888-4201-50020PB 888-4201-50020PB 888-4201-50020PB 888-4201-50020PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-2229-000PB 888-2239-000PB 888-2239-000PB 888-2239-000PB 888-2239-000PB 888-2239-000PB 888-2239-000PB 888-2259-000PB 888-2259-000PB 888-2259-000PB 888-2259-000PB 888-2259-000PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90°, 14"ANNPT x 1/4"F HOSE, PUSH-ON INSERT 1/4" x 1/4" NP' SWIVEL 90°, 1/8" MNPT x 1/4" F SWIVEL 90°, 1/8" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" MNPT x 1/4" F HEX NIPPLE 1/4" NPT x 1/4" WIBALL ST TEE, GALV, 1/4" WIF x 1/4" WIBALL ST TEE, GALV, 1/4" NPT x 1/4" WIBALL ST TEE, GALV, 1/4" DALVE, CONTROL, PNEUMATIC NORM DUST ELIMINATOR, 1/4" MNPT ELBOW, STREET, 90°, GALV, 1/4" BRACKET, CONTROL VALVE BRASS SOCKET, 1/4" PLUG, 1/4" HANDLE, CONTROL PNEUMATIC #2 HANDLE, CONTROL, PNEUMATIC #2 HANDLE, PNEUMATIC #2 HAN	R KITT ALLY	. HEAVY DUTY OPEN)  E CUTOFF SWITCH			BIO	
26 27 28 29 30 31 32 33 34 35 36 37 38 39 40*** 41 42 43 44	888-403-5002P8 888-4203-5002P8 888-4203-5002P8 888-4203-5002P8 888-4203-50002P8 888-3013-3002P8 888-3013-3002P8 888-3011-102P8 888-3023-50009P8 888-2229-000P8 888-2229-000P8 888-2229-000P8 888-2229-000P8 888-2229-000P8 888-223-0002P8 888-223-0002P8 888-303-002P8 888-4224-30102P8 888-4224-30102P8 888-4224-30102P8 888-4224-30102P8 888-2253-001P8 888-2253-001P8 888-2255-101P8 888-2255-101P8	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90', 14"AMPIT x 1/4"F HOSE, PUSH-NON INSERT 1/4" x 1/4" NP' HOSE, PUSH-NON INSERT 1/4" x 1/4" NP' SWIVEL 90', 18"5 MINPT x 1/4" F STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F WISHALL ST TEE, GALV, 1/4" VIDALL ST TEE, GALV, 1/4" VIDALL ST TEE, GALV, 1/4" VALVE, CONTROL, PNEUMATIC (NORM DUST ELIMINATOR, 1/4" MNPT ELBOW, STREET, 90', GALV, 1/4" BRACKET, CONTROL VALVE BRASS SOCKET, 1/4" PLUG, 1/4" HANDLE, CONTROL, PNEUMATIC #2 HANDLE, CONTROL, PNEUMATIC #2 HANDLE, CONTROL, PNEUMATIC #2 THANDLE, CONTROL, PNEUMATIC #3 TWINLINE ASSY 55' ACO WIJAR VALVE, ABRASIVE CUTOFF (PNEU) TOGGLE SWITCH GUARD BUSHING, PLATED 1/4" x 1/8"NPT VALVE, CONTROL, KNOB OPERATED 3 VALVE, CONTROL, KNOB OPERATED 3 VALVE, CONTROL, KNOB OPERATED 3	R KIT ALLY	HEAVY DUTY OPEN)  E CUTOFF SWITCH  REPAIR KIT, HEAVY C	DUTY		BIO	
26 27 28 29 30 31 32 33 34 35 36 37 38 39 40** 41 42 43 44 45 46	888-4101-002PB 888-4203-5002PB 888-4203-5002PB 888-4203-5002PB 888-4203-5002PB 888-3031-3002PB 888-3031-3002PB 888-3031-3002PB 888-3031-3002PB 888-223-0009PB 888-223-010PB 888-203-0100PB 888-203-0100PB 888-203-0100PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90°, 14"ANNPT x 1/4"F HOSE, PUSH-ON INSERT 1/4" x 1/4" NP' SWIVEL 90°, 1/8" MNPT x 1/4" F SWIVEL 90°, 1/8" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" MNPT x 1/4" F HEX NIPPLE 1/4" NPT x 1/4" WIBALL ST TEE, GALV, 1/4" WIF x 1/4" WIBALL ST TEE, GALV, 1/4" NPT x 1/4" WIBALL ST TEE, GALV, 1/4" DALVE, CONTROL, PNEUMATIC NORM DUST ELIMINATOR, 1/4" MNPT ELBOW, STREET, 90°, GALV, 1/4" BRACKET, CONTROL VALVE BRASS SOCKET, 1/4" PLUG, 1/4" HANDLE, CONTROL PNEUMATIC #2 HANDLE, CONTROL, PNEUMATIC #2 HANDLE, PNEUMATIC #2 HAN	R KIT ALLY	HEAVY DUTY OPEN)  E CUTOFF SWITCH  REPAIR KIT, HEAVY C	DUTY		BIO	
26 27 28 29 30 31 32 33 - 34 35 36 37 38 39 40**- 41 42 43 44 45 -	888-403-5002P8 888-4203-5002P8 888-4203-5002P8 888-4203-5002P8 888-4203-50002P8 888-3031-3002P8 888-3031-3002P8 888-3031-3002P8 888-3031-402P8 888-2229-000P8 888-2229-001P8 888-2229-001P8 888-2229-001P8 888-2229-001P8 888-223-001P8	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90", 14"ANNPT x 1/4" F HOSE, PUSH-NON INSERT 1/4" x 1/4" NP SWIVEL 90", 1/8" MNPT x 1/4" F SWIVEL 90", 1/8" MNPT x 1/4" F STRAIGHT SWIVEL, 1/4" MNPT x 1/4" F HEX NIPPLE 1/4" NPT x 1/4" WIBALL ST TEE, GALV, 1/4" WIBALL ST TEE, GALV, 1/4" NALVE, CONTROL, PNEUMATIC, NORM DUST ELIMINATOR, 1/4" MNP LUST ELIMINATOR, 1/4" MNP ELBOW, STREET, 90", GALV, 1/4" BRACKET, CONTROL VALVE BRASS SOCKET, 1/4" PLUG, 1/4" HANDLE, CONTROL PNEUMATIC #2 HANDLE, CONTROL NEUMATIC #2 HANDLE, CONTROL, NEUMATIC #3" NEUMAND, NEUMAND PREATED 3" NALVE, CONTROL, KNOB OPERATED 3" VALVE, CONTROL, KNOB OPERATED 3" NEUMAND AND AND AND AND AND AND AND AND AND	R KIT ALLY ASIVI	HEAVY DUTY OPEN)  E CUTOFF SWITCH  REPAIR KIT, HEAVY C	DUTY	48	BI(	
26 27 28 29 30 31 32 33 34 35 36 37 38 39 40*** 41 42 43 44 45 46 47 48 49	888-4101-002PB 888-4203-5002PB 888-4203-5002PB 888-4203-5002PB 888-4203-5002PB 888-3013-3022PB 888-3013-3022PB 888-3013-3022PB 888-3013-3022PB 888-3013-3022PB 888-3013-3022PB 888-2229-0009PB 888-2229-0009PB 888-2229-0009PB 888-4224-3002PB 888-223-301PB 888-223-301PB 888-2225-301PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90", 14"AMPIP x 1/4"F HOSE, PUSH-NON INSERT 1/4" x 1/4" NP' HOSE, PUSH-NON INSERT 1/4" x 1/4" NP' SWIVEL 90", 19" MWPIT x 1/4" F STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F HEX NIPPLE 1/4" NPT x 1/4" WIBALL ST TEE, GALV, 1/4" SALVE, CONTROL, PNEUMATIC (NORM DUST ELIMINATOR, 1/4" MNPT LEBOW, STREET, 90", GALV, 1/4" BRACKET, CONTROL VALVE BRACKET, CONTROL VALVE BRACS SOCKET, 1/4" HANDLE, CONTROL, PNEUMATIC #2 HANDLE, CONTROL, NEUMATIC #3 TO GALVE, ABRASSIVE CUTOFF (PNEU) TOGGLE SWITCH GUARD BUSHING, PLATED 1/4" x 1/6" NP' ALVE, CONTROL, KNOB OPERATED 3 VALVE, CONTROL, NOBER 7/4" 9 M M (GRON) HOSE, PUSH-ON INSERT 1/4" x 1/6" NP' STRAIGHT SWIVEL, 1/6" MNPT X 1/6" NP' S	R KIT ALLY ASIVI	HEAVY DUTY OPEN)  E CUTOFF SWITCH  REPAIR KIT, HEAVY C	DUTY	48 49	Bio	HOSE, PUSH-ON INSERT 1/4" x 1/4"
26 27 28 29 30 31 32 33 - 34 35 36 37 38 39 40** 41 42 43 44 45 - 46 47 48 49 50	888-4101-002P8 888-4203-5002P8 888-4203-5002P8 888-4203-5002P8 888-4203-5002P8 888-3031-3022P8 888-3031-3022P8 888-3031-3022P8 888-223-0009P8 888-223-0009P8 888-223-010P8	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90', 14"AMPIT x 1/4"F HOSE, PUSH-NON INSERT 1/4" x 1/4" NPT HOSE, PUSH-NON INSERT 1/4" x 1/4" NPT SWIVEL 90', 18" MMPIT x 1/4" F STRAIGHT SWIVEL, 1/4" MMPIT x 1/4" F STRAIGHT SWIVEL, 1/4" MMPIT x 1/4" WISHALL ST TEE, GALV, 1/4" VALVE, CONTROL, PNEUMATIC VALVE, CONTROL, PNEUMATIC, REPAI VALVE, CONTROL, PNEUMATIC, REPAI VALVE, CONTROL, PNEUMATIC, MORM JUST ELIMINATOR, 1/4" MMPIT ELBOW, STREET, 90', GALV, 1/4" BRACKET, CONTROL VALVE BRASS SOCKET, 1/4" PLUG, 1/4" HANDLE, CONTROL, PNEUMATIC #2 HANDLE, CONTROL, PNEUMATIC #2 HANDLE, CONTROL, PNEUMATIC HOSE, TWINLINE ASSY 55' ACO W/ABR VALVE, ABRASINE CUTOFF (PNEU) TOGGLE SWITCH GUARD BUSHING, PLATED 1/4" x 1/8"NPT VALVE, CONTROL, KNOB OPERATED 3 HOSE, TWINLINE CONTROL, ASSEMBL STRAINER, BRZ 1/4" 90 MICRON STRAINER, BRZ 1/4" 90 MICR	ASIVI W2P, Y, YE	HEAVY DUTY OPEN)  E CUTOFF SWITCH  REPAIR KIT, HEAVY C	DUTY		BI(	HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT
26 27 28 29 30 31 32 33 34 35 36 37 38 39 40*** 41 42 43 44 45 46 47 48 49 50 51	888-4101-002PB 888-4203-5002PB 888-4203-5002PB 888-4203-5002PB 888-4203-5002PB 888-3031-3022PB 888-3031-3022PB 888-3031-3022PB 888-223-000PB 888-223-000PB 888-223-002PB 888-223-003-002PB 888-223-002PB 888-223-002PB 888-223-002PB 888-223-002PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90', 14"AMPIT x 1/4"F HOSE, PUSH-NON INSERT 1/4" x 1/4" NP' HOSE, PUSH-NON INSERT 1/4" x 1/4" NP' SWIVEL 90', 18" MMPT x 1/4" F STRAIGHT SWIVEL, 1/4" MMPT x 1/4" F STRAIGHT SWIVEL, 1/4" MMPT x 1/4" WISHALL ST TEE, GALV, 1/4" VALVE, CONTROL, PNEUMATIC VALVE, CONTROL, PNEUMATIC VALVE, CONTROL, PNEUMATIC, (NORM OUST ELIMINATOR, 1/4" MMPT ELBOW, STREET, 90', GALV, 1/4" BRACKET, CONTROL VALVE BRASS SOCKET, 1/4" PLUG, 1/4" HANDLE, CONTROL, PNEUMATIC #2 HANDLE, CONTROL, PNEUMATIC HOSE, TWINLINE ASSY 55' ACO WI/ABR VALVE, ABRASIVE CUTOFF (PNEU) TOGGLE SWITCH GUARD USHING, PLATED 1/4" x 1/8"NPT VALVE, CONTROL, KNOB OPERATED 3 HOSE, TWINLINE CONTROL, ASSEMBL STRAINER, BRZ 1/4" 90 MICRON  STRAIGHT SWIYEL, 1/8" MMPT X 1/8" PP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP'  SWIVEL 90', 1/8" MMPT X 1/8" PP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP' HOSE, PUSH-ON INSERT 1/4" x 1/8" NP' HOSE, PUSH-ON INSERT 1/4" x 1/8" NP'  SWIVEL 90', 1/8" MMPT X 1/8" NP' HOSE, PUSH-ON INSERT 1/4" x 1/8" NP'  SWIVEL 90', 1/8" MMPT X 1/8" NP' HOSE, PUSH-ON INSERT 1/4" x 1/8" NP'  SWIVEL 90', 1/8" MMPT X 1/8" NP'  HOSE, PUSH-ON INSERT 1/4" x 1/8" NP'	R KITY ASIVI	HEAVY DUTY OPEN)  CUTOFF SWITCH  REPAIR KIT, HEAVY L	DUTY	49	888-4200-30202PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F
26 27 28 29 30 31 32 33 - 34 35 36 37 38 40** 41 42 43 44 45 - 46 47 48 49 50 51 52	888-4101-002PB 888-4203-50002PB 888-4203-50002PB 888-4203-50002PB 888-4203-50002PB 888-3013-3002PB 888-3013-3002PB 888-3013-3002PB 888-3013-3002PB 888-2229-000PB 888-223-000PB 888-223-000PB 888-223-000PB 888-223-000PB 888-223-000PB 888-223-000PB 888-223-000PB 888-223-000PB 888-2301-90290PB 888-2301-90290PB 888-2301-90290PB 888-2301-90290PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90", 14"AMPIP 1x 1/4"F HOSE, PUSH-NON INSERT 1/4" x 1/4" NP 140SE, PUSH-NON INSERT 1/4" x 1/4" NP 140SE, PUSH-NON INSERT 1/4" x 1/4" NP 140SE, PUSH-NON INSERT 1/4" WIBALL ST TEE, GALV, 1/4" WIBALL ST TEE, GALV, 1/4" POT x 1/4" WIBALL ST TEE, GALV, 1/4" POT x 1/4" WIBALL ST TEE, GALV, 1/4" BUSH-NON INSERT 1/4" NP 140SE, PUSH-NON INSERT 1/4" NP 140SE, PUSH-NON INSERT 1/4" NP 140SE, PUSH-NON INSERT 1/4" X 1/6"NP 140SE, PUSH-NON INSERT 1/4" NINSER 1/4" NI	R KITY ASIVI	HEAVY DUTY OPEN)  CUTOFF SWITCH  REPAIR KIT, HEAVY L	DUTY	49 52	BI(	HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT STRAIGHT SWIVEL, 1/4"MNPT x 1/4" NIPPLE, TBE, SCHEDULE 80, GALV, 1- 1/4" x 3" NIPPLE, TBE, GALV, 1-1/4" x 4" (BIG
26 27 28 29 30 31 32 33 34 35 36 37 38 39 40** 41 42 43 44 45 46 47 48 49 50 51	888-4101-002PB 888-4203-5002PB 888-4203-5002PB 888-4203-5002PB 888-4203-5002PB 888-3031-3022PB 888-3031-3022PB 888-3031-3022PB 888-223-000PB 888-223-000PB 888-223-002PB 888-223-003-002PB 888-223-002PB 888-223-002PB 888-223-002PB 888-223-002PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90', 14"AMPIT x 1/4"F HOSE, PUSH-NON INSERT 1/4" x 1/4" NP' HOSE, PUSH-NON INSERT 1/4" x 1/4" NP' SWIVEL 90', 18" MMPT x 1/4" F STRAIGHT SWIVEL, 1/4" MMPT x 1/4" F STRAIGHT SWIVEL, 1/4" MMPT x 1/4" WISHALL ST TEE, GALV, 1/4" VALVE, CONTROL, PNEUMATIC VALVE, CONTROL, PNEUMATIC VALVE, CONTROL, PNEUMATIC, (NORM OUST ELIMINATOR, 1/4" MMPT ELBOW, STREET, 90', GALV, 1/4" BRACKET, CONTROL VALVE BRASS SOCKET, 1/4" PLUG, 1/4" HANDLE, CONTROL, PNEUMATIC #2 HANDLE, CONTROL, PNEUMATIC HOSE, TWINLINE ASSY 55' ACO WI/ABR VALVE, ABRASIVE CUTOFF (PNEU) TOGGLE SWITCH GUARD USHING, PLATED 1/4" x 1/8"NPT VALVE, CONTROL, KNOB OPERATED 3 HOSE, TWINLINE CONTROL, ASSEMBL STRAINER, BRZ 1/4" 90 MICRON  STRAIGHT SWIYEL, 1/8" MMPT X 1/8" PP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP'  SWIVEL 90', 1/8" MMPT X 1/8" PP HOSE, PUSH-ON INSERT 1/4" x 1/8" NP' HOSE, PUSH-ON INSERT 1/4" x 1/8" NP' HOSE, PUSH-ON INSERT 1/4" x 1/8" NP'  SWIVEL 90', 1/8" MMPT X 1/8" NP' HOSE, PUSH-ON INSERT 1/4" x 1/8" NP'  SWIVEL 90', 1/8" MMPT X 1/8" NP' HOSE, PUSH-ON INSERT 1/4" x 1/8" NP'  SWIVEL 90', 1/8" MMPT X 1/8" NP'  HOSE, PUSH-ON INSERT 1/4" x 1/8" NP'	R KITY ASIVI	HEAVY DUTY OPEN)  CUTOFF SWITCH  REPAIR KIT, HEAVY L	DUTY	49	888-4200-30202PB 888-4201-50202PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F  NIPPLE, TBE, SCHEDULE 80, GALV, 1-1/4" x 3" NIPPLE, TBE, GALV, 1-1/4" x 3"
26 27 28 29 30 31 32 33 - 34 35 36 37 38 39 40** 41 42 43 44 45 - 46 47 48 49 50 51 52	888-4101-002PB 888-4203-50002PB 888-4203-50002PB 888-4203-50002PB 888-4203-50002PB 888-3013-3002PB 888-3013-3002PB 888-3013-3002PB 888-3013-3002PB 888-2229-000PB 888-223-000PB 888-223-000PB 888-223-000PB 888-223-000PB 888-223-000PB 888-223-000PB 888-223-000PB 888-223-000PB 888-2301-90290PB 888-2301-90290PB 888-2301-90290PB 888-2301-90290PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN SWIVEL 90', 14"AMPIT x 1/4"F HOSE, PUSH-NON INSERT 1/4" x 1/4" NP MOSE, PUSH-NON INSERT 1/4" x 1/4" NP SWIVEL 90', 18" MINPT x 1/4" F STRAIGHT SWIVEL, 1/4" MINPT x 1/4" F STRAIGHT SWIVEL, 1/4" MINPT x 1/4" WISALL ST TEE, GALV, 1/4"  VALVE, CONTROL, PNEUMATIC  VALVE, CONTROL, PNEUMATIC (NORM DUST ELIMINATOR, 1/4" MINPT X 1/4" F BRACKET, CONTROL VALVE  BRACKET, CONTROL, PNEUMATIC (NORM DUST ELIMINATOR, 1/4" MINPT LAW 1/4" HANDLE, CONTROL, PNEUMATIC #2  HANDLE, CONTROL, PNEUMATIC #2  HANDLE, CONTROL, PNEUMATIC #2  HANDLE, CONTROL, PNEUMATIC #3  HANDLE, CONTROL, PNEUMATIC #3  TANDLE, SWITCH GUART  VALVE, ABRASIVE CUTOFF (PNEU)  TOGGLE SWITCH GUART  VALVE, CONTROL, KNOB OPERATED 3  HOSE, PUSH-ON INSERT 1/4" x 1/8" NP'  STRAIGHT SWIVEL, 1/8" MINPT X 1/8" F  HOSE, PUSH-ON INSERT 1/4" x 1/8" NP'  STRAIGHT SWIVEL, 1/8" MINPT X 1/8" F  HOSE, PUSH-ON INSERT 1/4" x 1/8" NP'  INPPLE, TBE, SCHEDULE 80, GALV, 1-1	R KITY ASIVI	HEAVY DUTY OPEN)  E CUTOFF SWITCH  REPAIR KIT, HEAVY E LIYEL WIBLACK STRIF	DUTY	49 52	888-4200-30202PB 888-4201-50202PB 888-3028-10711PB 888-3029-10714PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT STRAIGHT SWIVEL, 1/4"MNPT x 1/4" F  NIPPLE, TBE, SCHEDULE 80, GALV, 1- 1/4" x 3" NIPPLE, TBE, GALV, 1-1/4" x 4" (BIG GUN)

<sup>\*</sup> See "Valve Parts Lists" Section for detailed parts list.

<sup>\*\*</sup> See "Control Handle Parts Lists" Section for detailed parts list.

## PIPE STRING PARTS LISTS &

SPH SERIES - Electric Abrasive Cut-off

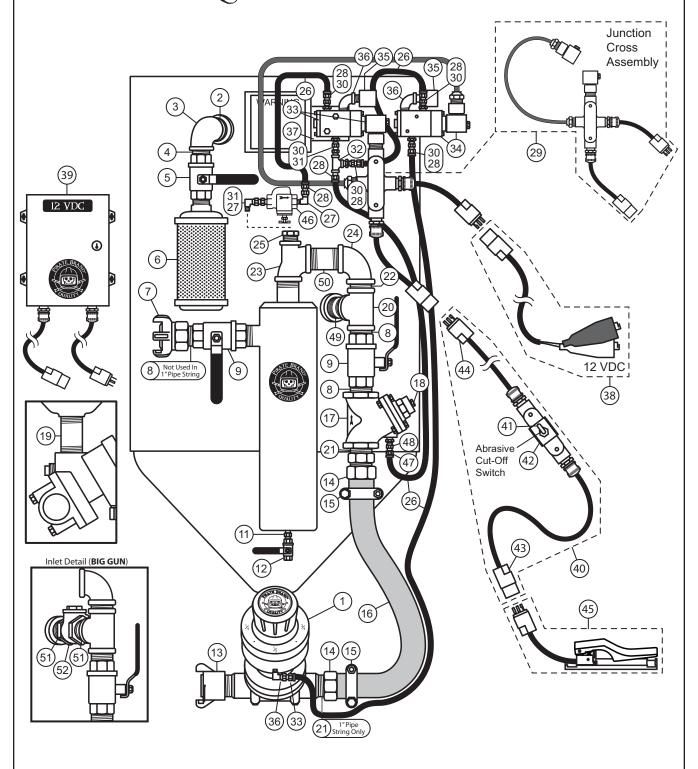



### SPH SERIES - Electric Abrasive Cut-off

	1" P	IPE STRING		1-1/4"	PIPE STRING		1-1/2"	PIPE STRING
П	888-2148-006PB	APV II, 1" W/SOLID TUNGSTEN CARBIDE SLEEVE		888-2148-007PB	APV II, 1-1/4" W/SOLID TUNGSTEN CARBIDE SLEEVE		888-2148-008PB	APV II, 1-1/2" W/SOLID TUNGSTEN CARBIDE SLEEVE
1*	888-2149-006PB	APV, 1", W/TC SLEEVE	1*	888-2149-007PB	APV, 1-1/4, W/TC SLEEV	1*	888-2149-008PB	APV, 1-1/2", W/TC SLEEVE
li	888-2149-106PB	APV, 1", W/URETHANE SLEEVE		888-2149-107PB	APV, 1-1/4", W/URETHANE SLEEVE		888-2149-108PB	APV, 1-1/2", W/URETHANE SLEEVE
2	888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 3"						
3	888-3010-10706PB	ELBOW, REDUCING, GALV, 1-1/4" x 1"						
4	888-3029-10699PB	NIPPLE, TBE, GALV, 1" x CLOSED						
5 6	VB100 888-2011-006PB	BALL VALVE, FULL PORT, 1" NPT MUFFLER, BLOWDOWN, 1" MNPT						
$\Box$		AIR HOSE COUPLINGS, 2 LUG, 1"			AIR HOSE COUPLINGS, 4 LUG, 1-1/4"			THD QUICK COUPLING, ALUMINUM, 1-
7	UM-100	MALE NPT	7	UF-125	FEMALE NPT	7	SB-3X-AL	1/2", FULL PORT
8	888-3029-10699PB	NIPPLE, TBE, GALV, 1" x CLOSED	8	888-3029-10799PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED	8	888-3029-10899PB	NIPPLE, TBE, GALV, 1-1/2" x CLOSED
9	VB100	BALL VALVE, FULL PORT, 1" NPT	9	VB125	BALL VALVE, FULL PORT, 1-1/4" NPT	9	VB150	BALL VALVE, FULL PORT, 1-1/2" NPT
10	888-1200-006PB-P	MOISTURE TRAP 1" (1"M INLET x 1- 1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK	10	888-1200-007PB-P	MOISTURE TRAP 1-1/4" (1-1/4"M INLET x 1-1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK	10	888-1200-009PB-P	MOISTURE TRAP, <b>BIG GUN</b> , 1-1/2" (1- 1/2"M INLET x 1-1/4"M OUTLET, 350 CFM, POWDER COATED BLACK)
					150 CFM) POWDER COATED BLACK		888-1200-008PB-P	MOISTURE TRAP 1-1/2" (1-1/2"M INLET x 1-1/4"M OUTLET, 90% EFFICIENT @ 150 CFM) POWDER COATED BLACK
11	888-3031-31202PB	NIPPLE, HEX 1/4"MNPT x 1/4" MNPT						
12	VB025	BALL VALVE, FULL PORT, 1/4" NPT	_			_		TUD OUTON COURT TO
13	SB-2-IR	THD QUICK COUPLING, IRON, 1-1/2"	13	SB-1S-IR	THRD CPLG, STD NPS, IRON, 1-1/4"	13	SB-3X-AL	THD QUICK COUPLING, ALUMINUM, 1- 1/2", FULL PORT
14	888-4205-106PB	HOSE, INSERT SWIVEL, 1", INCLUDES GASKET	14	888-4205-107PB	HOSE, INSERT SWIVEL, 1-1/4", INCLUDES GASKET	14	888-4205-108PB	HOSE, INSERT SWIVEL, 1-1/2", INCLUDES GASKET
45	888-4205-10699PB	HOSE, SWIVEL GASKET, 1"	15	888-4205-10799PB	HOSE, SWIVEL GASKET, 1-1/4"	45	888-4205-10899PB	HOSE, SWIVEL GASKET, 1-1/2"
15	888-4235-006PB	HOSE, CLAMP, DOUBLE BOLT, 1" HOSE, AIR, RED, NOMINAL 1" ID x 1-	15	888-4235-007PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/4" HOSE, AIR, RED, NOMINAL 1-1/4" ID x	15	888-4235-008PB	HOSE, CLAMP, DOUBLE BOLT, 1-1/2" HOSE, AIR, RED, NOMINAL 1-1/2" ID x
16	112-0100	1/2" OD, WP 300 PSI, PER FOOT	16	112-0114	1-51/64" OD, WP 250 PSI, PER FOOT	16	112-0112	2-3/32" OD, WP 250 PSI, PER FOOT
17*	888-2123-106PB	VALVE, AUTO AIR, 1", (NORMALLY CLOSED)	17*	888-2123-107PB	VALVE, AUTO AIR, 1-1/4", (NORMALLY CLOSED)	17*	888-2123-108PB-L	VALVE, AUTO AIR, 1-1/2" FULL FLOW, (NORMALLY CLOSED) (BIG GUN)
		OLOGED)			OLGGED)		888-2123-108PB	VALVE, AUTO AIR, 1-1/2", (NORMALLY CLOSED) (REQUIRES 888-3031-31200PB)
18	888-2014-300PB	VENT, 1/8"			•			
19	888-3028-10711PB	NIPPLE, HEAVY WALL, TBE, SCHEDULE	80,	1-1/4" x 3"		$\equiv$		
20	888-3013-10706PB	TEE, GALV, 1-1/4" x 1" x 1-1/4"	20	888-3011-107PB	TEE, GALV, 1-1/4"	20	888-3038-10807PB	TEE REDUCING, GALV, 1-1/2" x 1-1/2" x 1-1/4"
21	888-3031-30606PB	HEX NIPPLE, 1" x 1"	21	888-3031-30707PB	HEX NIPPLE, 1-1/4" x 1-1/4"	21	888-3031-30808PB	HEX NIPPLE, 1-1/2" x 1-1/2"
22	888-3029-10799PB 888-3013-10705PB	NIPPLE, TBE, GALV, 1-1/4" x CLOSED TEE, GALV, 90°, 1-1/4" x 3/4" x 1-1/4"				22	888-3029-10899PB	NIPPLE, TBE, GALV, 1-1/2" x CLOSED
24	888-3000-107PB	ELBOW, GALV, 90°, 1-1/4"				24	888-3010-10807PB	ELBOW, REDUCING, GALV, 1-1/2" x 1- 1/4"
25	888-3026-10502PB	BUSHING, GALV, 3/4" x 1/4"						•
26	888-4101-002PB	HOSE, AIR, INSTA-GRIP, BLACK, NOMIN	IAL 1	/4" ID, 300 PSI, PER FC	OOT			
27	888-4203-50202PB	SWIVEL 90°, 1/4"MNPT x 1/4"F						
28	888-4200-30202PB 888-7112-00002PB	HOSE, PUSH-ON INSERT 1/4" x 1/4" NPT JUNCTION CROSS ASSEMBLY, SMALL		I V DI ACTEDO 10VDO	ACO (1) OUTLET		FEATURING THE	
30	888-4201-50202PB	STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F	αΒυ	LK BLAGTENS, 12VDC	, ACO, (1) OUTLET		DIC	dx
31	888-3031-30202PB	HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST					BIG	CHAT
32	888-3011-102PB	TEE, GALV, 1/4"					DIO	OUN
33	888-2229-100PB	VALVE, CONTROL, ELECTRIC, 12VDC					44	FULL FLOW SYSTEM
	888-2229-10099PB	VALVE, CONTROL, REPAIR KIT, ELECT					and	
34 35	888-2229-600PB 888-2013-402PB	VALVE, CONTROL, ELECTRIC, 12VDC ( DUST ELIMINATOR, 1/4" MNPT	NUR	WALLY UPEN)			911	SO PSI (A
36	888-3006-102PB	ELBOW, STREET, 90°, GALV, 1/4"					10 00	
37	888-7033-002PB	BRACKET, CONTROL VALVE					0	
38	888-7072-012PB	POWER CORD, 25' 12VDC, 3-LUG					(aris	
39	PB-SMP3WP	POWER SUPPLY, 120AC INPUT, 12VDC	_					
40	888-7075-055PB	EXTENSION CORD W/CONNECTORS &	ABR	ASIVE CUTOFF SWITC	CH ASSEMBLY, 55', 3-PRONG, 3-WIRE			
41	888-2025-10002PB	ABRA CUTOFF SWITCH (ELEC) TOGGLE SWITCH GUARD						
42 43	888-2025-10001PB 888-7109-300PB	ELECTRIC CONNECTOR, FEMALE, TWI	IST-I	OCK 3 PRONG				
44	888-7109-301PB	ELECTRIC CONNECTOR, PENALE, TWIST						
П	888-2263-40101PB	HANDLE, CONTROL, ELECTRIC #2 W/P		· · · · · · · · · · · · · · · · · · ·				
45**	888-2263-40001PB	HANDLE, CONTROL, ELECTRIC W/PLU	G				-	
ايرا	888-2263-40102PB		EALE	ED CONNECTOR (REQ	UIRED WHEN USING STEEL ABRASIVES	S)		
46	888-2301-90290PB	STRAINER, BRZ 1/4" 90 MICRON	т			47	000 4000 202022	HOSE, PUSH-ON INSERT 1/4" x 1/4"
47	888-4200-30200PB 888-4201-50000PB	HOSE, PUSH-ON INSERT 1/4" x 1/8" NPT STRAIGHT SWIVEL, 1/8" MNPT X 1/8" F				47	888-4200-30202PB 888-4201-50202PB	NPT STRAIGHT SWIVEL, 1/4"MNPT x 1/4"F
49	888-3028-10711PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1-1	/4" x	3"		49	888-3028-10711PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1- 1/4" x 3"
50	888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 3"				50	888-3029-10714PB	NIPPLE, TBE, GALV, 1-1/4" x 4" (BIG GUN)
Н							888-3029-10711PB	NIPPLE, TBE, GALV, 1-1/4" x 3"
51		NO	T US	ED		51	888-3028-10799PB	NIPPLE, TBE, SCHEDULE 80, GALV, 1- 1/4" x CLOSE (BIG GUN) CHECK VALVE, SWING 1-1/4", W/ 5/32"
52		NO	T US	ED		52	888-2490-90701PB	DIFFERENTIAL EQUALIZER HOLE (BIG GUN)

<sup>\*</sup> See "Valve Parts Lists" Section for detailed parts list.


<sup>\*\*</sup> See "Control Handle Parts Lists" Section for detailed parts list.



# & CONTROL HANDLE PARTS LISTS &



	PNEUMATIC REMOTE CONTROL HANDLE (NOT FOR USE WITH STEEL ABRASIVES)					
ı		888-2263-000PB	HANDLE, CONTROL, PNEUMATIC			
			HANDLE, CONTROL, PNEUMATIC, REPAIR KIT, INCLUDES # 1, 2, 3 & 4			
ı	5	888-3031-30202PB	HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST			
ı	6	888-3031-30000PB	HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST			

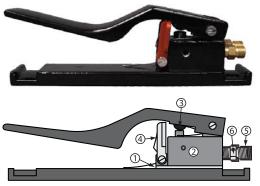


	PNEUMATIC REMOTE CONTROL HANDLE #2					
	888-2263-001PB	HANDLE, CONTROL, PNEUMATIC #2				
	888-2263-00199PB	HANDLE, CONTROL, PNEUMATIC #2, REPAIR KIT, INCLUDES #1, 2 & 3				
4	888-2263-00108PB	HANDLE, CONTROL, PNEUMATIC #2, SAFETY FLAP				
5	888-3031-30202PB	HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST				
6	888-3031-30000PB	HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST				



(NOT FOR USE WITH STEEL ABRASIVES)					
888-2263-002PB	HANDLE, CONTROL, PNEUMATIC #3				
888-2263-00299PB	HANDLE, CONTROL, PNEUMATIC #3, REPAIR KIT				
888-3031-30202PB	HEX NIPPLE 1/4" NPT x 1/4" W/BALL ST				
888-3031-30000PB	HEX NIPPLE 1/8" NPT x 1/8" W/BALL ST				




ELECTRIC REMOTE CONTROL HANDLE (NOT FOR USE WITH STEEL ABRASIVES)				
	888-2263-400PB	HANDLE, CONTROL, ELECTRIC		
	888-2263-40001PB	HANDLE, CONTROL, ELECTRIC W/PLUG		

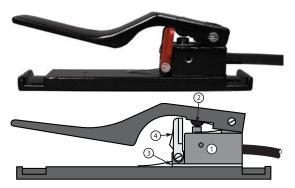

	ELECTRIC REMOTE CONTROL HANDLE #2					
	888-2263-401PB	HANDLE, CONTROL, ELECTRIC #2				
	888-2263-40101PB	HANDLE, CONTROL, ELECTRIC #2 W/PLUG				
	888-2263-40102PB	HANDLE, CONTROL, ELECTRIC #2 W/SEALED CONNECTOR (REQUIRED WHEN USING STEEL ABRASIVES)				
	PB-31131	1/2" 3 PART SEALED CONTROL CORD CONNECTOR (REQUIRED WHEN USING STEEL ABRASIVES)				
	888-2263-40199PB	HANDLE, CONTROL, ELECTRIC #2, REPAIR KIT, INCLUDES #1, 2 & 3				
4	888-2263-00108PB	HANDLE, CONTROL, #2, SAFETY FLAP				

# VALVE PARTS LISTS



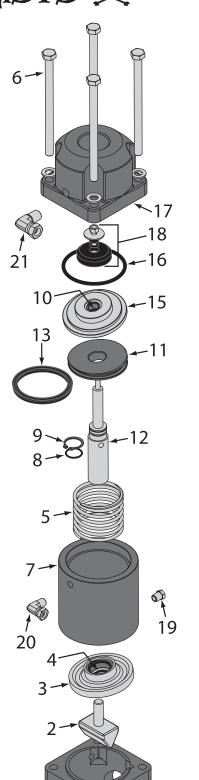


		Combination Valve
	888-2223-000PB	VALVE, COMBINATION, COMPLETE
	888-2223-00099PB	VALVE, COMBINATION, REPAIR KIT, INCLUDES # 4, 8, 9, 10, 13, 16 & 18
1	888-2223-00001PB	VALVE, COMBINATION, CAP
2	888-2223-00002PB	VALVE, COMBINATION, PINCH RAM
3	888-2223-00003PB	VALVE, COMBINATION, UPPER ROD GUIDE, INCLUDES SEAL(#4) AND BUSHING
4	888-2223-00004PB	VALVE, COMBINATION, SEAL, UPPER ROD
5	888-2223-00005PB	VALVE, COMBINATION, SPRING
6	888-7010-50715PB	VALVE, COMBINATION, BOLT 3/8" x 6" W/WASHER
7	888-2223-00007PB	VALVE, COMBINATION, CYLINDER
8	888-2223-00008PB	VALVE, COMBINATION, O-RING, SHAFT
9	888-2223-00009PB	VALVE, COMBINATION, SNAP RING
10	888-2223-00010PB	VALVE, COMBINATION, SEAL, LOWER ROD
11	888-2223-00011PB	VALVE, COMBINATION, PISTON
12	888-2223-00012PB	VALVE, COMBINATION, SHAFT
13	888-2223-00013PB	VALVE, COMBINATION, SEAL, PISTON
14	888-7017-50701PB	VALVE, COMBINATION, NUT, 3/8"
15	888-2223-00015PB	VALVE, COMBINATION, LOWER ROD GUIDE, INCLUDES SEAL(#10) AND BUSHING
16	888-2223-00016PB	VALVE, COMBINATION, O-RING, LOWER ROD GUIDE
17	888-2223-00017PB	VALVE, COMBINATION, BASE
18	888-2223-00018PB	VALVE, COMBINATION, PLUG ASSEMBLY
19	888-2014-300PB	VENT, 1/8"
20	888-4203-50000PB	SWIVEL 90°, 1/8"MNPT X 1/8"F
21	888-4203-50202PB	SWIVEL 90°, 1/4"MNPT x 1/4"F



## VALVE PARTS LISTS



_		
	APVII™ (	Automatic Plunger Valve II)
	888-2148-006PB	APV II, 1" W/SOLID TUNGSTEN CARBIDE SLEEVE
	888-2148-007PB	APV II, 1-1/4" W/SOLID TUNGSTEN CARBIDE SLEEVE
	888-2148-008PB	APV II, 1-1/2" W/SOLID TUNGSTEN CARBIDE SLEEVE
	888-2148-00099PB	APV II, REPAIR KIT W/SOLID TUNGSTEN CARBIDE SLEEVE, INCLUDES (1) # 8 & 10, (2) # 13, (2) # 15, (1) #16, 17, 18 & 19
	888-2148-00098PB	APV II, SEAL KIT, SEALS ONLY, W/URETHANE SEAT, INCLUDES (1) # 8, (2) # 13 & 15, (1) # 17 & 19
1	888-2148-00001PB	APV II, KNOB (BLACK PIRATE BRAND)
2	888-2014-300PB	VENT, 1/8"
3	888-2148-00002PB	APV & APV II, CAP ASSEMBLY
4	888-2149-00019PB	APV & APV II, BUMP RING
5	888-2149-00003PB	APV & APV II, SPRING
6	888-2148-00015PB	APV II, PLUNGER STOP (STAINLESS)
7	888-2148-00016PB	APV II, NYLON WASHER
8	888-2148-00004PB	APV & APV II, PISTON SEAL (GREEN URETHANE)
9	888-2148-00005PB	APV II, PISTON
10	888-2148-00007PB	APV II, PLUNGER (STAINLESS/SOLID TUNGSTEN CARBIDE)
11	888-2148-00009PB	APV II, CYLINDER, W/1" NPT CLEANOUT
12	888-4203-50000PB	SWIVEL 90°, 1/8"MNPT X 1/8"F
13	888-2148-00006PB	APV & APV II, PLUNGER SEAL W/ "O"-RING (CLEAR URETHANE)
14	888-2148-00017PB	APV II, PLUNGER BUSHING (STAINLESS)
15	888-2148-30006PB	APV II, PLUNGER SEAL W/O "O"-RING (CLEAR URETHANE)
16	888-2148-00013PB	APV & APV II, SOLID TUNGSTEN CARBIDE SLEEVE
10	888-2149-32020PB	APV & APV II, MULTI PORTED SLEEVE STAINLESS STEEL
17	888-2149-00010PB	APV & APV II, URETHANE SEAT
18	888-2148-00014PB	APV II, INSERT (STAINLESS)
19	888-2149-00018PB	APV & APV II, O-RING
20	888-2148-30011PB	APV II, BASE W/CLEANOUT
	888-2149-00615PB	APV & APV II, PIPE NIPPLE 1" FEMALE x 1-1/2" MALE
21	888-2149-00715PB	APV & APV II, PIPE NIPPLE 1-1/4" MALE x 1-1/4' MALE
	888-2149-00815PB	APV & APV II, PIPE NIPPLE 1-1/2" MALE x 1-1/2" MALE
22	888-7027-50302PB	APV & APV II, FLAT WASHER 3/8" SAE (10 PACK)
23	888-7010-50755PB	APV & APV II, BOLT, 4 PACK
24	888-3014-206PB	APV II, PLUG, PIPE STAINLESS 1"
25	999-8403-00054PB	APV II CLEANOUT BALL VALVE ASSY

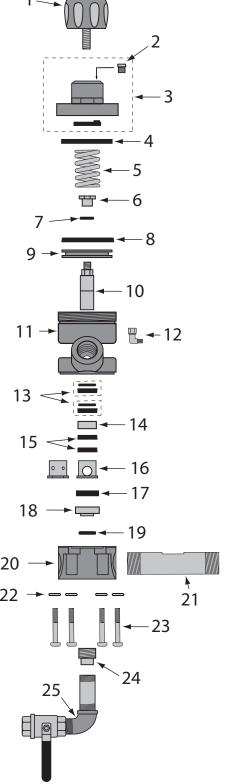




# VALVE PARTS LISTS



	ΛD\/ (Δι	utomatic Plunger Valve)
	888-2149-006PB	APV, 1", W/TC SLEEVE
Н	888-2149-106PB	APV. 1". W/URETHANE SLEEVE
Н	888-2149-007PB	APV, 1-1/4, W/TC SLEEVE
$\vdash$	888-2149-107PB	APV. 1-1/4". W/URETHANE SLEEVE
$\vdash$	888-2149-008PB	APV, 1-1/2", W/TC SLEEVE
Н	888-2149-108PB	APV, 1-1/2, W/IC SLEEVE APV, 1-1/2", W/URETHANE SLEEVE
	888-2149-00099PB	APV, REPAIR KIT W/TC SLEEVE, INCLUDES # 6, 8, 10, 15, 16, 17 & 18
	888-2149-00098PB	APV, SEAL KIT, SEALS ONLY W/URETHANE SEAT, INCLUDES # 6, 10, 15 & 17
	888-2149-10099PB	APV, REPAIR KIT W/URETHANE SLEEVE, INCLUDES # 6, 8, 10 & 11
	888-2149-10098PB	APV, SEAL KIT, SEALS ONLY W/URETHANE SLEEVE, INCLUDES 6, 10, & 11
1	888-2149-00001PB	APV, KNOB
2	888-2148-00002PB	APV & APV II, CAP ASSEMBLY
3	888-2149-00019PB	APV & APV II, BUMP RING
4	888-2149-00003PB	APV & APV II, SPRING
5	888-2149-00008PB	APV, NUT
6	888-2149-00004PB	APV, PISTON SEAL
7	888-2149-00005PB	APV, PISTON
8	888-2149-00007PB	APV, TUNGSTEN CARBIDE, PLUNGER
9	888-2149-00009PB	APV, CYLINDER
10	888-2148-00006PB	VALVE, PLUNGER SEAL
11	888-2149-10013PB	APV, SLEEVE, URETHANE
12	888-2149-00011PB	APV, BASE
13	888-7010-50755PB	APV & APV II, BOLT, 4 PACK
	888-2149-00615PB	APV & APV II, PIPE NIPPLE 1" FEMALE x 1-1/2" MALE
14	888-2149-00715PB	APV & APV II, PIPE NIPPLE 1-1/4" MALE x 1-1/4' MALE
li	888-2149-00815PB	APV & APV II, PIPE NIPPLE 1-1/2" MALE x 1-1/2" MALE
15	888-2149-00018PB	APV & APV II, O-RING
16	888-2149-00014PB	APV, INSERT
17	888-2149-00010PB	APV & APV II, URETHANE SEAT
	888-2148-00013PB	APV & APV II, SOLID TUNGSTEN CARBIDE SLEEVE
18	888-2149-32020PB	APV & APV II, MULTI PORTED SLEEVE STAINLESS STEEL
19	888-2014-300PB	VENT, 1/8
20	888-4203-50000PB	SWIVEL 90°, 1/8"MNPT X 1/8"F

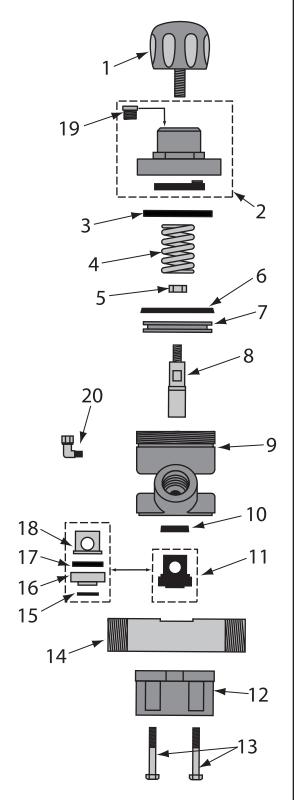




# & VALVE PARTS LISTS &




	MPV	(Manual Plunger Valve)
	888-2125-106PB	VALVE, MANUAL PLUNGER, 1", W/URETHANE SLEEVE
	888-2125-107PB	VALVE, MANUAL PLUNGER, 1-1/4", W/URETHANE SLEEVE
	888-2125-108PB	VALVE, MANUAL PLUNGER, 1-1/2", W/URETHANE SLEEVE
	888-2125-10099PB	VALVE, MANUAL PLUNGER, REPAIR KIT W/URETHANE SLEEVE, INCLUDES # 2, 5, 7, 8 & 9
	888-2125-10098PB	VALVE, MANUAL PLUNGER, SEAL KIT, W/URETHANE SLEEVE, INCLUDES 7, 8 & 9
1	888-2125-00001PB	VALVE, MANUAL PLUNGER, KNOB
2	888-2125-00004PB	VALVE, MANUAL PLUNGER, ROLL PIN
3	888-7010-50556PB	VALVE, MANUAL PLUNGER, BOLT W/WASHER
4	888-2125-00002PB	VALVE, MANUAL PLUNGER, CAP
5	888-2125-00005PB	VALVE, MANUAL PLUNGER, PLUNGER
6	888-2125-00006PB	VALVE, MANUAL PLUNGER, BODY
7	888-2148-00006PB	VALVE, PLUNGER SEAL
8	888-2125-10008PB	VALVE, MANUAL PLUNGER, SLEEVE, URETHANE
9	888-2125-00009PB	VALVE, MANUAL PLUNGER, GASKET
	888-2125-00610PB	VALVE, MANUAL PLUNGER, PIPE NIPPLE 1" FEMALE x 1-1/2" MALE
10	888-2125-00710PB	VALVE, MANUAL PLUNGER, PIPE NIPPLE 1-1/4" MALE x 1-1/2" MALE
	888-2125-00810PB	VALVE, MANUAL PLUNGER, PIPE NIPPLE 1-1/2" MALE x 1-1/2" MALE

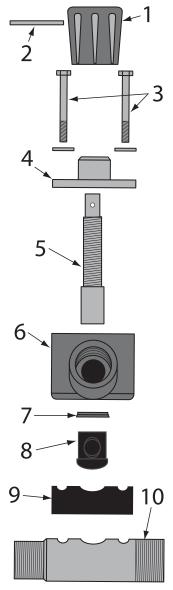



# YALYE PARTS LISTS




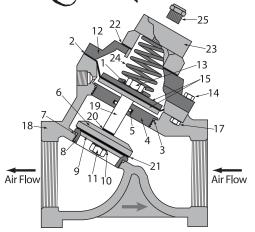

	1" Auto Air Valve		
	888-2123-106PB	VALVE, AUTO AIR, 1", (NORMALLY CLOSED)	
	888-2123-00699PB	VALVE, AUTO AIR, 1/2", 3/4" & 1", REPAIR KIT INCLUDES # 1, 2, 3, 5, 7, 11, 13, 20 & 21	
24	888-2123-10624PB	VALVE, AUTO AIR, 1/2", 3/4" & 1", SPRING	
25	888-2014-300PB	VENT, 1/8"	

	1-1/4" Auto Air Valve		
	888-2123-107PB	VALVE, AUTO AIR, 1-1/4", (NORMALLY CLOSED)	
	888-2123-00799PB	VALVE, AUTO AIR, 1-1/4 & 1-1/2, REPAIR KIT INCLUDES # 1, 2, 3, 5, 7, 11, 13, 20 & 21	
24	888-2123-10724PB	VALVE, AUTO AIR, 1-1/4 & 1-1/2, SPRING	
25	888-2014-300PB	VENT, 1/8"	

	1-1/2" Auto Air Valve	
	888-2123-108PB	VALVE, AUTO AIR, 1-1/2", (NORMALLY CLOSED)
	888-2123-00799PB	VALVE, AUTO AIR, 1-1/4 & 1-1/2, REPAIR KIT INCLUDES # 1, 2, 3, 5, 7, 11, 13, 20 & 21
24	888-2123-10724PB	VALVE, AUTO AIR, 1-1/4 & 1-1/2, SPRING
25	888-2014-300PB	VENT, 1/8"

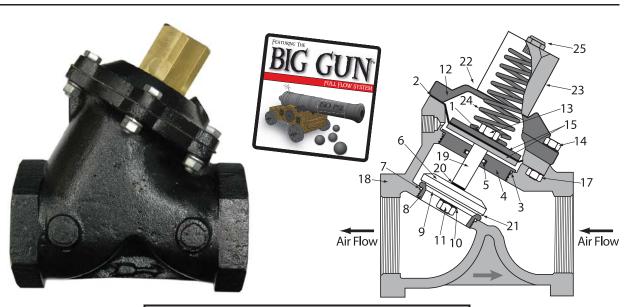

1-1/2" Auto Air Valve ( <sup>BIG</sup> GUN™)		
		VALVE, AUTO AIR, 1-1/2" FULL FLOW, (NORMALLY CLOSED)
		VALVE, AUTO AIR, 1-1/2"L & 2" FULL FLOW, REPAIR KIT INCLUDES # 1, 2, 3, 5, 7, 11, 13, 20 & 21
24	888-2123-10924PB	VALVE, AUTO AIR, 1-1/2"L & 2" FULL FLOW, SPRING
25	888-2014-300PB	VENT, 1/8"



# & BLASTING SET-UP &





AIR HOSE	
10-034RED-050-1	3/4" AIR HOSE ASSEMBLY, 50'
10-100RED-025-1	1" AIR HOSE ASSEMBLY, 25'
10-100RED-050-1	1" AIR HOSE ASSEMBLY, 50'
10-112RED-025-1	1-1/2" AIR HOSE ASSEMBLY, 25'
10-112RED-050-1	1-1/2" AIR HOSE ASSEMBLY, 50'
27WT-1	SAFETY CABLE, 1/2" -1" HOSE TO EQUIP.
27WC-1	SAFETY CABLE, 1/2" - 1" HOSE TO HOSE.
27WT <b>-</b> 2	SAFETY CABLE, 1-1/2" - 3" HOSE TO EQUIP.
27WC-2	SAFETY CABLE, 1-1/2" - 3" HOSE TO HOSE.



	BL	AST HOSE
П		Nozzles Not Included
	10-034BLK-050-3AL	3/4" BLAST HOSE ASSEMBLY, 50', INCLUDES NOZZLE HOLDER
	10-100BLK-050-3AL	1" BLAST HOSE ASSEMBLY, 50', INCLUDES NOZZLE HOLDER
	10-114BLK-050-3AL	1-1/4" BLAST HOSE ASSEMBLY, 50', INCLUDES NOZZLE HOLDER
	10-114BLK-050-3XAL	1-1/4" <b>BIG GUN</b> BLAST HOSE ASSEMBLY, 50", INCLUDES NOZZLE HOLDER
П		T
	10-034BLK-050-4AL	3/4" EXTENSION HOSE ASSEMBLY, 50'
	10-100BLK-050-4AL	1" EXTENSION HOSE ASSEMBLY, 50'
	10-114BLK-050-4AL	1-1/4" EXTENSION HOSE ASSEMBLY, 50'
	10-114BLK-050-4XAL	1-1/4" <b>BIG GUN</b> EXTENSION HOSE ASSEMBLY, 50'
П		
	27WT-1	SAFETY CABLE, 1/2" - 1" HOSE TO EQUIP
	27WC-1	SAFETY CABLE, 1/2" - 1" HOSE TO HOSE.
	27WC-15	SAFETY CABLE, 1-1/4" HOSE TO HOSE,
	27WT-2	SAFETY CABLE, 1-1/4" - 3" HOSE TO EQUIP.
	27WC <b>-</b> 2	SAFETY CABLE, 1-1/2" - 3" HOSE TO HOSE.



## & BLASTING SET-UP &



Nozzles		
1" ENTRY NOZZ	LES FOR USE WITH 3/4" BLAST HOSE	
1201-1172	#3 TUNGSTEN CARBIDE NOZZLE	
1201-1173	#4 TUNGSTEN CARBIDE NOZZLE	
1" ENTRY NOZ	ZLES FOR USE WITH 1" BLAST HOSE	
1201-1173	#4 TUNGSTEN CARBIDE NOZZLE	
1201-1174	#5 TUNGSTEN CARBIDE NOZZLE	
1201-1175	#6 TUNGSTEN CARBIDE NOZZLE	
1-1/4" ENTRY NOZ	ZLES FOR USE WITH 1-1/4" BLAST HOSE	
1348-555	#5 TUNGSTEN CARBIDE NOZZLE	
1348-556	#6 TUNGSTEN CARBIDE NOZZLE	
1348-557	#7 TUNGSTEN CARBIDE NOZZLE	
1348-558	#8 TUNGSTEN CARBIDE NOZZLE	






AIR DRYERS	
888-1310-021PB	AIR DRYER ADPB-250 CFM @ 100 PSIG OR 359 CFM @ 150 PSIG
888-1310-041PB	AIR DRYER ADPB-400 CFM @ 100 PSIG OR 574 CFM @ 150 PSIG
888-1310-071PB	AIR DRYER ADBP-750/950, 800 CFM @ 100 PSIG OR 1149 CFM @ 150 PSIG
888-1310-121PB	AIR DRYER ADPB-1200 CFM @ 100 PSIG OR 1723 CFM @ 150 PSIG
888-1310-161PB	AIR DRYER ADPB-1600 CFM @ 100 PSIG OR 2297 CFM @ 150 PSIG



BLAST,	SUITS / GLOVES
122-9140	BLAST SUIT, LIGHTWEIGHT, MEDIUM
122-9150	BLAST SUIT, LIGHTWEIGHT, LARGE
122-9160	BLAST SUIT, LIGHTWEIGHT, XL
122-9170	BLAST SUIT, LIGHTWEIGHT, XXL
122-9180	BLAST SUIT, LIGHTWEIGHT, XXXL
407701	LUXURY DOUBLE PALMED LEATHER BLASTING/WELDING GLOVES




## \* AVAILABLE ACCESSORIES \*

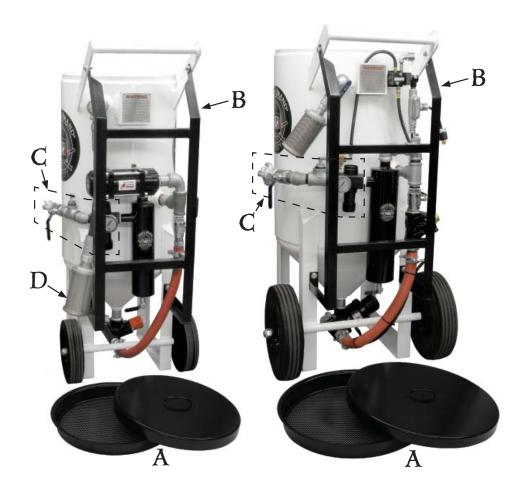







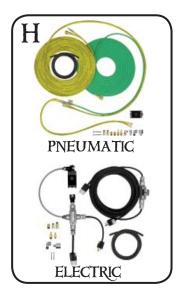





## \* AVAILABLE ACCESSORIES \*

A

#### LIDS AND SCREENS

LIDS ARE IMPORTANT FOR KEEPING MOISTURE FROM FALLING INTO THE ABRASIVE BLASTER IN OUTDOOR APPLICATIONS. MOISTURE IN THE ABRASIVE BLASTER CAN CAUSE OBSTRUCTIONS IN THE METERING VALVE LEADING TO COSTLY DOWN-TIME.

SCREENS ARE IMPORTANT FOR KEEPING FOREIGN OBJECTS FROM FALLING INTO THE ABRASIVE BLASTER. FOREIGN OBJECTS IN THE ABRASIVE BLASTER CAN CAUSE OBSTRUCTIONS IN THE METERING VALVE LEADING TO COSTLY DOWN-TIME.

888-5010-030PB	LID FOR 3.5 ABRASIVE BLASTERS
888-5011-030PB	SCREEN FOR 3.5 ABRASIVE BLASTERS
888-5010-060PB	LID FOR 6.5 ABRASIVE BLASTERS
888-5011-060PB	SCREEN FOR 6.5 ABRASIVE BLASTERS

B

#### LOADING SKIDS

LOADING SKIDS SERVE TWO IMPORTANT PURPOSES. THEY ALLOW FOR PORTABLE ABRASIVE BLASTERS TO BE LOADED AND TRANSPORTED ON THEIR BACK MAKING THEM MUCH EASIER TO TRANSPORT. LOADING SKIDS ALSO SHIELD THE PIPE STRING PROTECTING YOUR INVESTMENT.

POWDER COATED BLACK
LOADING SKID / VALVE GUARD 6 BAG, POWDER COATED BLACK

LOADING SKID / WALVE GLIAPD 3 BAG

 $\boldsymbol{C}$ 

### REGULATOR KITS

ADDING A REGULATOR KIT TO YOUR ABRASIVE BLASTER WILI ALLOW YOU TO BLAST AT LOWER PRESSURES TO ACHIEVE CUSTOM FINISHES OR HELP CONTROL PROFILE

888-2003-006PB-CI	1" REGULATOR KIT			
888-2003-007PB-CI	1-1/4" REGULATOR KIT			
888-2003-008PB-CI	1-1/2" REGULATOR KIT			
888-2003-00799PB	REPAIR KIT FOR 1", 1-1/4" & 1-1/2" REGULATORS			
888-2000-007PB-CI	1-1/2" BIG GUN REGULATOR KIT			
888-2001-00199PB	REGULATOR, 1/4", REPAIR KIT			
888-2000-00399PB	REGULATOR, 1-1/2" & 2" FULL FLOW, REPAIR KIT			

D

#### SPR MUFFLER

INSTALLING A BLOW-DOWN MUFFLER TO YOUR SPR SERIES ABRASIVE BLASTER WILL REDUCE THE NOISE GENERATED AT BLOW-DOWN. IT WILL ALSO DIFFUSE THE BLAST OF AIR THAT IS RELEASED.

	BLOW-DOWN MUFFLER KIT FOR SPI
888-2011-007PB-CI	(PRESSURE RELEASE) ABRASIVE
	BLASTERS

F

#### JOB TIMER

KEEP TRACK OF TIME SPENT ON A JOB AND TOTAL HOURS ON YOUR ABRASIVE BLASTER. KNOW YOUR COST, CONTROL YOUR COST & SET UP A PREVENTATIVE MAINTENANCE PROGRAM FOR YOUR BLAST EQUIPMENT.

PB-9805023P

DUAL TIMER CONTROL BOX W/ KEY RESET & MOUNTING BRACKET

F

### POWER SUPPLY

ADD A POWER SUPPLY TO RUN ANY 12VDC ELECTRIC BLASTER ON COMMON 120AC OUTLET POWER. POWERS UP TO 4 CONTROL VALVES AT ONE TIME.

PB-SMP3WP

POWER SUPPLY 120AC INPUT/12VDC @ 2.5 AMP OUTPUT

G

### ELECTRIC CONV. KIT

CONVERT YOUR PNEUMATICALLY CONTROLLED SPH OR SPR SERIES ABRASIVE BLASTER TO ELECTRIC. ELECTRIC REMOTE CONTROLS ARE RECOMMENDED IF YOU RUN OVER 100 FEET OF BLAST HOSE OR WHEN BLASTING IN COLD WEATHER.

888-0004-410PB	PNEUMATIC TO ELECTRIC CONVERSION KIT FOR SPH SERIES ABRASIVE BLASTERS
888-0005-410PB	PNEUMATIC TO ELECTRIC CONVERSION KIT FOR SPR SERIES ABRASIVE

H

### ABRASIVE CUT-OFF CONV. KIT FOR SPH

ADD AND ABRASIVE CUT-OFF CONVERSION KIT TO YOUR SPH SERIES ABRASIVE BLASTER ALLOWING YOU TO BLOW OFF YOUR PROJECT WITH THE SAME HIGH VELOCITY AIR YOU BLAST WITH

888-2035-00101PB	55' PNEUMATIC ABRASIVE CUT-OFF CONVERSION KIT FOR SPH SERIES ABRASIVE BLASTERS					
	55' ELECTRIC ABRASIVE CUT-OFF CONVERSION KIT FOR SPH SERIES ABRASIVE BLASTERS					

I

### RELIEF VALVE KIT

ADDING THIS ASME RELIEF VALVE KIT TO YOUR BLASTER CAN PREVENT DANGEROUS OVERPRESSURIZATION. LOCAL CODES MAY REQUIRE A DIFFERENT VALVE

888-2470-00702PB SMALL BLASTER RELIEF VALVE KIT

# & BLASTING CHARTS &

### **Nozzle Air, Power & Abrasive Requirements**

						NOZZLE P	RESSURE			
NOZZLE#	NOZZLE AIR, F		50 PSI 60 PSI 70 PSI 80 PSI 90 PSI 100 PSI 125 PSI 140 PSI							
ORIFICE SIZE	ABRASIVE REQU	JIREMENTS	(3.45 BAR)	(4.14 BAR)	(4.83 BAR)	(5.52 BAR)	(6.21 BAR)	(6.89 BAR)	(8.62 BAR)	(9.65 BAF
	415	(cu ft/min)	12	13	15	18	19	21	26	
<i>"</i>	AIR	(cu m/min)	0.34	.037	0.42	0.51	0.54	0.59	0.74	
#2		(hp)	1.75	2	2.5	3	3.5	4	6	
1/8 inch	HORSEPOWER	(kW)	1.30	1.49	1.86	2.24	2.61	2.98	4.47	
(3.2 mm)		(lb/hr)	70	80	90	100	110	120	135	
` ′	ABRASIVE	(kg/hr)	32	36	41	45	50	54	61	
	AIR	(cu ft/min)	25	30	35	40	43	45	60	
		(cu m/min)	0.71	0.85	0.99	1.13	1.22	1.27	1.70	
#3		(hp)	5	8	9	9.5	10	10.5	16	
3/16 inch	HORSEPOWER	(kW)	3.75	5.97	6.71	7.08	7.46	7.86	11.93	
(4.8 mm)		(lb/hr)	150	170	200	215	240	260	320	
(	ABRASIVE	(kg/hr)	68	77	91	98	109	118	145	
		(cu ft/min)	50	55	60	70	75	80	95	
	AIR	(cu m/min)	1,42	1,56	1,70	1.98	2,12	2,27	2.69	
#4		(hp)	10	12	13	16	17	18	25	
1/4 inch	HORSEPOWER	(kW)	7.46	8.95	9.69	11.93	12.68	13,42	18.64	
(6.35 mm)		(lb/hr)	270	300	350	400	450	500	675	
(0.00 11111)	ABRASIVE	(kg/hr)	122	136	159	181	204	227	306	
		(cu ft/min)	80	90	100	115	125	140	190	230
	AIR	(cu m/min)	2.27	2.55	2.83	3.26	3.54	3.96	5.38	6.51
#5		(hp)	17	2.00	2.65 25	27	28	3.90	36	60
	HORSEPOWER	(kW)	12.68	14.91	18.64	20.13	20.88	22.37	26.85	44.85
5/16 inch (8 mm)		` ′	470	530	600	675	750	825	1000	1125
(6 111111)	ABRASIVE	(lb/hr)								
		(kg/hr)	213	240	272	306	340	374	454	510
	AIR HORSEPOWER ABRASIVE	(cu ft/min)	110	125	145	160	175	200	275	315
#6		(cu m/min)	3.12	3.54	4.11	4.53	4.96	5.66	7.79	8.91
		(hp)	25	29	32	35	40	45	57	65
3/8 inch		(kW)	18.64	21.63	23.86	26.10	29.83	33.56	42.50	48.59
(9.5 mm)		(lb/hr)	675	775	875	975	1060	1100	1350	1840
		(kg/hr)	306	352	397	442	481	499	612	835
	AIR	(cu ft/min)	150	170	200	215	240	255	315	405
#7		(cu m/min)	4.25	4.81	5.66	6.09	6.80	7.22	8.92	11.46
	HORSEPOWER	(hp)	35	40	45	50	55	60	70	90
7/16 inch		(kW)	26.10	29.83	33.56	37.28	41.01	44.74	52.20	67.28
(9.5 mm)	ABRASIVE	(lb/hr)	900	1000	1200	1300	1400	1510	1800	2540
		(kg/hr)	408	454	544	590	635	703	816	1152
T	AIR HORSEPOWER	(cu ft/min)	200	225	250	275	300	340	430	540
#8		(cu m/min)	5.66	6.37	7.08	7.79	8.50	9.63	12.18	15.28
#0		(hp)	45	50	55	63	70	75	95	120
1/2 inch		(kW)	33.56	37.28	41.01	46.98	52.20	55.93	70.84	89.70
(12.7 mm)	ABRASIVE	(lb/hr)	1200	1350	1500	1700	1850	2025	2525	3240
		(kg/hr)	544	612	680	771	839	919	1145	1470
	AIR	(cu ft/min)	300	350	400	450	500	550	700	880
#40	AIR	(cu m/min)	8.50	9.91	11.33	12.74	14.16	15.58	19.82	24.90
#10	HORSEPOWER	(hp)	70	80	90	100	110	120	150	190
5/8 inch	HOROLI OWER	(kW)	52.20	59.66	67.11	74.57	82.03	89.48	111.85	142.02
(16 mm)	ABRASIVE	(lb/hr)	1900	2200	2400	2700	3000	3300	4000	5200
	ADIVAGIVE	(kg/hr)	862	998	1089	1225	1361	1497	1814	2359
	ALD	(cu ft/min)	430	500	575	650	700	800	1100	1255
440	AIR	(cu m/min)	12.18	14.16	16.28	18.41	19.82	22.66	31.15	35.52
#12	HODOESOWE	(hp)	100	115	130	145	160	175	215	245
3/4 inch	HORSEPOWER	(kW)	74.57	85.76	96.94	108.13	119.31	130.50	160.33	183.13
(19 mm)	ABRASIVE	(lb/hr)	2700	3100	3500	3900	4300	4700	5700	7375

This table is to be used as reference only. Actual results may vary depending on specific abrasive medium used. This table is based on abrasive with a bulk density of 100 pounds per cubic foot.