# **VS520SZ Hot Sheet**

# Balboa Instruments System PN 56007

System Model # VSP-VS520SZ-DCAH Software Version # 39 EPN # 1945

Base PCBA - PN 55151 PCB VS500Z - PN 22972 Rev C or D

Base Panels Serial Standard – PN 53189





## **Basic System Features and Functions**

#### **Power Requirements**


- 240VAC, 60Hz, 40A, Class A GFCI-protected service (Circuit Breaker rating = 50A max.)
- 4 wires (hot, hot, neutral, ground)

### **System Outputs (As Configured)**


- 240V Pump 1, 2-Speed
- 240V Pump 2, 2-Speed
- 240V Blower
- 120V Circ Pump
- 120V Ozone
- 12V Spa Light
- 120V AV (Stereo)
- 240V 5.5kW Heater


#### **Additional Options**

- Full Feature Dolphin Remote and Spa-only Dolphin Remote
- IR Receiver Module Connects to terminal J1 or J2
- Ozone Generator Connects to terminal J29
- MoodEFX Lighting Connects to Spa Light terminal J20
- FiberEFX Lighting Connects to Spa Light terminal J20
- Stereo System Connects to A.V. terminal J50

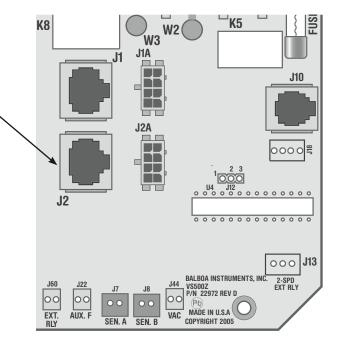


## Wiring Configuration

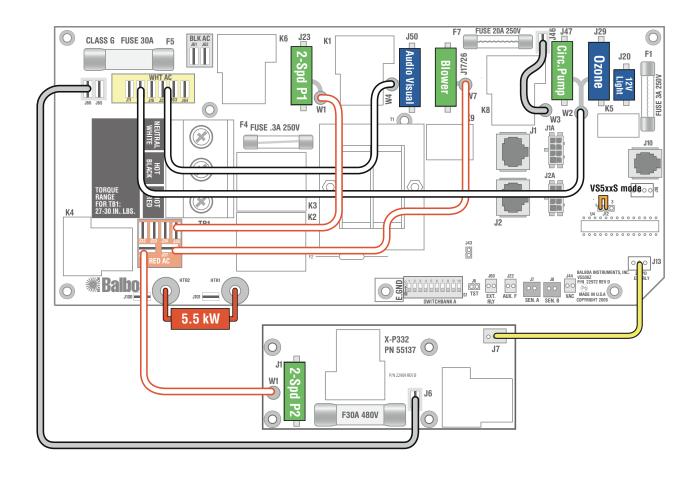

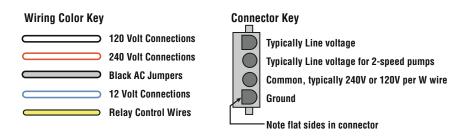

PCB Revision	History
С	Production Release
D	Added Red AC connections J36 & J37; Added Aux Heater connections J100 & J101

## **Configuration Options**

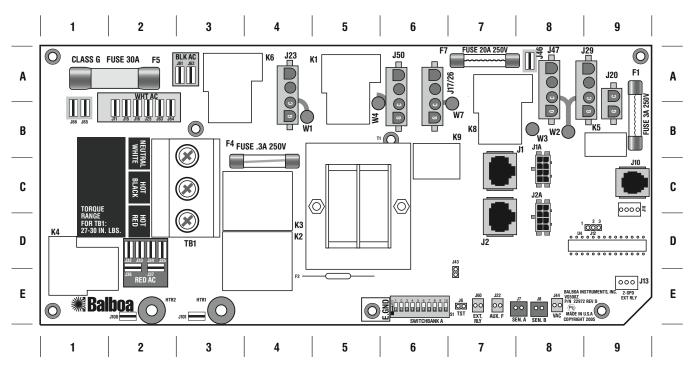


Output Features	Quadrant
- m-pm	

J23	+	W1	– 2-Speed Pump 1	4-A
			<ul> <li>OR 1-Speed Pump 1 with DIP Switch A5</li> </ul>	
J50	+	W4	– Audio Visual - always hot, no relay	6-A
J17/26	+	W7	– 1-Speed Blower (W3 to J46)	6-B
			- OR Single-Speed Pump 2 or Pump 3 (W3 to J	162)
J47	+	W2	– Circ Pump	8-A
J29	+	W2	- Ozone (Same voltage as Circ Pump, if used)	9-A
			<ul> <li>Note X-03 option board for retro fit</li> </ul>	
J20			– Spa Light (12V only)	9-A

System can be factory configured for either a Duplex Topside Panel, a Serial Standard Panel, or a Digital Deluxe Panel.


Note: Some panels styles are not available depending on system configuration. Consult your Balboa product representative for details.

120V Conversion Option - Add jumper from Red AC (J32) to White AC (J11) and set DIP switch A10 to ON.

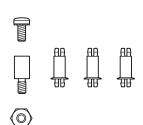


X-Mount P PN 53933 Used for mounting any Expander Board in a plastic enclosure. Standoffs attach to heater mounting bracket.


## **Expander Options**

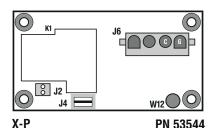

Used for a 1-speed Pump output.

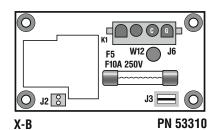


Used for a Blower output ONLY.

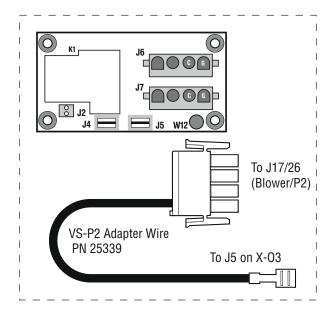

X-2SP Kit PN 53913

Adapter PN 25339 is used in conjuction with an X-03 to run a 2-speed pump 2. No Blower is available when this kit is used.


- J4 connects to Black AC (3-A) using J61 or J62 on main board.
- Connect 2-speed pump to J7 on X-03.

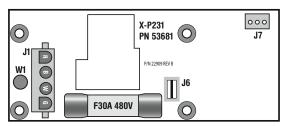

X-P231 PN 53681

Can replace the X-P in cases where branch circuit protection is needed for high amperage devices that would over-burden power input fuse F5 (1-A) on the main PCBA.

- J6 on the X-P231 connects directly to Black AC by using J66 or J65 on the main board (1-B).
- Connect J7 wire on the X-P231 to **J60** on the main board (7-E).
- Connect W1 on the X-P231 to Red AC on the main board (2-D).

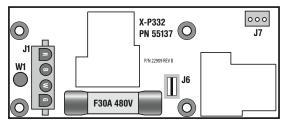

X-P332 PN 55137

Used for an additional 2-speed Pump output.


- J6 on the X-P332 connects directly to Black AC by using J66 or J65 on the main board (1-B).
- Connect J7 wire on the X-P332 to **J13** on the main board (9-E).
- Connect W1 on the X-P332 to Red AC on the main board (2-D).

#### NOTE Regarding J12 (Quadrant 9-D):

 
When J12 on the Main Board is jumpered on pins 2 & 3, the system is in VS50xZ compatibility mode.

If J12 on the Main Board is jumpered on pins 1 & 2, the system is in VS51xZ/VS5xxSZ/VS5xxDZ compatibility mode.

## **DIP Switches and Jumpers**



#### Switchbank A

 

A1, Test Mode OFF A2, See Table 1

A3, N/A

..... In "OFF" position, no circ pump

A4, Aux Freeze

A5, 1-speed P1 w/Circ

 
A6, 60 Hz

A7, J17/26 Enabled

A8, Degrees F

A9, Circ Pump OFF

A10, See Table 1





A1 A2 and A3 A4		<u>Table</u>		# of Hi-Speed Pumps/Blower Before Heat Disabled
A5	In "ON" position, Two-speed pump 1	<u>A2</u>	<u>A10</u>	
	In "OFF" position, One-speed pump 1 (A9 must be On and a	OFF	OFF	0
	circ pump installed)	ON	OFF	1
3	In "ON" position, 50Hz operation	OFF	ON	2
	In "OFF" position, 60Hz operation	ON	ON	3
7	In "ON" position, J17/26 equipment enabled			
	In "OFF" position, J17/26 equipment disabled			
3	In "ON" position, temperature is displayed in degrees Celsius			
	In "OFF" position, temperature is displayed in degrees Fahrenheit			
9	In "ON" Position, 24 Hour Circ Pump with 3°F shut off			

#### **Jumper Key**

Jumper on Pin 1 and 2 will enable VS51x/VS5xxS/VS5xxD compatibility mode.

Jumper on Pin 2 and 3 will enable VS50x compatibility mode (Do not use with Serial or Deluxe Panels).

J43 When jumper is placed on 2 pins during power-up, system will reset persistent memory. Leave on 1 pin only to enable persistent memory feature.

## **Ozone Connections**

**Ozone Connector Voltage:** The VS500Z circuit board is factory configured to deliver a preset voltage (120V or 240V) to the on-board ozone connector (J29). See the ratings table on the wiring diagram attached to the cover of the enclosure for the configured voltage. For 240V output W2 connects to Red AC and for 120V output W2 connects to White AC.


The voltage to the ozone connector can be changed in the field if required. W2 just needs to be set for the required voltage.

WARNING: Changing the voltage of the ozone connector also effects the voltage supplied to the circ pump connector (J47). Any equipment controlled by that connector may be damaged if the wrong voltage is selected.

**Balboa Ozone Generator:** If the board is set up to operate a 120V ozone generator, the connector on the ozone generator is likely to be configured correctly, but should be compared to the illustration below.

If a 240V ozone generator is required, be sure the red wire in the ozone cord is positioned in the connector next to the green ground wire as described below.

Note: A special tool is required to remove the pins from the connector body once they are snapped in place. Check with your Balboa Account Manager for information on purchasing a pin-removal tool.

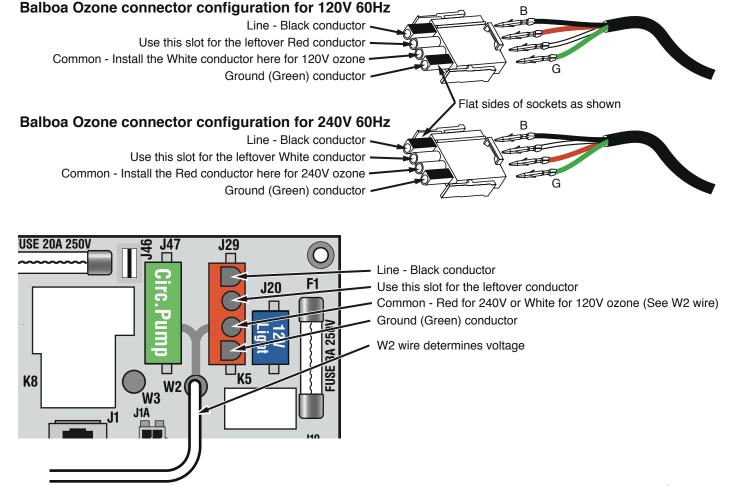

# **Serial Panel Configurations**



Serial Standard PN 53189 with Overlay PN 10430
• Connects to Main Panel terminal J1