

# 6'×4'TOOL STORAGE SHED MODEL#: LGCF1601

# **ASSEMBLY MANUAL**



Missing part?Damaged?Contact us via emali at service@domioutdoorliving.com

© copyright 2019-2023 Domi Outdoor Living LLC. All Rights Reserved.

### Pre-assembly



1.Two or more people are required for assembly.



2.You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4.You may need a safety hat.



5.Please use a Phillips screw driver.



6.For ease of construction, you may need a drill.



7.You may need a safety goggle.



8.Do not fully tighten screws prior to complete assembly.

#### Warning & Attention

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;

-It would be much easier to assemble the product with three or more people;

-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

**A** Use bolts to secure the frame to the ground to against the strong wind.









Appendix







Step 3: Place part#J on the bottom frame(A5), using 3 screws 1# and gaskets to fix. **Repeat the above procedures to assemble the another side.** 

Step 4: Fix the part #C3 to the part #C1(C2) with 2 screws 3#, gaskets and nuts each as shown in 34.







Installed 2 assembled part #H3/H4 with 8 screws 9# and gaskets, then put on the plastic caps as shown in (1) (2) (3).





Install part#J1/J2: Use screws 1# and gaskets to fix them on the bottom frame.

Fix part #H3/H4/H5 to part#J1/J2 with screws 9# and gaskets, then put on the plastic caps. **Repeat the above procedures to assemble 2 part #J on side wall.** 



06







Fix the upper end of the part#C1/C2 with part#B1/B2 and part#C4 by using screws 3#, the nuts and gaskets are on the back side as shown in ③④.













## Assemble the TOP ROOF

Assemble the part#G1/G2 to the one side of part#K1/K4 with screws 2#, gaskets and nuts.





The roof panel part#K1/K2/K3/K4 is laid in order; the roof panel K1/K4 is fixed with G1/G2 & D1/D2 by using screws 2#, gaskets and nuts as shown in (1); the roof panel K1/K2 & K3/K4 are fixed with E1/E2 by using screws 2#, gaskets and nuts as shown in (2). Then fix with screw 1# and gaskets to part #B3/B4.







2. Part #G5/G6 is inlaid at the four corners and fixed with screws 3#, gaskets and nuts as shown in ①2.











Insert the bolt and lock the door

**Open the door:** insert the key, rotate 180° counterclockwise, and rotate the handle counterclockwise to open the door.

Lock the door: close the door, insert the key, rotate the handle clockwise, then rotate the key  $180^{\circ}$  clockwise and pull the key out.







Insert the bolt and locks the door

17



#### RESORT COMFORT IN YONR

OWN BACKYARD

## Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and

friendly, easy-to-reach after-sales service. So if you

have any questions about our product and assembly-

,please feel free to contact us.We will be here for you.



email: service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.

Copyright 2019-2023 Domi Outdoor Living LLC. All Rights Reserved.