## INSTRUCTION SHEET



## FXRP/FXRT/FXRD FAIRING ACCESSORY HEADLIGHT COVER

## **RECOMMENDED TOOLS:**


- Philips Screwdriver


## QUESTIONS?




CALL: (605) 996.3700

- 1. Verify the contents of the Headlight Cover Kit (FIG 1):
  - a. Headlight Cover
  - b. Headlight Cover Trim
  - c. Hardware Bag "A" Headlight Cover

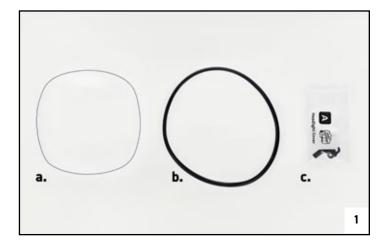

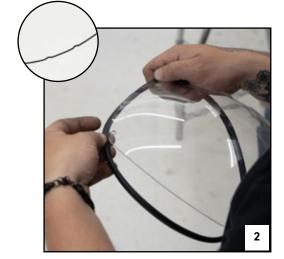



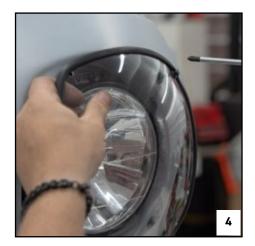

- 2. Install the **Headlight Cover Trim** on the **Headlight Cover** by placing the trim's seam between the two notches that indicate the bottom edge. (FIG 2).
- 3. Using Hardware Bag "A", insert the four well nuts into the fairing (FIG 3).
- 4. Mount Headlight Cover starting with the top screws. Torque screws to 10 in-lbs (FIG 4).