

# OUTBOUND

•INDUSTRY•

## USER GUIDE

76 Series Land Cruiser Drop Down Table



## STEP ONE

### REMOVING REAR DOOR CARD

Please read and fully understand all instructions prior to install.

The first step of this install requires you to remove the factory door card.

Start by carefully lifting the corner of the door card. Once the first clip has popped out work your way around the door card until all 10 clips have popped. Your doorcard will now be removed.





## **STEP TWO**

### **INSTALLING NUTSETS**

Using a 5mm Rivnut Tool insert the supplied 5mm Rivnuts into the 10 holes that originally held the door card in place.

Please ensure the nutserts are installed as per your tools operating instructions. Ensure the Rivnuts are seated properly before progressing with this install.





## STEP THREE

### CUTTING DUST COVER

To allow for the storage compartment to sit within the door cavity, the plastic dust cover needs to be cut.

Using a sharp knife cut around the existing cutout.

Ensure you are careful not to cut any wiring within the door.






## STEP FOUR

### INSTALLING DOORCARD & BUTTON HEAD BOLTS

Using the Supplied eight m5 x 20mm Button Head Screws secure your new table to the door. Ensure that all screws are left loose until all have been threaded in.

Remember do not install these Button Heads into the below circled positions. These are used in the next step.

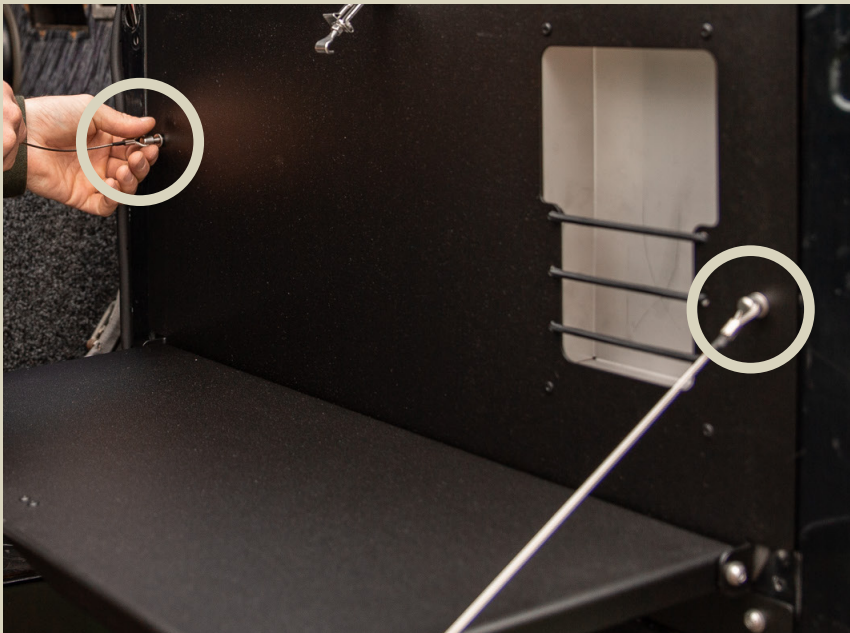



## STEP FIVE


### INSTALLING TABLE CABLES

Using the supplied cables you can secure your table. There are a couple of details to note at this point. Firstly - You will have two length cables. The longer is used on the left hand side of the table.

Secondly - One end of the cables has a longer thread than the other.

Install the longer thread into your door card. Use an 8mm Spanner to make sure it is tight.

Thirdly - When tightening your hardware into the table, install the washer so it is against the 5mm nut.

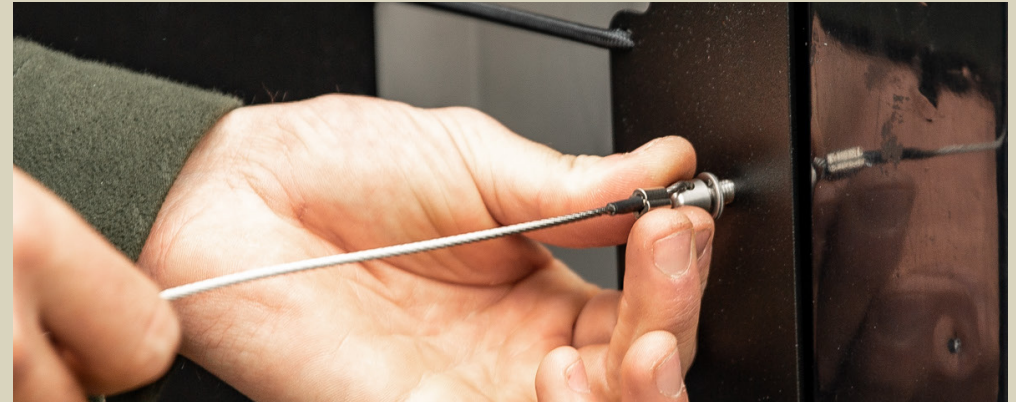

## STEP SIX

### ADJUSTING LATCH

It is important your latch is adjusted correctly. We have adjusted your latch when assembling but it may need a tighten up.

To do this simply release the lock nut and adjust in or out depending on what your latch requires. You want this to be tight to stop any rattling but do not over tighten as this will cause unnecessary stress on components.





## STEP SEVEN

### DOUBLE CHECK YOUR WORK

Lastly, it is important to double check your work. Go over all nuts and bolts you installed and ensure they are tight.

Open and close the table and ensure everything operates correctly.

Congratulations & Well done! You have completed your Outbound Install. If you have any questions or feedback please let us know how we did!

Its time to,

*Get out There!*

