

SINCE 1908

Solis

FLEXI TEMP KETTLE

Type 5519

User manual



CONTENTS

INTENDED USE	3
IMPORTANT SAFETY PRECAUTIONS	3
CONTENTS	6
APPLIANCE DESCRIPTION	6
INSTALLATION	8
BEFORE FIRST USE	9
BOILING WATER	9
USING THE TEA PRE-SETS	10
ACTIVATING SILENT MODE	11
DEACTIVATING STANDBY MODE	11
CLEANING AND CARE	12
STORAGE	12
REMOVING LIMESCALE	12
TECHNICAL SPECIFICATIONS	13
TROUBLESHOOTING	13
DISPOSAL	14
2 YEAR GUARANTEE	14
SOLIS CUSTOMER SERVICE	14

INTENDED USE

- This appliance is intended to heat and boil water.
- Only use the appliance as described in this manual.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments and not for commercial use.
- This appliance is intended for indoor use only.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazard involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void the warranty.
- This product is not calibrated for commercial or scientific use. Temperatures may vary, although these are within the range for optimal heating of water for all types of tea and coffee.

IMPORTANT SAFETY PRECAUTIONS

General safety instructions

WARNING

- Ensure you have fully read and understood the instructions in this user manual before you install or use the appliance. Keep this document for future reference.
- Do not use the appliance if a part is damaged or defective. Replace a damaged or defective appliance immediately.
- If the power cable is damaged, it must be replaced by the manufacturer, the service agent or similar qualified personnel in order to avoid a hazard.
- Do not disconnect the appliance from the mains by pulling on the cable. Always grasp the power plug and pull.

Safety instructions regarding installation

⚠ WARNING

- Do not drop the appliance and avoid bumping.
- Place the appliance on a stable, flat, heat and moisture resistant surface.
- Only use the appliance with the provided power base.
- Before using the appliance, check that the voltage stated on the type plate of your appliance matches your mains voltage. Do not operate the appliance with a multiway plug adapter.
- Never use the appliance with an external timer switch or remote control.
- Do not place the appliance in direct sunlight.
- Do not leave the power cable hanging over table edges to prevent the appliance from being pulled down or knocked over. Make sure that neither the appliance nor the power cord or plug comes into contact with hot surfaces, such as hotplates or a radiator, or that they come into contact with the appliance itself.
- Never reach for an appliance that has fallen into water or other liquids:
 - Always wear dry rubber gloves to unplug the appliance before taking it out of the water.
 - Do not start using the appliance again before having it checked for functionality and safety by Solis or a service center authorized by Solis.
- Unplug the appliance before moving it.

Safety instructions regarding use

⚠ WARNING

- Children must be supervised to ensure that they not play with the appliance.
- Do not use the appliance when it is empty. Always fill the kettle with a minimum 0.5 litres and a maximum of 1.8 litres water. Do not switch on the appliance when it is empty or the kettle is filled less than the minimum. This can damage the appliance.
- Do not fill the appliance with more than 1.8 litres of water. Boiling water can overflow out of the appliance when the appliance is too full.
- Do not operate the appliance with wet hands.
- Do not open the lid while the water in the kettle is boiling.
- Be careful when moving the kettle with hot water. Avoid spillage.
- Avoid spillage on the power connector.
- Be careful when opening the lid, hot steam may escape.
- Do not move the complete appliance when:
 - it contains hot water. Only move the kettle.
 - when the water is still boiling.
- Be careful when pouring out hot water. Do not tilt the kettle too fast.
- When the kettle is not cooled down, only touch the handle.
- Do not touch the cover of the heating element during or shortly after use. The heating element may be subject to residual heat.

- Only fill the kettle with cold and fresh water and with no other liquids or additives.

Safety instructions regarding maintenance

⚠ WARNING

- Always unplug the appliance when not in use.
- Unplug the appliance before maintenance and cleaning.
- Do not try to open or repair the appliance. It must be serviced by Solis or by a service agent authorized by Solis.
- Let the appliance cool down before cleaning.
- Never immerse the appliance in water or place it in a dishwasher.
- Do not use abrasive chemical cleaning agents such as ammonia, acid or acetone when cleaning the appliance. This can damage the appliance.

▲ CONTENTS


Please check the contents of the package:

1x FLEXI TEMP KETTLE

1x Power base


▲ APPLIANCE DESCRIPTION

The FLEXI TEMP KETTLE is a water kettle that heats water to the desired temperature. The appliance also has a tea mode to easily select the perfect water temperature for your tea. When selected, the keep warm function maintains the set temperature up to 30 minutes after the boiling process is finished.

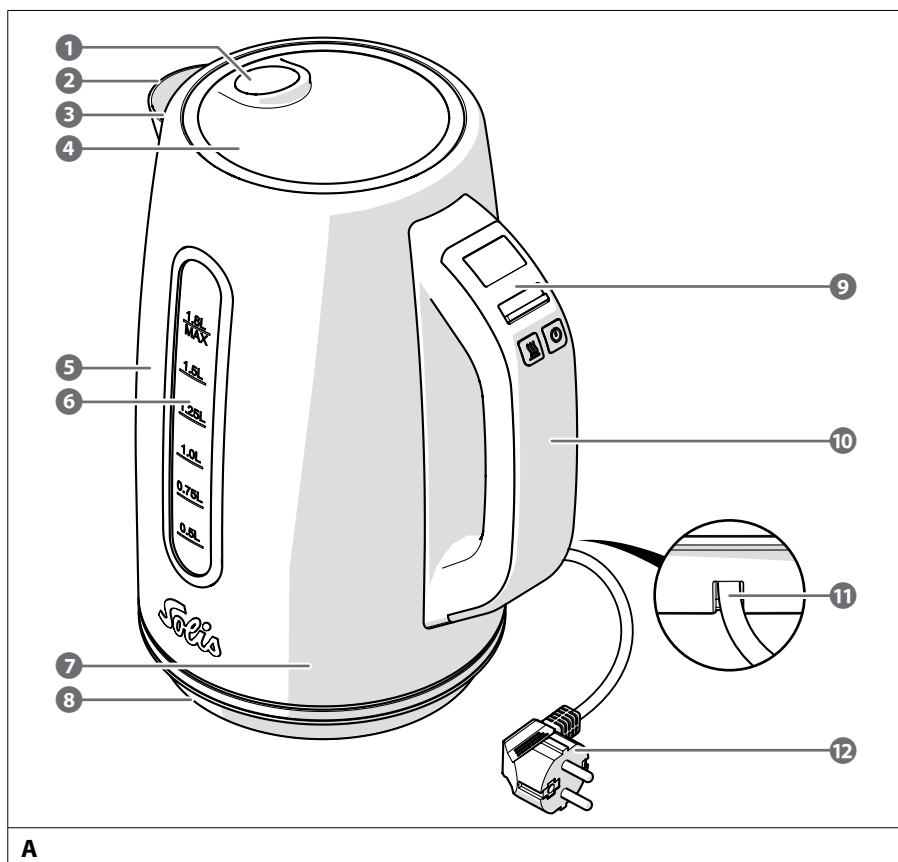

A

- | | |
|-------------------------|---------------------------------|
| 1 Opening button | 7 Covered heating element |
| 2 Spout | 8 Power base |
| 3 Limescale filter | 9 Control elements with display |
| 4 Lid | 10 Handle |
| 5 Kettle | 11 Power cable recess |
| 6 Water level indicator | 12 Power cable and plug |

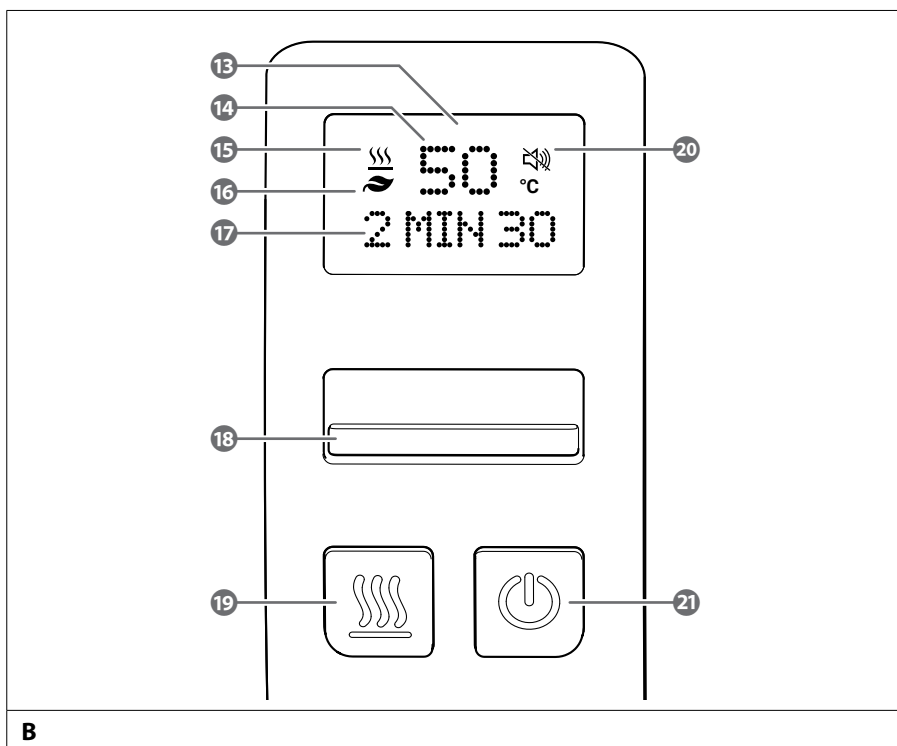

- | | |
|--------------------------|--------------------------|
| 13 Display | 18 Selection button |
| 14 Temperature indicator | 19 Keep warm button |
| 15 Keep warm indicator | 20 Silent mode indicator |
| 16 Tea mode indicator | 21 Power button |
| 17 Text display | |

▲ INSTALLATION

To install the appliance:

1. Uncoil the **power cable** 12.
2. Place the **power base** 8 on a stable and flat as well as a heat and moisture resistant surface. Make sure the **power cable** 12 runs through the **power cable recess** 11.
3. Plug the **power plug** 12 into a power outlet.
4. Place the **kettle** 5 filled with water onto the **power base** 8. The appliance beeps for 2 seconds and the **display** 13 lights up.

The appliance is now ready for use.

▲ BEFORE FIRST USE

Clean the appliance before first use:

1. Boil two full kettles of water (chapter *Boiling water*).
2. Discard the boiled water.

▲ BOILING WATER

▲ Avoid spillage on the power plug and the power base.

To boil water:

1. Press the **opening button** ① to open the **lid** ④.
2. Fill the **kettle** ⑤ with 0.5 – 1.8 litres of water.
3. Close the **lid** ④.
4. Place the **kettle** ⑤ onto the **power base** ⑧. The appliance beeps for 2 seconds and the **display** ⑬ lights up.
5. Push the **selection button** ⑱ upwards or downwards to select the desired temperature. The **temperature indicator** ⑭ shows the desired temperature.

① If none of the buttons have been pressed within 6 seconds, the display shows the current water temperature.
6. Press the **power button** ⑲ to start heating the water. The **power button** ⑲ lights up and the **temperature indicator** ⑭ shows the current water temperature.

① If the current temperature of the water is higher than the desired temperature, the heating process does not start.
7. If desired, press the **keep warm button** ⑳ after the heating process has started to enable the keep warm function. The **keep warm button** ⑳ and the **keep warm indicator** ⑮ on the display light up.

① To cancel the heating process, press the power button again. The power button light switches off.

① To cancel the keep warm mode, press the keep warm button again. The keep warm button light switches off and the keep warm indicator switches off.

The appliance beeps 3 times when the process is finished. The power button light switches off. When the keep warm function is activated the power button light starts blinking. The keep warm function automatically switches off after 30 minutes.

USING THE TEA PRE-SETS


To use the tea pre-sets:

1. Follow step 1-4 from chapter *Boiling water*.
2. Press and hold the **keep warm button** 19 for 2 seconds to activate the tea mode. The **tea mode indicator** 16 lights up on the **display** 13.
3. Push the **selection button** 18 upwards or downwards to select the desired tea preset. The **temperature indicator** 14 shows the desired temperature and the tea variety is shown at the **text display** 17.

 If none of the buttons have been pressed within 6 seconds, the display shows the current water temperature.

Tea variety	Water temperature	Recommended brewing time
GYOKURO	50 °C	2 minutes 30 seconds
SHINCHA	55 °C	2 minutes
SENCHA	60 °C	2 minutes
BANCHA	65 °C	2 minutes
WHITE	70 °C	9 minutes
GREEN	75 °C	3 minutes
MATCHA	80 °C	1 minute
BLACK	85 °C	4 minutes
HERBAL	90 °C	5 minutes
OOLONG	95 °C	6 minutes

4. Follow step 6-7 from chapter *Boiling water*.

 When the heating process is done, the text display shows, instead of the tea variety, the recommended brew time for the selected tea type. This is only information and not a timer function.


5. Press and hold the **keep warm button** 19 for 2 seconds to deactivate the tea mode. The **tea mode indicator** 16 switches off.

 Do not put tea bags or tea leaves in the kettle. The appliance is only suitable for heating water.

▲ ACTIVATING SILENT MODE

To activate silent mode:

1. Press and hold the **keep warm button** 19 for 4 seconds to activate the silent mode. The **silent mode indicator** 20 on the **display** 13 lights up and the sounds are muted.

 During the press and hold the appliance will first try to activate the tea mode. Do not release the keep warm button and the silent mode is activated.
2. Press and hold the **keep warm button** 19 for 4 seconds to deactivate the silent mode. The **silent mode indicator** 20 on the **display** 13 turns off and the sounds switch on.

▲ DEACTIVATING STANDBY MODE

-  To save energy the appliance goes into standby mode after 10 minutes of inactivity. The display switches off.

To deactivate standby mode:

1. Press any button to switch on the appliance. The **display** 13 lights up.

▲ **CLEANING AND CARE**

▲ Do not put the appliance or its parts in the dishwasher.

We recommend cleaning the appliance every week. To clean the appliance:

1. Unplug the appliance.
2. Let the appliance cool down.
3. Clean the appliance with a light damp cloth.
4. Rinse the inside of the **kettle 5**.

▲ **STORAGE**

Store the appliance in a dry and enclosed space.

▲ **REMOVING LIMESCALE**

We recommend removing limescale regularly. The frequency of decalcification depends on the limescale content of your water. To remove limescale:

1. Fill the **kettle 5** to 2/3 (1.2 litres) with clear water and boil it to 100 °C. Follow steps 4 - 6 from the chapter *Boiling water*.
2. When the boiling process is finished, add 1/3 (0.6 litres) of white vinegar.
3. Keep the **lid 4** open and leave the solution to soak for 30 minutes.
4. Empty the **kettle 5**.
5. Boil two full kettles of water to remove the remaining vinegar from the kettle (chapter *Boiling water*).
6. Discard the boiled water.

▲ TECHNICAL SPECIFICATIONS

Model-No.	Type 5519
Voltage / frequency	220–240 V~ / 50/60 Hz
Output	2000 - 2400 W
Dimensions (W × D × H)	22 × 16 × 24.5 cm
Weight	1.18 kg
Maximum capacity	1.8 L
Temperature range	40 - 100°C
Temperature steps	5 °C

Technical changes reserved.

▲ TROUBLESHOOTING


Problem	Possible cause	Solution
The appliance does not function.	The power connection is not working.	Make sure the power cable is connected to a working power source.
	The appliance is not switched on.	Press the power button.
	The appliance is damaged.	Press the power button. If the appliance doesn't switch on, the appliance is damaged. Contact Solis or a Solis authorized service center.
The appliance switched off while the boiling process is not finished. -H- flashes on the display.	The boil-dry protection switched off the appliance because it ran without water.	Allow the appliance to cool down before next use.

▲ DISPOSAL



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

▲ 2 YEAR GUARANTEE

 Only valid with a till receipt.

We provide a guarantee for this appliance, if the defect has demonstrably arisen as a result of faults in the material or construction, and has arisen despite proper handling and care. Glass breakage is not covered by the guarantee. The guarantee starts from the date of sale, as noted on the sales receipt, which must be enclosed with the appliance. For commercial use, the guarantee lasts for 12 months. The detailed guarantee conditions are available at www.solis.com.

▲ SOLIS CUSTOMER SERVICE



It is always worth calling us before sending in the article, as malfunctions can often be easily solved by the appropriate tip or trick from our experts. For country specific contact information, scan the QR code, follow the weblink or call us.

S I N C E 1 9 0 8

Solis

Solis of Switzerland Ltd

Solis-House • CH-8152 Glattbrugg-Zürich • Switzerland
www.solis.ch • www.solis.com

Please visit us at

www.solis.com

Version 07/2023