

Installation Instructions for K10618 Idler relocator for LS truck engines Additional parts required: - Belt. See chart below. Kit contents:

Idler post

 Fasteners • Idler pulley

- Kwik Performance AC bracket and Sanden compressor OR - Factory tensioner mounted on passender side of water pump
- Suggested belt length and Gates PN K10618 Idler relocator Belt when using Belt when using AC bracket being used "small" alternator "large" alternator 89.13" K060885 88.38" K060878 Kwik Performance K10291 98.13" K060975 96.63" K060960 Kwik Performance K10472 77.87" K060772 78.63" K060780 None. Use factory tensioner
- 1. Identify the alternator size



2.19" (130+ amp) "large" alternator 1.68" (105 amp) "small" alternator

2. Prepare the factory cast bracket



Copyright 2022 Kwik Performace, Inc. All rights reserved



The belt path shown above assumes no AC compressor is being instlalled. If an AC compressor and Kwik Performance bracket K10291 or K10472 is being installed, the belt path shown above is correct for the alternator side of the engine, but use the path around the compressor and tensioner shown in the AC bracket instructions.

O

Note: For best performance and longest life, the belt lengths suggested by Kwik Performance are the shortest belt that can be reasonably installed.

We recommend the following procedure:

- 1. When installing the serpentine belt, place the belt around all pulleys as shown in the diagram except for the water pump pulley.
- 2. Check to see that the belt is in the correct grooves of the AC compressor.
- 3. Check to make sure that the belt is seated all the way in the grooves of each grooved pulley.
- 4. Retract the tensioner all the way and slip the belt onto the water pump pulley.
- 5. Release the tensioner.