



Carefully read all instructions before use and save for future reference. This diagram (Fig. 1) will help you locate and identify various features and functions used in the user guide of your Ampex 300 Lumen Rechargeable Mini Lantern.

### OPERATION

Your Ampex 300 Lumen Rechargeable Mini Lantern has easy access multiple modes: Three White Light Modes (Low, Medium and High), Red Light (to preserve your night adapted vision) and Moonlight (allows for optimized runtime for extended use).

#### WHITE LIGHTING MODES:

1. Press once for "Low," twice for "Medium," a third for "High" and a fourth to turn "Off." (Fig. 1)

#### TO ACCESS RED LIGHT MODE:

1. Press and hold down button for approximately 1-2 seconds until red light turns to "On."
2. Press button once to turn to "Off." (Fig. 1)

#### TO ACCESS MOONLIGHT MODE:

1. Quickly depress the button twice to turn moonlight mode "On."
2. Press button once to turn to "Off." (Fig. 1)

**NOTE:** The battery life indicator will illuminate when charging and after the light is turned on. After the light is turned on, the battery life indicator will turn off between 15 to 20 seconds.

#### BATTERY LOCKOUT SWITCH:

Your Ampex 300 Lumen Mini Lantern is equipped with a battery lockout switch to prevent accidental activation during transportation.

1. To prevent the light from turning on, move the lock switch towards the center of the light. No red will be showing on the switch.
2. To unlock the light and allow for operation, move the lock switch towards the outside of the light body. The red unlock indicator on the switch will be showing.

### CHARGING THE BATTERY

Your Ampex 300 Lumen Rechargeable Mini Lantern contains a rechargeable lithium-polymer battery.

**NOTE:** The USB-C cable included is for charging only.

1. Lift up the USB-C charging port cover. (Fig. 1)

2. Plug USB-C into input port then plug other end of cable into any USB outlet on computer, wall adaptor (not included), etc. (Fig. 2 & 3)



**NOTE:** Charging while using a USB wall adaptor will be faster than a computer USB port.

3. When fully charged, all three indicator lights will appear solid. (Fig. 1)

**NOTE:** Recharge the battery immediately when light output is low. Only one battery indicator light will be illuminated when battery is low.

4. When battery charging is complete, remove the USB-C cable from the charging port and close the USB-C charging port cover. (Fig. 1)

5. Store charging cable for future usage.

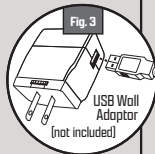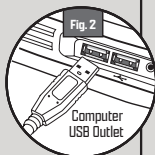

### LIMITED LIFETIME WARRANTY

AMPEX products are covered by a Limited Lifetime Warranty against manufacturing defects in materials and workmanship for the lifetime of the product.

The life of the product can vary based on its age and how it is used. Items may be repaired or replaced at the discretion of AMPEX. If an identical product is not available, the most comparable product may be substituted, or credit towards a different AMPEX product may be offered.

If a product covered by this warranty fails due to a manufacturing defect, AMPEX will repair it without charge, or replace it, at the discretion of the manufacturer. Only original, unaltered, and unmodified items and workmanship are covered. This warranty does not cover damage caused by accident, improper care, negligence, normal wear and tear, alterations, misuse, neglect, or the natural breakdown of colors and materials over extended time and use. Storm and wind damage, burns, UV damage, and products used for commercial use are specifically not covered. Damage not covered under warranty may be repaired for a reasonable rate and a fee may be charged for shipping.

Service under this warranty is provided to the original consumer purchaser with proof of purchase from an AMPEX authorized dealer. AMPEX products purchased from unauthorized 3rd party retailers or in as-is or used condition are specifically not covered by this warranty. This warranty does not cover consequential damages, or any other losses caused by any defect in the product.

AMPEX products eligible for the Limited Lifetime Warranty are covered to the original owner, for the lifetime of the product. Please refer to the table below to assess the defined lifetime of products. To check availability and pricing for repairs or replacement parts, please call our customer support team at 1-877-887-8650 or email [service@ampexgear.com](mailto:service@ampexgear.com).

#### PRODUCT CATEGORY

Headlamps, Lanterns, Flashlights

#### PRODUCT LIFETIME DEFINITION & TERM

Lifetime of the Product which, is Ten (10) years from the original date of purchase of the Product by a customer from an AMPEX authorized dealer.

### IMPORTANT INFORMATION

1. Operating time for your Ampex 300 Lumen Rechargeable Mini Lantern depends on continuous or intermittent use. Intermittent operation extends the run time of the battery.
2. The LEDs are a lifetime light source. They will never need to be replaced.

### STORAGE

When storing your Ampex 300 Lumen Rechargeable Mini Lantern for long periods, please recharge the battery every six months to prolong battery life. Your mini lantern should be stored in a cool, dry place. The optimal storage temperature is between 68F and 80F.

### CARE & CLEANING

Your Ampex 300 Lumen Rechargeable Mini Lantern can be fully submerged and is waterproof up to 1 meter, but do not submerge when cleaning.

Clean with water and a mild detergent. Place on flat surface to air dry. Gently wipe the lens with a soft, non-abrasive cloth. Do not dismantle the mini lantern.

### WARNING!

**WARNING!** Do not disassemble product. Do not charge the battery if the product/battery is cracked or damaged. Do not short terminals, crush, heat above 140 Degrees F. (60 Degrees C.), throw into a fire, or incinerate. Please recycle.

