


AMP-60041  
**THREE PERSON  
 BACKPACKING TENT**




**COMPONENT GLOSSARY**

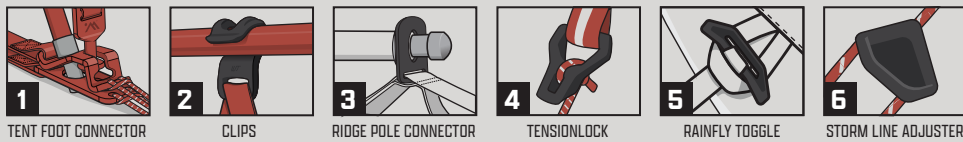


**1 PREPARE FOR SET UP**

- Select a level site clear of rocks, branches, and other hard or sharp objects to set up your tent.
- Remove all contents from bag.
- Spread out footprint and place tent body directly on top.
  - **NOTE:** Color code tent foot connector<sup>1</sup> to footprint connector.
- Assemble all poles.

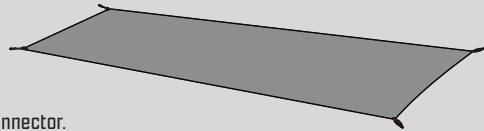


**2 ATTACH TENT POLES**

- Place color-coded tent poles into foot connector at the circular hole closest to the tent body, connecting red pole ends to red tent foot connectors and silver pole ends to silver tent foot connectors.
  - **NOTE:** Once tent poles are in place, poles should fit into both the footprint and tent feet comfortably.
- Once poles are securely in tent foot connector,<sup>1</sup> begin clipping tent body to poles to build tent shape (Fig. 1).
- **NOTE:** The clip webbing is color coded: attach clips<sup>2</sup> with red webbing to red poles, and clips with silver webbing to silver poles.
- Secure tent body to ridge pole ends by sliding silver ridge pole through ridge pole connector<sup>3</sup> (Fig. 2).

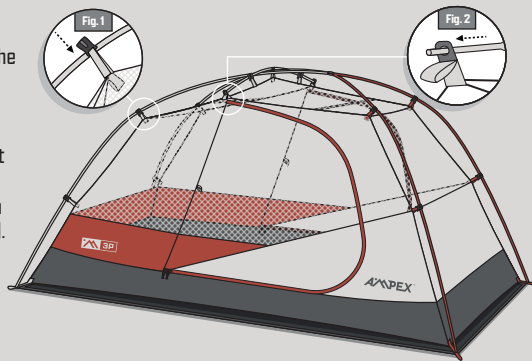

**3 STAKE & SECURE TENT**

- Stake out tent using red cord at tent foot connector.<sup>1</sup> Repeat until all 4 stake points are staked out properly and floor is flat with no wrinkles.

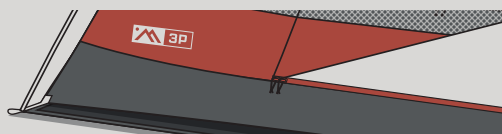

**4 ATTACH RAINFLY**

- Drape rainfly over tent, centering zippers over door and vents at sides of tent.
- **RECOMMENDED:** For extra stability, attach orange hook-and-loop fasteners on underside of rainfly to tent poles to help keep tent stable.
- Attach rainfly to tent foot connector<sup>1</sup> by inserting into channel (Fig. 3).
  - **NOTE:** Color code rainfly anchor to tent foot connector.<sup>1</sup>
- Adjust tension webbing at corner(s) of tent until rainfly is taut.
- Stake out vestibule and remaining sides of rainfly.
  - **NOTE:** For extra tension, make sure non-looped end of cord is securely tucked into "tooth" on underside of tensionlock<sup>4</sup>. Lift up to release tension.



**5 SECURE VENTS & GUYLINES**

- Locate gylines in gyline bag. Insert rainfly toggle<sup>5</sup> through reflective cord loop on rainfly (4 total). Enlarge the loop near storm line adjuster<sup>6</sup> to shorten the gylines as needed (Fig. 4).



AMP-60041  
**THREE PERSON  
 BACKPACKING TENT**



**CARE INSTRUCTIONS**

**For Setting Up Your Tent:**

- For a comfortable night's rest, find a smooth and level spot and clear your camp area of debris before setting up your tent.
- When opening for the first time, the rainfly and footprint will be rolled together with the tent body.
- Lay out all contents of the bag and slowly assemble tent poles for a smoother setup.

**For Using Your Tent:**

- Remove shoes before entering tent. Store in vestibule to prevent any loose dirt or rocks from puncturing the tent floor.
- Handle zippers with care. Use limited force when opening and closing your tent.
- Zippers may be damaged if dirt and dust get caught in between the teeth. If frequently camping near the beach or in sandy environments, we recommend brushing the zipper teeth with a soft toothbrush to eliminate debris.
- Keep all food and fragrances outside of tent. This will help keep small bugs and critters from chewing through the mesh.

**For Breaking Down Your Tent:**

- Shake out your tent before packing away. This will help remove any dirt or debris still inside the tent. Good news! Since this tent is freestanding, this will be easy for you because the poles will help hold the tent open when dumping out the dirt.
- This tent will likely accumulate some condensation under the floor and rainfly, especially in the morning. Make sure the tent is as dry as possible before packing up and hitting the trail.

**For Cleaning at Home:**

- Clean the tent using a soft, damp sponge. Be sure to scrub gently.
- Never machine-wash or machine-dry your tent. This could potentially damage the fabric, mesh or seams.
- To preserve the life of your tent, we recommend that you do a gentle cleaning 1-2 times per season to clean off any excess dust, sand or tree sap.

**For Storage:**

- After every use, hang or pitch your tent in a shaded outdoor spot to dry completely before storing away in the carry bag. Putting your tent away damp or wet can cause mold to grow on the tent and break down the chemicals responsible for keeping the tent dry.
- Once dry, store your tent in a cool, dry location like a closet.

**WHAT'S INSIDE?**

- Tent body (#92152)
- Tent footprint (#92153)
- Main tent pole assembly (#92155)
- Ridge pole (#92169)
- Stake bag (#92180) with 14 stakes (#92156)
- Rainfly (#92154)
- Gylines bag (#92181) with 6 Gylines (#92157)
- Adjustable carry bag (#92158)
- Mesh repair patch (#92159)
- Floor repair patch (#92160)

**AMPEX LIMITED LIFETIME WARRANTY**

AMPEX products are covered by a Limited Lifetime Warranty against manufacturing defects in materials and workmanship for the lifetime of the product.

The life of the product can vary based on its age and how it is used. Items may be repaired or replaced at the discretion of AMPEX. If an identical product is not available, the most comparable product may be substituted, or credit towards a different AMPEX product may be offered (see Product Lifetime Table below).

If a product covered by this warranty fails due to a manufacturing defect, AMPEX will repair it without charge, or replace it, at the discretion of the manufacturer. Only original, unaltered, and unmodified items and workmanship are covered. This warranty does not cover damage caused by accident, improper care, negligence, normal wear and tear, alterations, misuse, neglect, or the natural breakdown of colors and materials over extended time and use. Storm and wind damage, burns, UV damage, and products used for commercial use are specifically not covered. Damage not covered under warranty may be repaired for a reasonable rate and a fee may be charged for shipping.

Service under this warranty is provided to the original consumer purchaser with proof of purchase from an AMPEX authorized dealer. AMPEX products purchased from unauthorized 3rd party retailers or in as-is or used condition are specifically not covered by this warranty. This warranty does not cover consequential damages, or any other losses caused by any defect in the product.

AMPEX products eligible for the Limited Lifetime Warranty are covered to the original owner, for the lifetime of the product. Please refer to the table below to assess the defined lifetime of products. To check availability and pricing for repairs or replacement parts, please call our customer support team at 1-877-887-8650 or email [service@ampexgear.com](mailto:service@ampexgear.com).

PRODUCT CATEGORY	PRODUCT LIFETIME DEFINITION & TERM
Tents	Lifetime of the Product which, is Five (5) years from the original date of purchase of the Product by a customer from an AMPEX authorized dealer.

**LEARN MORE**

Scan to learn more and see detailed instructions:



[ampexgear.com/pages/instructions-for-tents](https://ampexgear.com/pages/instructions-for-tents)



Distributed by 120 Licensed Brands LLC, Overland Park KS 66223.  
 © 2022 120 Licensed Brands LLC. All Rights Reserved.  
 AMPEX is a trademark of Insight 2 Design LLC.

