

# **BACK BAR COOLER**


**LE125BB** 

**LE205BB** 

LE335BB

LE205SBB

LE335SBB

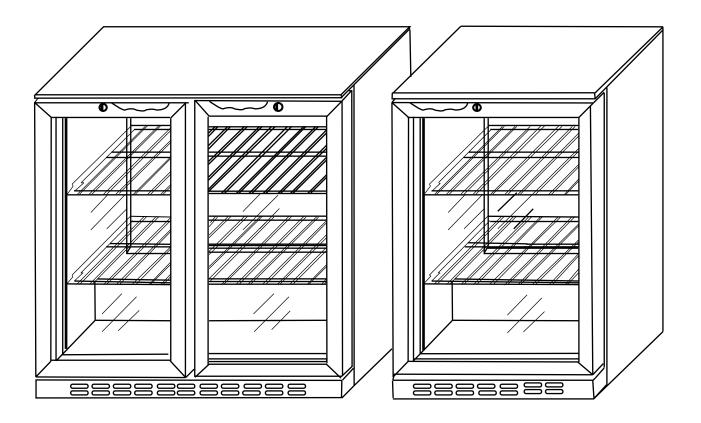

# **IMPORTANT SAFETY INSTRUCTIONS**

Read these instructions for use carefully before using the device. Observe all safety instructions, so as to avoid damage through improper use.

- 1. Keep this instruction manual for future use. Should this appliance be passed on to a third party, this instruction manual must be handed over.
- 2. This appliance is heavy. To prevent injury or damage to it, unpack and set up with two people.
- 3. Never use a damaged appliance! Disconnect the appliance from the mains outlet and contact your supplier, if it is damaged.
- 4. Connect and install this appliance in strict compliance with the relevant instructions in this manual.
- 5. Only use the appliance for its intended use. The appliance is intended for commercial use.
- 6. No responsibility is accepted for damage resulting from improper use or non-compliance with the instructions.
- 7. Only use the appliance indoors.
- 8. Danger of electric shock! Never try to repair the appliance yourself. Refer to qualified customer service outlet for maintenance and repairs.
- 9. Regularly check the power plug and power cord for damage. A damaged power cord has to be replaced by the manufacturer, his customer service or a similar qualified person in order to avoid danger of injury.
- 10. Before inserting the power plug into the mains outlet, check that the power supply voltage and current rating corresponds with the power supply details shown on the appliance rating label.
- 11. Avoid damage to the power cord. Do not squeeze, bend or scour on sharp edges. Keep away from hot surfaces and naked flames.
- 12. Please connect the earthing wire to the terminal of equipotentiality using a qualified technician.
- 13. For your safety, only connect the appliance with a properly earthed mains outlet. Unplug the appliance immediately if you get an electric shock when touching the appliance.




- 14. Do not pull on the power cord. Only pull on the plug. Do not wrap the power cord around the appliance.
- 15. This appliance must be earthed!

- 16. Securely route the power cord so that no unintentional pulling or tripping over it is possible.
- 17. Connect the power plug with an easy reachable mains outlet so that in case of an emergency the appliance can be unplugged immediately.
- 18. Only use original accessories.
- 19. The appliance is powered when connected to the power supply.
- 20. Warning! Do not insert any objects into the casing of the appliance.
- 21. Do not open the casing.
- 22. Do not obstruct or cover the ventilation openings. Keep the appliance well ventilated at all times.
- 23. Should the cover of the light or ventilator grill fall off or break, unplug the appliance immediately and contact qualified personnel for repairs.
- 24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 25. Children should be supervised to ensure that they do not play with the appliance.
- 26. Do not keep the key of the appliance lock near or within reach of children.
- 27. Do not touch the appliance with wet or damp hands. Do not operate the appliance with wet hands or standing on a wet floor.
- 28. Warning! During cleaning or operation do not immerse the appliance in water or other liquids. Do not clean the appliance with a garden hose.
- 29. Should water flow into the appliance, immediately unplug the appliance and let it be inspected by qualified personnel before using again.
- 30. Do not place combustible, explosive or volatile articles, corrosive acids or alkali in the appliance. Store high-proof spirits only in upright position and close them properly. Containers with flammable gases and liquids can leak at low temperatures and catch fire from electrical appliances' sparking. Danger of explosion!
- 31. Warning! This product is for food storage with containers. Do not place food without container.
- 32. Danger of fire! In event of refrigerant leakage, unplug the appliance, remove any ignition sources nearby, ventilate the room and contact your supplier. Avoid contact with the eyes as the refrigerant may cause serious eye injury. You can find details on the refrigerant on the rating label.

- 33. Do not accelerate the defrosting process by using mechanical devices, heating sources (candles or heaters) or other means. The emerging steam can cause short circuit and too high temperatures can damage the synthetic covering of the appliance.
- 34. Caution: Fire hazard
- 35. Warning keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for built-in.
- 36. Warning do not use mechanical devices or other means to accelerate to defrosting process ,other than those recommended by the manufacturer.
- 37. Warning do not damage the refrigerant circuit.
- 38. Warning do not use electrical appliances inside the food storage compartments of the appliance ,unless they are of the type recommended by the manufacture.

# **Controller Operation Instrction**

# 1. Display description

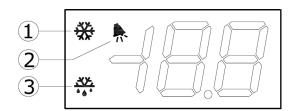

- 2 digits display(-88),3 characteristics(refrigeration,defrost,alarm)
- Refrigeration. Light on means the unit is in refrigeration mode, light blinking(1Hz) means refrigerating output delay.
- 2. Alarm. The controller will alarm when reaching set condition.
- 3. Defrost .Light on means the unit is defrosting.

Note: when setting parameters the alarm sign flashes at a speed of 2Hz.


# 2. Key description

There are 3 button SET,  $\bullet$ , to manipulate the controller.

# 2.1 SET button

In normal mode,press SET for more than 6s,you will access the menu of parameter 1,

press SET and at the same time you can access the menu of parameter 2.

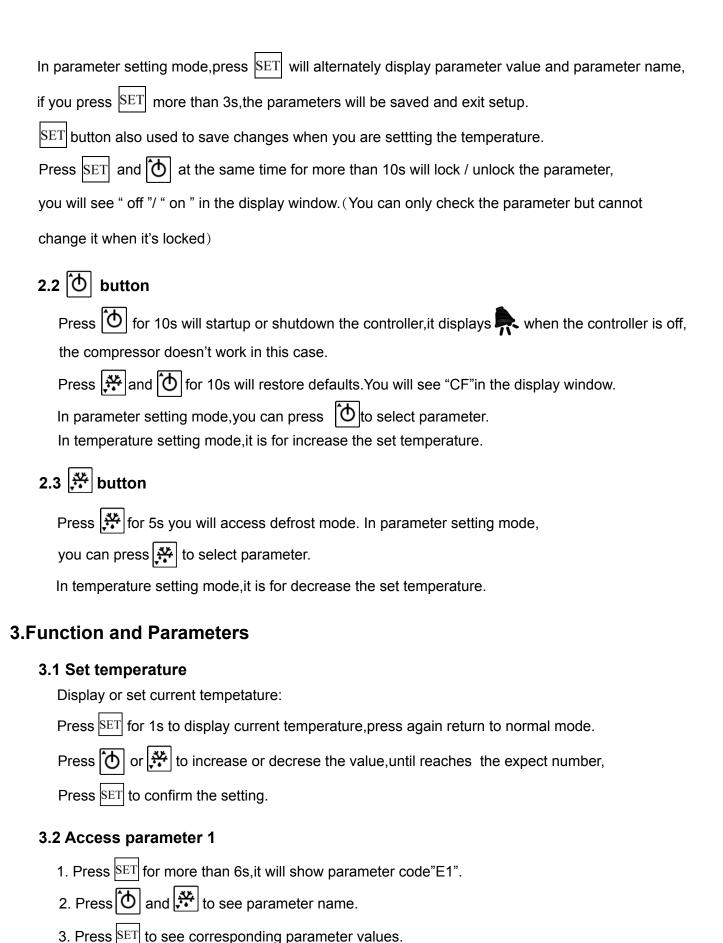

4. Press or to select parameters.

5. Press SET to save the modification.

- 6. If you want to modify other parameters, please repeat step2~5.
- 7. Press SET more than 3s, parameters will be saved and you will exit setup.

#### Note:

- 1. If you don't press any buttons in 10s, parameters (the value temporarily stored in RAM) you set before will not be saved. The parameters will be the previous settings.
- 2 .All value temporarily stored in RAM will lost if the controller blackout before you save the parameter. The parameters will be the previous ones when you restart.

# 3.3 Access parameter 2

- 1. Press SET and from more than 6s,it will show parameter code"F1".
- 2. Press on and to see parameter name.
- 3. Press SET to see corresponding parameter values.
- 4. Press or to select parameters.
- 5. Press SET to save the modification.
- 6. If you want to modify other parameters, please repeat step2~5.
- 7. Press SET more than 3s, parameters will be saved and you will exit setup.

#### Note:

- 1. If you don't press any buttons in 10s,parameters (the value temporarily stored in RAM) you set before will not be saved. The parameters will be the previous settings.
- 2. All value temporarily stored in RAM will lost if the controller blackout before you save the parameter. The parameters will be the previous ones when you restart.

### 3.4 Set the default parameters

Set the default parameters:

- 1. Press 🗱 and 🗖 and hold it until the power is on.
- 2. Loosen the buttons when you see "CF".

# 3.5 Sensor

Parameters	Description	Parameter type	Min	Max	Unit	Default
E5	sensor offset	1	-10.0	10.0	$^{\circ}$	0.0

# E5 sensor offset

This parameter is used to correct sensor of measuring temperature. The figure represents the sensor temperature plus (positive) or minus (negative) offset.

#### 3.6 Temperature control

Parameters	Description	Parameter typ	Min	Max	Unit	Default
SET	Set temperature	-	-40	80	°C	4.0
E1	Minimum temperature	1	-40.0	E2	°C	2.0
E2	Maximum temperature	1	E1	99.0	°C	8.0
E3	Range of temperature	1	1	20.0	°C	4.0

St Set temperature

Used to set working temperature's rest point

**E1** Minimum temperature

The minimum value allowed to be set(St)

**E2** Maximum temperature

The maximum value allowed to be set(St)

E3 Range of temperature

In cooling mode, when temperature <=St, compressor stops working; when temperature>=St+rd, compressor starts working.

### 3.7 Compressor protection

Compressor protection parameter:

Parameters	Description	Parameter type	Min	Max	Unit	Default
E4	Delay start time of compressor	1	0	10	Min	0

#### **E4 Minimum shutdown time**

It needs at least C1(Unit:Min)to make the compressor from shutdown to restart.

#### 3.8 Defrost

Parameters	Description	Parameter type	Min	Max	Unit	Default
F1	Defrosting time	2	1	80	Min	18
F2	Defrosting cycle	2	0	24	h	6
F4	Temperature display when defrosting	2	0	1	-	1
F6	Temperature locked when defrosting	2	1	30	-	10

**F1** Defrosting time

Time needed for defrosting

F2 Defrosting cycle

Intervals between two defrosting

When F2=0,the defrost fuction will be shutdown.

F4 Temperature display when defrosting

It displays current temperature while defrosting

When F4=0,it shows the temperature that sensor measures.

When F4=1,it shows the temperature when defrost begins.

How to return to normal display condition: after defrosting,

delay time after the F6, returning to normal temperature display.

#### 3.9 Abnormal work mode

When the probe short circuit or high temperature overrun(higher than  $99^{\circ}$ C),you will see "HH" When the probe open circuit or low temperature overrun(lower than -40 °C),you will see "LL" In this mode, the controller comes into timing work mode, compressor works for 45 minutes, rest for 15 minutes, and that cycle repeats.

# **BEFORE FIRST USE**

- Remove all packaging (→ Disposal of packaging).
- Check for completeness and transport damage. In case of damages or incomplete delivery please contact your dealer (→ Guarantee).
- Clean the appliance (→ Cleaning).
- Place the appliance on a horizontal and stable surface with a maximum incline of 5%.
- Do not expose parts which heat up. Try to position the appliance close to a wall, but leave enough space for ventilation to ensure good circulation and efficiency of the appliance.
- Keep the appliance away from any substance, which can cause ignition.
- · Do not position the appliance in direct sunlight or near any heat sources.
- · Protect the appliance from moisture, extreme heat or cold.
- Climate class of the appliance: 4. Please see the climate class and matched temperature range for reference:

Test room climate class	Dry bulb temperature	Relative humidity
rest room climate class	°C	%
1	16	80
2	22	65
3	25	60
4	30	55
5	40	40

- Never use an extension cord risk of overheating! If the power cord (4) does not reach the nearest mains outlet, either rearrange your store layout or ask qualified personnel to fit a new outlet.
- The appliance is fitted with castors (5), so that you can easily move it from one place to another. Two of four castors have brakes. Warning! Do not move the appliance across uneven floors or steps.
- If power is cut off, wait for at least 5 minutes before plugging the appliance in again to avoid damaging the compressor.
- Important! Allow the appliance to stand upright for 8 hours before connecting to a mains outlet for the first time, in order to allow the refrigerant to settle.
- The maximum load for a shelf (8) is 25kg.

# **CLEANING**

- Unplug your appliance and remove any products to a suitable back-up showcase before cleaning.
- Take out all removable parts before cleaning.
- Clean the inner compartment (9), equipment parts and casing (3) with dry cloth. Do not allow the control panel (7), power cord with plug (4), Ventilation opening (2), lamp (11) or other electrical components to become wet.
- Never use corrosive detergents, wire brushes, or abrasive scourers to clean your appliance.
- Never use metal or sharp implements to remove debris.
- Dry all surfaces thoroughly.
- · Use dry cloth to clean the gaskets and seals. Check them for debris to ensure the door (10) always closes properly.
- Do not remove or damage the rating label as it contains important data.

#### Replacing the lamp

- Please do not replace the lamp (11) yourself. Contact qualified personnel for this purpose.
- · Note: the specification of replacement lamp should be the same as the original one.

# **DISPOSAL INTRODUCTIONS**

#### Disposal of old appliances

- Disable discarded appliances by removing the plug and cutting through the power cord.
- Break any locks in order to avoid children and other persons becoming trapped. If possible, remove any doors and discard separately.
- Warning hazardous chemicals!Do not allow children to play with the old appliance.
- Do not damage the refrigerant circuit during storage and transportation of old appliances! Make sure that the evaporator pipes,
  refrigerant circuit and surface coverings are not damaged. Avoid contact with the eyes as the refrigerant may cause serious eye injury.
- Do not store old appliance near heat and ignition sources. In event of leakage the refrigerant of this appliance is highly inflammable.
- Please note: the refrigeration system contains gases and refrigerants which require specialist waste disposal.

#### Disposal of packaging

All packaging materials should be disposed of in an environmentally friendly way.

The cardboard may be used as scrap paper. The protective foil and the foam cushions are CFC - free.

Do not allow children to play with the packaging and destroy plastic bags safely.

You can break or cut the cardboard into smaller pieces and give to a waste paper disposal service.

#### **Environmental protection**

Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centres (if available).

#### **GUARANTEE**

A statutory guarantee applies for this product.

Claims must be submitted immediately after their determination.

The right to guarantee claims expires upon any intervention of the purchaser or third parties. Damages caused by wrong treatment or operation, by false placement or storage, improper connection or installation, as well as force or other external influences are not covered by this guarantee. We recommend careful reading of the operating instructions as it contains important information.

The purchaser must prove the right to guarantee claims by presentation of the purchase receipt.

#### Note:

- 1. In case this product does not function correctly, please firstly check if there are other reasons, e.g. interruption of the power supply, or incorrect handling are the cause.
- 2. Please note that the following documents need to be submitted together with your faulty product:
  - Purchase receipt
  - Model description/Type/Brand
  - Describe the fault and problem as detailed as possible

In the case of a claim for guarantee or defects, please contact the seller personally.

This product contains a light source of energy efficiency class G. Light source in this product is replaceable only by a professional.

Osass Australia Pty Ltd. PO Box 141, Waverley 2024