


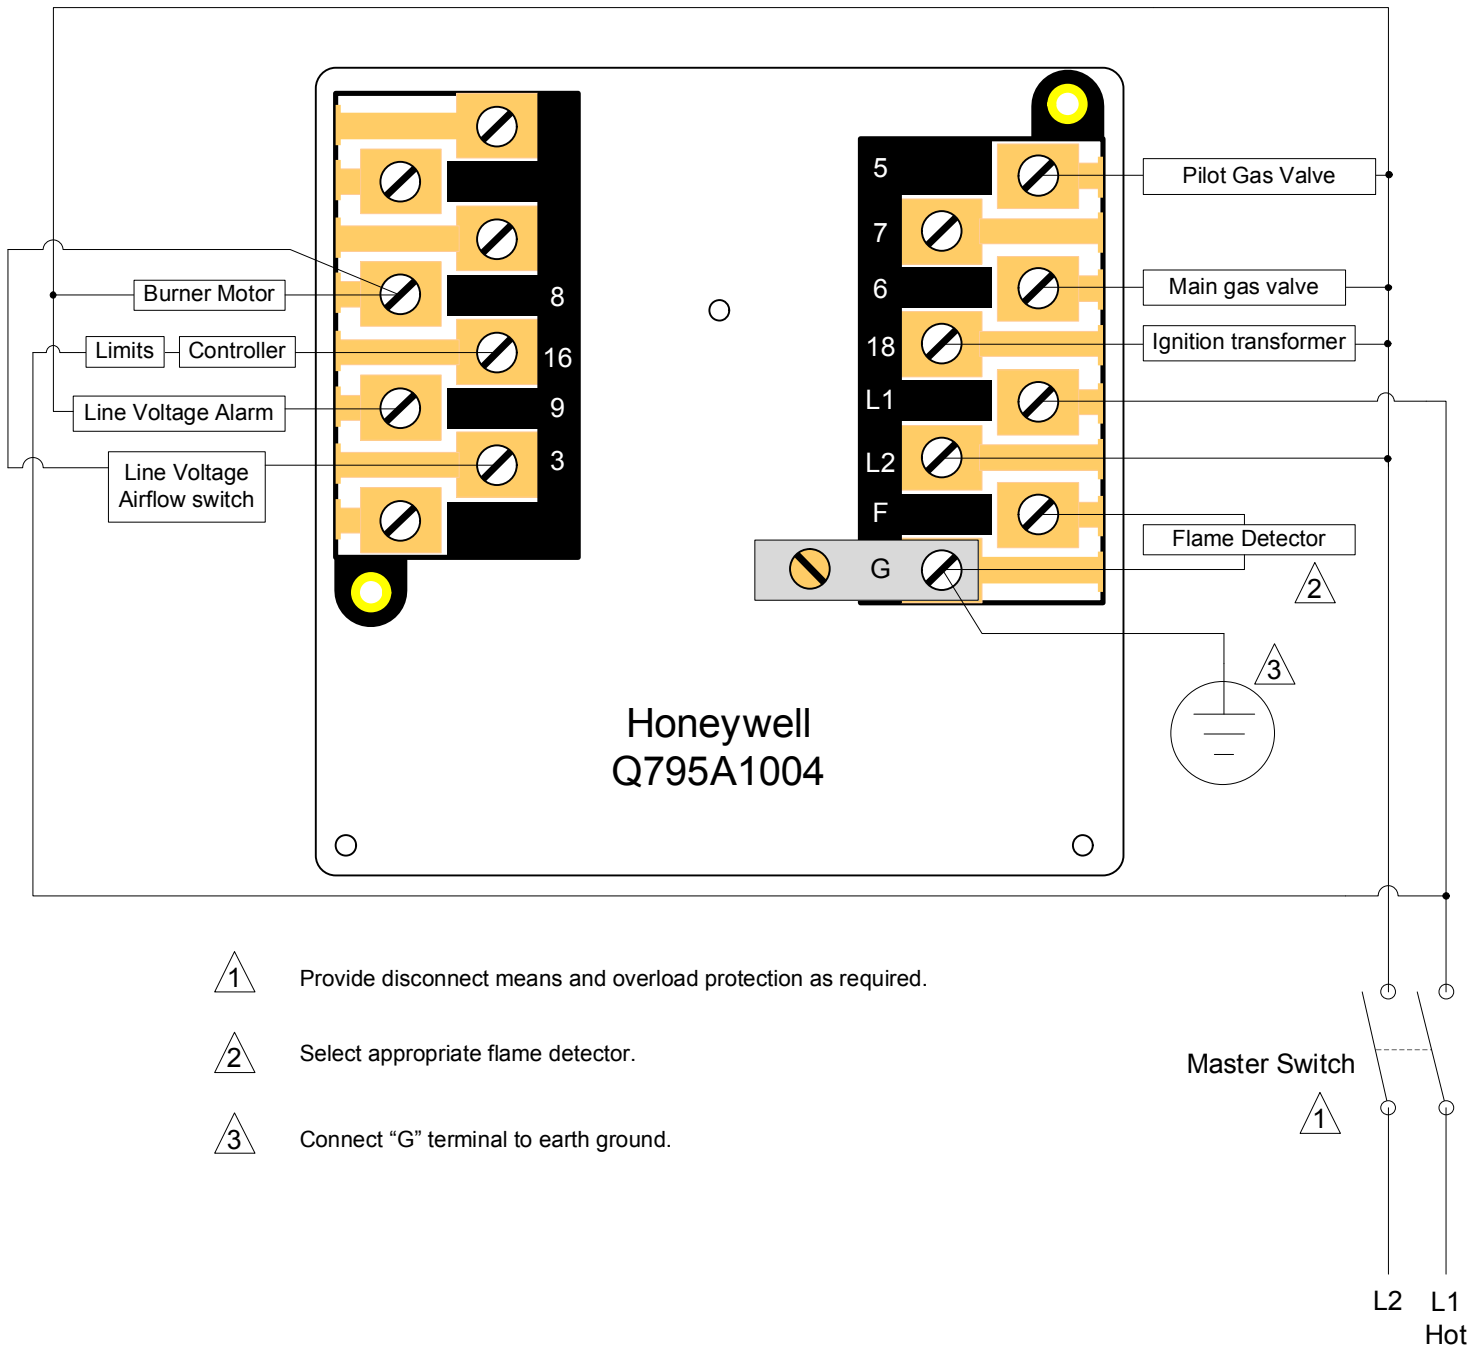

R7795B Wiring Schematic



See reverse side for RM7898A1000 wiring schematic & conversion table.





RM7898A1000 Wiring Schematic

See reverse side for R7795B wiring schematic

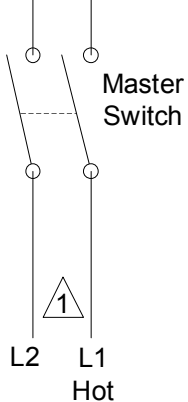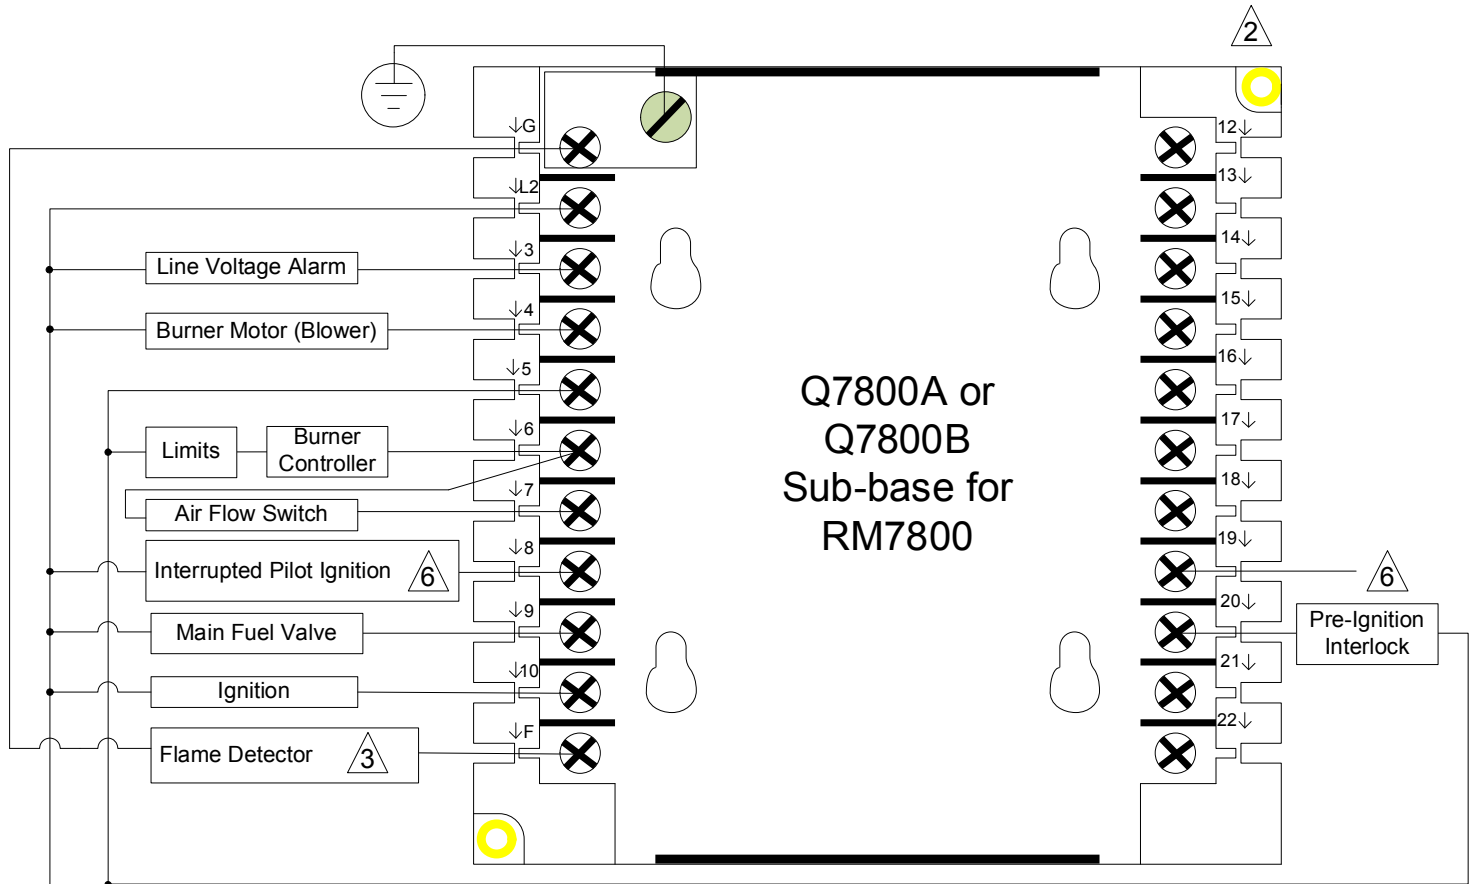

- 1 120V power supply. Provide disconnect means and overload protection as required.
- 2 Do not connect any wires to unused terminals.
- 3 See flame detection specifications for correct wiring.
- 4 Post Purge is programmed on startup using the ST7800A1142.
- 5 Pre Purge is dependent on which ST7800 timer is installed.
- 6 Provide line voltage input to terminal 19 for intermittent pilot operation.

R7795B to RM7898A1000 Conversion wiring chart

R7795B Terminal		RM78981000 Terminal	
G	(Ground)	G	(Ground)
L1	L1 Hot	5	L1 Hot
L2	Common	20	Pre-Ignition Interlock
F	Flame Detection	L2	Common
3	Air Flow Switch	F	Flame Detection
5	Pilot Gas Valve	6	Air Flow Switch
6	Main Gas Valve	8	Pilot Gas
8	Burner Motor	9	Main Gas Valve
8	Air Flow Switch	4	Burner Motor
9	Line Voltage Alarm	7	Air Flow Switch
16	Controller & Limits	3	Line Voltage Alarm
18	Ignition Transformer	6	Limits & Controller
		10	Ignition Transformer