


RA890F Wiring Schematic

See reverse side for RM7890B1048 wiring schematic & conversion table.

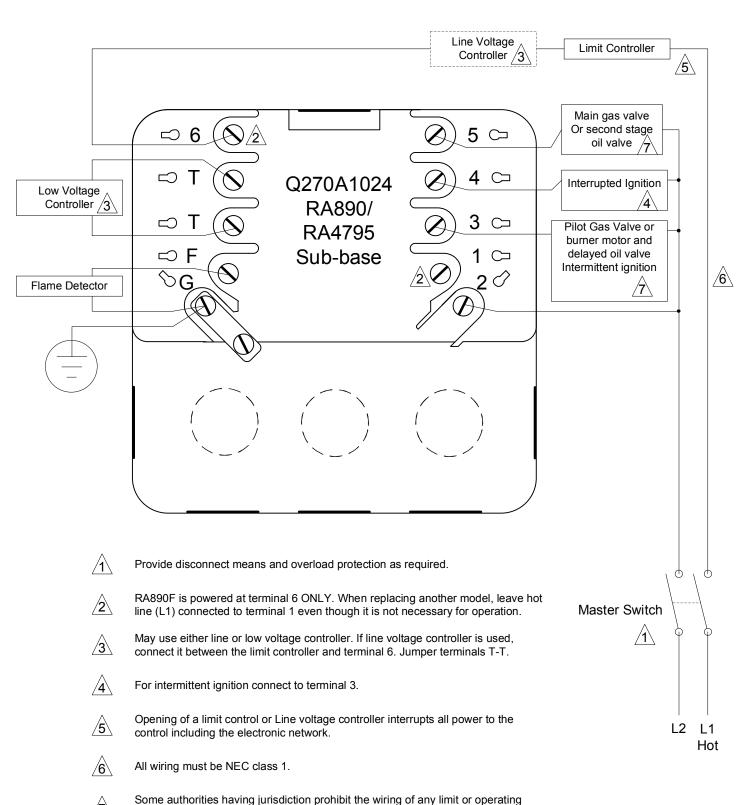

contacts in series with the main fuel valve(s).




Hot

6

RM7890B1048 Wiring Schematic

See reverse side for RA890F wiring schematic

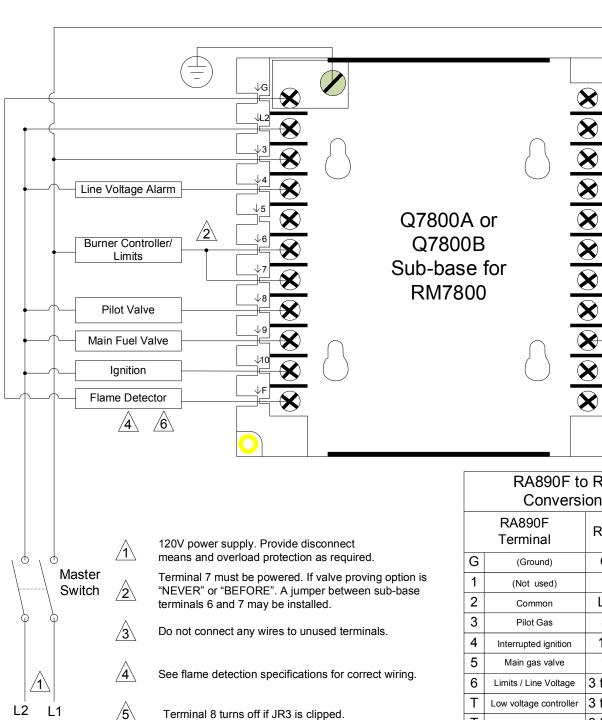

Terminal 8 turns off if JR3 is clipped.

Clip Jumper JR2 if using 3 second FFRT amplifier.

RA890F to RM7890B1048			
Conversion wiring chart			
RA890F Terminal		RM7890B1048 Terminal	
G	(Ground)	G	(Ground)
1	(Not used)		
2	Common	L2	Common
3	Pilot Gas	8	Pilot Gas
4	Interrupted ignition	10	Interrupted ignition
5	Main gas valve	9	Main gas valve
6	Limits / Line Voltage	3 to 6	Limits / Line Voltage *
Т	Low voltage controller	3 to 6	Controller **
Т	Low voltage controller	3 to 6	Controller **
F	Flame Detection	F	Flame Detection

∕3\

18↓

20↓

- * Separate limits from L1 power to terminals 3 to 6 on RM7890B. Connect L1 to terminal 3.
- ** Low voltage controller must be replaced with line voltage controller and placed in limit string between terminals 3 and 6