

Ecowell™
LULU™
QUICK CLEAN



4-IN-1

 
WET/DRY
VACUUM
& WASH

SKU#: P03
Model#: CL-2001

Quick Start Guide

LULU QUICK CLEAN SERIES: P03

Operation



- ▶ Start by pressing .
- ▶ After starting up, the mode defaults to the normal cleaning mode without water spraying.
- ▶ Press once to start small-scale water spray. Press the second time to start large-scale water spray. Press the third time to stop spraying water.



- ▶ Do not recline to protect against water leakage to the motor and to avoid affecting washing effect.



- ▶ Release the clean water tank and add clean water and adequate amount of the specified floor cleaning formula if applicable.



- ▶ When the dirty water tank is full of sewage and reaches the warning line, the appliance stops working. Please empty the dirty water tank.


Charging & Storage



- ▶ Only use Ecowell adapter.
- ▶ Full charging time: 5-6 hours.
- ▶ Charge 3 hours every 2 months in case of long-term storage.
- ▶ Store indoors in a dry place.

LULU QUICK CLEAN SERIES: P03

Digital Light

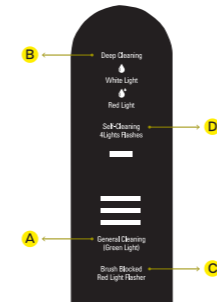


A. General Cleaning Mode (Green light)

B. Deep Cleaning Mode: Small-Scale (white light) Large-Scale (Red light)

C. Brush Blocked Indicator (Red Light Flashes)

D. Self-Cleaning Mode (4 Lights Flashes)

 Self-Cleaning

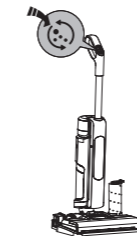

- ▶ Before and after the self-cleaning function, please clean out the sewage from the dirty water tank.
- ▶ Long press for 1 second to start the self-cleaning mode.
- ▶ After self-cleaning, the appliance will shut down automatically.
- ▶ Each cleaning time is 2 minutes and 5 seconds.

*It is recommended to clean the roller cover regularly after the whole appliance is used to keep it clean and tidy.

Ecowell™
LULU™
QUICK CLEAN

LULU QUICK CLEAN SERIES: P03

Notice:

- ▶ Do not use this product near or on the surface of flammable and explosive objects.
- ▶ Do not use this product near a working fireplace or heater.
- ▶ Do not use on high-temperature substances, ultra-fine substances, chemical materials, etc.
- ▶ Do not use this appliance to absorb oil, wine, etc.
- ▶ Do not use this appliance to pick up sharp objects, such as glass shards.



2-YEAR WARRANTY



MAINTENANCE TIPS



EXCLUSIVE DEALS

TO REDUCE THE RISK OF INJURY,
USER MUST READ INSTRUCTION MANUAL
BEFORE OPERATING PRODUCT.
PLEASE DO NOT RETURN TO STORE.
ALTON IS HERE TO HELP.

Alton Industry Ltd. Group
Manufactured by: Alton Industry Ltd.
Group
643 Innovation Dr., West Chicago, IL
60185

Helpline:
1-888-899-0146

For more information,
please visit:
www.ecowell.com