


Disabling Wi-Fi on TRTs

Note: If you are using a different router, you must use the owner's manual for that router to disable the Wi-Fi.

1. Connect computer ethernet cable to any numbered port on router.
2. Disconnect any internet cable.
3. Open web browser and in the URL bar type "192.168.0.1" and press "Enter".
4. If you get a "No Internet Connection" window, wait and this will change once the router is fully booted.
5. The login page will appear. Username and Password are both "admin".
6. Close the pop-up window.
7. Click on the "Wireless" tab.
8. Set configuration to "Manual".
9. Set Network Mode dropdown to "Disabled".
10. Click "Save Setting" and exit browser.

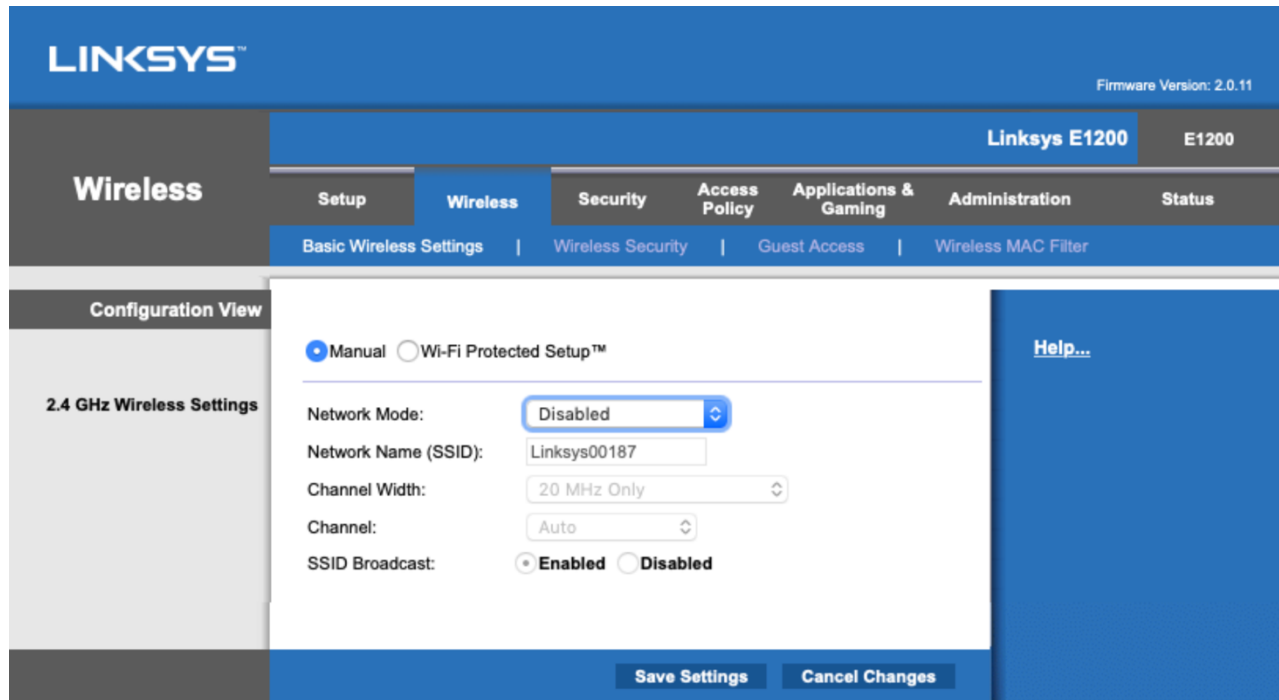

The screenshot shows the Linksys E1200 web interface. The top navigation bar includes the Linksys logo, the model name "Linksys E1200", and the firmware version "2.0.11". The main navigation menu has tabs for "Setup", "Wireless", "Security", "Access Policy", "Applications & Gaming", "Administration", and "Status". The "Wireless" tab is selected, and the sub-menu shows "Basic Wireless Settings" as the active page. On the left, there is a "Configuration View" sidebar with "2.4 GHz Wireless Settings" selected. The main content area shows the "2.4 GHz Wireless Settings" configuration. At the top, there are two radio buttons: "Manual" (selected) and "Wi-Fi Protected Setup™". Below this, the "Network Mode" dropdown is set to "Disabled". Other settings include "Network Name (SSID)" set to "Linksys00187", "Channel Width" set to "20 MHz Only", "Channel" set to "Auto", and "SSID Broadcast" set to "Enabled". At the bottom of the configuration area, there are "Save Settings" and "Cancel Changes" buttons.