


## Error Codes

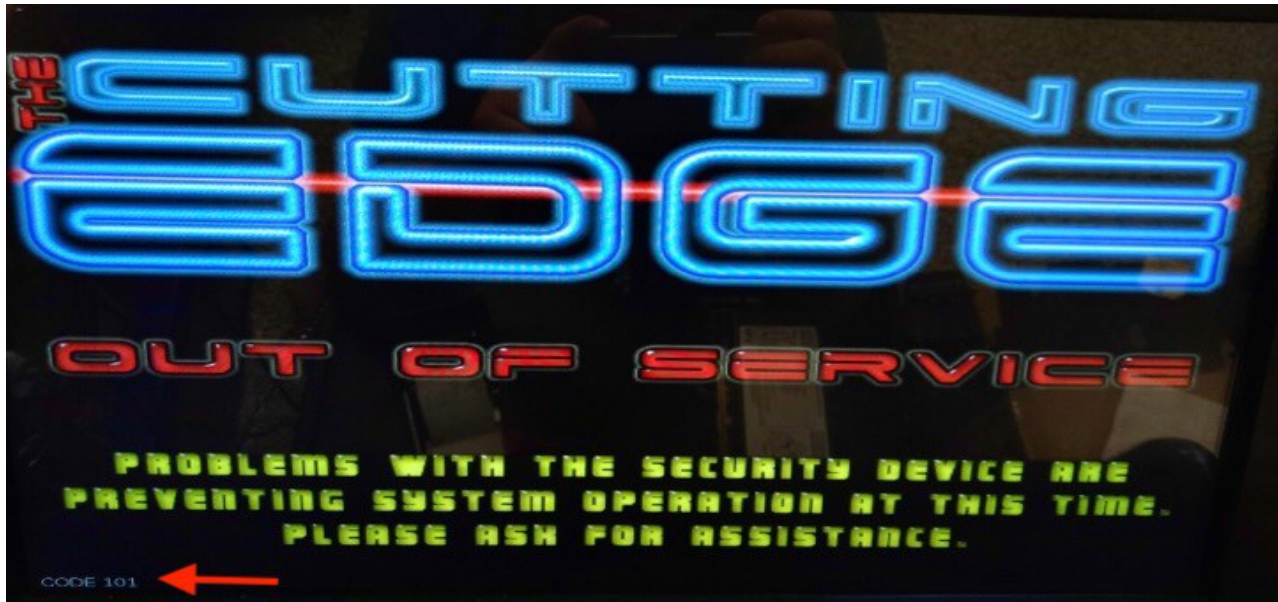

**Check connection to dongle and recycle power before proceeding to below solutions.**

Error	Problem	Solution
001	—	Bill Acceptor Issue, Usually Stacker
101	No Security Dongle	Reseat Dongle/Remove Dongle
102	Cannot Mount/RW	Reseat Dongle/Remove Dongle
103	Cannot Mount Squashfs Image Partitions	Reseat Dongle/Remove Dongle
104	Cannot Mount Persistence Partitions	Reload Software
105	Rootfs Checksum Bad	Try Reloading Software *Often Indicates Failing Hard Drive
106	Cannot Decrypt Rootfs	Reload Software
107	Cannot Mount Rootfs	Reload Software
108	Cannot Mount Rootfs Overlay	Reload Software
1001	Cannot Find Optfs Image	Try Reloading *Often Indicates RAM Issues
1002	Cannot get Decrypt Code from Dongle	Reseat Dongle/Remove Dongle
11##	Cannot Mount Optfs	Try Reloading Software *Often Indicates Failing Hard Drive
12## -13##	Cannot Create/Mount Persistence Overlay	Reload Software
2003	Cannot Mount Edge_Data	Try Reloading Software *Often Indicates Failing Hard Drive
2006	—	Reload Software