

User's Guide Iyvel GL3-REM

110V, 60Hz

Safety Instructions

1

IMPORTANT SAFETY GUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed.

READ ALL INSTRUCTIONS BEFORE USING

- For 120V 60Hz: Power supply must be a 15 Amp GFCI outlet.
- The electrical cord must be connected to a GFCI outlet.
- The GFCI outlet should be 1ft. above the floor.
- Install only in well-ventilated areas to avoid excess humidity.
- Do not install in narrow toilet stalls or in shower stalls.
- Install only where direct contact with water is minimized.
- Do not install near any heat source.
- Avoid using extension cords if possible. Consult with a certified electrician where extension cords are necessary.

DANGER – To reduce the risk of electrocution:

- Do not use while bathing.
- Do not place or store product where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for a product that has fallen into water. Unplug immediately.

WARNING – To reduce the risk of burns, electrocution, fire or injury to persons:

- Close supervision is necessary when this product is used by, on, or near children or handicapped individuals.
- Use this product only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Never operate this product if it has a damaged cord or plug, if it is not working properly, has been dropped or damaged, or dipped into water. Return the product to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening or hose.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Connect this product to a properly grounded outlet only. See grounding instructions.
- Unplug this product before filling. Fill (reservoir) with water only.

GROUNDING INSTRUCTION

DANGER - Improper use of the grounding plug can result in a risk of electric shock.

This product has a three-prong grounding plug, which must be plugged into an outlet that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. If repair or replacement of the cord or plug is necessary do not connect the grounding wire to either flat blade terminal.

The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire. Check with a qualified electrician or service person if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.

This product is for use on a nominal 120V circuit, and has a grounding plug that looks like the plug illustrated in sketch A in Figure 1.

A temporary adapter, which looks like the adapter illustrated in sketches B and C, may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available.

The temporary adapter should be used only until a properly grounded outlet (sketch A) can be installed by a qualified electrician.

The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by the screw.

 


Figure 1.


Optional Grounding Instructions



3

Installation & Trial operation


3 Fix the bracket onto the toilet first.

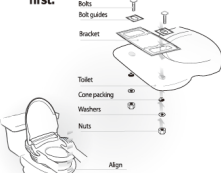

- Adjust the seat and the front part of toilet back and forth so that they can correspond well before fastening the nuts.

7 Remove the adhesive protection to attach the remote control bracket to the wall or other surface.

- Clean the area thoroughly before attaching the bracket.

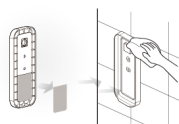

4 Push the main body toward the bracket completely.




- Push it in until it sounds 'click'
- When the product is not installed well, it may cause seat apart.

8 Insert four "AAA" type batteries (included) as indicated inside battery compartment.

- Identify a location in the bathroom for the remote control that is visible and reachable from the toilet.



5 After installing the T-valve, connect the bidet-use hose to the bidet body and turn on the water.

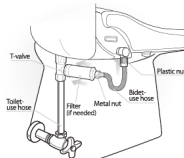


9 Be sure that the nozzle comes out and retracts when powered on.

- Don't plug the power cord with wet hands.
- Risk of electric shock.




6 Be sure of no leakage around the hose connection.

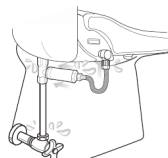


2

Parts & Configuration & Installation


Main Body

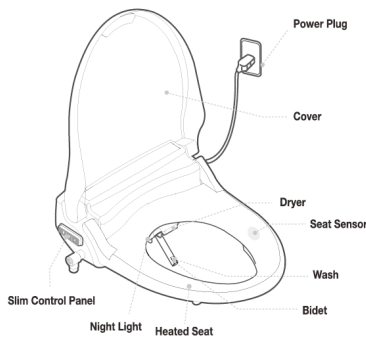

Accessories

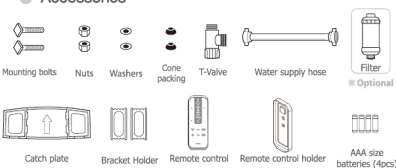

Remote Control Panel

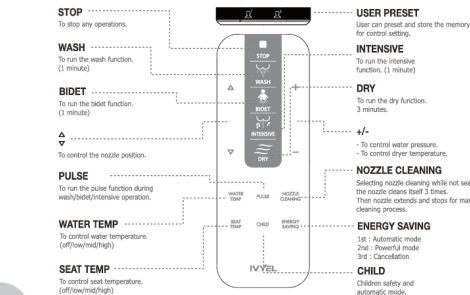


1 Remove the seat from the existing toilet body.

- Release the nuts, and then remove the seat and cover from it.
- Keep the removed seat, cover and nuts well in a proper place in case of using them again.
- Turn off the water.



2 Remove the water hose and then install T-valve.

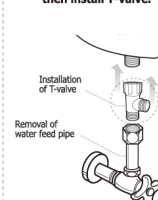


4

How to Use

1 Sit on the toilet seat

- Be sure to sit on the seat sensor. If the sensor is not occupied, all functions will not operate.

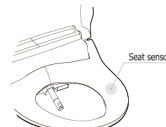

2 Wash, Bidet, Intensive

- Selected function can be used as described.
- When pressing the selected function again, nozzle will move back and forth to wash a wider range.
- Press the button once again to stop Massage function.
- SPECIALIZED water spray in Intensive function helps relieve constipation and fecal stasis.



5 Nozzle Position Control

- Nozzle position is adjustable. (5 levels)



6 Water Pressure Control

- Water pressure is adjustable. (5 levels)
- If the water or screen filters become blocked, it may cause low water pressure. Regularly check the screen filter.



3 Dry Temperature Control

- Dryer operates for 3 minutes.
- Dryer temperature is adjustable by pressing power (on) buttons. (5 levels)
- Dryer effect will be improved if you wipe the moisture lightly before operating the drying function.



7 Stop

- All operations will stop.
- When pressing the Stop button for 3 seconds, unit will turn off.
- Press any of Stop, Wash, Bidet or Intensive to turn on. All settings will be initialized.
- When pressing the Stop button on the side control panel for 5 seconds consecutively, the unit will be turned off and on automatically and initialized. All presets will be deleted.



4 Pulse

- When pressing the Pulse button during the operation of Wash, Bidet, and Intensive, water pressure will repeat high and low for smooth pulsating wash.
- Pulse function will not operate during the operation of Sitz bath.

Pulse

8 Child Function

- When selecting Child function, settings* will be adjusted for children.
- 1 min Bidet - 30 sec Bidet Oscillating - 30 sec Bidet Pulse - 2 min Dry work consecutively.
- * Settings: Extra extended nozzle position, Lower water pressure, Lower seat temperature, Lower water temperature.

Child

User's Guide Iyvel GL3-REM

120V, 60Hz

Thank you for purchasing the unit.
This unit should be installed according to this manual.
Read this manual carefully and install properly.
Do not attempt to service this unit yourself. Doing so could void your warranty.

IVYEL

How to Use

5

Seat Temperature Control

- Seat temperature is adjustable. (4 levels) (Off - Low - Middle - High)
- To reduce the chance of low temperature burns, the seat has a seat heater auto adjustment function which turns to low temperature (35°C, 95°F) when seat is occupied for more than 15 minutes consecutively.
If the seat is set lower than middle level, the seat will remain at off or low level.

SEAT TEMP

Energy Saving Function

- Automatic energy saving mode
- This mode will be activated by pressing the Energy Saving button until yellow LED lamp lights on. (Seat and water temperature will be kept at 32°C)
- Powerful energy saving mode
- This mode will be activated by pressing the Energy Saving button until green LED lamp lights on. (Seat and water heater will be kept off)
- Release of energy saving mode
- Press the Energy Saving button until LED lamp turns off.
- When the unit is occupied, it adjusts to the preset temperature and it returns to the saving mode when seat is unoccupied.
- If the seat and water temperature are off, they will remain off.

Sitz Bath

- Wash or Bidet is switched to Wash Sitz Bath or Bidet Sitz Bath if Nozzle Cleaning button is selected during Wash or Bidet operation.
- Water pressure is switched to 1st level regardless preset water pressure setting and Sitz Bath operates for 5 minutes.
- LED of Nozzle Cleaning turns on during the operation of Sitz Bath.
- Select the Nozzle Cleaning again to switch to normal Wash or Bidet.

NOZZLE CLEANING

Nozzle Cleaning

- When selecting Nozzle Cleaning while not seated, the nozzle cleans itself 3 times. Then nozzle extends and stop for manual cleaning process.
- Clean the nozzle with a brush and press STOP button after completion of manual cleaning.
- NOZZLE CLEANING will not operate if the seat sensor is activated.

NOZZLE CLEANING

Seat Sensor Release

- The seat sensor can be activated and deactivated by pressing Pulse button for 3 seconds.
- If the seat sensor is deactivated, the unit works without occupying the seat and features cannot be controlled.

Features
Night light, Silence mode, Nozzle cleaning.

PULSE

Precautions

Do not pull the nozzle out. It will cause malfunction. To see the nozzle, press on the "Nozzle Cleaning" button. The nozzle will stay out for two minutes and automatically go back in. Do not pull the nozzle with your hand. When cleaning the bidet, do not use an acidic detergent (Clorox, Benzene, Thinner, Windex, etc.) or wet wipes because the seat may discolor and cause the bidet plastic to harden and break. Clean only with neutral detergent or water. (Chemicals such as hair sprays and dyes may discolor the seat if they come in contact with the bidet.)



7

7-3. User preset

 
USER PRESET

- Nozzle position, water pressure, dryer/water/seat temperatures can be preset and stored for 2 different users. Wash and dry functions can only be set while seated on unit.
- SETTING PRESET 1: Set position, pressure, dryer/water/seat temperature to preference. Press STOP and FORWARD NOZZLE POSITION at the same time for 3 seconds. Press STOP or just wait. Red light will blink for 5 seconds.
- SETTING PRESET 2: Set position, pressure, dryer/water/seat temperature to preference. Press STOP and BACKWARD NOZZLE POSITION at the same time for 3 seconds. Press STOP or just wait. Red light will blink for 5 seconds.

NOTE: Changing batteries will not retain remote settings.

CHOOSING USER PRESET

- Press selected preset user 1 or 2 on top to activate preset nozzle position, water pressure, and temperatures.




Comparison Chart

9

	Features	Iyvel GL3-REM
Wash / Dry features	Wash	•
	Bidet	•
	Child	•
	Dry	•
Convenient / Comfortable features	Normal / Powerful energy saving	•
	Oscillating / Pulsating	•
	Continuous heated water	•
	Heated seat	•
	Soft closing	•
	One touch release	•
	Nozzle cleaning	•
	Seat sensor release	•
	Night Light	•
	Remote control	•
Safety features	Low burn protection	•

Dimensions inch(mm)

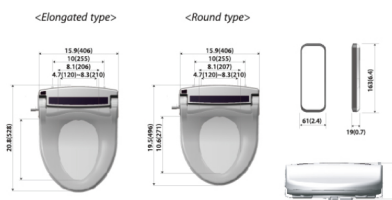


Maintenance & Cleaning

6

Screen Filter Cleaning


- Close the water valve.
- Disconnect the water supply hose. Take the screen filter out and clean it with a soft brush.
- Return the filter after cleaning and reconnect the water supply hose.
- Open the water valve.

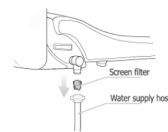

Maintenance during Winter Season

When bidet seat is not used for an extended period of time, either;

- Leave unit plugged in and turned on OR Unplugged and drain the unit.

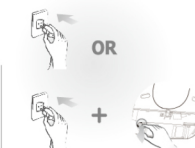


Cleaning of Unit Body

- Exterior surface of unit is made of plastic material, which may be damaged by scrubber, chemicals, etc.
- Wipe the surface with a soft damp cloth. Do not spray water directly onto the surface.
- Clean the body after removing the power plug from the outlet. Be sure no water splashes into the power plug or outlet.
- Be careful of not dropping any chemical detergents of toilet cleaner on the water supply hose. Risk of the hose damage.



Draining of Remaining Water

- Remove the power plug from the outlet.
- Close the water feed valve.
- Press the lever plate and gently pull to remove the unit from the catch plate.
- Use a coin to open the drain plug.

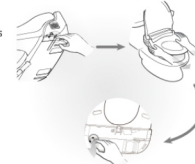

Settings

7

7-1. User setting with the remote control

○ : Seat sensor 'on' status ◐ : Regardless of on/off

No	Function	Seat status	Switch operation	Description	Initial status
1	Silent mode	◐	" - " for longer than 3 seconds.	To turn on/off the operating chime sound.	ON
2	Seat sensor release	◐	" + " for longer than 3 seconds.	Seat sensor feature will be deactivated.	OFF
3	Night light	◐	" + " for longer than 3 seconds.	To on/off the night light.	ON

7-2. User setting with the side control (auxiliary panel)

No	Function	Seat status	Switch operation	Description	Initial status
1	Factory default setting	◐	" ■ " for longer than 5 seconds.	Press one of Stop, Wash or Bidet to power on.	
2	Sleep mode	◐	" ■ " for longer than 3 seconds.	The unit will be in sleep mode. Press any of " ■ " and " ■ " turn on.	OFF

- * The unit will work without sitting on the seat if the occupied seat sensor is deactivated. (turned off)
- * If the seat sensor is deactivated, some features cannot be controlled. (Night light on/off, silent mode on/off and nozzle cleaning)
- * Above features are deactivated with 1 buzzer sound and activated with 2 buzzer sounds.

8

Troubleshooting

※ Please check the following points before requesting the repair service.

Problem	Check list
Completely out of order	<ul style="list-style-type: none"> Check if the power plug is not connected. Check if the power supply or outlet is failed.
Water does not spray out	<ul style="list-style-type: none"> Check if the water supply is turned on. Check if water valve is locked. Check if nozzle is blocked by foreign material. Check if connection hose is bent.
Water pressure is low	<ul style="list-style-type: none"> Check if screen filter is blocked by foreign material. Check if the water pressure is set at too low level.
Water is not warm enough	<ul style="list-style-type: none"> Check if its temperature is set at off or low level.
Seat is not warm enough	<ul style="list-style-type: none"> Check if its temperature is set at off or low level.

Specifications

10

Item	Iyvel GL3-REM
Rated voltage	AC 120V, 50Hz
Max. Power consumption	870W
Power cord length	1.2m
Water feed method	Directly connected to water pipe
Recommended inlet water pressure	99~106.6psi
Feed Volume	Wash 0.13~0.21gal/min Bidet 0.13~0.18gal/min Child 0.13~0.16gal/min
Pressure control	5 levels
Temperature control	4 levels (off-low-middle-high)
Heater capacity	800W
Safety device	Water level sensor, Thermal fuse, Bi-metal, Temperature sensor
Heated seat	Temperature control 4 levels (off-low-middle-high) Heater capacity 55W Safety device Thermal fuse
Dry	Temperature control Room temp. ~ 122°F Heater capacity 250W Safety device Thermal fuse, Bi-metal
Feed water temp. tolerance range	37 ~ 95°F (recommended 54 ~ 95°F)
Usage room temp. tolerance range	37 ~ 104°F (recommended 50 ~ 95°F)
Dimension	Elongated 15.9"(406) x 20.8"(528) x 5.7"(145) Round 15.9"(406) x 19.5"(496) x 5.7"(145)
Weight	Elongated 10.8 lb (15.7) Round 10.4 lb (15.4)

- WARRANTY -

- We hereby guarantee the product as follows in accordance with the regulation of consumer damage compensation.
- In case of failure of the product, please inform the distributor where you purchased the product.
- Product Warranty will be effective for one year from date of purchase.

Product Name	Warranty Period
Model Name	One (1) year since the date purchased
Date Purchased	
Serial number	
Customer's Address	Name
	Tel. No.
Distributor's Address	Name
	Tel. No.

Regarding Product Warranty Regulation.

- We will repair the product at free of charge in case it was failed under the normal operating condition in accordance with the user guide during the warranty period.
- Although it is within the warranty period, we will charge the repair service fee etc. (repair + product + travel expense) if it falls under the following cases.
- Voiding warranty
- Defects occurred from the user's careless handling
- Defects occurred from the use with incorrect power voltage (E.g. 220V was used to the 110V product.)
- Defects occurred from the improper repair done by the person other than our service engineer.
- Defects occurred from Force Majeure (fire, salt, flood, etc.)
- Failure or damage due to the drop, etc. (user's mis-handling) during the operation after installed
- Defect occurred from the interior modification at user's discretion
- In case the life cycle of the part expired

Mail, email or fax the warranty form to:

YOUR LOCAL DEALER FIRST where you bought this appliance

If your dealer is unable to assist you

IVYEL

Head Office & Factory :
12145 Mora Dr. #4, Santa Fe Springs CA 90670
www.ivyeshop.com / Email: info@ivyeshop.com