

Safety Instructions

1

IMPORTANT SAFETYGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed.

READ ALL INSTRUCTIONS BEFORE USING

- For 120V 60Hz: Power supply must be a 15 Amp GFCI outlet.
- The electrical cord must be connected to a GFCI outlet.
- The GFCI outlet should be 1ft. above the floor.
- Install only in well-ventilated areas to avoid excess humidity.
- Do not install in narrow toilet stalls or in shower stalls.
- Install only where direct contact with water is minimized.
- Do not install near any heat source.
- Avoid using extension cords if possible. Consult with a certified electrician where extension cords are necessary.

DANGER – To reduce the risk of electrocution:

- Do not use while bathing.
- Do not place or store product where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for a product that has fallen into water. Unplug immediately.

WARNING – To reduce the risk of burns, electrocution, fire or injury to persons:

- Close supervision is necessary when this product is used by, on, or near children or handicapped individuals.
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this product if it has a damaged cord or plug, if it is not working properly, has been dropped or damaged, or dipped into water. Return the product to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening or hose.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Connect this product to a properly grounded outlet only. See grounding instructions.
- Unplug this product before filling. Fill (reservoir) with water only.

GROUNDING INSTRUCTION

DANGER - Improper use of the grounding plug can result in a risk of electric shock.

This product has a three-prong grounding plug, which must be plugged into an outlet that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. If repair or replacement of the cord or plug is necessary do not connect the grounding wire to other flat blade terminal.

The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire. Check with a qualified electrician or service person if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.

This product is for use on a nominal 120V circuit, and has a grounding plug that looks like the plug illustrated in sketch A in Figure 1.

A temporary adapter, which looks like the adapter illustrated in sketches B and C, may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available.

The temporary adapter should be used only until a properly grounded outlet (sketch A) can be installed by a qualified electrician.

The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by the screw.

 


Figure 1.

 
Optional Grounding Instructions




2

Parts & Configuration & Installation


Main Body

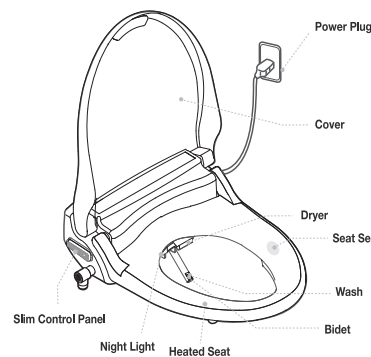

Accessories

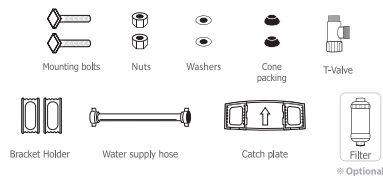 

Remote Control Panel

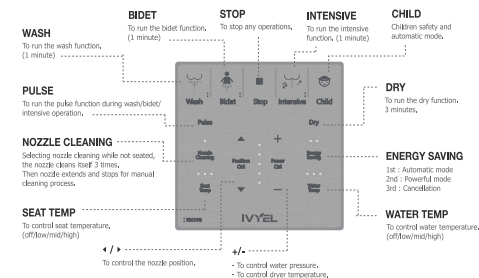 


3

1 Remove the seat from the existing toilet body.

- Release the nuts, and then remove the seat and cover from it.
- Keep the removed seat, cover and nuts well in a proper place in case of using them again.
- Turn off the water.



 
2 Remove the water hose and then install T-valve.

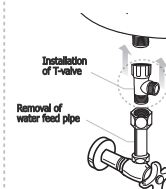

3

Installation & Trial operation

 3 Fix the bracket onto the toilet first.

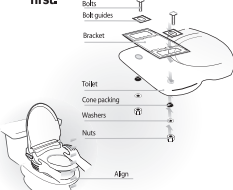


- Adjust the seat and the front part of toilet back and forth so that they can correspond with before fastening the nuts.

4 Push the main body toward the bracket completely.




- Push it in until it sounds 'click'.
- When the product is not installed well, it may cause seat apart.

 5 After installing the T-valve, connect the bidet-use hose to the bidet body and turn on the water.

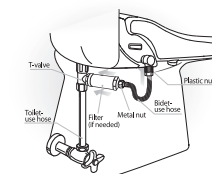


 6 Be sure of no leakage around the hose connection.

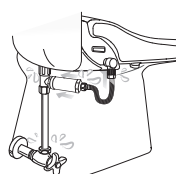


7 Remove the adhesive protection to attach the remote control bracket to the wall or other surface.

 - Clean the area thoroughly before attaching the bracket.

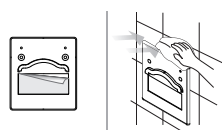

8 Insert two "AA" type batteries (included) as indicated inside battery compartment.

 - Identify a location in the bathroom for the remote control that is visible and reachable from the toilet.



9 Be sure that the nozzle comes out and retracts when powered on.

- Do not plug the power cord with wet hands. Risk of electric shock.

 


4

How to Use

1 Sit on the toilet seat

- Be sure to sit on the seat sensor. If the sensor is not occupied, all functions will not operate.

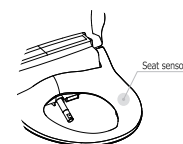


2 Wash, Bidet, Intensive

- Selected function can be used as described.
- When pressing the selected function again, nozzle will move back and forth to wash a wider range.
- Press the button once again to stop Message function.
- SPECIALIZED water spray in Intensive function helps relieve constipation and fecal stasis.



3 Dry Temperature Control

 - Dryer operates for 3 minutes.
- Dryer temperature is adjustable by pressing power ctrl buttons, (5 levels)
- Dryer effect will be improved if you wipe the moisture lightly before operating the drying function.



4 Pulse

- When pressing the Pulse button during the operation of Wash, Bidet, and Intensive, water pressure will repeat high and low for smooth pulsating wash.
- Pulse function will not operate during the operation of Sitz bath.

*See how to use section 5-14 for Sitz bath.



5 Nozzle Position Control

- Nozzle position is adjustable, (5 levels)



6 Water Pressure Control

- Water pressure is adjustable, (5 levels)
- If the water or screen filters become blocked, it may cause low water pressure. Regularly check the screen filter.



7 Stop

- All operations will stop.
- When pressing the Stop button for 3 seconds, unit will turn off.
- Press any of Stop, Wash, Bidet or Intensive to turn on. All settings will be initialized.
- When pressing the Stop button on the side control panel for 5 seconds consecutively, the unit will be turned off and on automatically and initialized. All presets will be deleted.



8 Child Function

- When selecting Child function, settings* will be adjusted for children.
- 1 min Bidet - 30 sec Bidet Oscillating - 30 sec Bidet Pulse - 2 min Dry work consecutively.
- * Settings: Extra extended nozzle position, Lower water pressure, Lower seat temperature, Lower water temperature.



