

Thermal copy machine for tattoo

-user manual-



Thank you for purchasing our PELCAS Transfer Tattoo Machine. Please read the manual before using it to help you better use it.

Main engine



Operation Panel Introduction

MIRROR: The key shifts between two kinds of function: Mirror
PHOTO: The key shifts between two kinds of resolution: PHOTO and FINE. When the resolution is PHOTO, the photo light works.

DEEPNESS I: The key is to set the copied documents by DEEPNESS I. When the DEEPNESS I works, the DEEPNESS II light goes off.

DEEPNESS II: The key is to set the copied documents by Deepness II. When Deepness II works, Deepness I goes off.

COPY: The key is to start the copy function.

STOP: The key is to stop the copy function

POWER: The light indicates that the machine is prepared for working.

ERROR: The light is to show that something wrong happened on the machine. When the TPH is Overheating, the light goes on.



2

START OPERATION

Insert the power plug into an available power outlet. When the machine is in the standby situation, the sound "doo" will be heard. All the parameters items can be set up when the machine is under the standby situation.

TRANSFER PAPER OPERATION



1. Open the transfer paper cover.



2. Throw away the stencil paper (between white paper and blue paper). Keep the white paper top. Independently, pull the yellow paper through the input mouth and stop as the white and blue paper exceeds the output mouth.



3. Close the transfer paper cover.

3

Copy

Please set relevant parameters before transfer :

1. Please insert the transfer paper as above
2. The writing surface of the document should be placed face down at the entrance, please press the (COPY) button to copy.
3. If you want to copy more pages, insert another page before the end of the tone. After copying, the machine will remain in standby mode.

Notice

1. Since preheating must be performed before mirror copying, the black print head on the cover must be placed on the top printing paper to prevent black marks from being left on the surface of the paper.
2. If you want to interrupt copying during copying, please press the "Stop" button.
3. Press the "ERROR" button immediately when there is a warning or an error light is on

Technische Daten

TYPE	Transfer Machine
SCANNING MODE EFFECTIVE	CIS
SCANNING WIDTH SCANNING	210mm
RESOLUTION HORIZONTAL	
VERTICAL DOCUMENTTYPE	8 dot/mm 7.7line/mm
DOCUMENT SIZE DOCUMENT	FINE/PHOTO A5 ~ A4
THICKNESS RECORDING MODE	0.06mm ~ 0.15mm
EFFECTIVE PRINTING WIDTH	TPH
POWER	210mm
POWER CONSUMPTION	AC110V ~ 240V 50Hz ~ 60 Hz /0.46A
ENVIRONMENT CONDITION	5°C ~ 35°C
WORKING TEMPERATURE	20% ~ 80%
RELATIVE HUMIDITY WEIGHT	1.67Kg
CUBAGE	292 mm(W)X225 mm(D)X84mm(H)

If you have any question about the product, please feel free to contact us via service@pelcas.com.

4