 


# CALLAWAY 200 PRO LASER RANGEFINDER


## QUICK START

### HOW TO USE

1. While looking through the **Eye Piece**, **PRESS & RELEASE** the **Power Button**. The rangefinder is now powered on.



2. To focus/increase clarity, use the **Diopter Adjustment** by turning the **Eye Piece**.

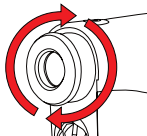


3. Continue looking through the **Eye Piece**, aim the **Zero-In Aiming Square** at your intended target & **PRESS** the **Power Button**. The laser will fire and the **Laser Indicator Box** will appear around the **Zero-In Aiming Square**. The measurement will be displayed at the top of the LCD display.




### RANGEFINDER DIAGRAM

- A. Eye Piece
- B. Diopter Adjustment
- C. Power Button
- D. Battery Door

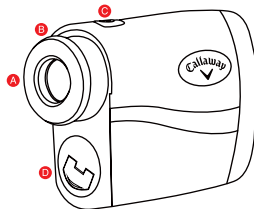

### LCD DISPLAY


- A. Zero-In Aiming Square
- B. Laser Indicator Box
- C. P.A.T. Mode Indicator
- D. Pulse Indicator
- E. Distance
- F. Unit of Measure
- G. Low Battery
- H. Slope Adjusted Distance

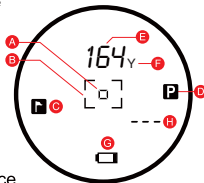

To view complete user manual visit: [www.CallawayDMD.com/product-support](http://www.CallawayDMD.com/product-support)

## MEASUREMENT MODES

- 1. Standard** - Standard Mode is recommended when measuring distances to larger objects. (Fig. A)
- 2. P.A.T. with Pulse Technology** - P.A.T. Mode is best used when measuring the distance to a Flagstick or smaller objects. Device will provide a short vibration to confirm that the laser has locked on to the pin. To toggle between Standard and P.A.T Mode, quickly **PRESS** the **Power Button Twice** while device is powered on. When P.A.T. Mode is activated, the flagstick icon will appear on the left side of the LCD display (Fig. B). To deactivate Pulse, **HOLD** the **Power Button** for 6 seconds.

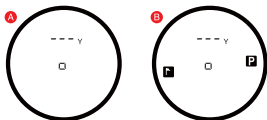

- 3. Scanning** - To measure distances to multiple targets in succession, **PRESS** and **RELEASE Power Button** to power on. Then **HOLD Power Button**, the **Laser Indicator Box** will flash and the laser will continuously fire. Measurements will change as you scan the landscape and change targets.

**NOTE:** While scanning in P.A.T. Mode, the measurement will only change when a shorter distance is measured. This is useful when measuring the distance to a flagstick when there are trees or other objects in the background.

### 4. To turn Slope Measurement On/Off:

**NOTE:** The slope measurement & adjusted yardage will appear in the bottom right corner of the LCD display when the function is enabled.

1. With the unit off, **HOLD** the **Power Button** for **three seconds** until the slope function appears in the bottom right corner of the LCD display. Once the slope function appears, **RELEASE** the **Power Button**.
2. Repeat this process if you need to turn The Slope Measurement off. The Slope function will not appear unless enabled.
5. **Unit of Measure** - To change the unit of measure from Yards to Meters, start with the device powered off. Then **HOLD** the **Power Button** for 7 sec. The unit of measure is indicated by a "Y" or "M" shown directly to the right of the distance displayed.