 
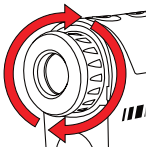 
 


HOW TO USE


1. While looking through the **Eye Piece**, **PRESS & RELEASE** the **Power Button**. The rangefinder is now powered on.
2. To focus/increase clarity, use the **Diopter Adjustment** by turning the **Eye Piece**.
3. Continue looking through the **Eye Piece**, aim the **Zero-In Aiming Square** at your intended target & **PRESS** the **Power Button**. The laser will fire and the **Laser Indicator Box** will appear around the **Zero-In Aiming Square**. The measurement will be displayed at the top of the LCD display.

**RANGEFINDER DIAGRAM**

 - A. Eye Piece
- B. Diopter Adjustment
- C. Power Button
- D. Mode Button
- E. Battery Door


**LCD DISPLAY**

- A. Zero-In Aiming Square
- B. Laser Indicator Box
- C. P.A.T. Mode Indicator
- D. Pulse Indicator
- E. Distance
- F. Unit of Measure
- G. Low Battery
- H. Slope Adjusted Distance

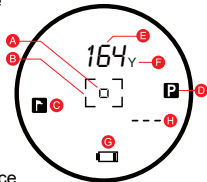

MEASUREMENT MODES

 - 1. Standard** - Standard Mode is recommended when measuring distances to larger objects. (Fig. A)
- 2. P.A.T. with Pulse Technology** - P.A.T. Mode is best used when measuring the distance to a Flagstick or smaller objects. Device will provide a short vibration to confirm that the laser has locked on to the pin. To toggle between Standard and P.A.T. Mode, quickly **PRESS** the **Mode Button** once while device is powered on. When P.A.T. Mode is activated, the flagstick icon will appear on the left side and the Pulse icon will appear on the right side of the LCD display (Fig. B). To deactivate Pulse, **HOLD** the **Mode Button** for 5 seconds.



- 3. Scanning** - To measure distances to multiple targets in succession, **PRESS** and **RELEASE Power Button** to power on. Then **HOLD Power Button**, the **Laser Indicator Box** will flash and the laser will continuously fire. Measurements will change as you scan the landscape and change targets.

NOTE: While scanning in P.A.T. Mode, the measurement will only change when a shorter distance is measured. This is useful when measuring the distance to a flagstick when there are trees or other objects in the background.

4. To turn Slope Measurement On/Off:

NOTE: The slope measurement & adjusted yardage will appear in the bottom right corner of the LCD display when the function is enabled.

1. With the unit off, **HOLD** the **Mode Button** for **three seconds** until the slope function appears in the bottom right corner of the LCD display. Once the slope function appears, **RELEASE** the **Mode Button**.
2. Repeat this process if you need to turn The Slope Measurement off. The Slope function will not appear unless enabled.
5. **Unit of Measure** - To change the unit of measure from Yards to Meters, start with the device powered off. Then **HOLD** the **Mode Button** for 7 seconds in P.A.T. Mode (5 seconds in Standard Mode) The unit of measure is indicated by a "Y" or "M" shown directly to the right of the distance displayed.

Caution: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.