





Replacing and Installing Grand 20 Apple Wi-fi Remote Control.


Step	Description	Tools	Picture
	Models that Apply: Elite Grand 4, 5, 5-LE, Pickle 3 Champion		
	<p>Unscrew the (4) screws that attach the control panel to the red case.</p>  <p>Control Panel - Open</p>		 <p>Control Panel - Open</p>
	<p>Take the plastic cover off of the Velcro, and stick it on the Left side of the case. (With the wires pointing toward the control panel).</p> 		 <p>Receiver being placed on Left hand side of the Red Case.</p>

Replacing and Installing Grand 20 Apple Wi-fi Remote Control.

Plug the Wi-Fi red and white wire (coupling) with the female 4-pronged housing.




Connect the 3 pinned black and Green wire to the 3 pinned slot on the control panel titled “J6”.

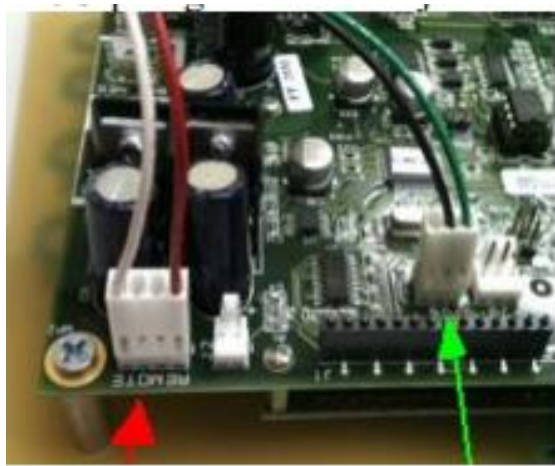

Remote spot on control panel.



Remote Receiver connected to Remote terminal on control panel.

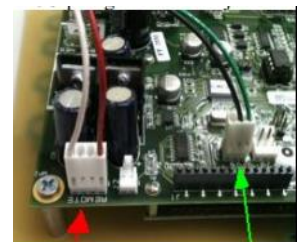

3 Pronged J6 connection on control panel.

Replacing and Installing Grand 20 Apple Wi-fi Remote Control.

Screw the control board back onto the case.



Control Panel - Open



Control Panel - Open

Please follow the instructions below to Test the Wi-Fi.

Note:

Make sure your Control Panel has Software version:
1.207.11, 1.214.11, or 1.218.34.

Go to settings and click on “Wi-Fi” connections.
Your device will detect the network called “**LobsterSports-xx**”. Select this network. *Note: xx is a number unique to your machine.*

For this network, press the > to adjust its settings:

- a) Make sure your device is set up to detect “LobsterSports-xx” automatically by setting your ‘AutoJoin’ button to ON.
- b) Click on your Lobster Remote icon on your iPhone/iPad device. Please allow anywhere from 30 seconds to 1 full minute for your machine and phone to properly acknowledge each other! Your Lobster app will tell you when you are ready to go.