



Motor Wire Connections

This guide will show the wires with a lower-case letter, and the image of where these wires connect to on the new panel in Capital letters. Each lower-case letter matches its Capital version on the wire connection diagram.

EL03

Motor Connections


a. Top Server Motor (marked in Red)



b. Bottom Server Motor (marked in Blue)






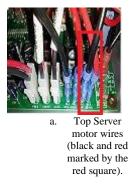



b. Bottom Server Motor (marked by a blue square).

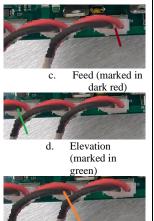


e. Sweep (marked in orange)



d. Elevation Motor (marked in Green)




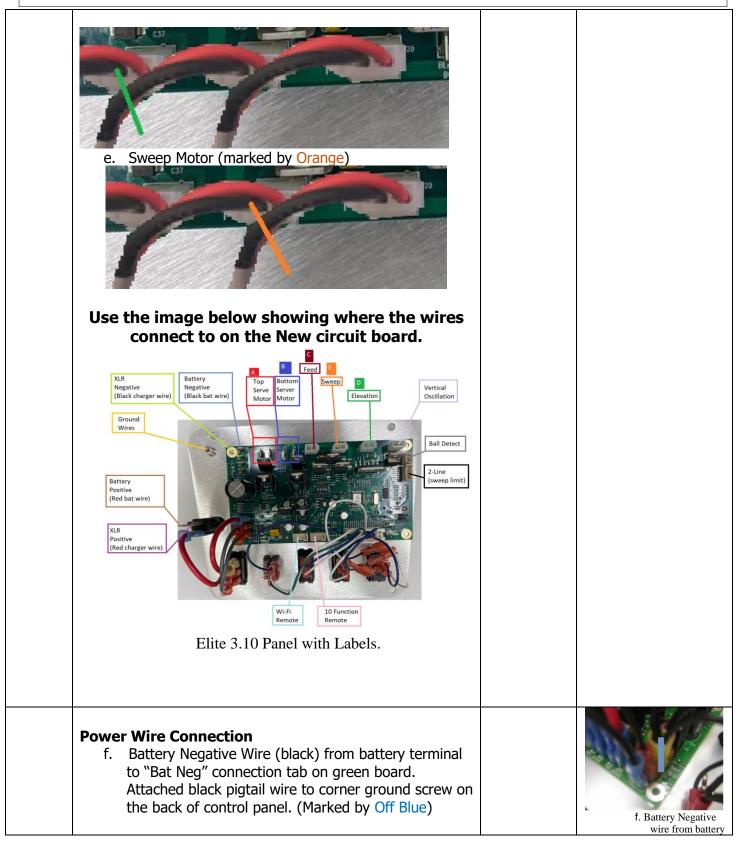


Repair Instructions



Replacing and Installing an Elite 3.10 Board

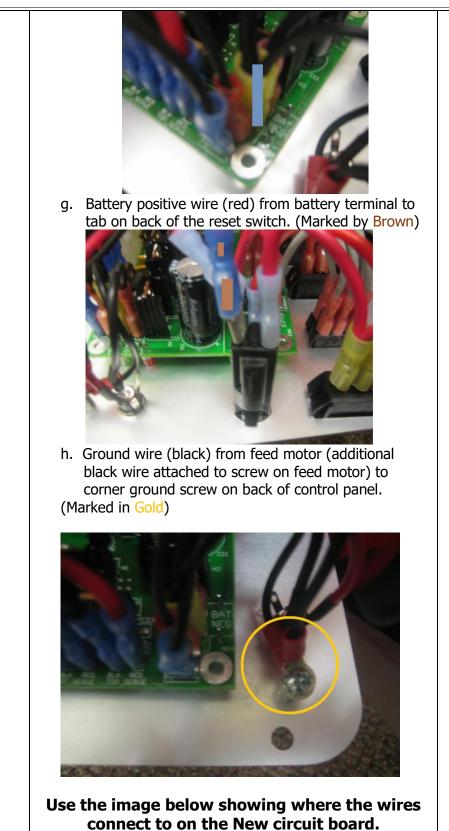


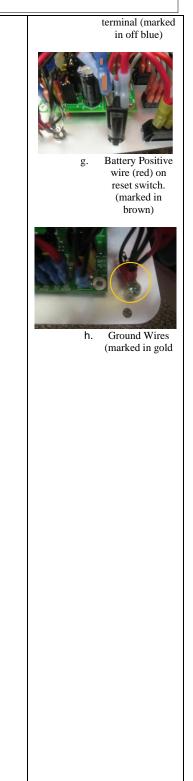


Author: JJ

Date: 2/8/2022



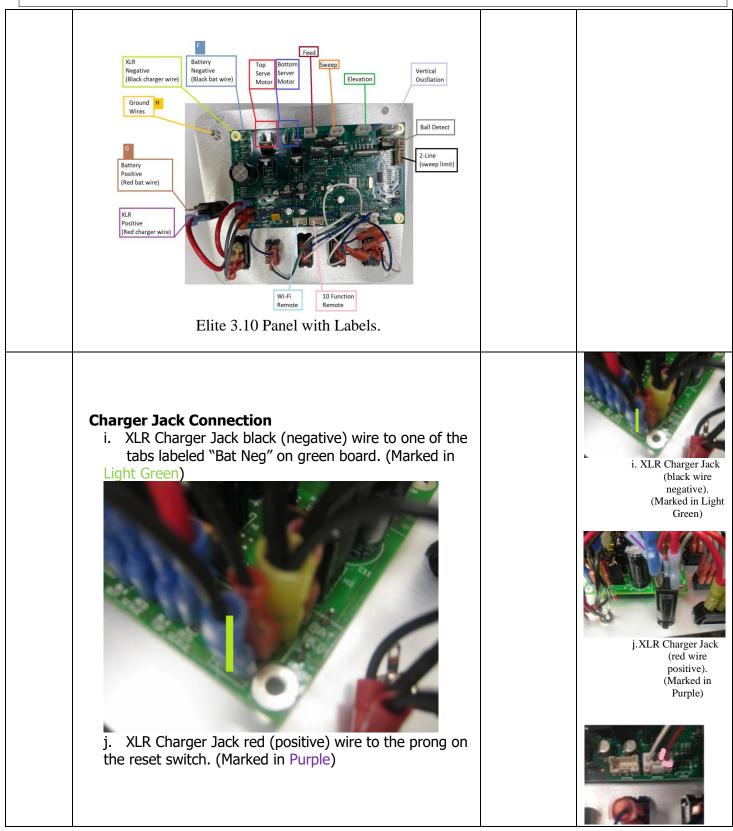



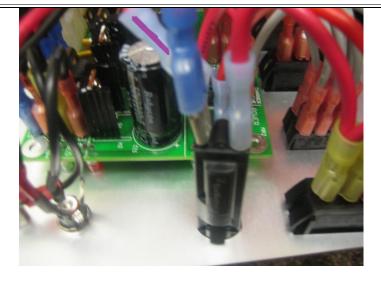

Note: The remote connection ONLY applies if you have an elite 10-function remote or elite 10-function Wi-Fi receiver with your machine.



k. Remote Control Receiver (multiple wire connector) if included, to connection labeled "Remote 1" on green board. (Marked in Pink)




I. Remote Wi-Fi Control Receiver connects to 'Remote 2' on green board (Marked in Light Turquoise)



I. Wi-Fi Remote Control (marked in Light Turquoise)



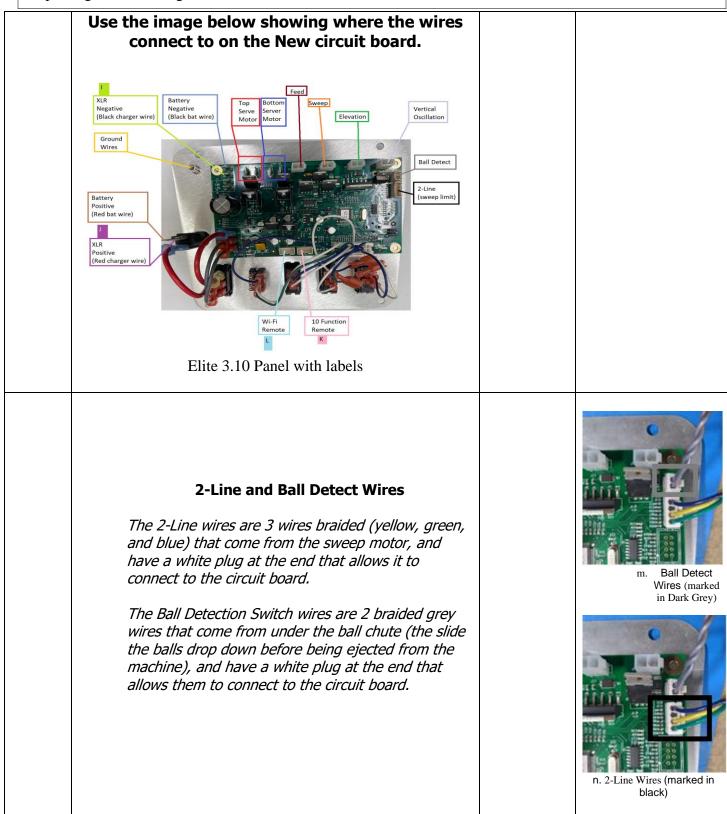

Date: 2/8/2022

Repair Instructions



