Repair Instructions



Replacing and Installing a Control Panel Grand Machine

Description
Models that Apply: Elite model Grand 4, 5, & 5-LE. This instruction is to help guide you through installing a new control panel for your Elite Grand 4, 5, 5-LE model machines. Please use the image as reference to ensure you have the correct control panel. If your panel says 'elite Liberty' or 'elite 3' on the front lower left-hand side of the panel or looks differently on the circuit board section (shown in the 2 nd picture), please contact Lobster Sports Customer Service at 1-818-764-6000 for a Return Authorization (they might ask for a picture by e-mail as proof, and your machine serial number which is located underneath the machine on a white sticker readings ELO*-



Revised:

Replacing and Installing a Control Panel Grand Machine







Author: JJ Contributors: Date: 2/1/2022



Unscrewing You Control Panel

Step 1.) Using a Philips screw driver, unscrew the 4 control panel screws that are holding the old panel to the back of the red case (in between the lower folding handle). Note: If your control panel was sent under warranty with-in the first year of ownership of the machine, it is likely that you sent the old control panel back, and there is no old control panel to be removed.

Step 2.) Disconnect the Positive (red wires) and Negative (black) wire's from the battery terminal.

Step 3.) You can simply disconnect 1 wire from the old control panel, and reconnect it on the new control panel, one wire at a time, until all of the old wires have been transferred onto the new control panel. In order to help you, we have also showed were these wires connect and what they look like. The rest of the guide will show this in sections of small wires to make this task easier to follow.




4 Control Panel Screw locations.



Battery Terminals (grand series).

EL04-EL05LE Motor Connections

- a. Top Server Motor (marked in Pink)
- b. Bottom Server Motor (Marked in Orange)
- c. Feed Motor (Marked in light Green)
- d. Elevation Motor (Marked in light Blue)
- e. Sweep Motor (Marked in dark Blue)

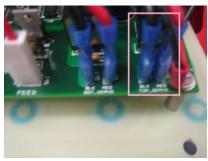

a. Top Server Motor (marked in Pink)




Top Server Motor (marked in Pink).




 Bottom Server Motor (marked in Orange).




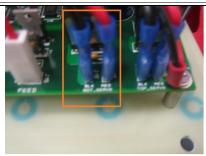


b. Bottom Server Motor (Marked in Orange)

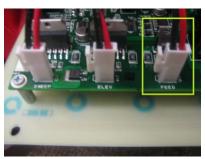

c. Feed Motor (Marked in light Green)

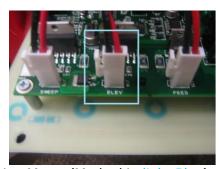


d. Elevation Motor (Marked in light Blue)

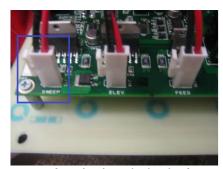

e. Sweep Motor (Marked in dark Blue)

Below is Grand 4,5,5-LE Wire Reference Diagram

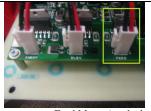

Feed Motor (marked in light green).




d. Elevation Motor (marked in light blue).



e. Sweep Motor (marked in dark blue).



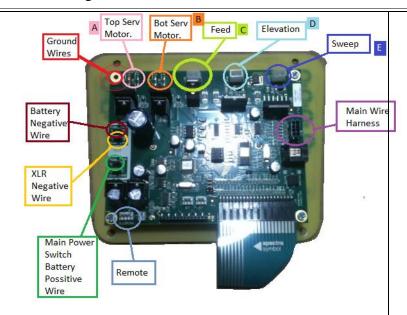

Grand 4, 5, and 5-LE Panel with Labels

Power Wire Connection

f. Battery negative wire (black) from battery terminal to "Bat Neg" connection tab on green board. The battery negative has an attached "pigtail" wire that connects to the ground screw on the lower right corner of control panel. (Marked in Dark Red).



Battery negative connected to Bat Neg J12 on circuit board (marked in dark red).




Ground Wire Connection Screw (marked in red).





f. Battery Negative wire (marked in Dark Red).

g. XLR Negative wire from Charging Port to "Bat Neg" on circuit board. (Marked in Gold).

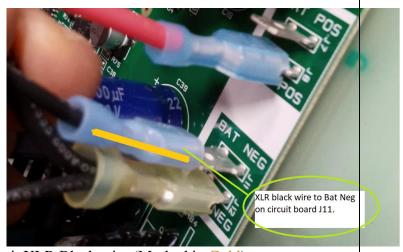

i. XLR Black wire (Marked in Gold).

 h. Main Power Switch Red wire (from underneath the machine on the left-hand side) to "Bat Pos" connection tab on green electronic board. (Marked in Green).




Black XLR wire to Bat Neg (J11 or J12) on circuit board (marked in gold).




Main Power Switch Red wire to Bat Pos (battery positive) on circuit board. J8 and J7 locations are both the same current) (marked in green).



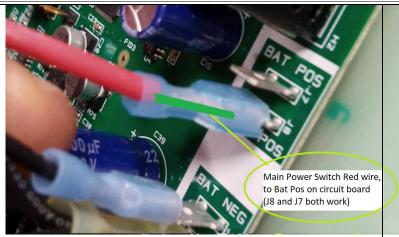

h. Main Power Switch Red wire (Marked in Green).

Below is Grand 4,5,5-LE Wire Reference Diagram

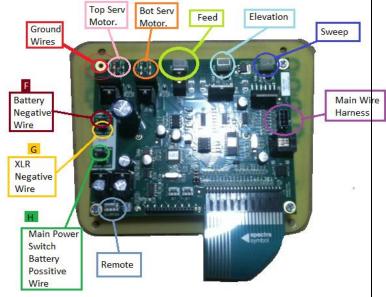

Grand 4,5,5-LE Panel with Labels


Ground Wire Connection

 i. Ground wire (black) from feed motor (additional black wire attached to screw on feed motor) to corner ground screw on green electronic board. (Marked in Red).




Ground Wire Connection Screw (marked in red).



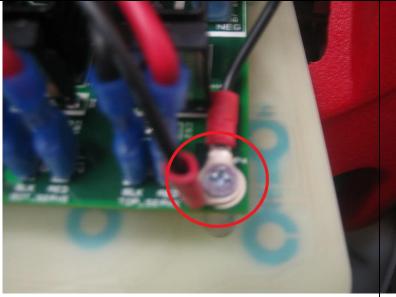

i. Ground Wires (Marked in Red).

Below is Grand 4,5,5-LE Wire Reference Diagram

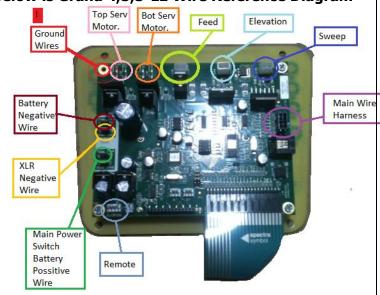

Grand 54,5,5-LE Panel with Labels


Sensor Harness Connection

j. Sensor Harness (multiple wire connector) to "J10" connection on board. (Marked in Purple).




Sensor Harness Connection (marked in purple).



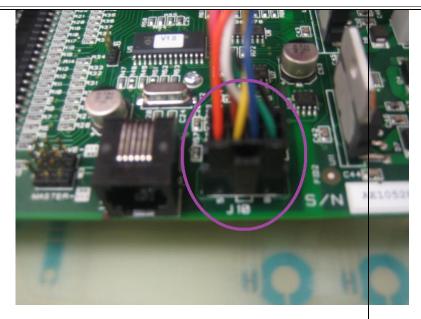

Sensor Harness Connection (Marked in Purple).

Below is Grand 4,5,5-LE Wire Reference Diagram

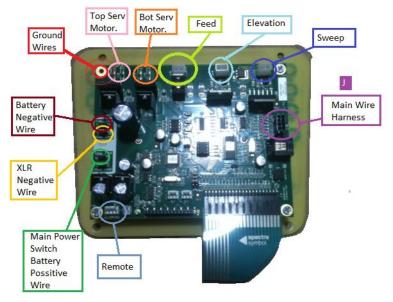

Grand 4,5,5-LE Panel with Labels

Remote Control Connection

k. Remote Control Receiver (multiple wire connector) if included, to connection labeled "Remote" on board. (marked in medium blue).



4 pronged Remote connector




jack. (marked in medium blue).

Replacing and Installing a Control Panel Grand Machine



Remote (Marked in Medium Blue).

Below is Grand 4,5,5-LE Wire Reference Diagram

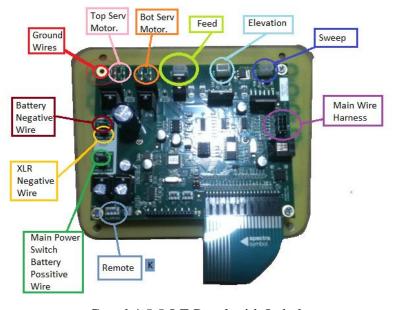


Grand 4,5,5-LE Panel with Labels

Reconnecting Your Battery Wires

Step 1.) With the new control panel installed, you can now reconnect the Black battery terminal wire to the negative section of the battery, and the Red battery terminal wire's (battery positive wire) to the positive section of the battery.

Step 2.) You can now fasten the control panel to the red case, using the 4 black control panel screws.

Step 3.) It is important to ensure the new board is functioning properly. Once the machine is fully tested, we

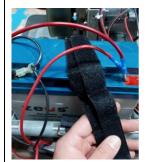

Battery Terminals (grand series).

Repair Instructions



Replacing and Installing a Control Panel Grand Machine

recommend checking the charger. Note: If for what ever reason you find some function not working properly, first unscrew the control panel to ensure everything is connected properly, and no wire came disconnected in the process of reconnecting the battery wire terminals. If you find that there are no disconnected wires, but the machine is still not starting up, please see our "my machine won't turn on" troubleshooting guide on our website. If upon reviewing this guide, the problem continues, please contact Customer Service at 1-818-764-6000.	4 Control Panel Screw lo