


OWNER'S MANUAL



RS-1412 GLUTE MASTER

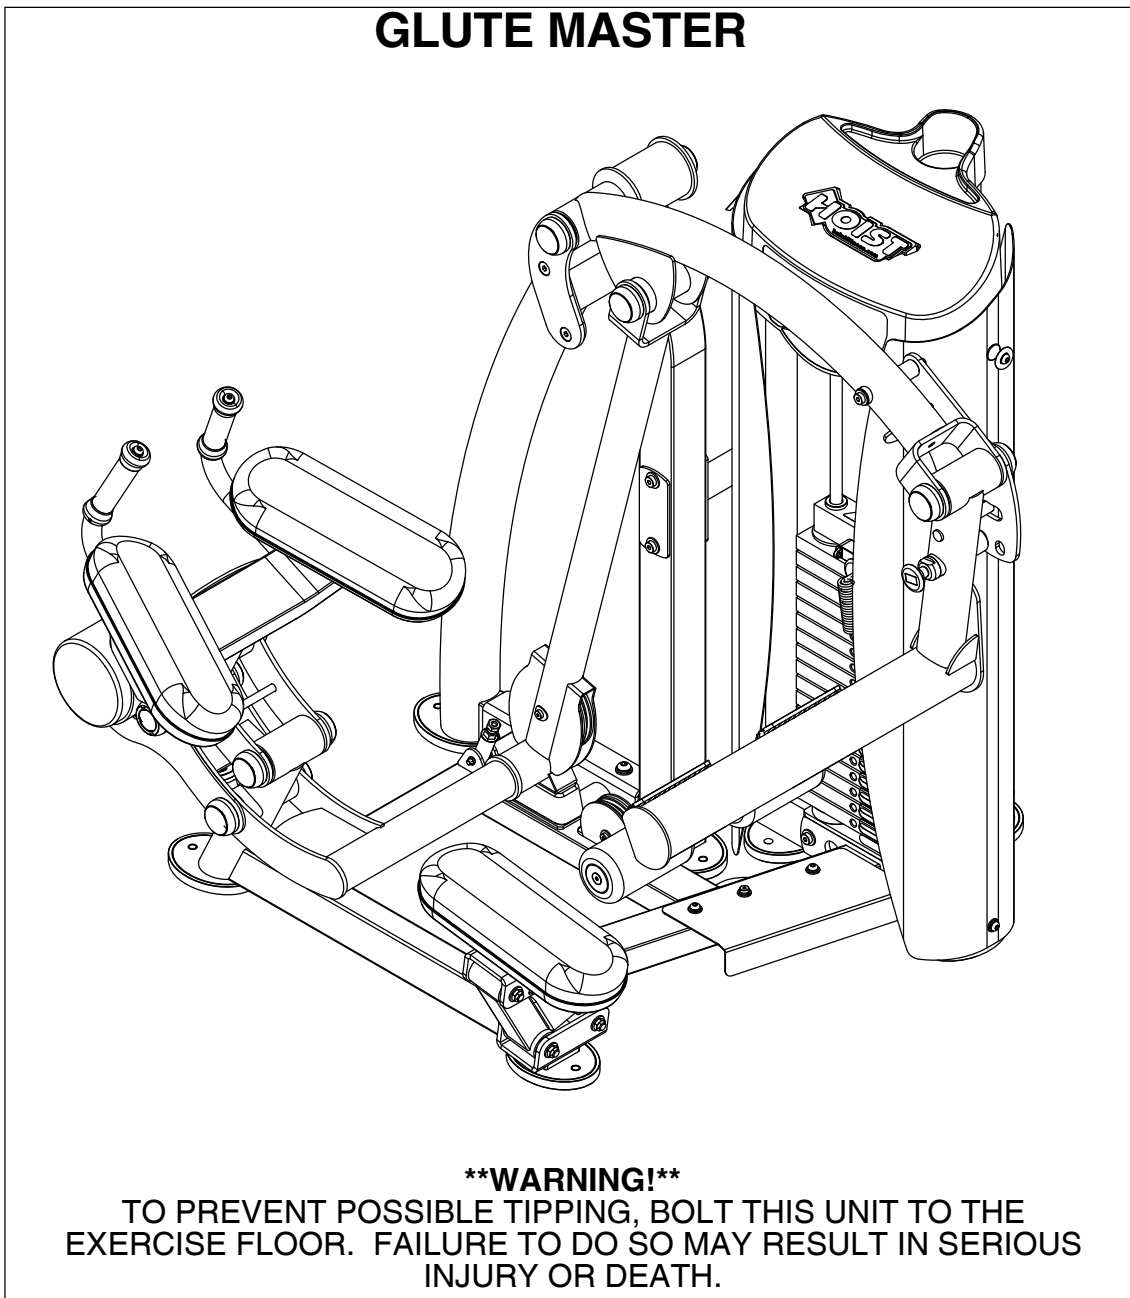

****WARNING!****
TO PREVENT POSSIBLE TIPPING, BOLT THIS UNIT TO THE EXERCISE FLOOR. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY OR DEATH.

Note: Both Serial Number and Model Number are Required when Ordering Parts
RECORD SERIAL NUMBER HERE

MACHINE CODE

Customer Service

(800) 548-5438

(858) 578-7676

Fax

(858) 578-9558



www.facebook.com/hoistfitness

OWNER'S MANUAL

CONTENTS

| | |
|--------------------------------------|----|
| INSTRUCTIONS | 02 |
| FRAME ASSEMBLY | 04 |
| PRE-ASSEMBLY..... | 20 |
| DECAL PLACEMENT..... | 21 |
| DECAL REFERENCE..... | 22 |
| PART LIST..... | 23 |
| ABBREVIATIONS..... | 26 |
| BOLT SIZING CHART..... | 27 |
| WASHER SIZING CHART..... | 33 |
| MAINTENANCE SCHEDULE..... | 35 |
| GENERAL MAINTENANCE INFORMATION..... | 36 |
| WEIGHT TRAINING TIPS..... | 37 |
| EXERCISE LOG..... | 39 |
| LIMITED WARRANTY..... | 40 |

OWNER'S MANUAL

INSTRUCTIONS

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only HOIST replacement parts when servicing. Failure to do so will void your warranty and could result in personal injury.

HOIST equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized HOIST dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

TOOLS REQUIRED

Ratchet Wrench

1/2", 9/16" and 3/4" Sockets

Adjustable Wrench

Rubber Mallet

Tape Measure

Level

Hex Key Wrench Set


Two People

OWNER'S MANUAL

THIS PAGE WAS INTENTIONALLY LEFT BLANK

OWNER'S MANUAL

FRAME ASSEMBLY

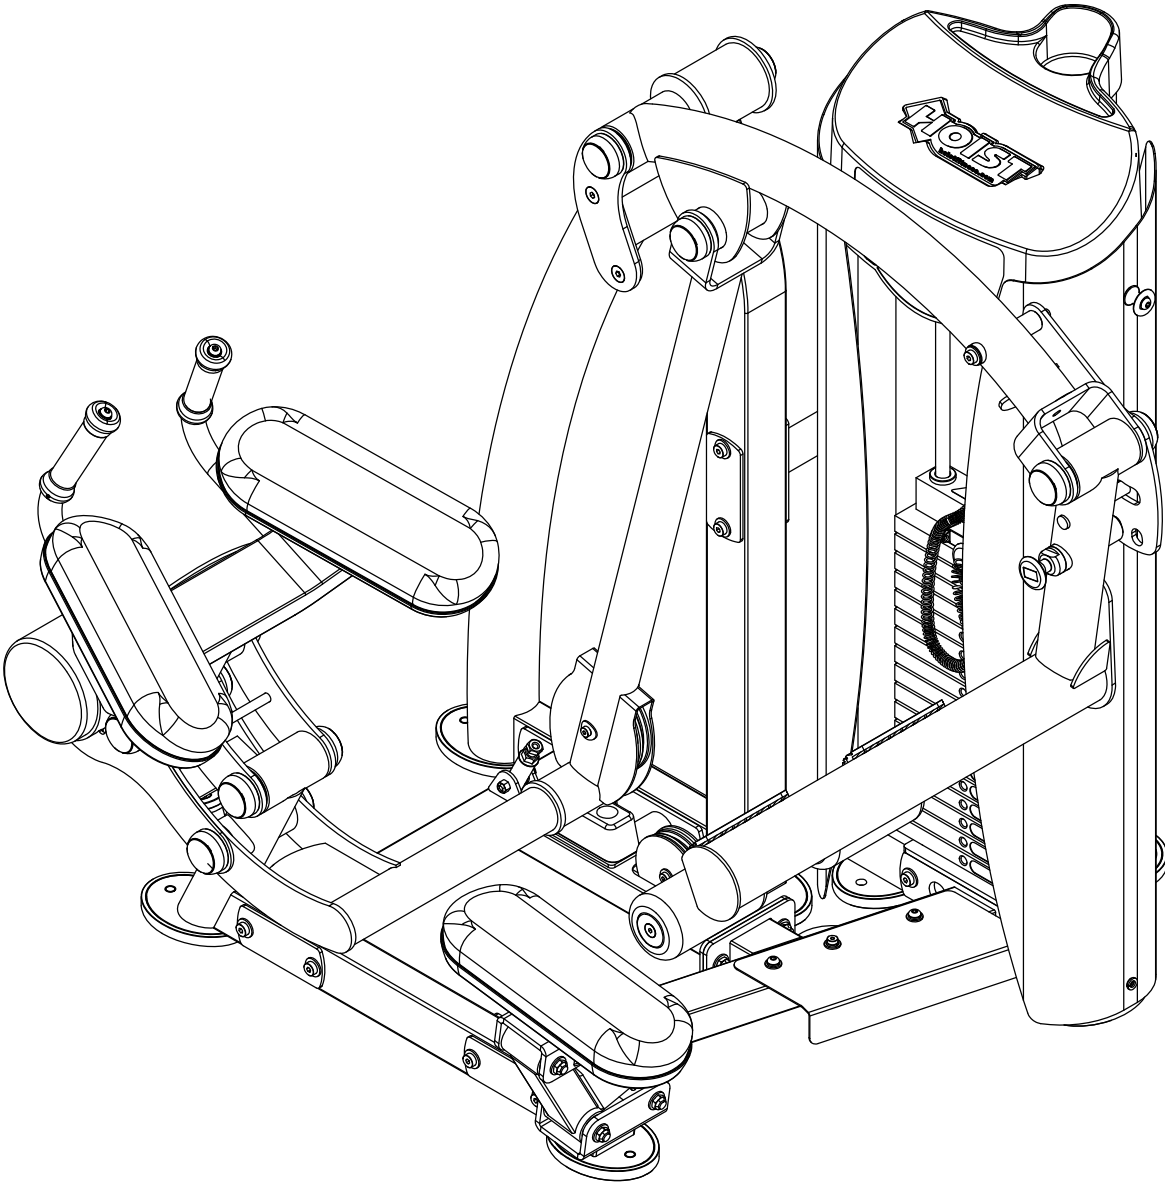


OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:
- SOME PARTS MAY HAVE BEEN
REMOVED FOR CLARITY.

CABLING PROFILE

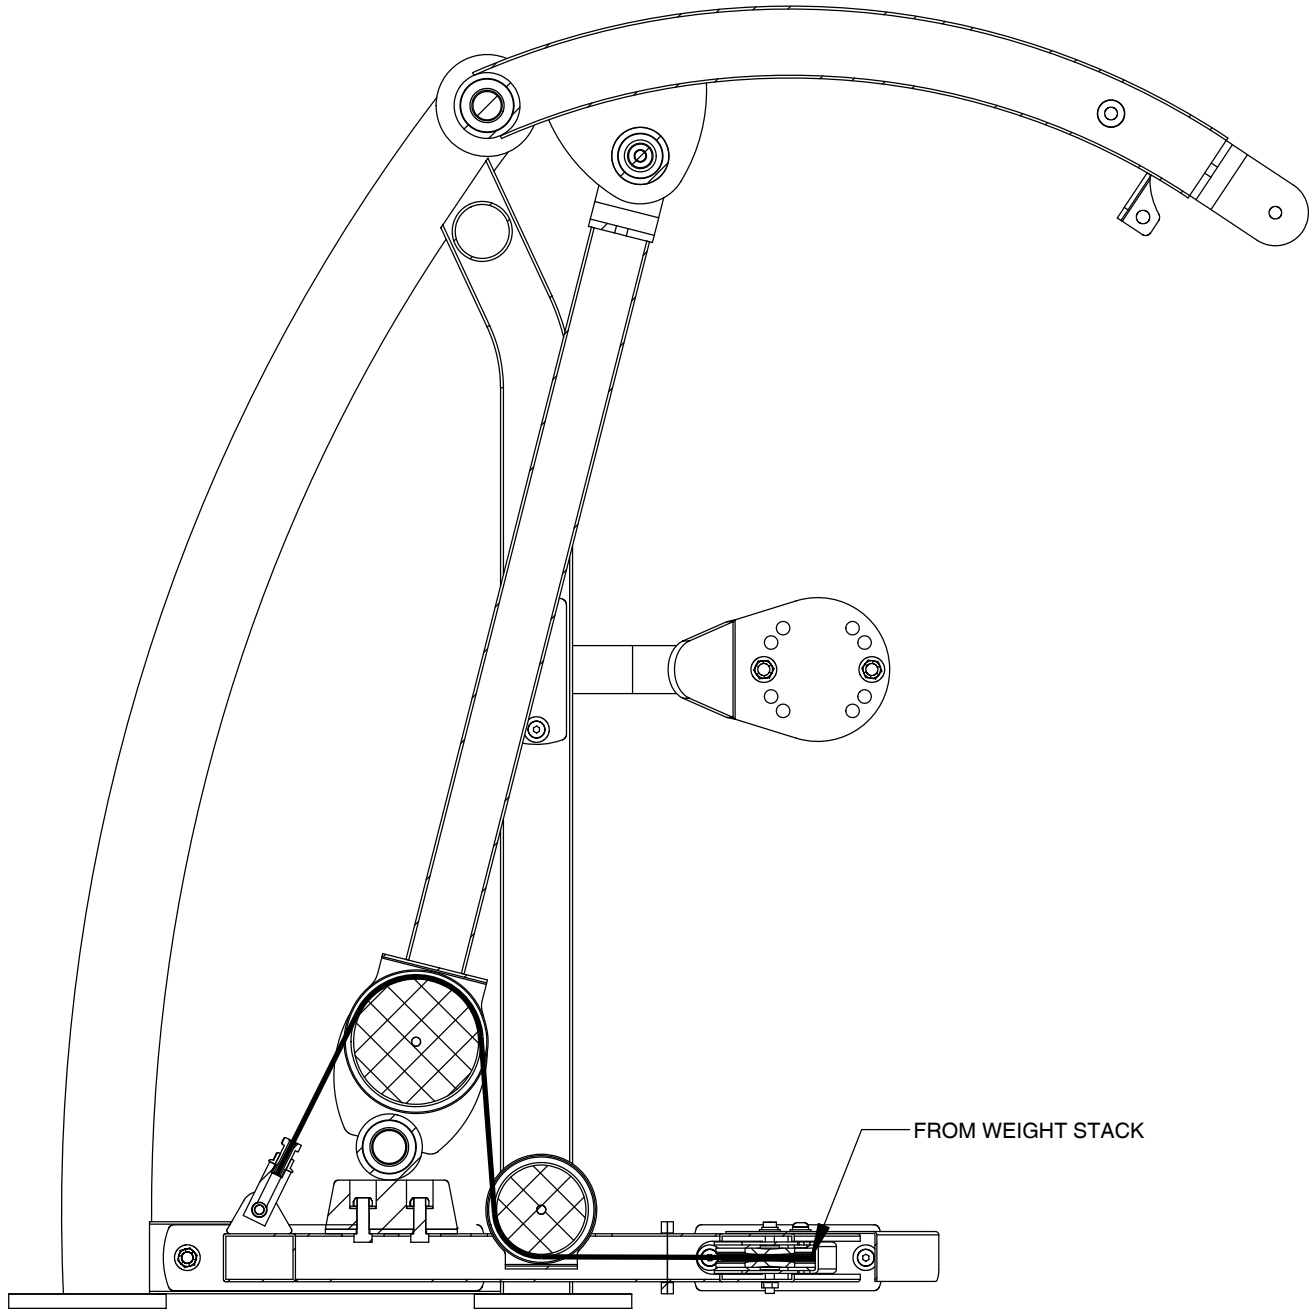


OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:

- HAND TIGHTEN HARDWARE.
- INSTALL CABLE AND PULLEYS AT THE SAME TIME.
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

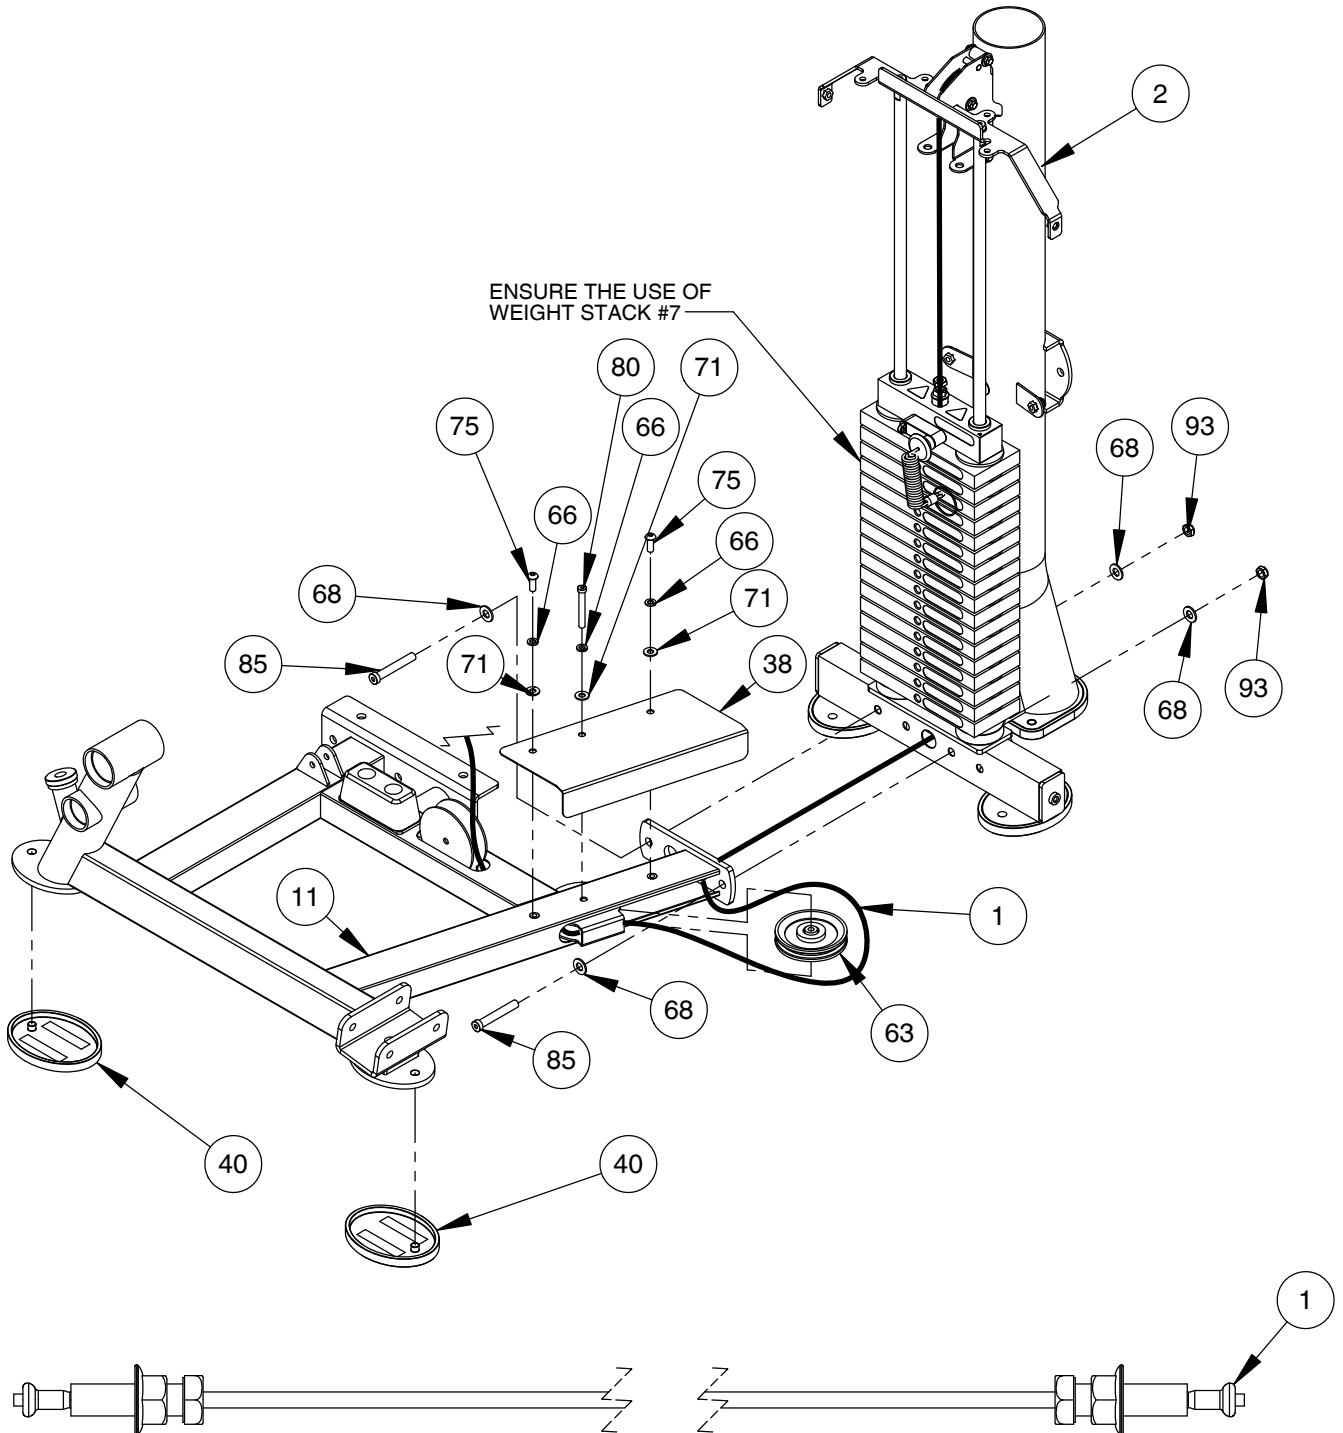


OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:


- HAND TIGHTEN HARDWARE.
- INSTALL CABLE AND PULLEYS AT THE SAME TIME.
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

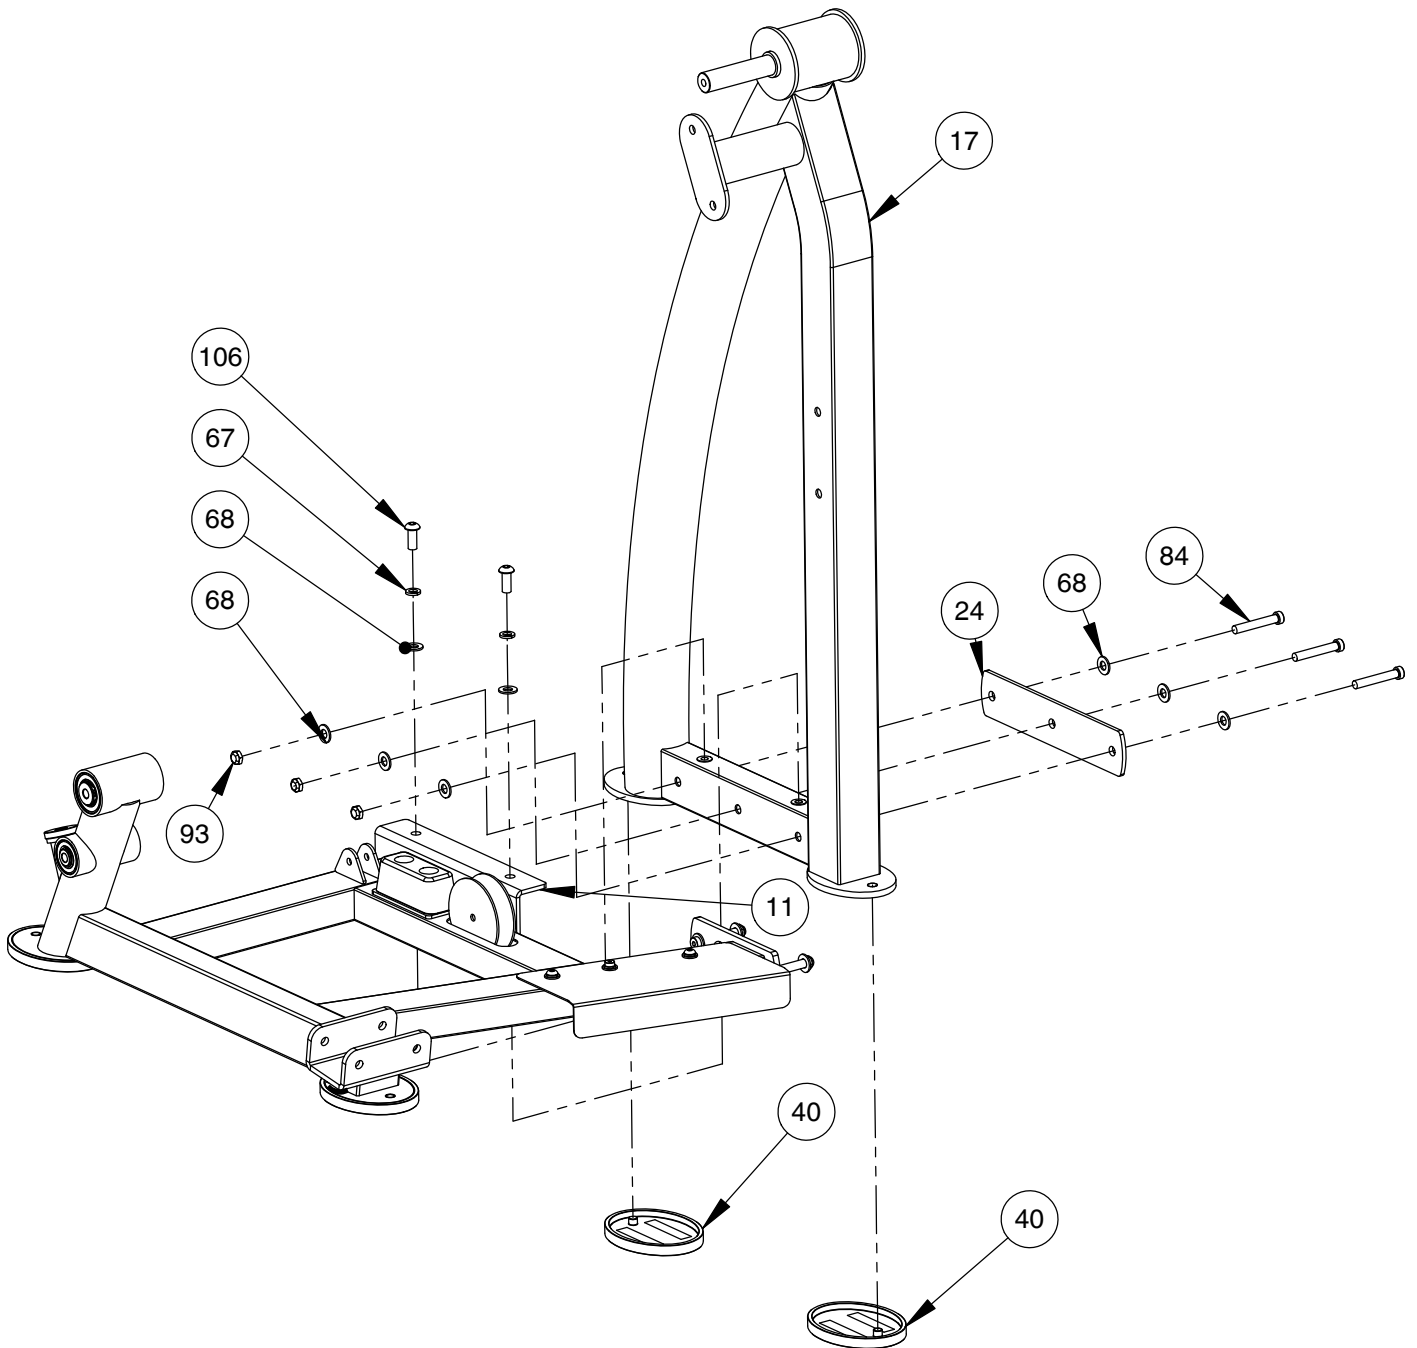

OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:
- HAND TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN
REMOVED FOR CLARITY.

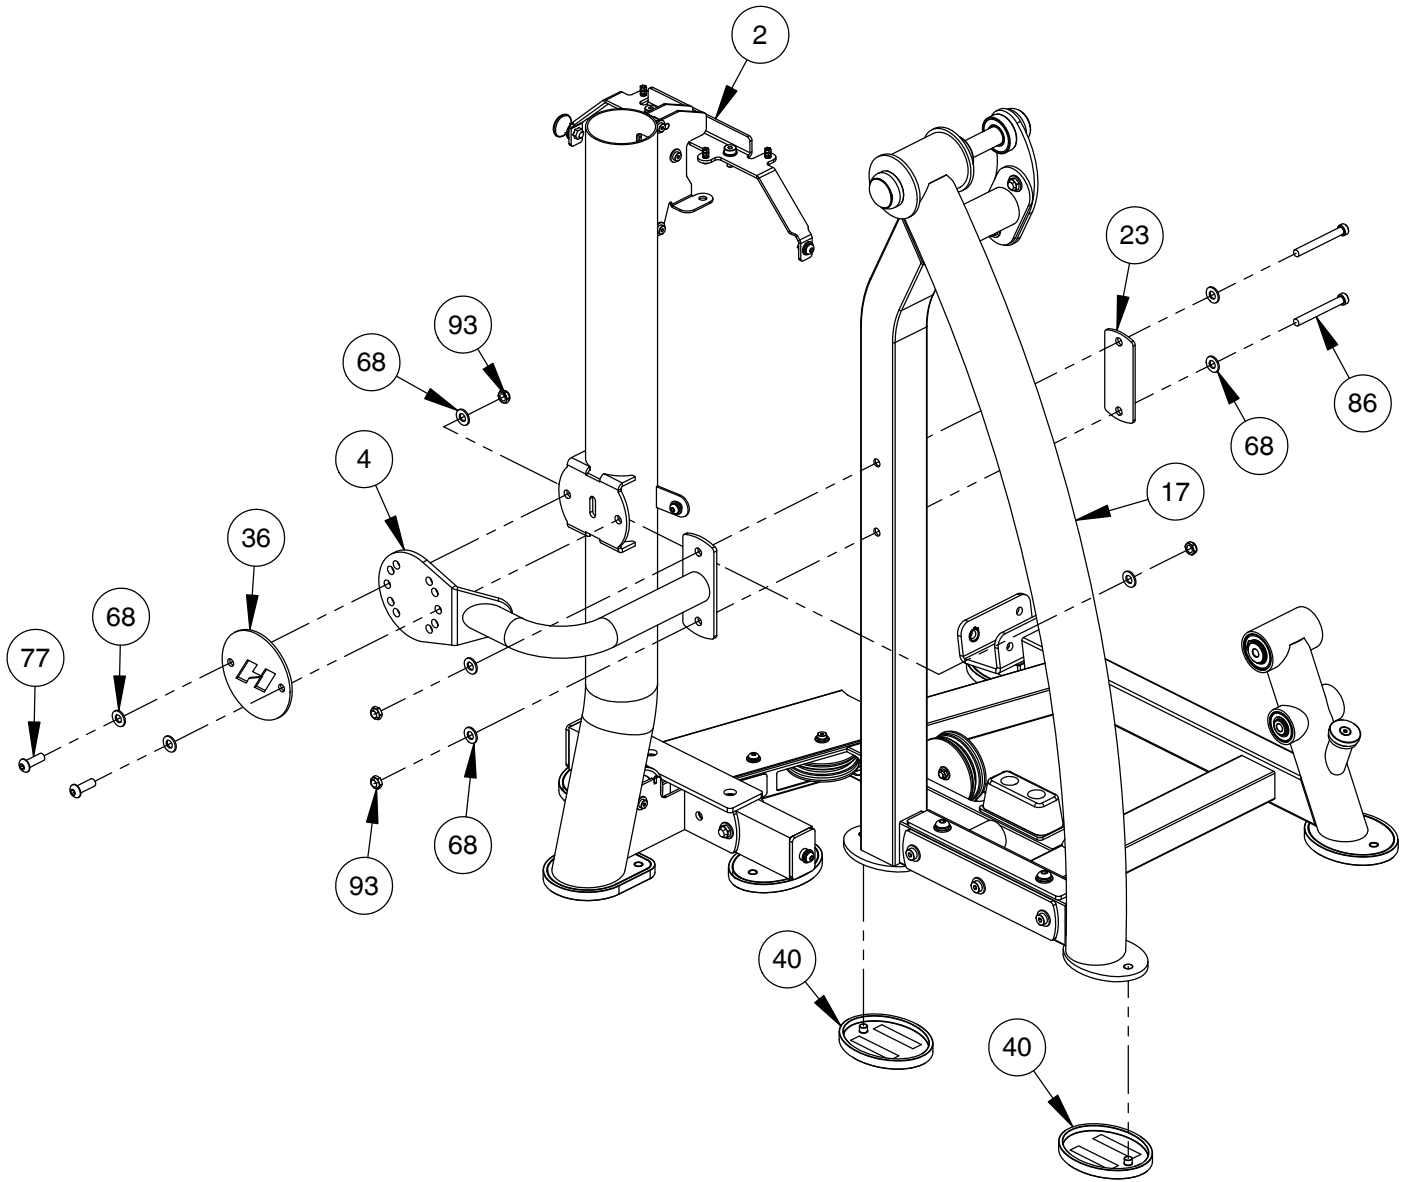


OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:


- HAND TIGHTEN HARDWARE.
- INSTALL CABLE AND PULLEYS AT THE SAME TIME.
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

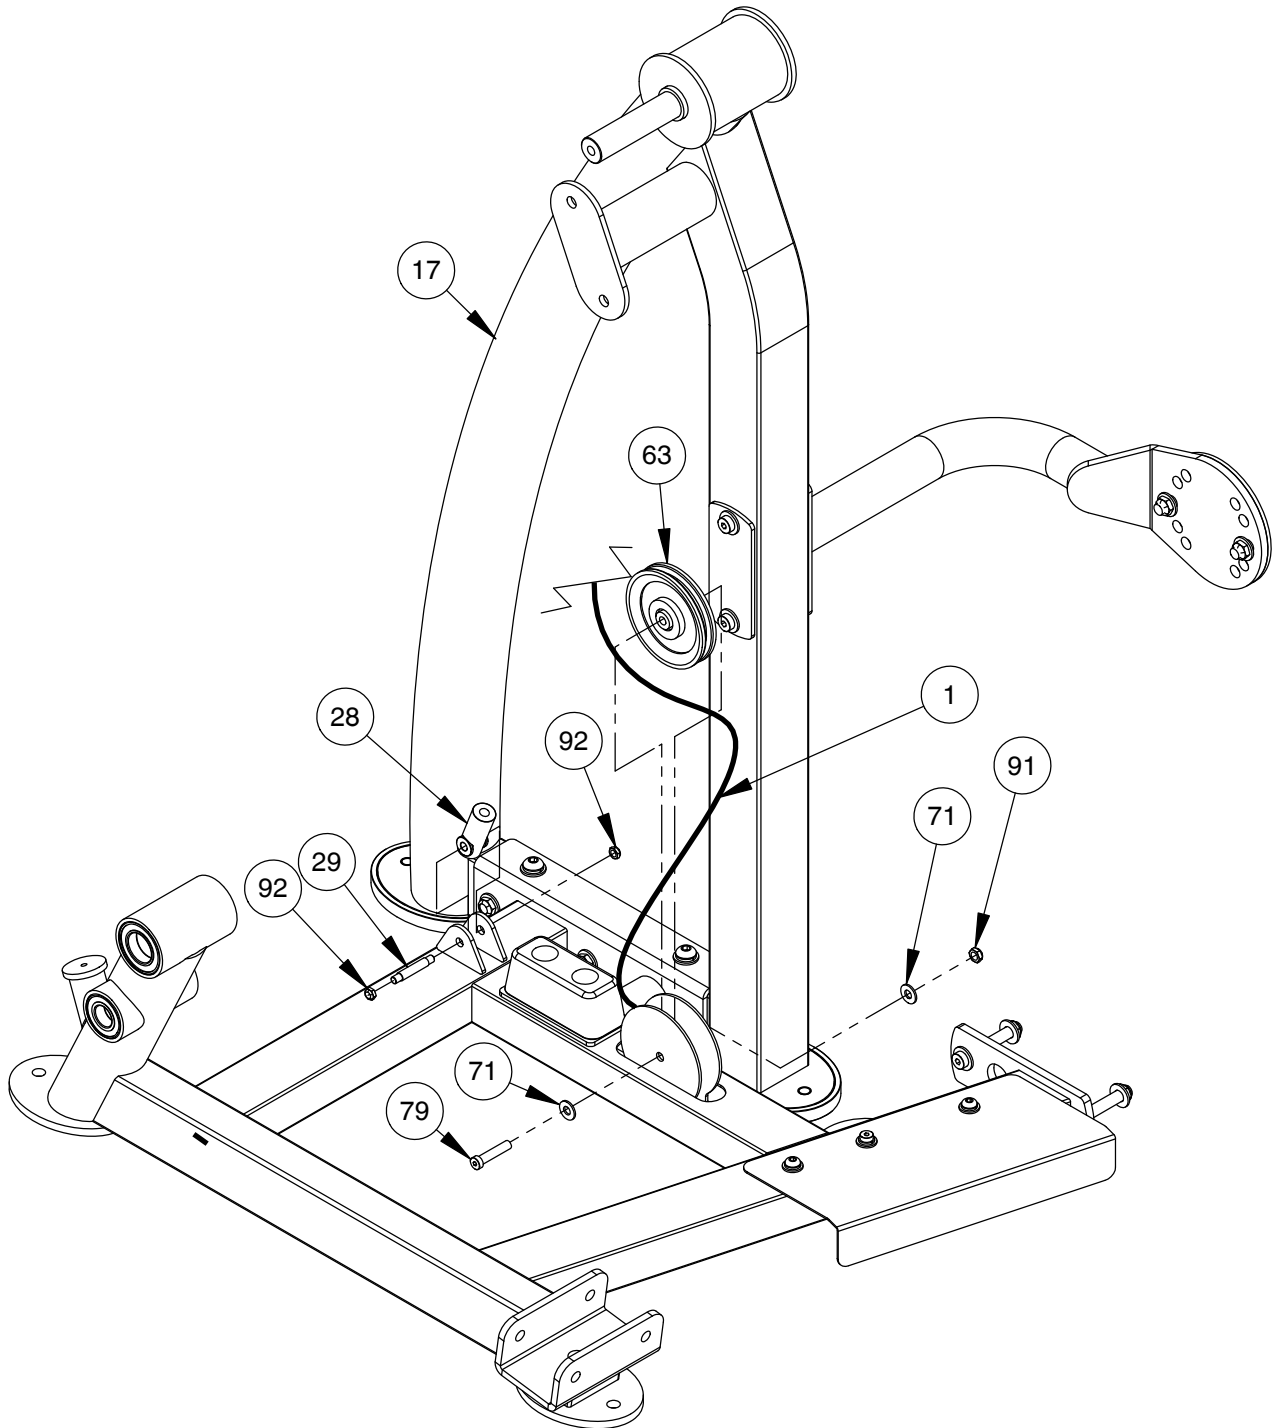

OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:
- WRENCH TIGHTEN ALL PREVIOUSLY
HAND TIGHTENED HARDWARE.
- HAND TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN
REMOVED FOR CLARITY.

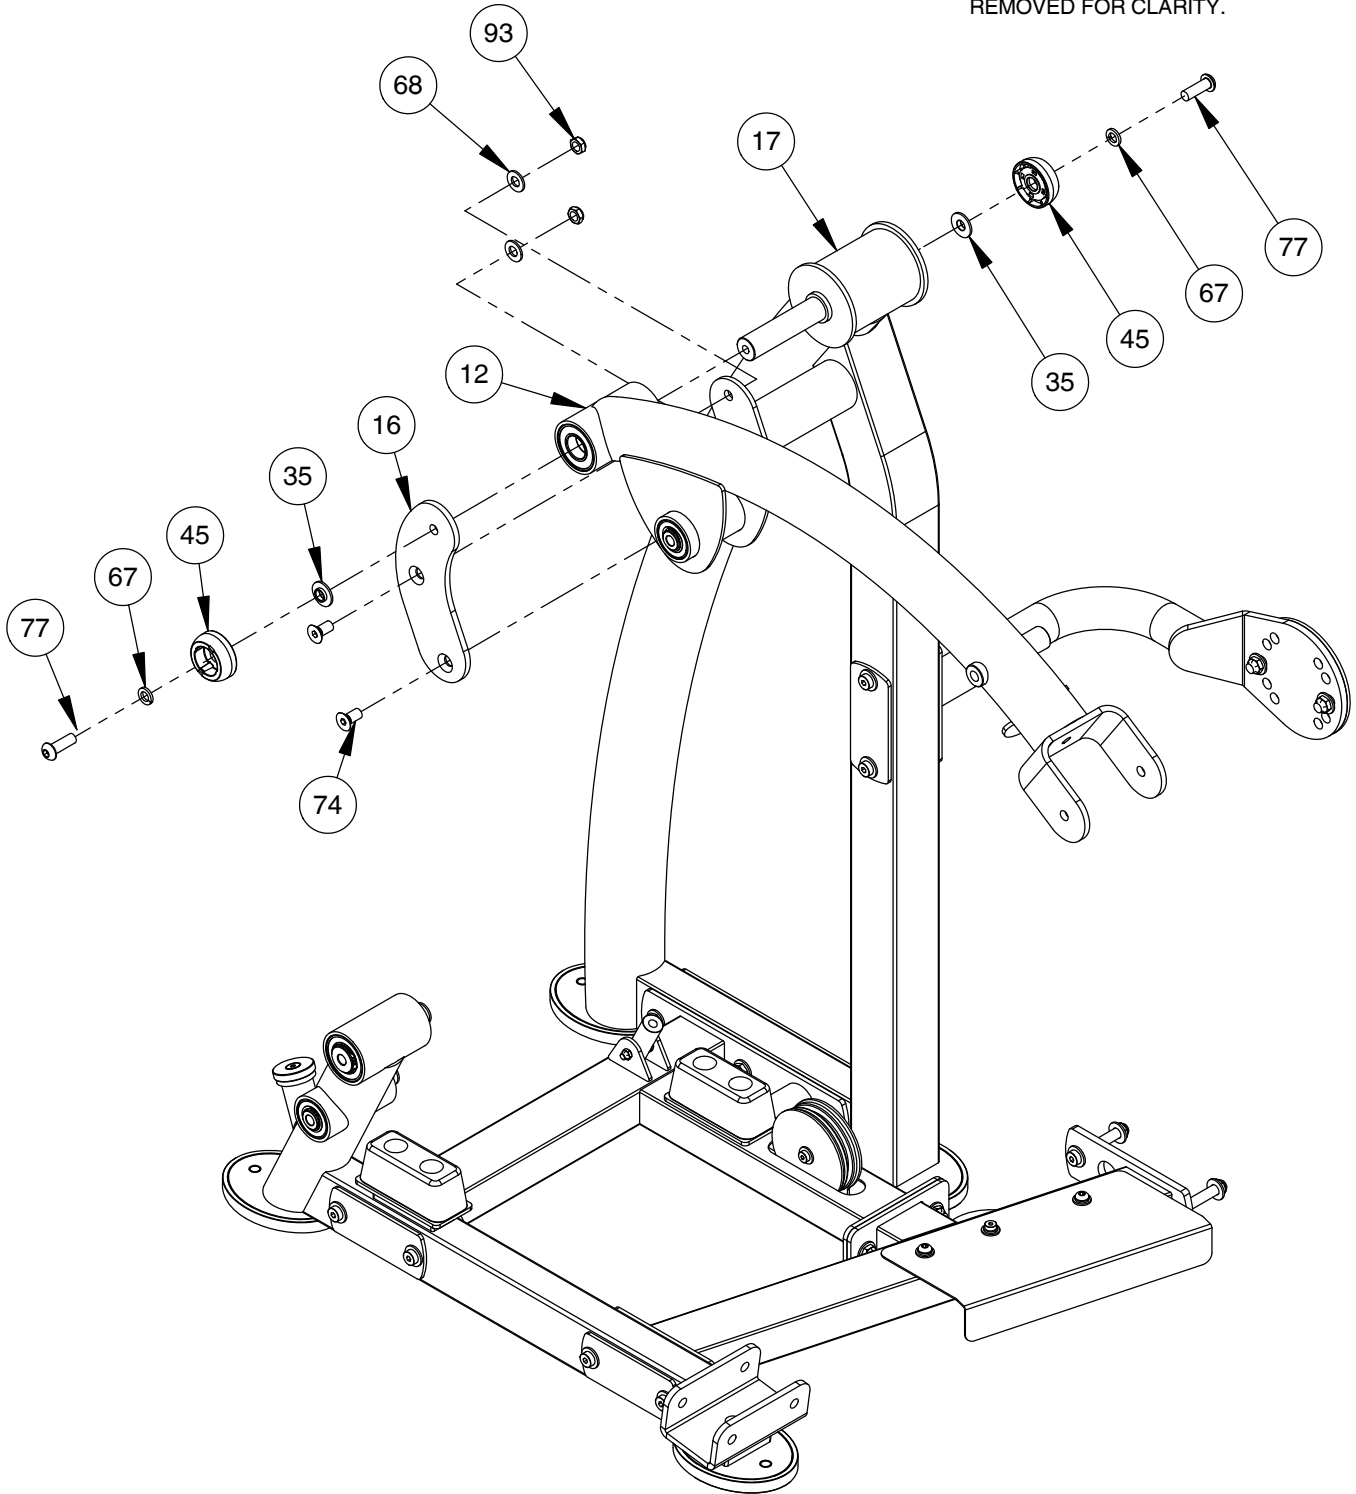


OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:

- HAND TIGHTEN HARDWARE.
- INSTALL CABLE AND PULLEYS AT THE SAME TIME.
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

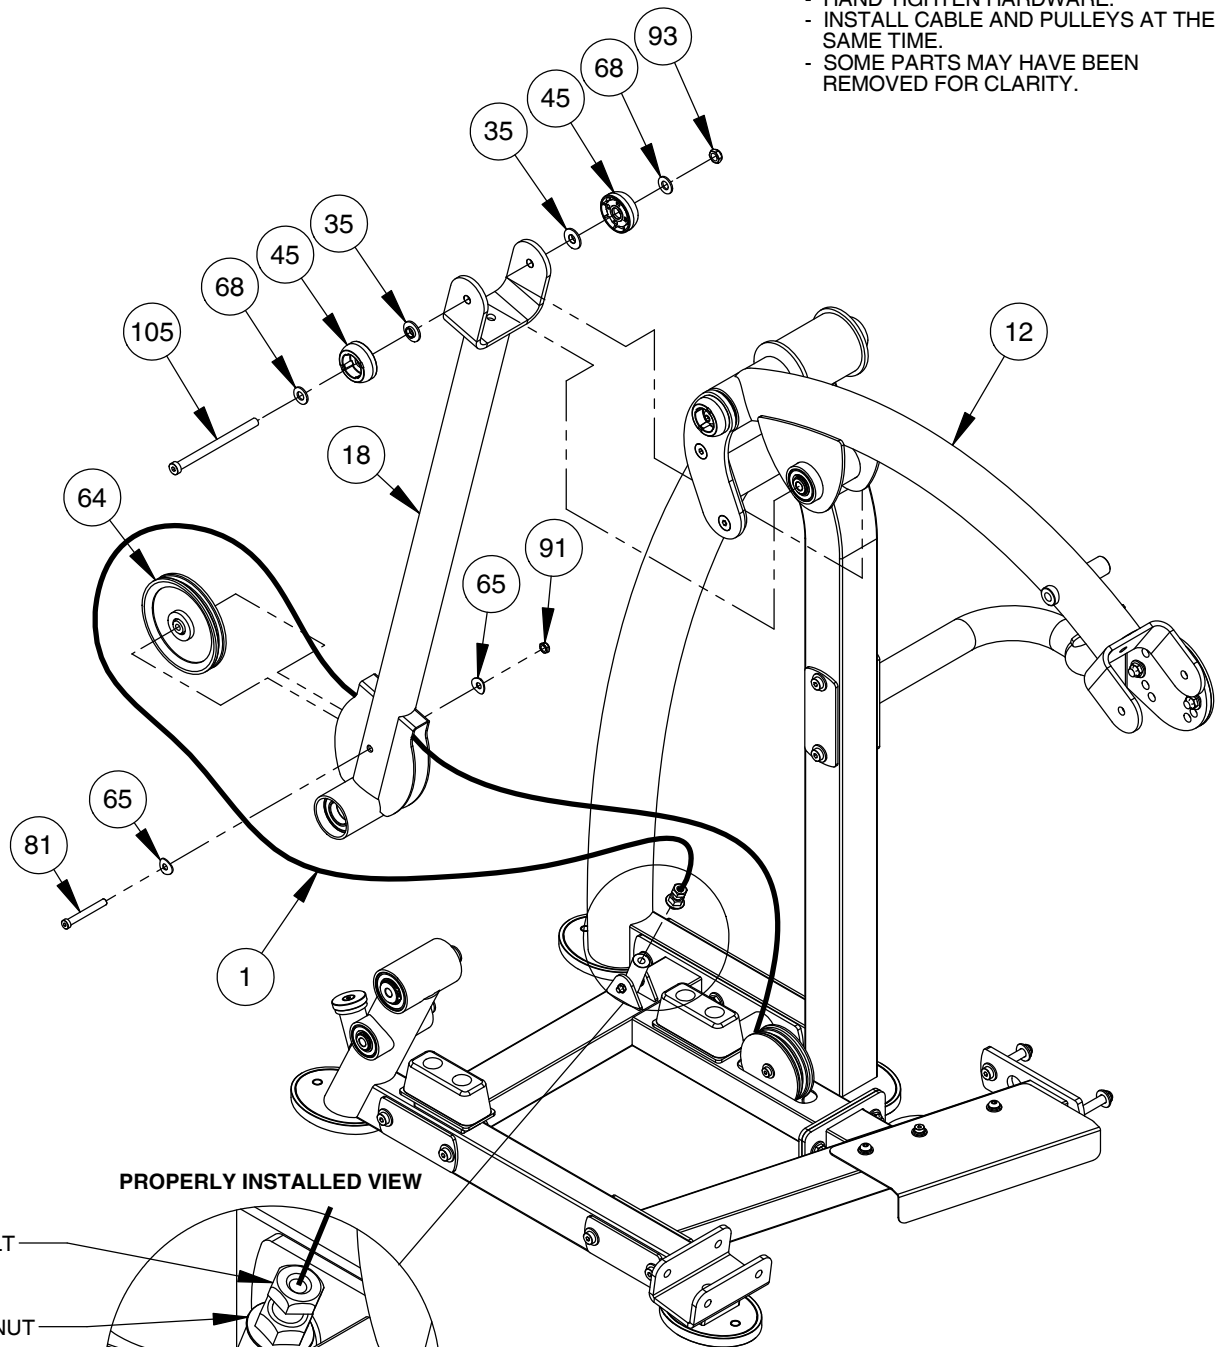

PROPERLY INSTALLED VIEW

CABLE BOLT

JAM NUT

FINE TUNING:


LOOSEN JAM NUT AND THREAD BOLT IN/OUT TO GIVE THE CABLE PROPER TENSION. RE-TIGHTEN JAM NUT.

WARNING - CABLE BOLT MUST BE THREADED A MINIMUM OF 3/8" WITH JAM NUT TIGHTENED SECURELY TO ENSURE PROPER CONNECTION.

OWNER'S MANUAL

FRAME ASSEMBLY


NOTE:
- HAND TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN
REMOVED FOR CLARITY.

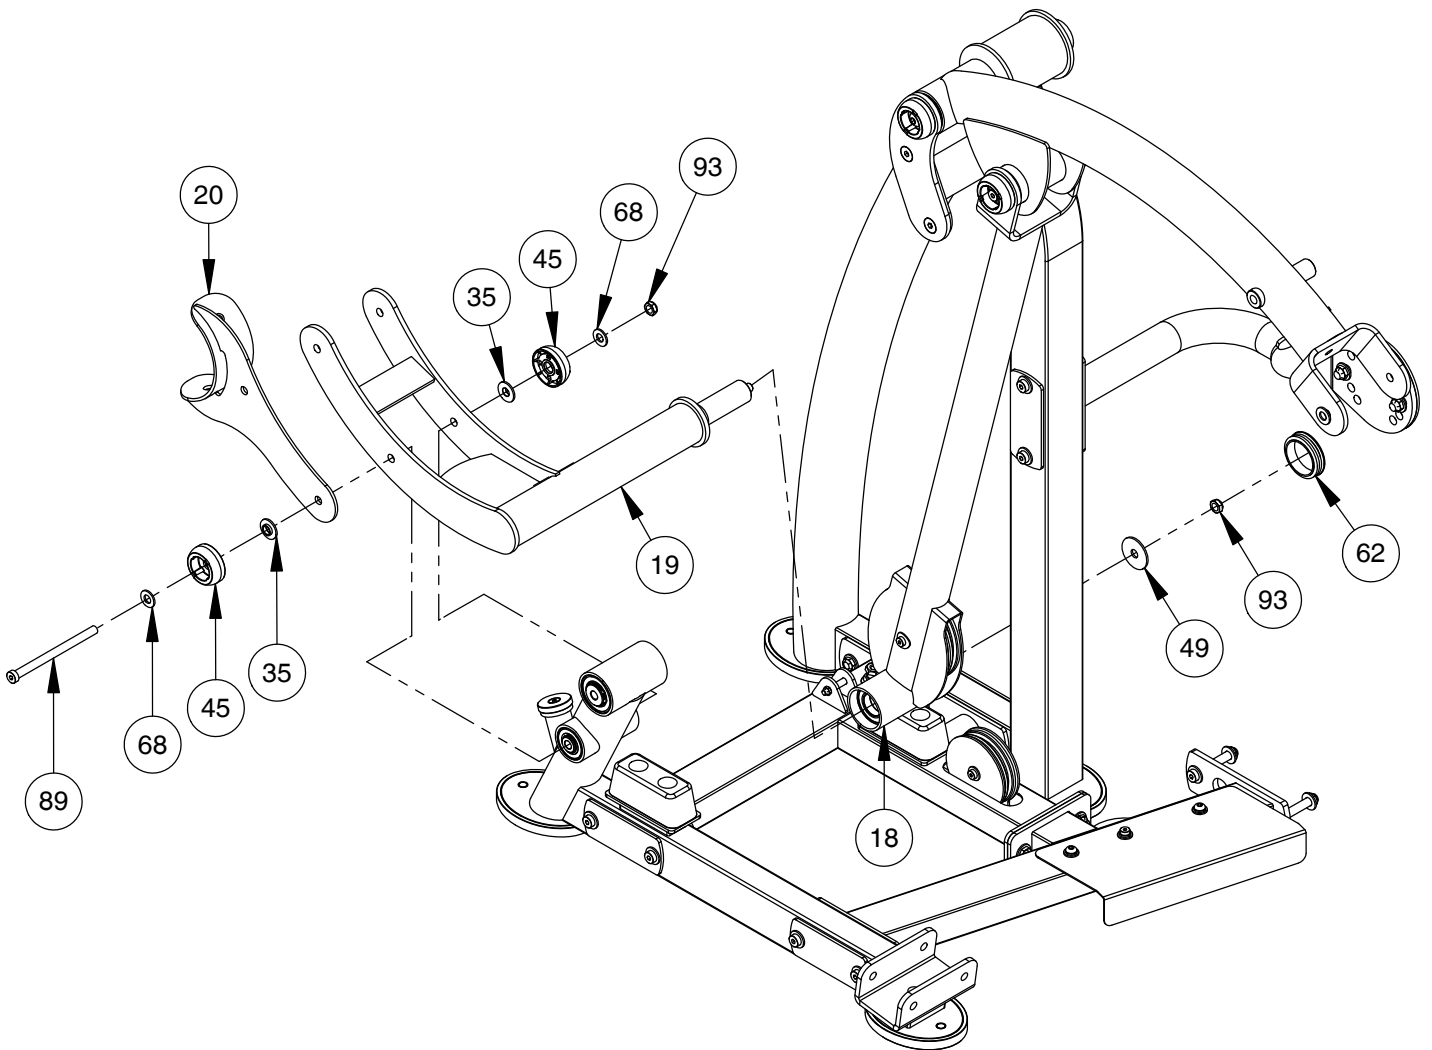

OWNER'S MANUAL

FRAME ASSEMBLY


NOTE:
- WRENCH TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN
REMOVED FOR CLARITY.

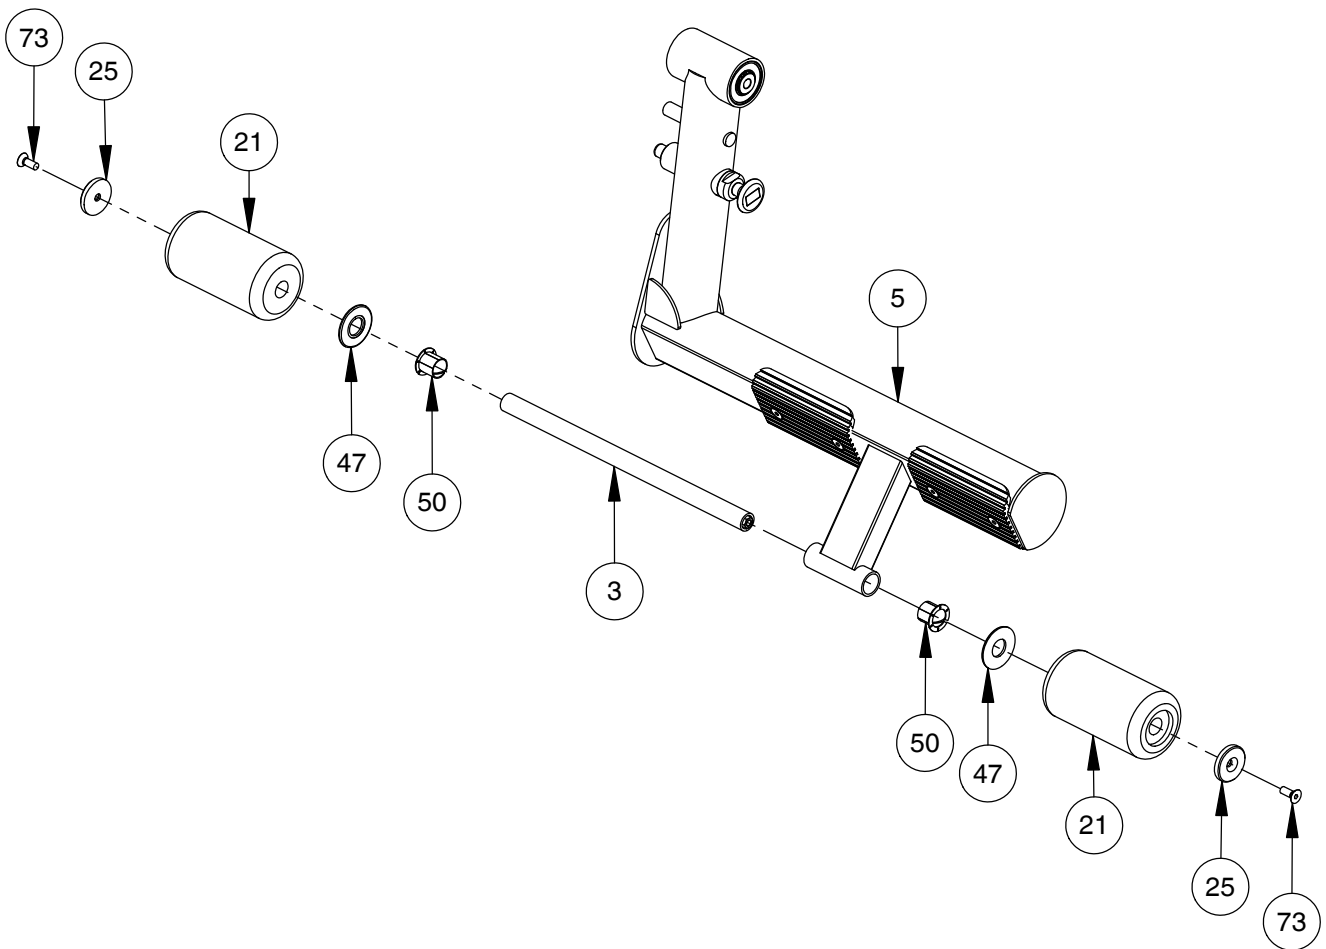

OWNER'S MANUAL

FRAME ASSEMBLY


NOTE:
- WRENCH TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN
REMOVED FOR CLARITY.

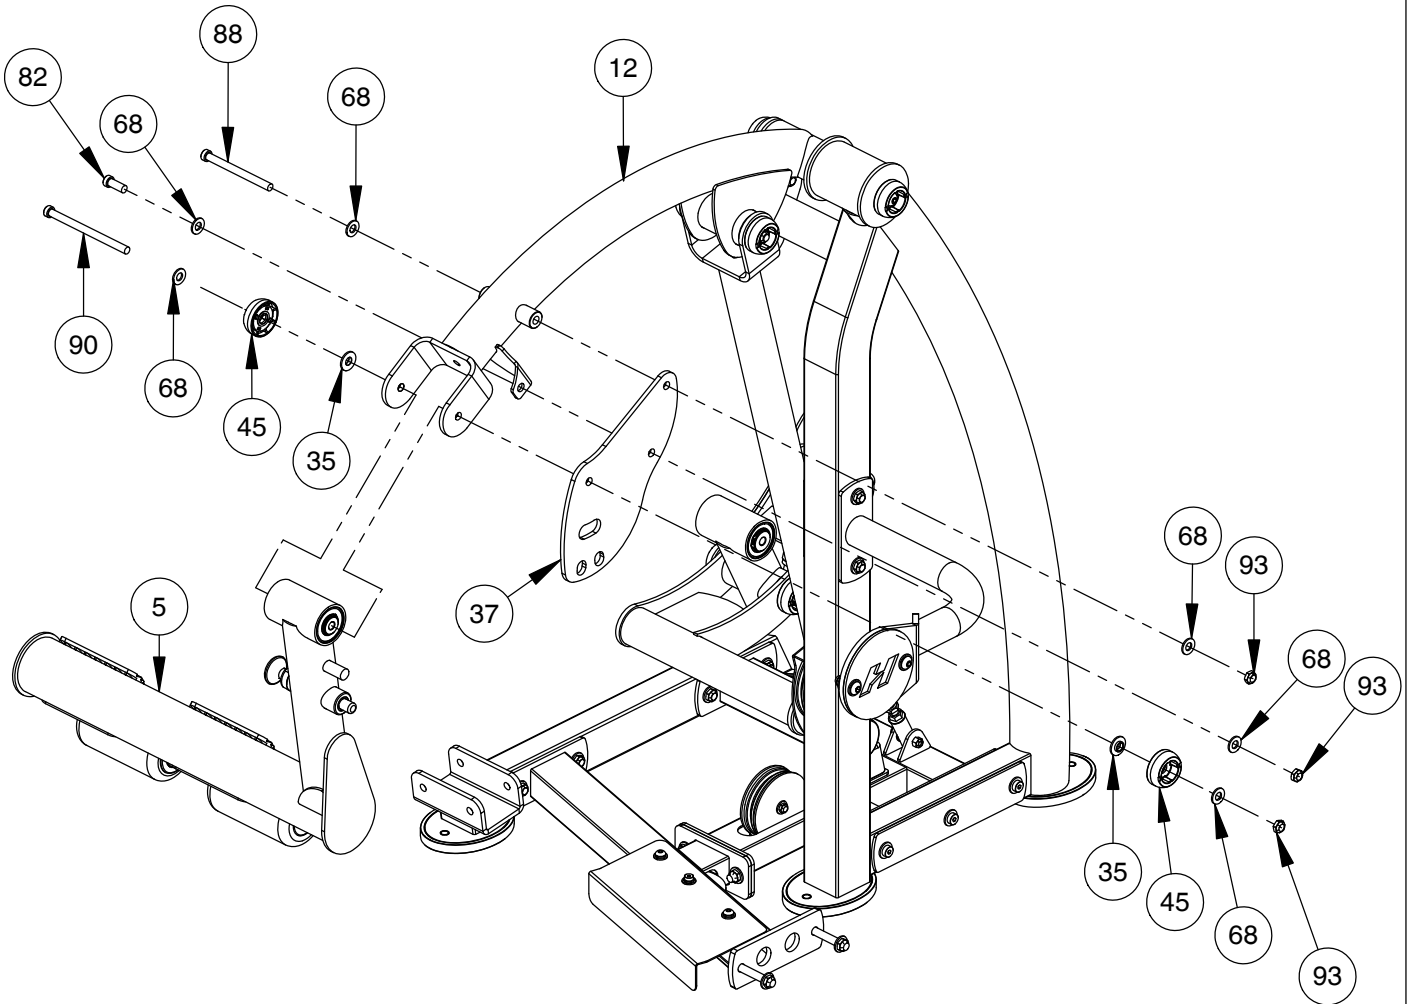

OWNER'S MANUAL

FRAME ASSEMBLY


NOTE:
- HAND TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN
REMOVED FOR CLARITY.

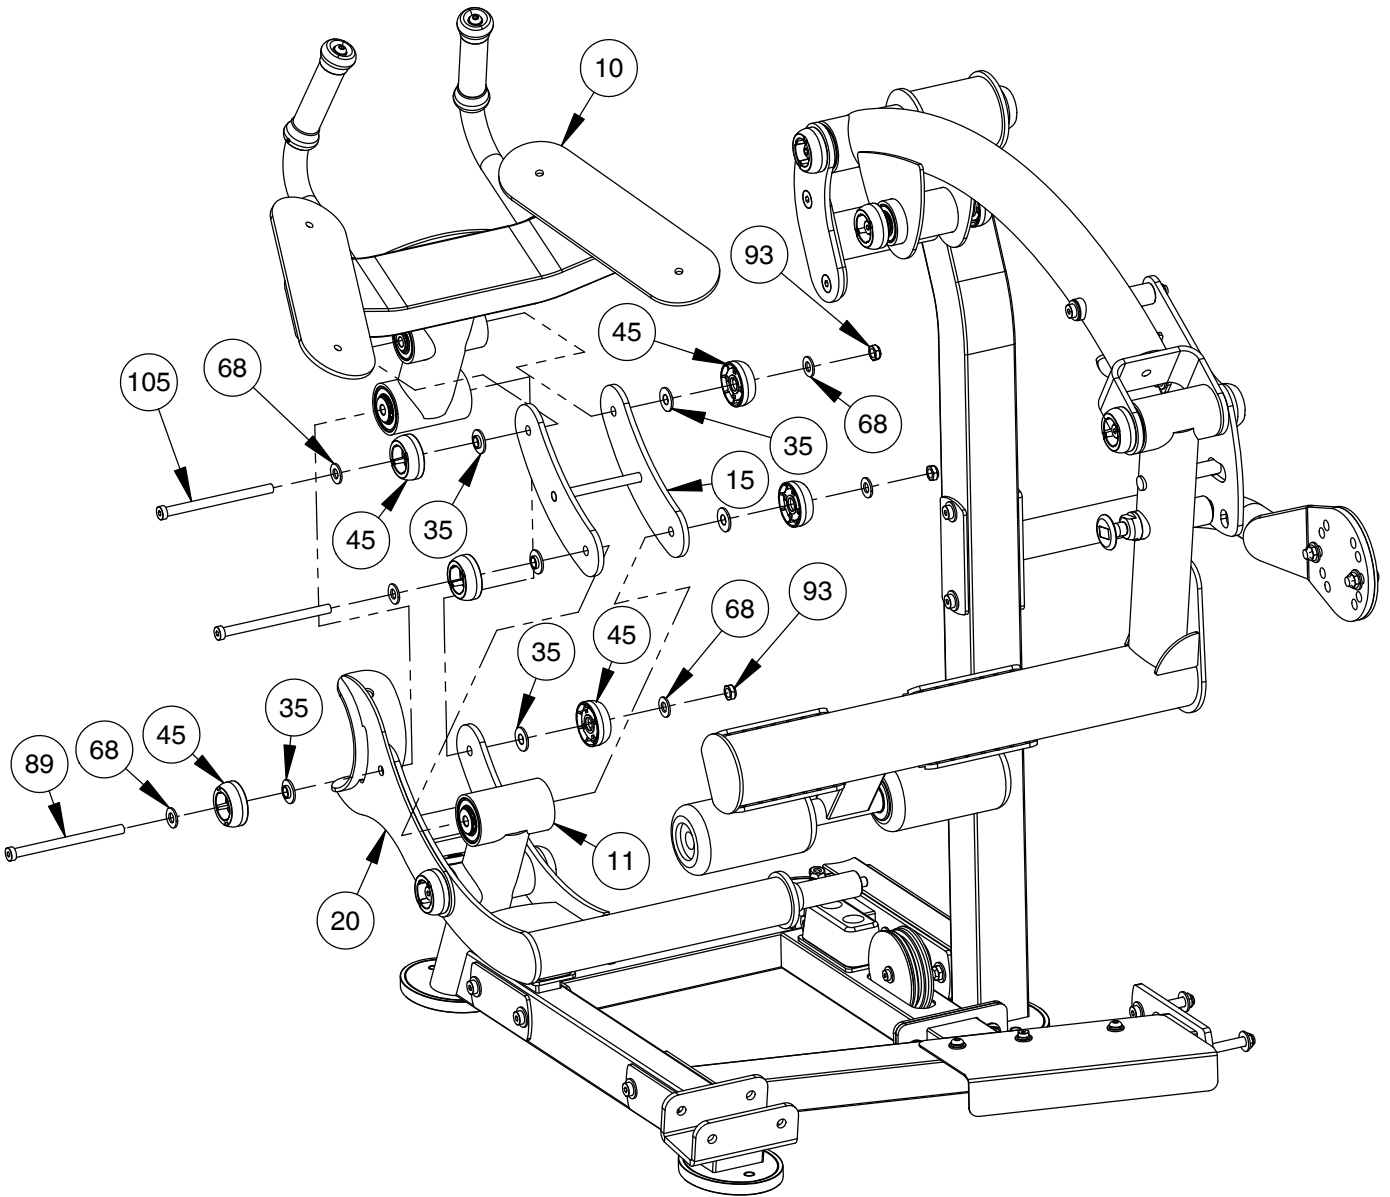

OWNER'S MANUAL

FRAME ASSEMBLY


- NOTE:
- WRENCH TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

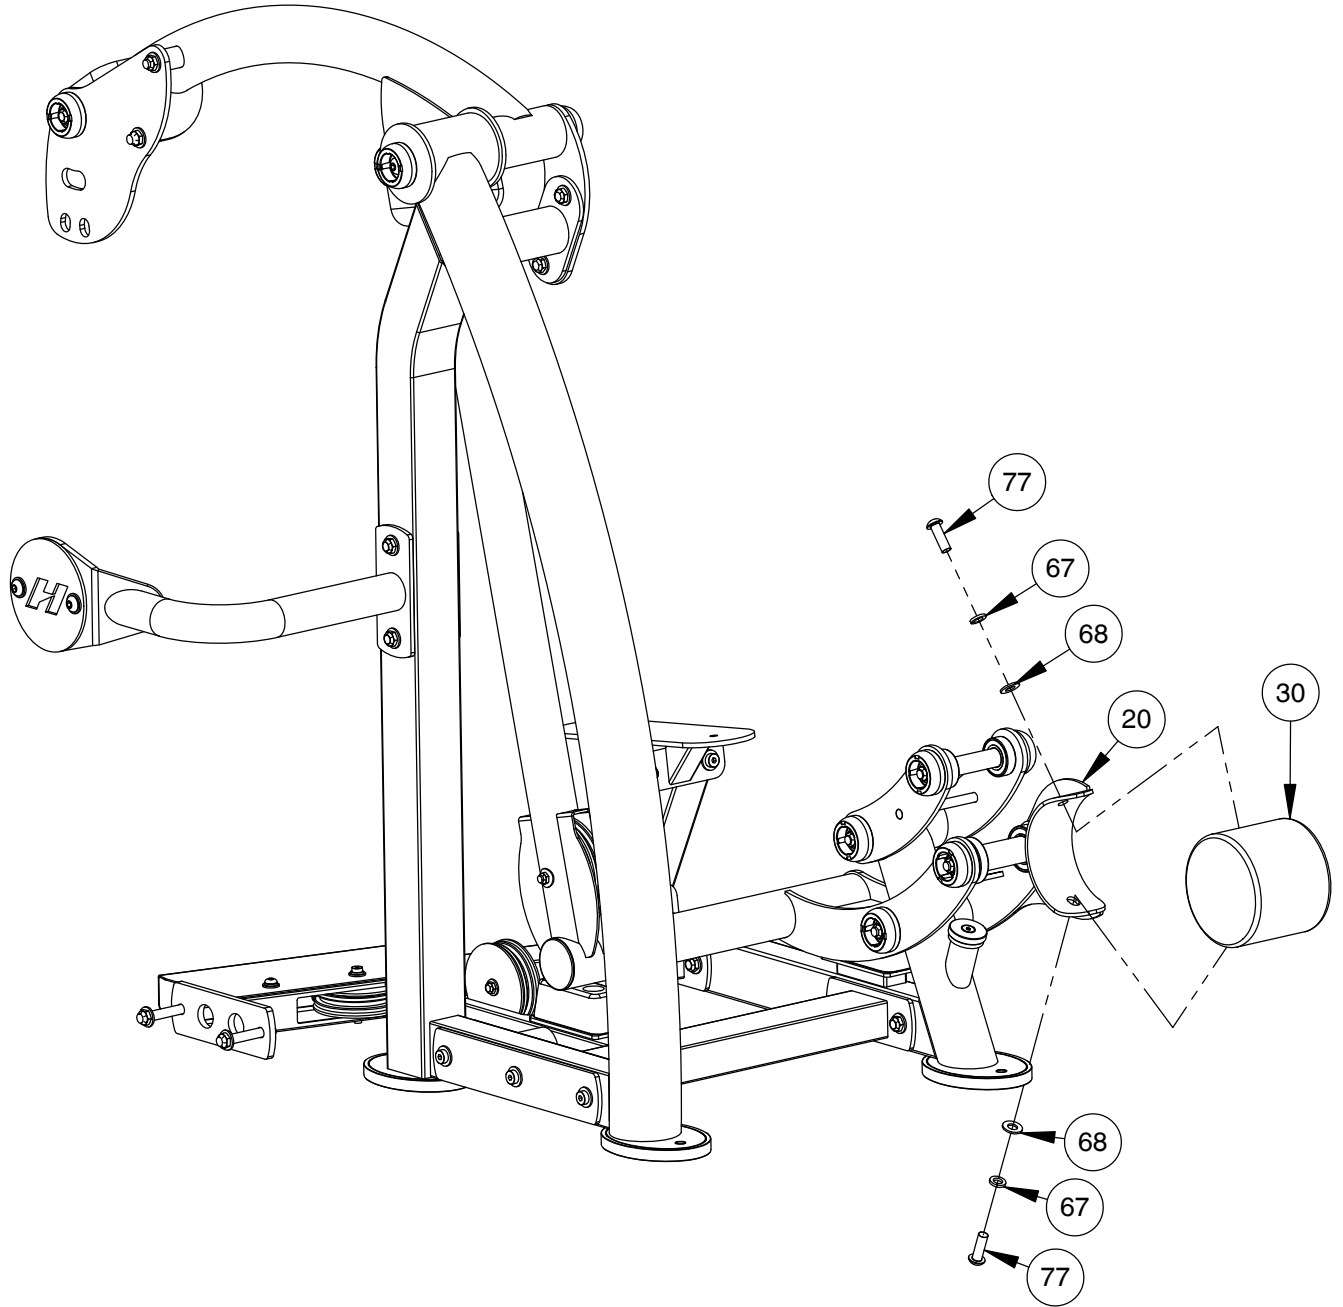

OWNER'S MANUAL

FRAME ASSEMBLY


- NOTE:
- WRENCH TIGHTEN HARDWARE.
- WRENCH TIGHTEN ALL PREVIOUSLY
HAND TIGHTENED HARDWARE.
- SOME PARTS MAY HAVE BEEN
REMOVED FOR CLARITY.

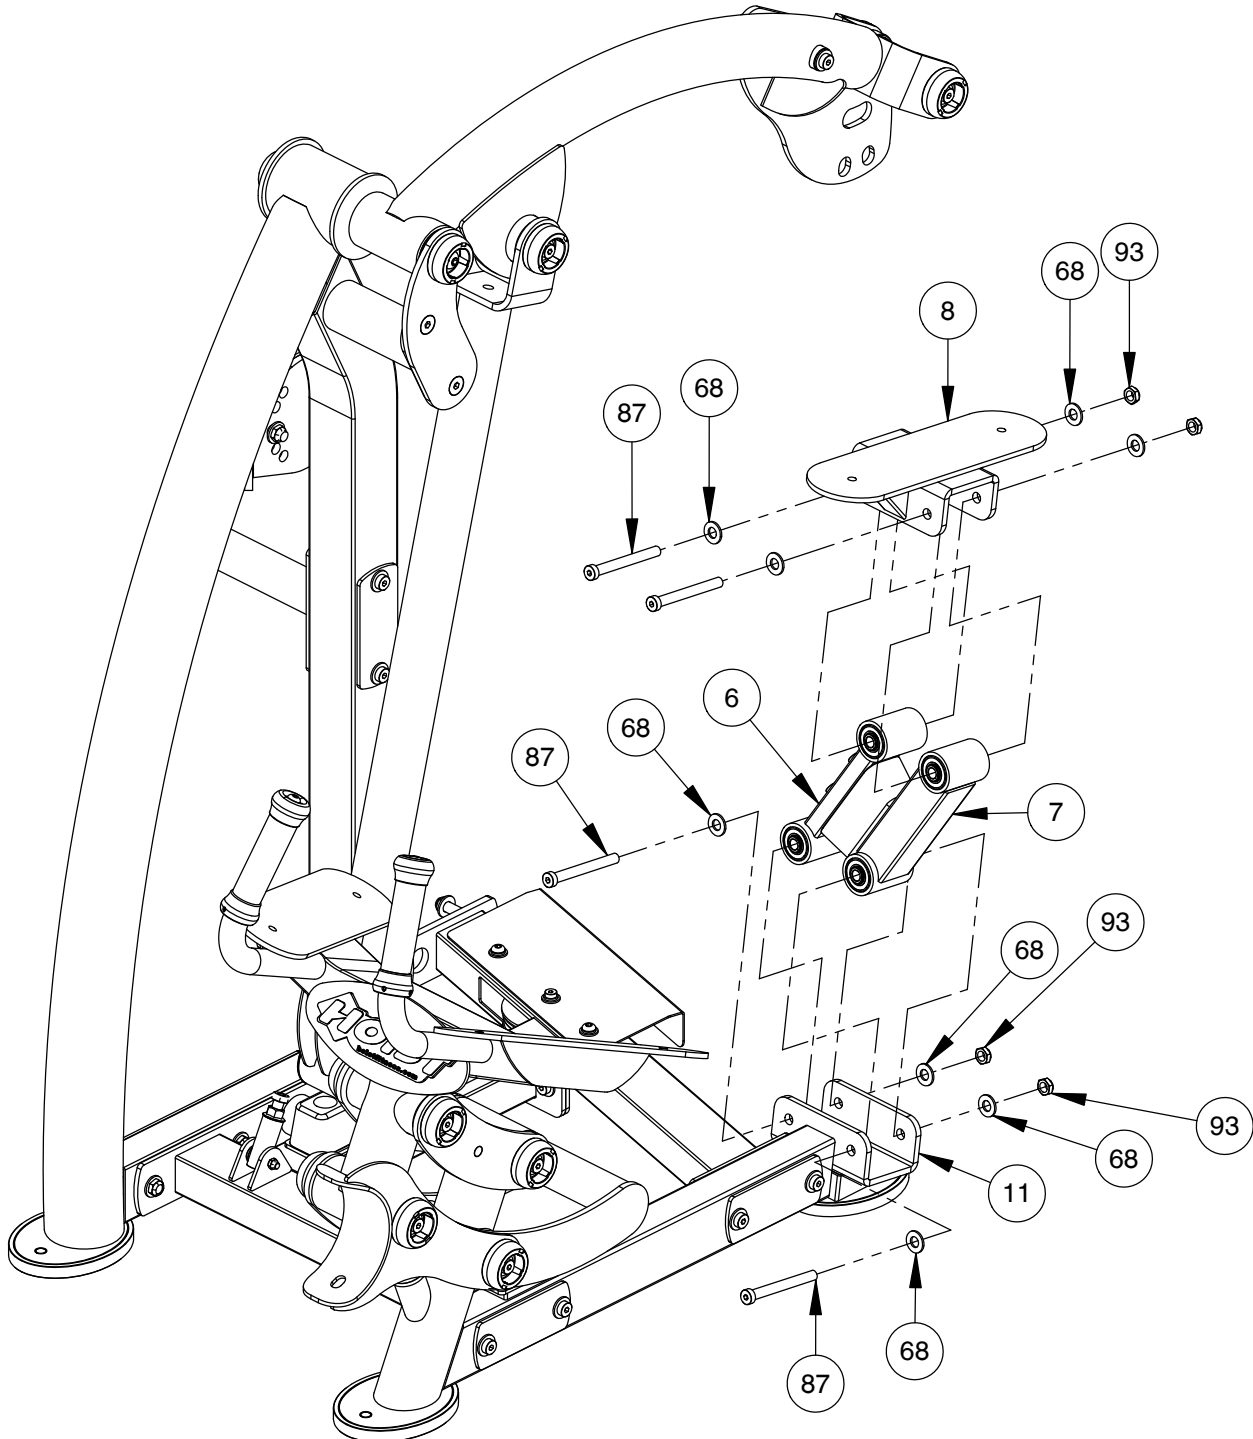

OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:
- WRENCH TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN
REMOVED FOR CLARITY.

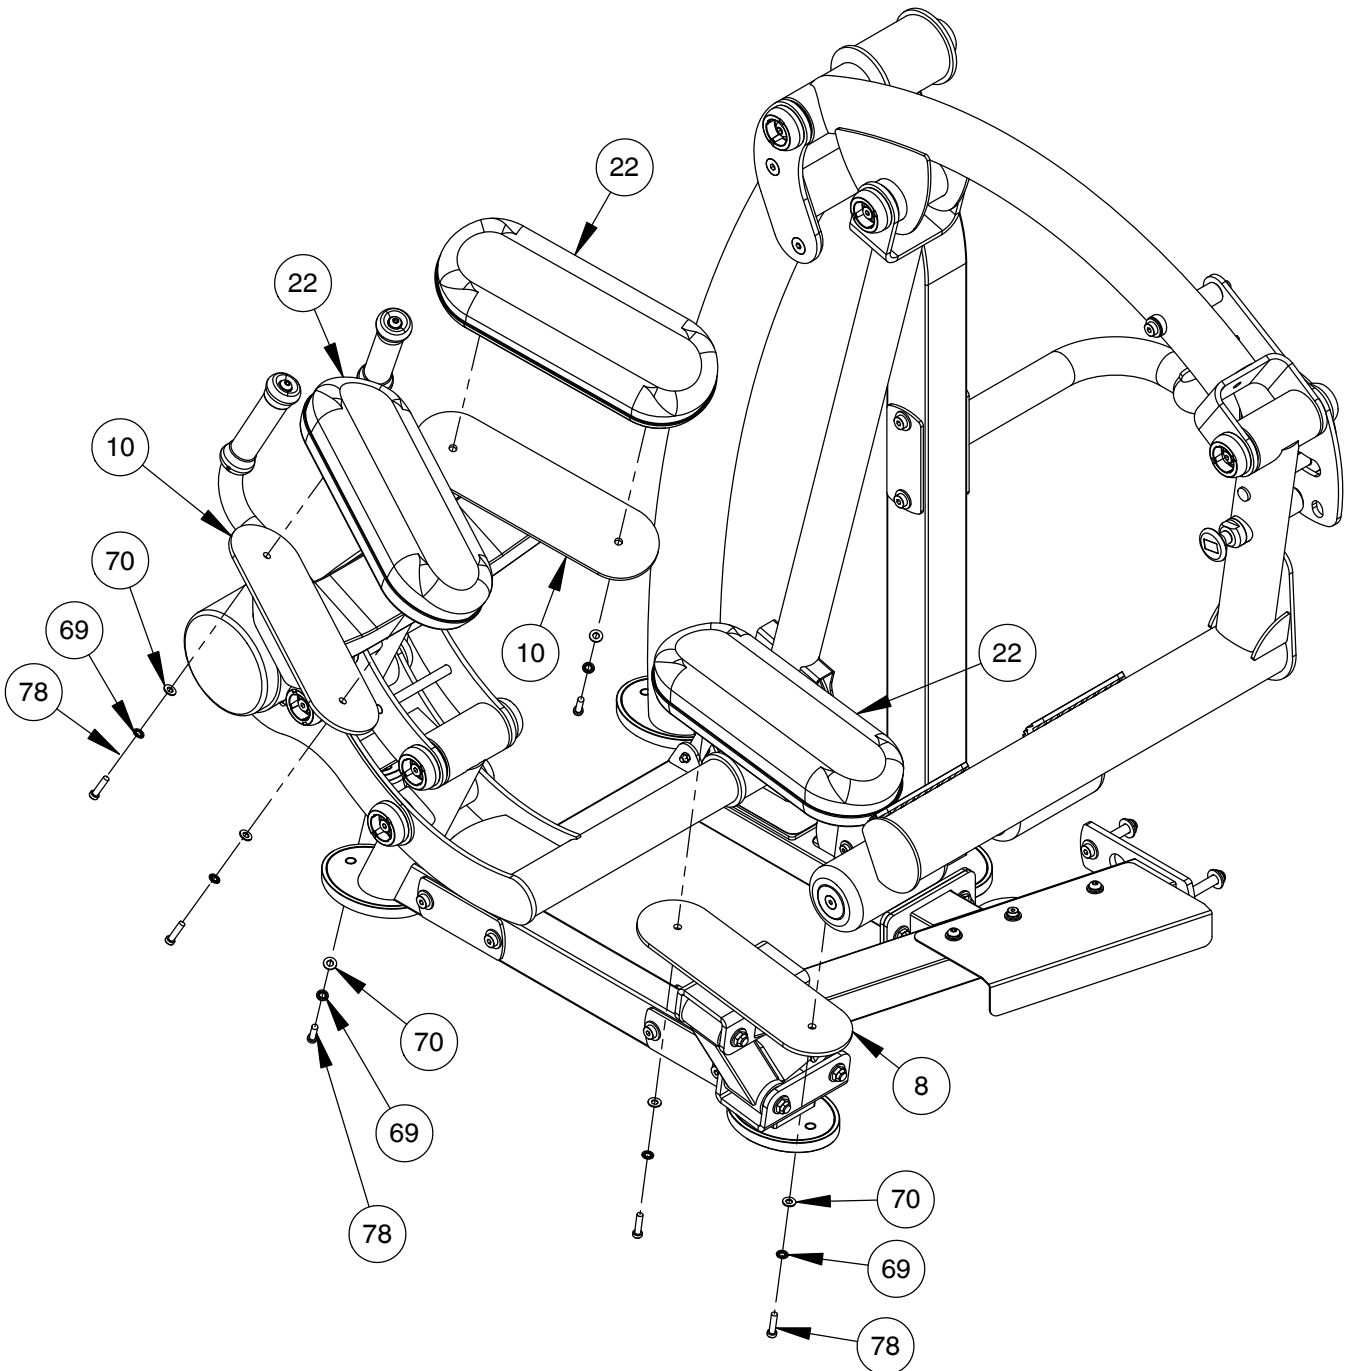

OWNER'S MANUAL


FRAME ASSEMBLY

NOTE:

- BE SURE THAT ALL ASSEMBLIES ARE SQUARE, PERPENDICULAR AND WRENCH TIGHTENED BEFORE INSTALLING END CAPS (44)
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

STOP

WHEN FINISHED WITH THIS STEP PLEASE SEE ROC-IT WEIGHT CAGE MANUAL FOR FINAL ASSEMBLY.

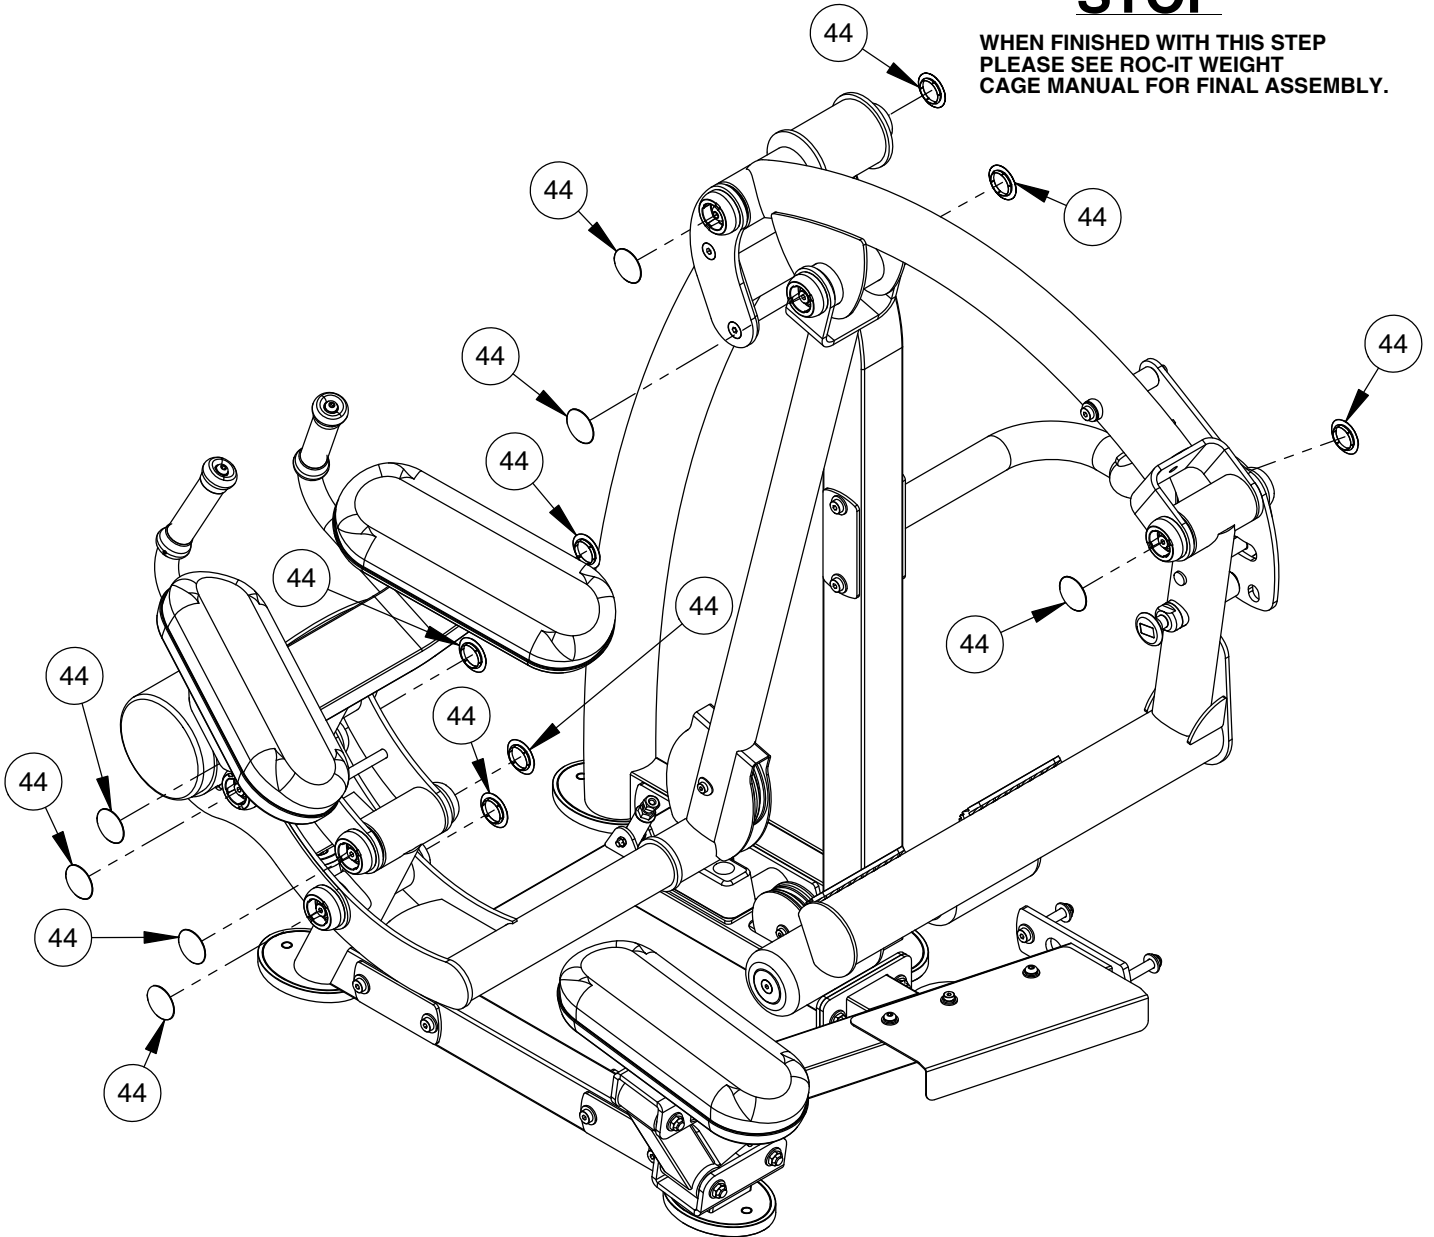


IMPORTANT

NOW THAT THE RS-1412 IS COMPLETELY ASSEMBLED TAKE TIME TO ASSURE THAT YOUR UNIT IS ASSEMBLED SQUARE AND PERPENDICULAR. IF NOT, IT WILL BE NECESSARY TO LOOSEN SOME FRAME HARDWARE TO RE-ALIGN THE FRAME AND RETIGHTEN BOLTS.


OWNER'S MANUAL

PRE-ASSEMBLY

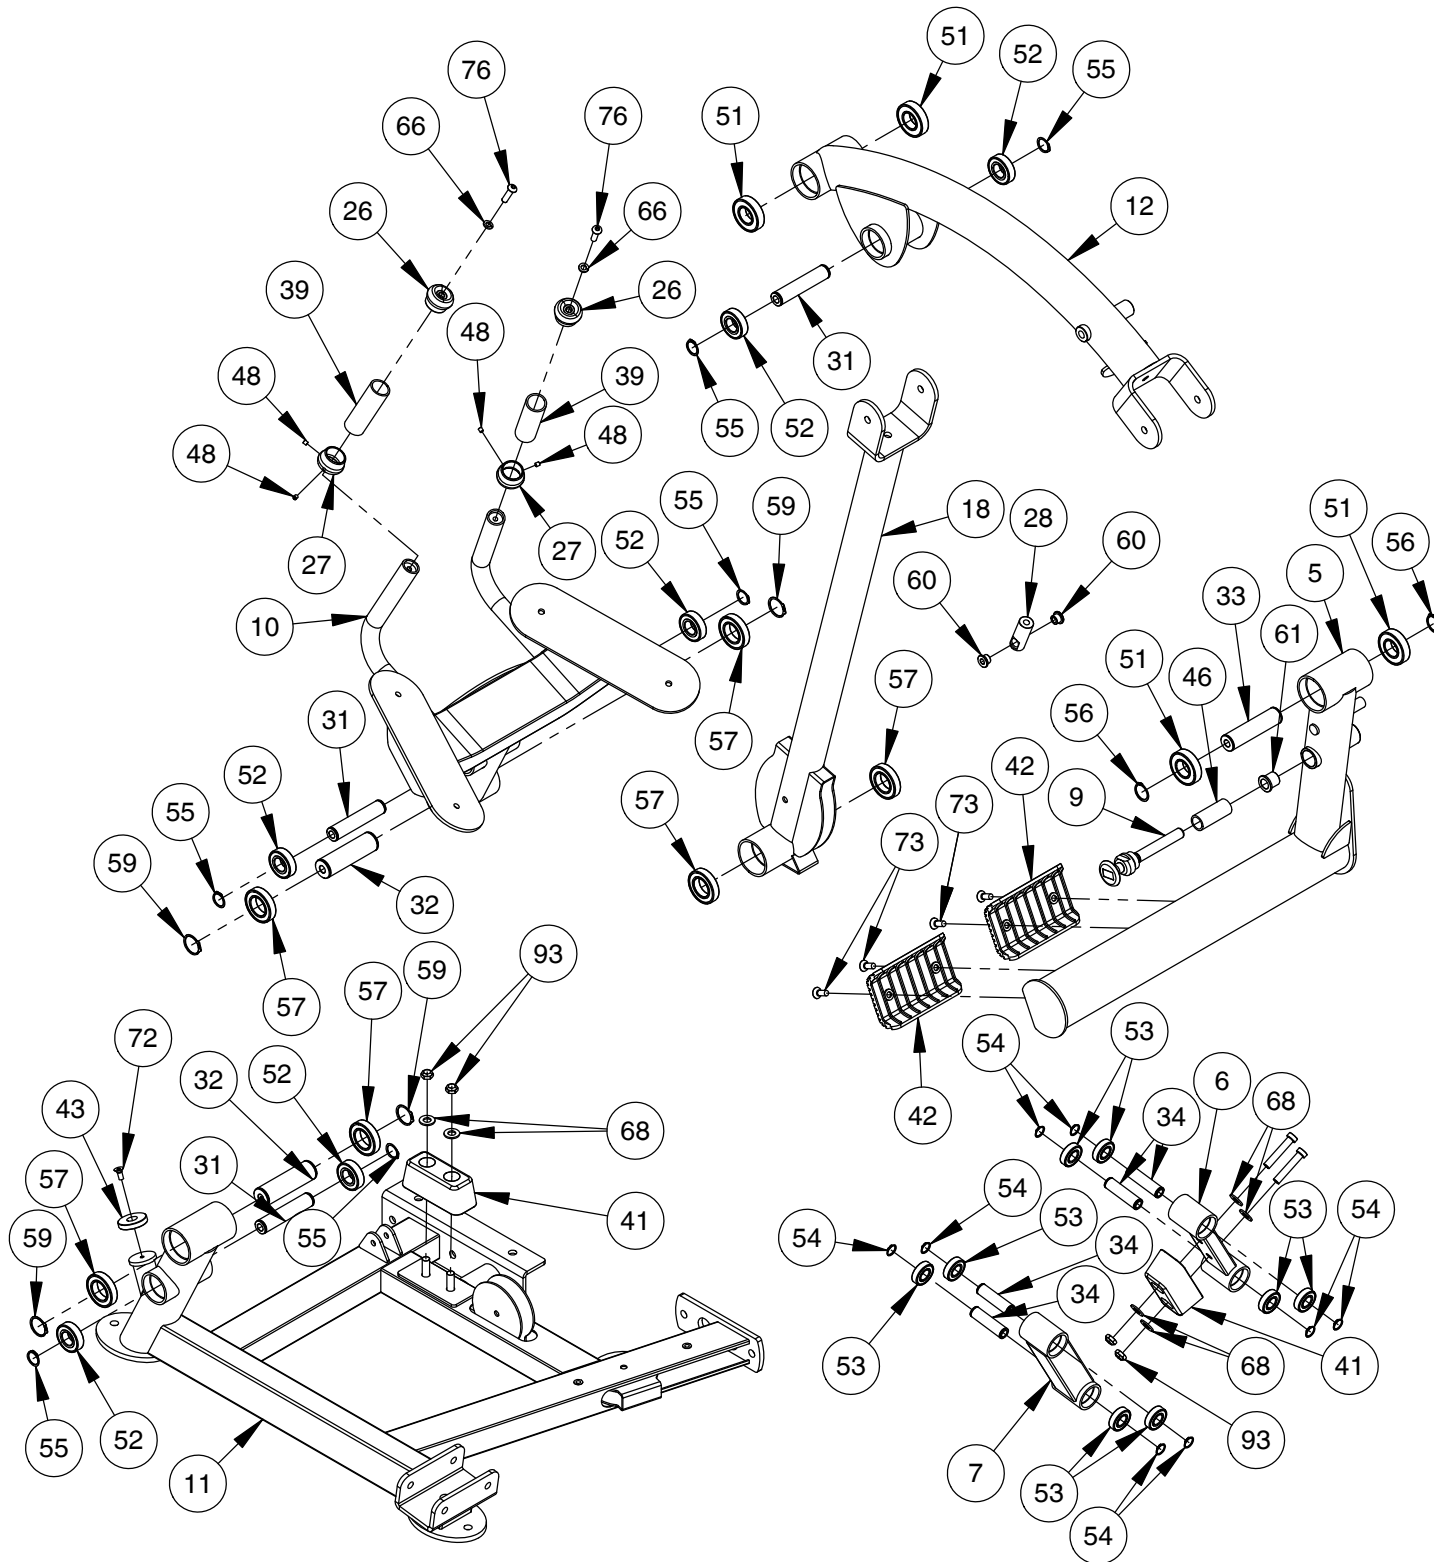


OWNER'S MANUAL

DECAL PLACEMENT

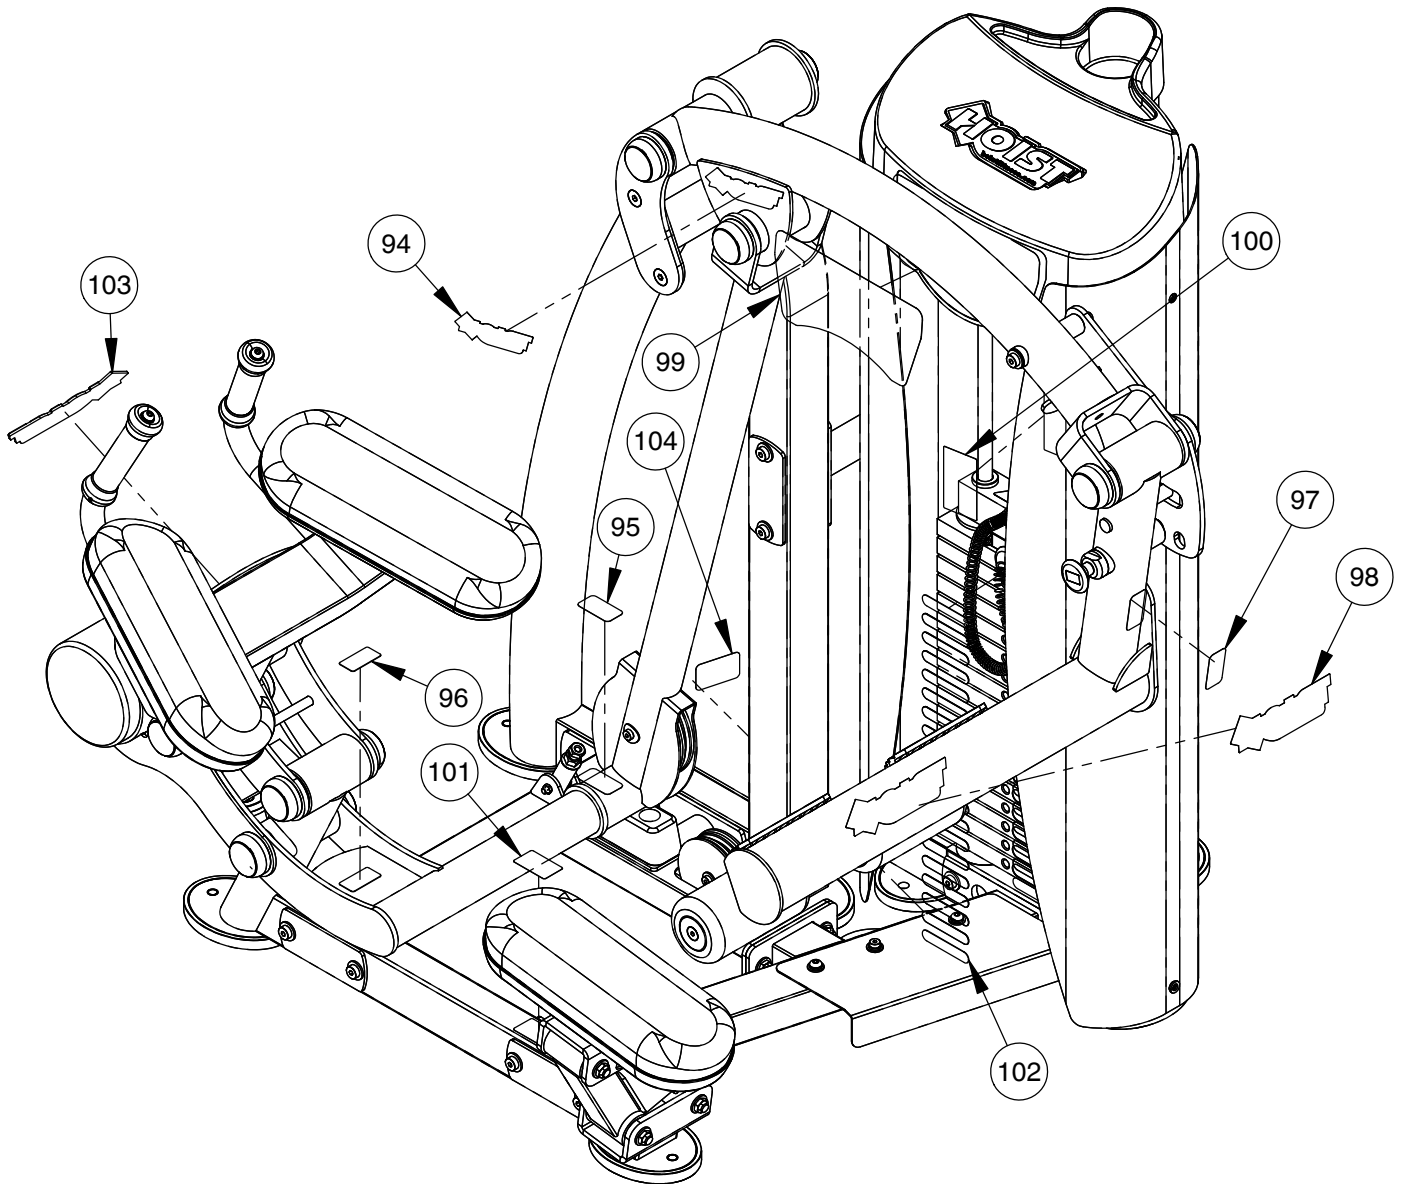

OWNER'S MANUAL

DECAL REFERENCE




GLUTE MASTER

RS-1412


GLUTES

CAUTION

- 1 Keep knee on support pad and hands on handles at all times.
- 2 Upper torso support is designed to move as you exercise.
- 3 Do not enter or exit the machine unless it is stationary.

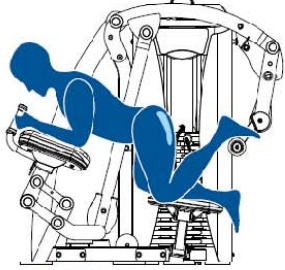

START

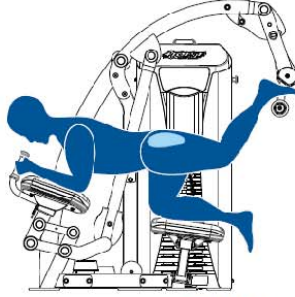

EXERCISE

INSTRUCTIONS

- 1 **ADJUST** footrest to desired start position.
- 2 Place knee on support pad and grasp handles for support.
- 3 Raise non-kneeling leg rearward lifting footrest. **EXERCISE.**
- 4 Slowly return to start position.

021-0003830



021-0003341

021-0018022

| | | |
|-----------------|------------------|------------------|
| 8 LBS / 4 KGS | 88 LBS / 40 KGS | 168 LBS / 76 KGS |
| 18 LBS / 8 KGS | 98 LBS / 44 KGS | 178 LBS / 81 KGS |
| 28 LBS / 13 KGS | 108 LBS / 49 KGS | |
| 38 LBS / 17 KGS | 118 LBS / 54 KGS | |
| 48 LBS / 22 KGS | 128 LBS / 58 KGS | |
| 58 LBS / 26 KGS | 138 LBS / 63 KGS | 021-0003938 |
| 68 LBS / 31 KGS | 148 LBS / 67 KGS | |
| 78 LBS / 35 KGS | 158 LBS / 72 KGS | |



021-0003839



021-0003322



021-0003627



021-0003230



1-800-548-5438

www.hoistfitness.com

SERIAL # 00-00-A-000000



SERIAL# DECAL



021-0003543

TO VISIT THE HOIST® MOBILE APPLICATION, SCAN THE QR CODE* BELOW WITH YOUR SMARTPHONE'S CAMERA.

*THE APPLICATION PROVIDES A SHORT VIDEO, ALONG WITH ANSWERS TO:

- HOW DO I USE THIS MACHINE?
- WHY DOES THE MACHINE MOVE?
- HOW MUCH WEIGHT AM I LIFTING?

SCAN HERE:

*USING YOUR SMARTPHONE, VISIT WWW.HOISTFITNESS.COM/SCAN TO DOWNLOAD A FREE QR CODE SCANNER.

021-0003838

OWNER'S MANUAL

PART LIST

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------------------|---|------|
| 1 | 010-01C0674 | Ø.188" X Ø.25" CABLE ASSY. (GLUTE) 132 1/4" LG. | 1 |
| 2 | ROC-IT WEIGHT CAGE - A2 | ROC-IT WEIGHT CAGE | 1 |
| 3 | 026-01X0139 | ROLLER BAR ASSEMBLY 17.69" LG. | 1 |
| 4 | 026-01X5679 | CROSS BAR ASSEMBLY | 1 |
| 5 | 026-01X5694 | PRESS ARM | 1 |
| 6 | 026-01X5695 | LINK, PIVOT | 1 |
| 7 | 026-01X5696 | LINK, PIVOT | 1 |
| 8 | 026-01X5697 | PAD MOUNT | 1 |
| 9 | 026-01X5740 | PULL-PIN ASSEMBLY | 1 |
| 10 | 026-01X5746 | TORSO SUPPORT | 1 |
| 11 | 026-01X7171 | BASE FRAME | 1 |
| 12 | 026-01X5749 | PRESS ARM ADJUST TUBE | 1 |
| 15 | 026-01X5756 | LINK, PIVOT | 1 |
| 16 | 026-01X5765 | SHAFT SUPPORT | 1 |
| 17 | 026-01X5766 | PIVOT UPRIGHT | 1 |
| 18 | 026-01X7170 | RESISTANCE LINK | 1 |
| 19 | 026-01X5777 | LINK, LEVERAGE | 1 |
| 20 | 026-01X6640 | COUNTERWEIGHT MOUNT | 1 |
| 21 | 022-01PDR017 | ROLLER PAD Ø3.75" X 7.00" LG. | 2 |
| 22 | 022-01PD2340-A-M | PAD ASSEMBLY | 3 |
| 23 | 026-01F0307 | FLANGE: 2 HOLES 6.25" X 2.50" | 1 |
| 24 | 026-01F0432 | BRACKET PLATE: 3 HOLES 13.5000" X 2.7500" | 1 |
| 25 | 026-01M0238 | FLATHEAD CAP Ø2.00" ALUM. | 2 |
| 26 | 026-01M0932 | ALUMINIUM CAP: Ø1.25" ID | 2 |
| 27 | 026-01M0933 | ALUMINUM RING: Ø1.25" ID | 2 |
| 28 | 026-01M1103 | THREADED CABLE ANCHOR Ø1.00" O.D X 2.50" LG. | 1 |
| 29 | 026-01M1136 | SHAFT CABLE ANCHOR Ø.375" X 1.53" LG. | 1 |
| 30 | 026-01M2358 | 30 LB. COUNTERWEIGHT, RUBBER COATED | 1 |
| 31 | 026-01M2360 | SHAFT - Ø 25mm X 4.71" LG. | 3 |
| 32 | 026-01M2726 | SHAFT: Ø35MM O.D. X Ø.5156" I.D. X 4.71" LG. | 2 |
| 33 | 026-01M2629 | SHAFT - Ø 1.181" X 4.71" LG. | 1 |
| 34 | 026-01M2661 | SHAFT Ø.787" OD X Ø.5156" ID X 2.9375" LG. | 4 |
| 35 | 026-01M3119 | FINISHED CAP WASHER | 14 |
| 36 | 026-01P2653 | 'H' PLATE | 1 |

OWNER'S MANUAL

PART LIST

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-----------------|--|------|
| 37 | 026-01P5362 | ROM PLATE | 1 |
| 38 | 026-01P5440 | CABLE SHIELD | 1 |
| 39 | 026-01PL0235-12 | GRIP OPEN END ϕ 1.43" X 4.25" LG. | 2 |
| 40 | 026-01PL2122 | OVAL-SHAPED RUBBER FOOT | 4 |
| 41 | 026-01PL2246 | DUAL HOLE BUMPER 2.05" THICK | 2 |
| 42 | 026-01PL2303 | FOOT PLATE PLASTIC 7.00" X 4.37" | 2 |
| 43 | 026-01PL2362 | STOP, 2.0000" OD X .375" T | 1 |
| 44 | 026-01PL2371 | 3.75" ROLLER PAD END CAP | 14 |
| 45 | 026-01PL2553 | FINISH CAP BODY, ϕ 2.3750" | 14 |
| 46 | 026-01T5558 | 2.75" X ϕ 1.13" SPACER | 1 |
| 47 | 026-STD-06-0027 | PLASTIC WASHER ϕ 2.50" | 2 |
| 48 | 011-0711001 | SET SCREW: 1/4"-28 X .25" LG. (Ni) | 4 |
| 49 | 013-0003012 | ϕ 2.0000" O.D. X ϕ .5300" I.D. CUSTOM WASHER | 1 |
| 50 | 014-0011001 | NYLINER BUSHING: ϕ 1.09" O.D. X ϕ 1.00" I.D X 1.13" LG. | 2 |
| 51 | 014-0012013 | BEARING: BALL BEARING ϕ 2.44" O.D. X ϕ 1.18" I.D. | 4 |
| 52 | 014-0012014 | BEARING: FLANGELESS - 25mm I.D. | 6 |
| 53 | 014-0012015 | BEARING: FLANGELESS ϕ 1.65" O.D. X ϕ .79" I.D. X .47" WIDE | 8 |
| 54 | 014-0012017 | SNAP RING - 20mm EXTERNAL | 8 |
| 55 | 014-0012018 | SNAP RING - 25mm EXTERNAL | 6 |
| 56 | 014-0012019 | SNAP RING - 30mm EXTERNAL | 2 |
| 57 | 014-0012020 | BEARING - FLANGELESS BALL 2.44" O.D. X 35MM I.D. X .55" | 6 |
| 59 | 014-0015023 | EXTERNAL SNAP RING 1.38" DIA. | 4 |
| 60 | 014-0101020 | BUSHING: OILITE FLANGED ϕ .63" O.D. X ϕ .38" I.D. X .50" LG. | 2 |
| 61 | 014-0101030 | FLANGED OILITE 18MM I.D. X 25MM L.G. | 1 |
| 62 | 016-0201053 | ϕ 2.750" END CAP (DOMED) | 1 |
| 63 | 018-0001003 | CABLE PULLEY: ϕ 4.50" | 2 |
| 64 | 018-0002017 | PULLEY 6.00" OD | 1 |
| 65 | 013-1009001 | 3/8" CURVED WASHER (Ni) | 2 |
| 66 | 013-1006003 | 3/8" SPLIT LOCK WASHER (Ni) | 5 |
| 67 | 013-1006004 | 1/2" SPLIT LOCK WASHER (Ni) | 6 |
| 68 | 013-1002006 | 1/2" X 27mm SAE FLAT WASHER (Ni) | 56 |
| 69 | 013-1010003 | 5/16" INTERNAL LOCK WASHER (Ni) | 6 |
| 70 | 013-1002010 | 5/16" SAE FLAT WASHER (Ni) | 6 |
| 71 | 013-1002007 | 3/8" X 22mm FLAT WASHER (Ni) | 5 |
| 72 | 011-0702061 | 5/16"-18UNC X .75" FHCS (Ni) | 1 |
| 73 | 011-0702003 | 3/8"-16UNC X 1.00" FHCS (Ni) | 6 |

OWNER'S MANUAL

PART LIST


NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|----------------|--|------|
| 74 | 011-0702024 | 1/2"-13UNC X 1.00" FHS (Ni) | 2 |
| 75 | 011-0701020 | 3/8"-16UNC X 1.00" BHCS (Ni) | 2 |
| 76 | 011-0701021 | 3/8"-16UNC X 1.25" BHCS (Ni) | 2 |
| 77 | 011-0701049 | 1/2"-13UNC X 1.50" BHCS (Ni) | 6 |
| 78 | 011-0116175 | 5/16"-18UNC X 1.25" LOW HEAD SHCS (Ni) | 6 |
| 79 | 011-0116145 | 3/8"-16UNC X 1.75" LOW HEAD SHCS (Ni) | 1 |
| 80 | 011-0116149 | 3/8"-16UNC X 2.75" LOW HEAD SHCS (Ni) | 1 |
| 81 | 011-0116150 | 3/8"-16UNC X 3.00" LOW HEAD SHCS (Ni) | 1 |
| 82 | 011-0116108 | 1/2"-13UNC X 1.25" LOW HEAD SHCS (Ni) | 1 |
| 83 | 011-0116113 | 1/2"-13UNC X 2.50" LOW HEAD SHCS (Ni) | 2 |
| 84 | 011-0116115 | 1/2"-13UNC X 3.00" LOW HEAD SHCS (Ni) | 3 |
| 85 | 011-0116116 | 1/2"-13UNC X 3.25" LOW HEAD SHCS (Ni) | 2 |
| 86 | 011-0116119 | 1/2"-13UNC X 4.00" LOW HEAD SHCS (Ni) | 2 |
| 87 | 011-0116120 | 1/2"-13UNC X 4.25" LOW HEAD SHCS (Ni) | 4 |
| 88 | 011-0116125 | 1/2"-13UNC X 5.50" LOW HEAD SHCS (Ni) | 1 |
| 89 | 011-0116129 | 1/2"-13UNC X 6.50" LOW HEAD SHCS (Ni) | 2 |
| 90 | 011-0116130 | 1/2"-13UNC X 6.75" LOW HEAD SHCS (Ni) | 1 |
| 91 | 012-0504005 | 3/8"-16 UNC THIN NYLOCK NUT (Ni) | 2 |
| 92 | 012-0504006 | 5/16"-18UNC THIN NYLOCK NUT (Ni) | 2 |
| 93 | 012-0504002 | 1/2"-13 UNC THIN NYLOCK NUT (Ni) | 30 |
| 94 | 021-0003230 | DECAL HOIST 1.625" X 6.0613" | 1 |
| 95 | 021-0003322 | DECAL PINCH POINT 1.25" X 2.31" (VERTICAL) | 1 |
| 96 | 021-0003341 | DECAL PINCH POINT 1.07" X 2.13" (HORIZONTAL) | 1 |
| 97 | 021-0003543 | DECAL MOVING PARTS 1.20" X 2.38" (VERTICAL) | 1 |
| 98 | 021-0003627 | DECAL HOIST 2.07" X 7.75" | 1 |
| 99 | 021-0003830 | ROC-IT RS-1412 GLUTE MASTER PLACARD | 1 |
| 100 | 021-0003838 | GLUTE MASTER | 1 |
| 101 | 021-0003839 | ADJUST KNEE PAD DECAL | 1 |
| 102 | 021-0003938 | DECAL: ROC-IT WEIGHT STACK #7 | 1 |
| 103 | 021-0018022 | DECAL HOISTFITNESS.COM LOGO | 1 |
| 104 | SERIAL # DECAL | DECAL HOIST SERIAL # 1.63" X 2.63" | 1 |
| 105 | 011-0716022 | 1/2"-13UNC X 6.375" LOW HEAD SHCS (Ni) | 3 |
| 106 | 011-0701048 | 1/2"-13UNC X 1.25" BHCS (Ni) | 2 |


OWNER'S MANUAL

ABBREVIATIONS


BZ = Black Zinc
Ni = Nickel Plated
WZ = White Zinc
SS = Stainless Steel

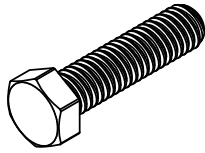


HHB = Hex Head Bolt

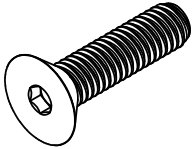


FHCS = Flat Head Cap Screw

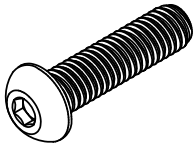


BHCS = Button Head Cap Screw

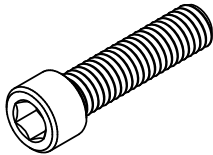

SHCS = Socket Head Cap Screw

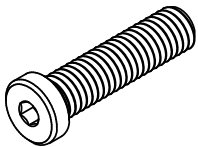



Low Head SHCS = Low Head Socket
Head Cap Screw

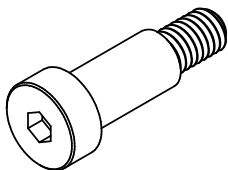



SHSS = Socket Head Shoulder Screw

OWNER'S MANUAL

 

BOLT SIZING CHART HEX HEAD BOLT

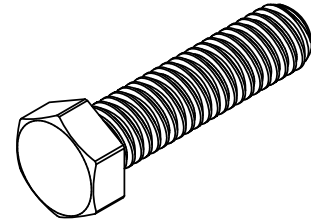

 

1/4" HHB
RECOMMENDED
TORQUE RANGE:
6-8 ft-lbs

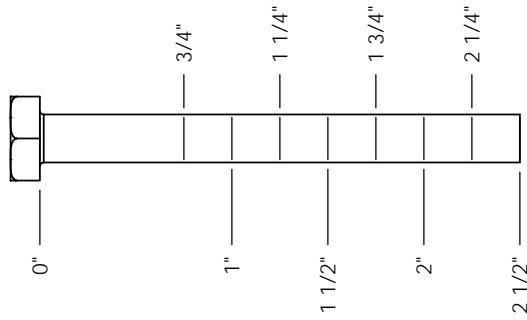

 
5/16" HHB
RECOMMENDED
TORQUE RANGE:
14-17 ft-lbs

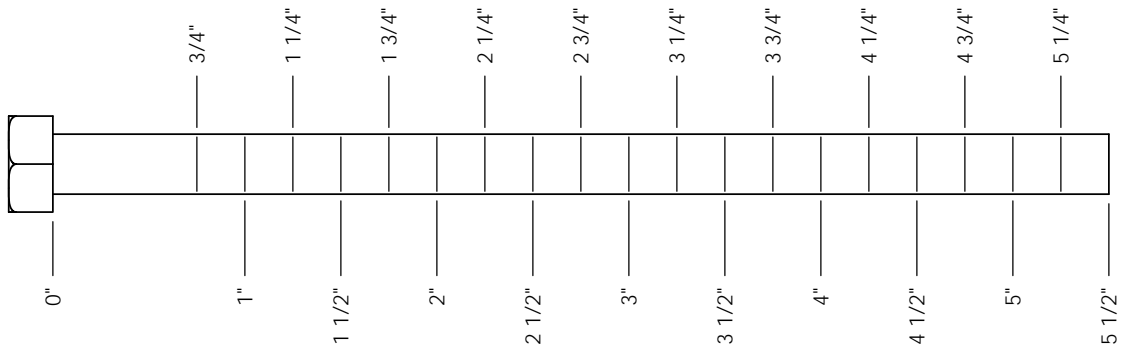

3/8" HHB
RECOMMENDED
TORQUE RANGE:
24-30 ft-lbs

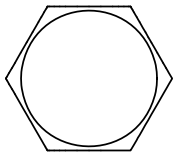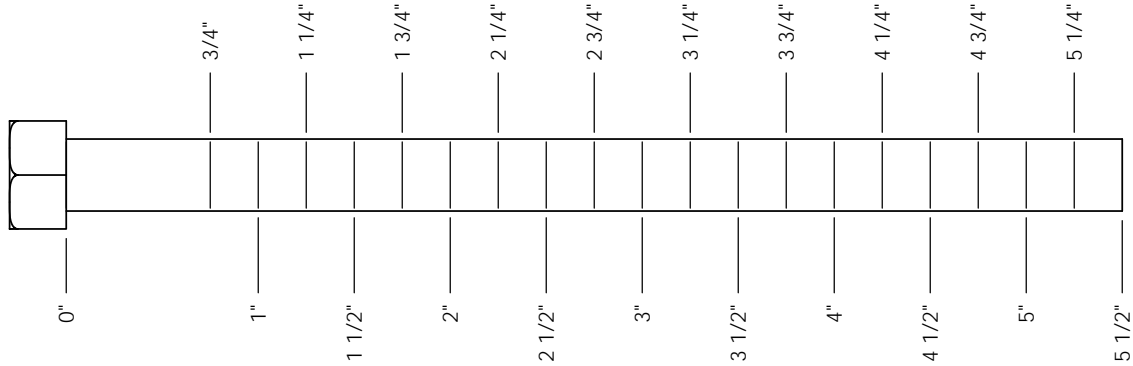


1/2" HHB
RECOMMENDED
TORQUE RANGE:
60-75 ft-lbs



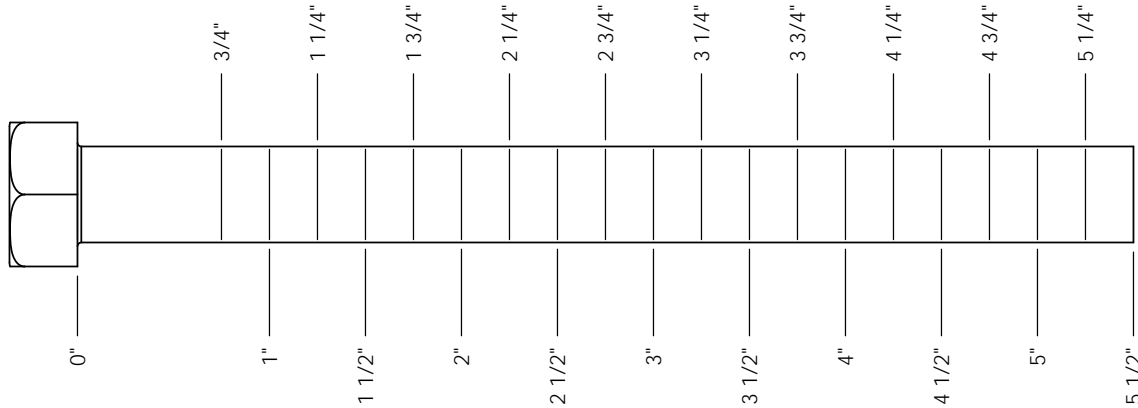


OWNER'S MANUAL


 
BOLT SIZING CHART FLAT HEAD CAP SCREW




1/4" FHCS
RECOMMENDED
TORQUE RANGE:
5-7 ft-lbs

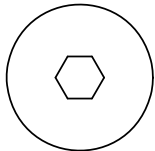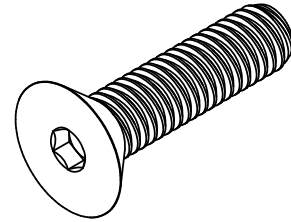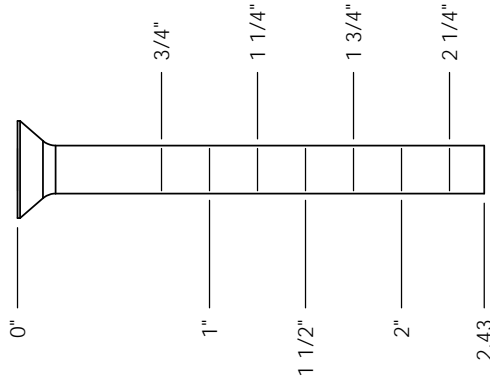

3/8" FHCS
RECOMMENDED
TORQUE RANGE:
19-26 ft-lbs

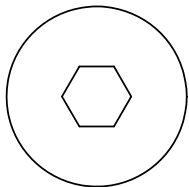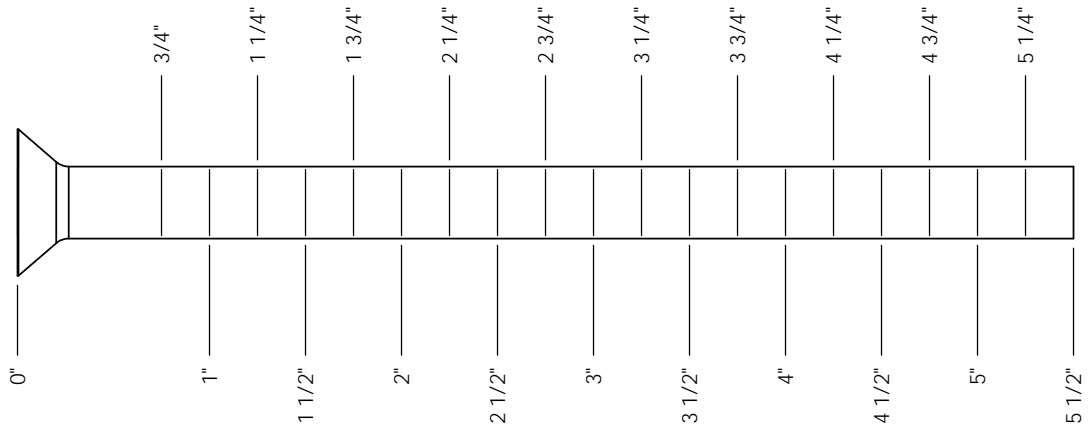

1/2" FHCS
RECOMMENDED
TORQUE RANGE:
47-65 ft-lbs



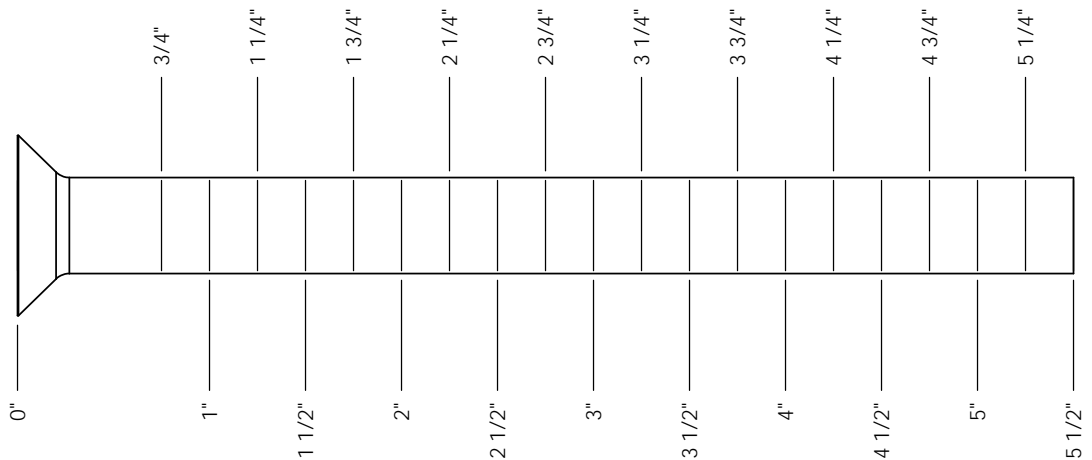


OWNER'S MANUAL



BOLT SIZING CHART BUTTON HEAD CAP SCREW



 

1/4" BHCS
RECOMMENDED
TORQUE RANGE:
5-7 ft-lbs

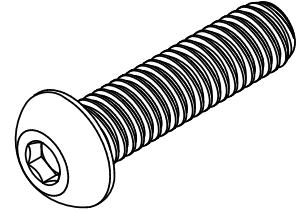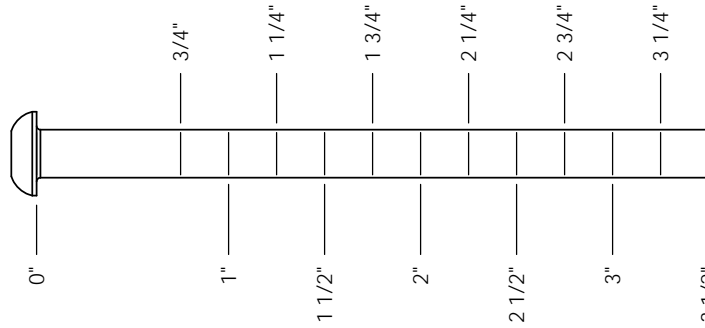


5/16" BHCS
RECOMMENDED
TORQUE RANGE:
11-15 ft-lbs

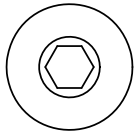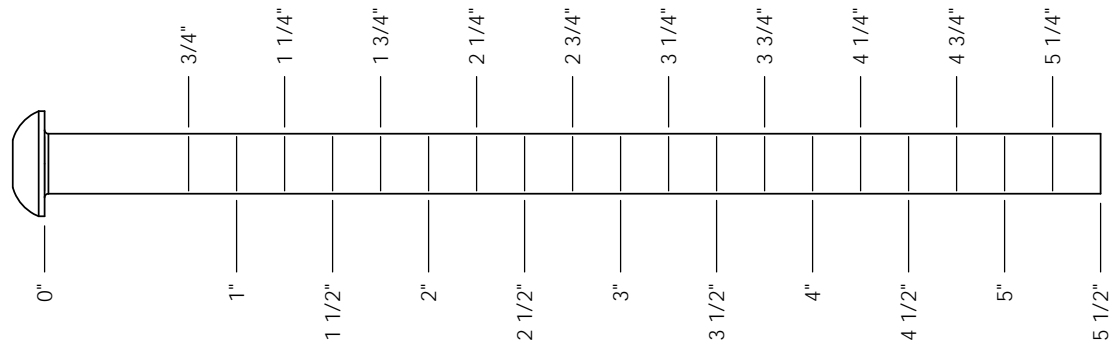

3/8" BHCS
RECOMMENDED
TORQUE RANGE:
19-26 ft-lbs

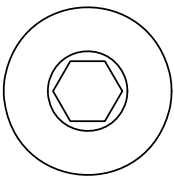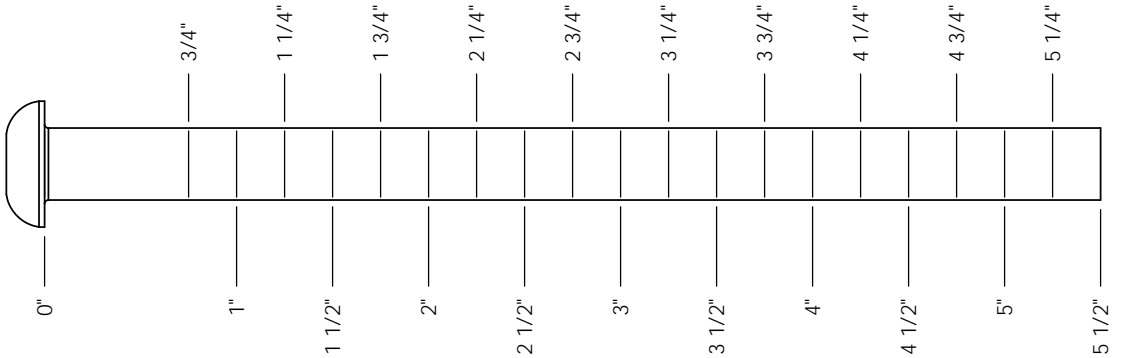

1/2" BHCS
RECOMMENDED
TORQUE RANGE:
47-65 ft-lbs



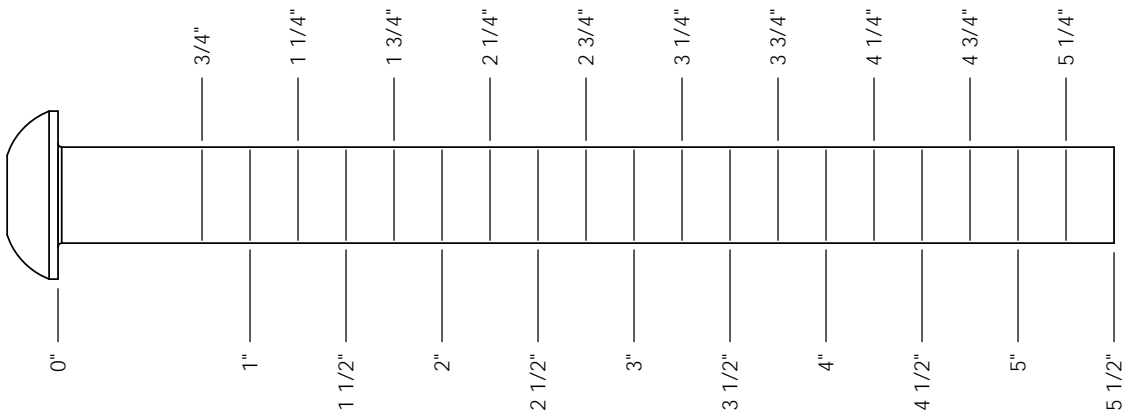


OWNER'S MANUAL



BOLT SIZING CHART SOCKET HEAD CAP SCREW



 
1/4" SHCS
RECOMMENDED
TORQUE RANGE:
11-14 ft-lbs

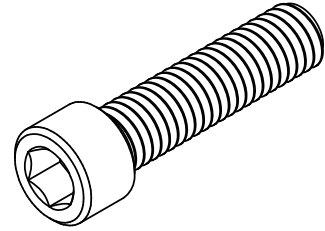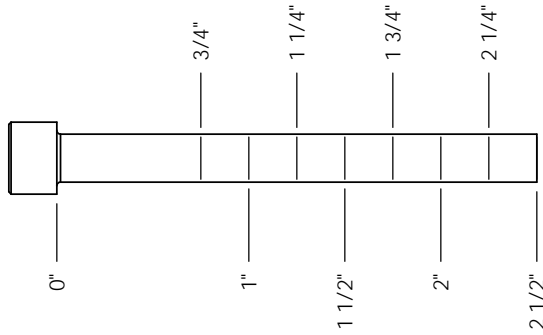

 5/16" SHCS
RECOMMENDED
TORQUE RANGE:
23-29 ft-lbs

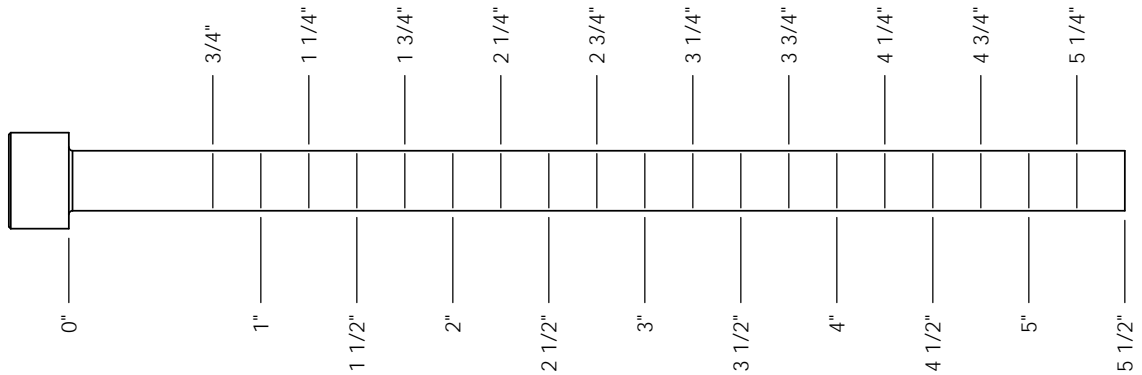

3/8" SHCS
RECOMMENDED
TORQUE RANGE:
39-49 ft-lbs

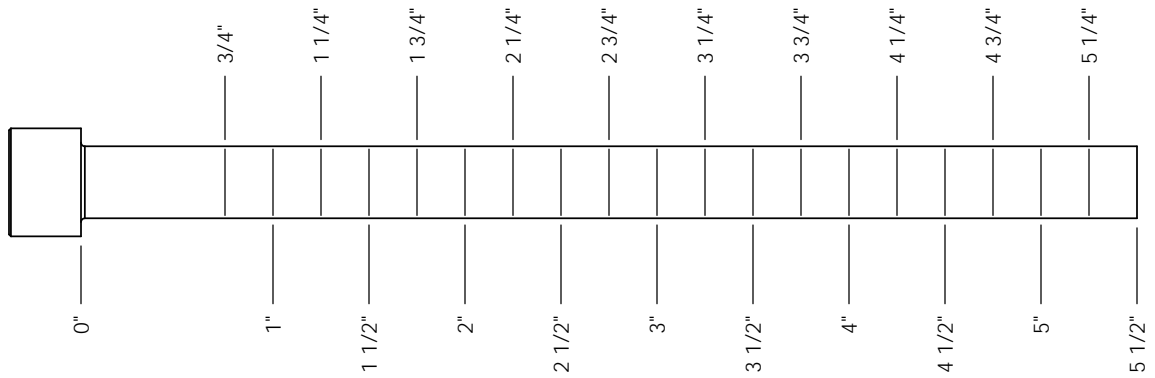




OWNER'S MANUAL

BOLT SIZING CHART LOW HEAD SOCKET HEAD CAP SCREW





1/4"
LOW HEAD
SHCS

 RECOMMENDED
TORQUE RANGE:
4-6 ft-lbs

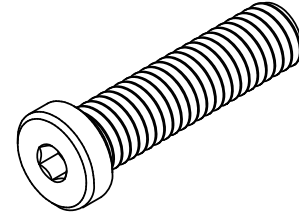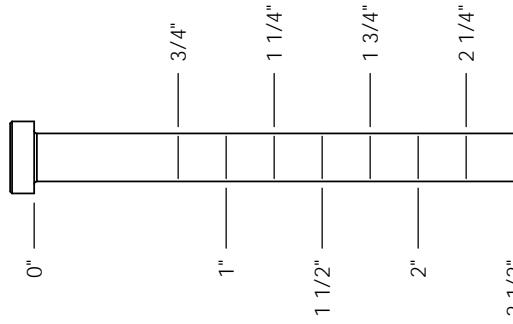



5/16"
LOW HEAD
SHCS

 RECOMMENDED
TORQUE RANGE:
9-12 ft-lbs

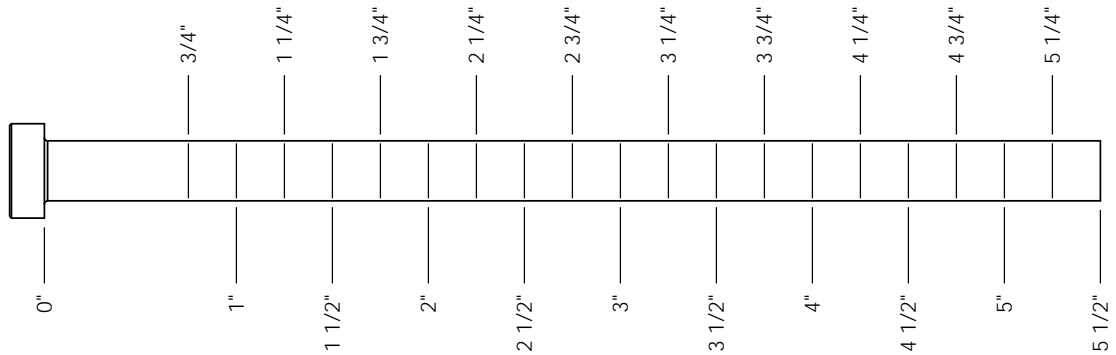


3/8"
LOW HEAD
SHCS

RECOMMENDED
TORQUE RANGE:
18-23 ft-lbs

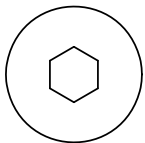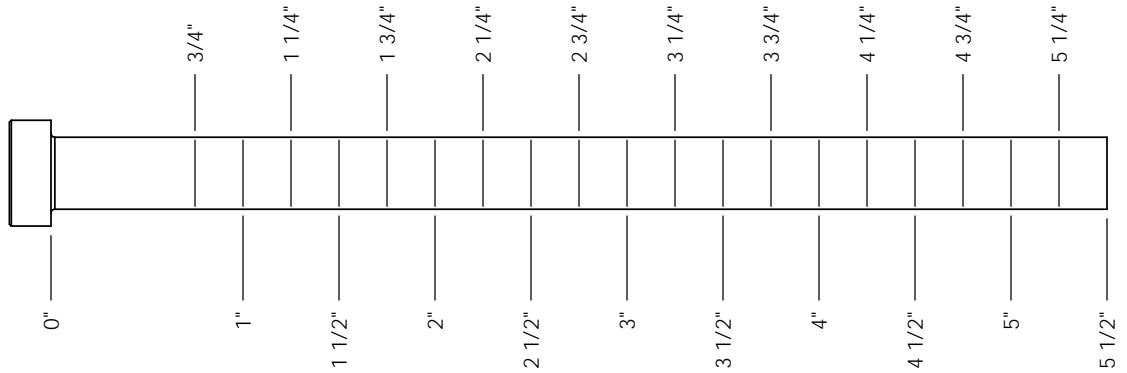

1/2"
LOW HEAD
SHCS

RECOMMENDED
TORQUE RANGE:
40-50 ft-lbs


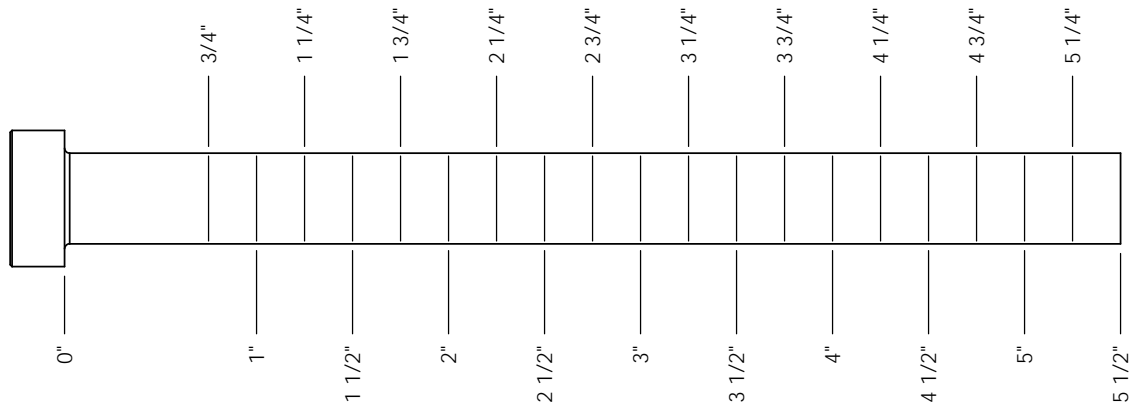


OWNER'S MANUAL



BOLT SIZING CHART SOCKET HEAD SHOULDER SCREW




1/4" SHSS
RECOMMENDED
TORQUE RANGE:
3-4 ft-lbs

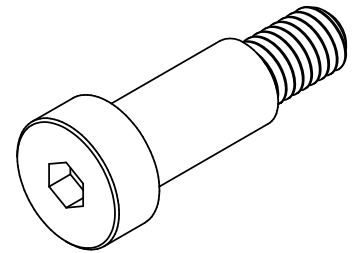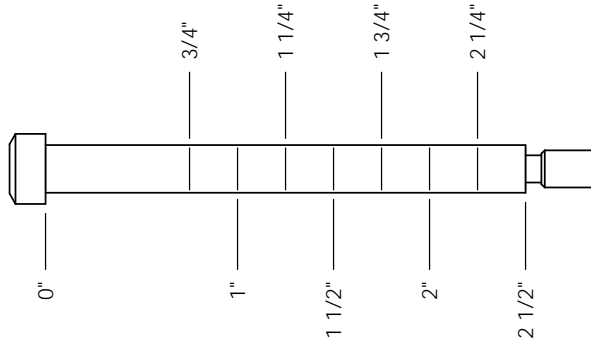

5/16" SHSS
RECOMMENDED
TORQUE RANGE:
8-10 ft-lbs

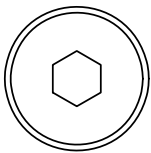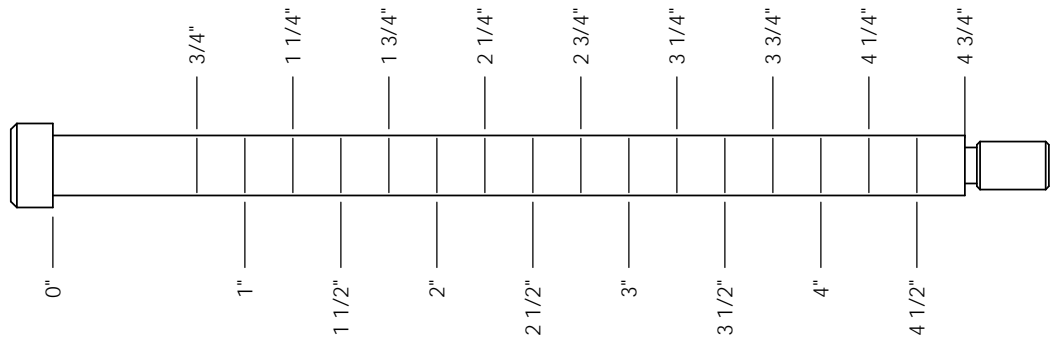


3/8" SHSS
RECOMMENDED
TORQUE RANGE:
17-22 ft-lbs

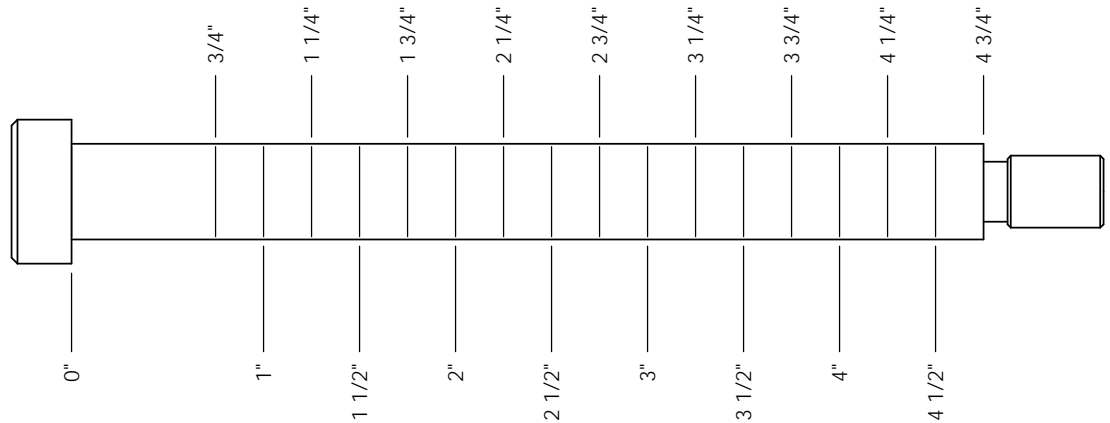


OWNER'S MANUAL

WASHER SIZING CHART

 
013-0002003
1/4"
FLAT WASHER
SMALL, SAE, 13mm




013-0102004
5/16"
FLAT WASHER
LARGE, USS, 22mm

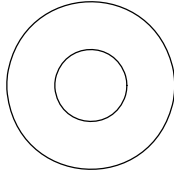


013-0002004
3/8"
FLAT WASHER
SMALL, SAE, 21mm

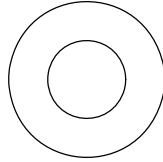


013-0402005
3/8"
FLAT WASHER
LARGE, USS, 25mm

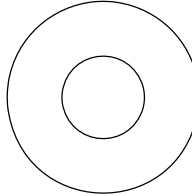


013-0102003
1/2"
FLAT WASHER
SMALL, SAE, 27mm

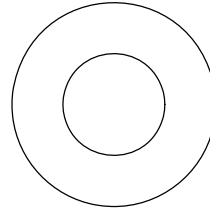


013-0102026
1/2"
FLAT WASHER
LARGE, USS, 34mm

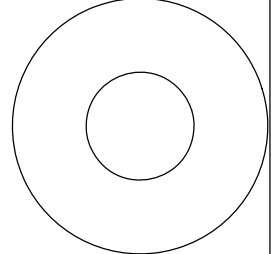

013-0102028
3/8"
CURVED WASHER

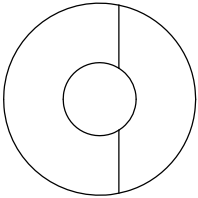


013-0402007
3/8"
FLAT WASHER
22mm O.D.

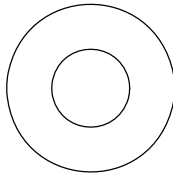


013-0102019
1/4"
LOCK WASHER




013-0102020
3/8"
LOCK WASHER

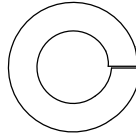


013-0102018
1/2"
LOCK WASHER

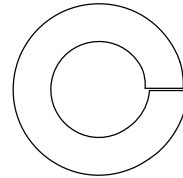


014-0018001
1/2" LONG
SPACER

 


026-01M0238
2" ALUMINUM
FLATHEAD CAP

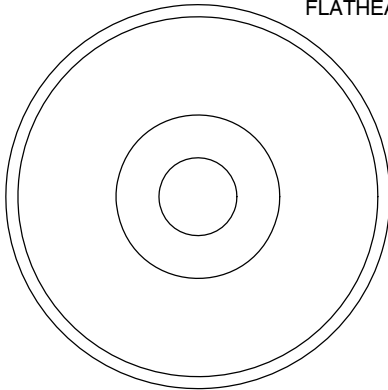


016-0009003
1" SHIM WASHER

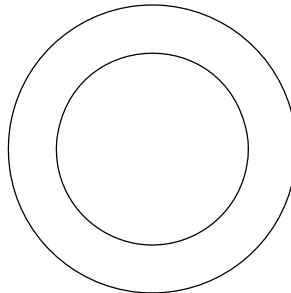


013-0003002
3/8" FENDER WASHER

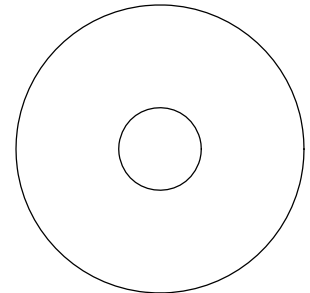


013-0003004
1 1/16"
FENDER WASHER

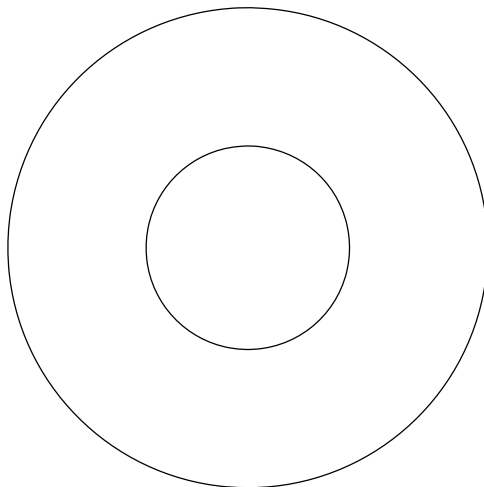

026-01PL151
PLASTIC 1 1/16"
FENDER WASHER

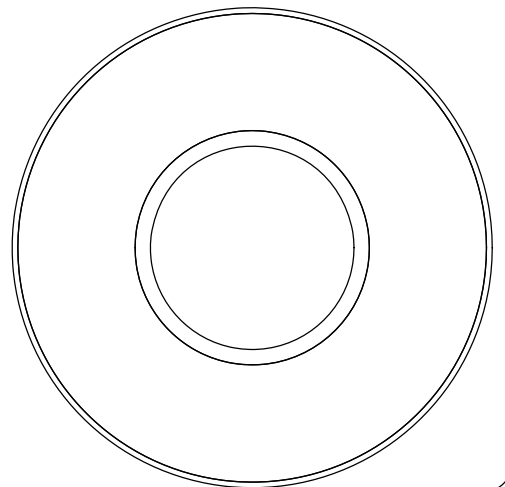


014-0018002
1" LONG
SPACER

 


OWNER'S MANUAL

WASHER SIZING CHART (CONTINUED)


026-01M0211
1/4" LONG
FLANGED SPACER

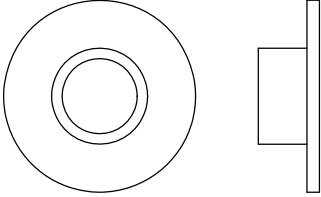


026-01M0198
1/2" LONG
FLANGED SPACER

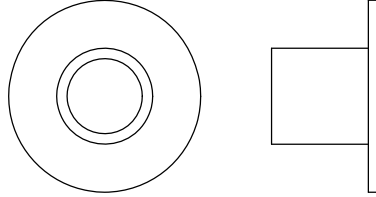


026-01M0760
1/2" LONG HEAVY
FLANGED SPACER

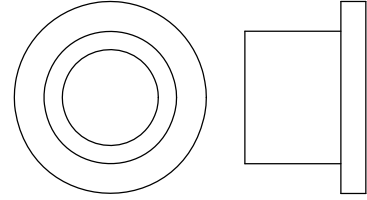


026-01M211T
1/4" LONG HEAVY
FLANGED SPACER

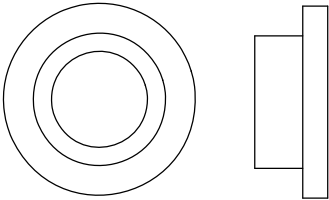


026-01M0532
11/16" LONG HEAVY
FLANGED SPACER

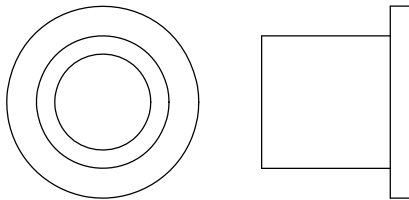


026-01M0551
1" LONG HEAVY
FLANGED SPACER

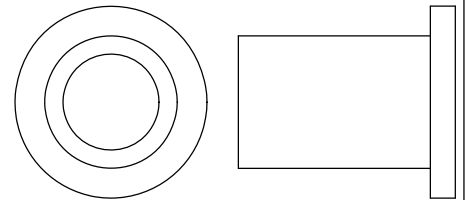


026-01M0788
.81" LONG HEAVY
FLANGED SPACER

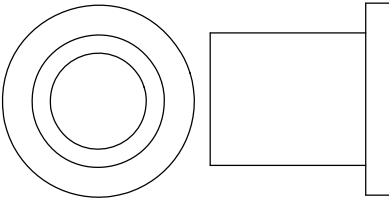


026-01M0780
.65" LONG HEAVY
FLANGED SPACER

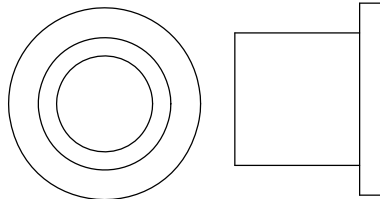


026-01M0761
1 11/16" LONG HEAVY
FLANGED SPACER

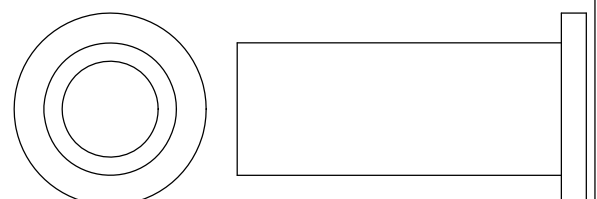


026-01M0789
.44" LONG HEAVY
FLANGED SPACER

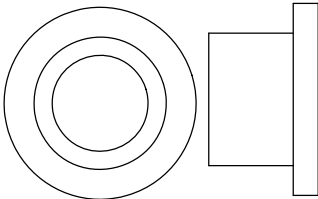


026-01M0762
1 1/2" LONG HEAVY
FLANGED SPACER

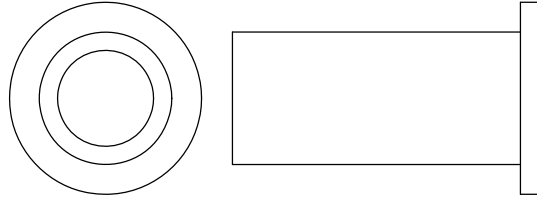


026-01M0768
1 1/4" LONG HEAVY
FLANGED SPACER

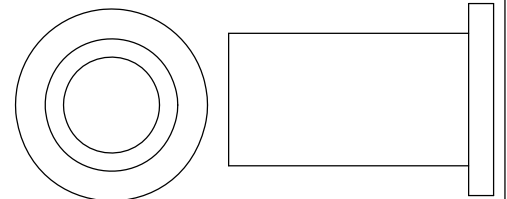


026-01M0600
.625" LONG
FLANGED SPACER

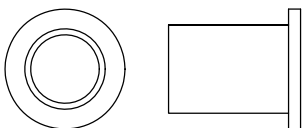

026-01M0240
1 3/8" ALUMINUM
FLATHEAD CAP

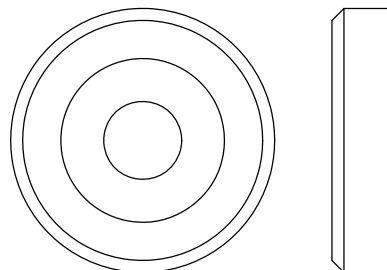

026-01M0239
1 5/8" ALUMINUM
FLATHEAD CAP

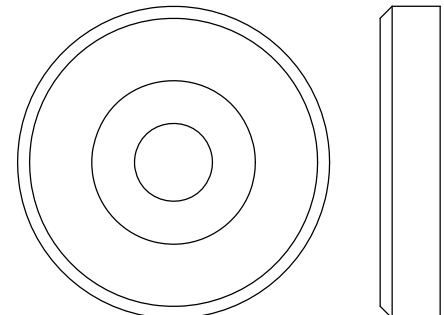

OWNER'S MANUAL

MAINTENANCE SCHEDULE

| ROUTINE | COMMERCIAL / LIGHT COMMERCIAL MAINTENANCE | HOME MAINTENANCE | LATEST DATE ENTRY | | | | | | | | | | | | | | | | | |
|--|---|---------------------|-------------------|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins | DAILY | WEEKLY | | | | | | | | | | | | | | | | | | |
| Clean; Upholstery | DAILY | WEEKLY | | | | | | | | | | | | | | | | | | |
| Inspect; Cables or Belts and their tension | DAILY | WEEKLY | | | | | | | | | | | | | | | | | | |
| Inspect; Accessory Bars, and Handles | WEEKLY | 3 MONTHS | | | | | | | | | | | | | | | | | | |
| Inspect; All Decals | WEEKLY | 3 MONTHS | | | | | | | | | | | | | | | | | | |
| Inspect; All Nuts and Bolts, Tighten if needed | WEEKLY | 3 MONTHS | | | | | | | | | | | | | | | | | | |
| Inspect; Anti-Skid Surface | WEEKLY | 3 MONTHS | | | | | | | | | | | | | | | | | | |
| Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube) | MONTHLY | 3 MONTHS | | | | | | | | | | | | | | | | | | |
| Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing | MONTHLY | 3 MONTHS | | | | | | | | | | | | | | | | | | |
| Clean and Wax; All Glossy Finishes | 6 MONTHS | YEARLY | | | | | | | | | | | | | | | | | | |
| Repack with Grease; Linear Bearings | 6 MONTHS | YEARLY | | | | | | | | | | | | | | | | | | |
| Replace; Cables, Belts and Connecting Parts | YEARLY | 3 YEARS | | | | | | | | | | | | | | | | | | |

*Your equipment comes with a commercial maintenance decal.
For personal, in home use, please follow the home maintenance schedule listed above.*

Never use ammonia, acid-based, or petroleum-based solvents on any portion of the machine as it may damage the finish.

OWNER'S MANUAL

HOIST FITNESS SYSTEMS **GENERAL MAINTENANCE INFORMATION**

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- *Check all pieces for signs of visible wear or damage.
- *Check springs in snap hooks and pull-pins for proper tension and alignment.
- *If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- *To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- *Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- *Replace ripped or worn upholstery immediately.
- *Keep sharp or pointed objects clear of all upholstery.

Decals:

- *Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- *Inspect all nuts and bolts for any loosening and tighten if needed.
- *Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

- *These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- *Hoist uses only high quality belt, and mil-spec cables.
- *Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- *While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- *Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- *Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- *Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- *Wipe down adjusting tubes with a dust free rag before applying lubricant.
- *Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

- *Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

OWNER'S MANUAL

WEIGHT TRAINING TIPS

Use this manual to guide you through the basic exercises you can perform on your RS-1412 HOIST® Fitness System. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your RS-1412 HOIST® Fitness System, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

Enjoy your RS-1412 HOIST® Fitness System!

OWNER'S MANUAL

THIS PAGE WAS INTENTIONALLY LEFT BLANK

OWNER'S MANUAL

HOIST FITNESS SYSTEMS **LIMITED LIFETIME WARRANTY**

Hoist Fitness Systems warrants this product to the **original purchaser** to be free from defects in workmanship and/or materials under normal use or service. If at any time a component part is defective, Hoist Fitness Systems shall repair or replace it (at Hoist Fitness Systems option) within a reasonable period of time. This warranty does not cover costs of removal, transportation or reinstallation. This warranty shall not apply if the defect was caused by misuse, neglect or normal wear and tear.

WARRANTY CLAIMS. All claims require: Model number, Serial number, Date of installation, and any information supporting the existence of the alleged defect.

To complete Warranty Registration visit:

www.HOISTFITNESS.com

and click on the Warranty Registration link

Starting from the original date of purchase, normal wear and tear shall be considered as the following:

COMMERCIAL USE: All malfunctions of upholstery, grips, and coatings that occur up to one year; all malfunctions of belts, or cables up to one year; all malfunctions of pulleys, bearings, or bushings that occur up to three years. The frame and body components are warranted for ten years, with structural moving parts warranted for five years.

LIGHT COMMERCIAL USE: All malfunctions of upholstery, grips, and coatings that occur up to one year; all malfunctions of belts, or cables up to one year; all malfunctions of pulleys, bearings, or bushings that occur up to three years. The frame and body components are warranted for ten years, with structural moving parts warranted for five years.

HOME USE: All malfunctions of grips, paint, and chrome that occur up to ten years; all malfunctions of electronic components, belts, cables, or upholstery that occur up to ten years; all malfunctions of pulleys, bearings, or bushings that occur up to ten years. The frame and all welded components are warranted for the life of the product.

PLEASE NOTE THAT NOT ALL HOIST PRODUCTS ARE MADE FOR COMMERCIAL USE. Refer to the instructions page of your owners manual or consult with you fitness product dealer to establish if a product is made for commercial use or not. Using a non-commercial product in a commercial setting can result in serious injury or death! Hoist Fitness Systems sole responsibility shall be to repair or replace the component within the terms stated above. Hoist Fitness Systems shall not be liable for any loss or damage of any kind including any incidental or consequential damages resulting, directly or indirectly from any warranty expressed or implied or any other failure of this product.

LIGHT COMMERCIAL USE: Our Light Commercial warranty applies to facilities that **DO NOT** charge monthly membership dues and where the equipment would be used by **no more than 50** people per day. Examples of Light Commercial facilities include hotels, apartment complexes, personal training studios, fire stations, police stations, etc., that meet the criteria stated above.

WHAT IS NOT COVERED BY THIS WARRANTY: Hoist's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additions below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

NO CONSEQUENTIAL DAMAGES: Hoist is not responsible for economic loss; profit loss; or special, indirect, or consequential damages.

WARRANTY IS NOT TRANSFERABLE: This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, expressed, implied or statutory, except the one (1) and five (5) year warranties described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof.

TRANSPORTATION COSTS: Hoist will accept parts covered under this warranty freight collect, provided that shipment has received prior approval. Hoist is not responsible for any other transportation costs, but will ship freight collect parts either repaired or replaced under these warranties.

Hoist Fitness Systems
11900 Community Rd.
Poway, CA. 92064
(800)548-5438

PLEASE KEEP THIS FOR YOUR RECORDS