

Designed by Greta Grossman

PRODUCT



COLORS



DESCRIPTION

The iconic Gräshoppa table lamp was first produced in 1948. The tubular brass stand is mounted on a brass base whilst the elongated conical steel shade is mounted with a moveable joint in solid brass, consequently the light can be directional, yet the glare is minimal. The shade is powder-coated and available in 5 colours. Switch integrated in the base.

VERSION - GRÄSHOPPA TABLE LAMP

RAL codes are indicative.

 
- Fabric wire - Golden:
- Jet Black / White inside // RAL 9005 / RAL 9003 // Gloss level 20 / Gloss level 20
- Anthracite grey / White inside // RAL 7016 / RAL 9003 // Gloss level 20 / Gloss level 20
- Blue grey / White inside // RAL 160 60 05 / RAL 9003 // Gloss level 20 / Gloss level 20
- Matt white / White inside // RAL 9003 / RAL 9003 // Gloss level 20 / Gloss level 20
- Vintage red / White inside // RAL 3012 / RAL 9003 // Gloss level 20 / Gloss level 20
- Andorra red / White inside // RAL 020 30 20 / RAL 9003 // Gloss level 17 / Gloss level 20
- Oyster white/ White inside // RAL 1013 / RAL 9003 // Gloss level 17 / Gloss level 20

VERSION

Order item - look for part number in the pricelist.

Series contains the following:

- GM1 GRÄSHOPPA**
- GM2 COBRA TABLE**
- GM3 COBRA FLOOR**
- GRÄSHOPPA TASK TABLE LAMP**
- GRÄSHOPPA PENDANT**
- COBRA WALL LAMP**

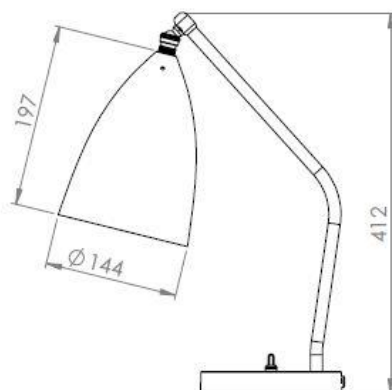

FACTS

MATERIAL

Shade: Powder-coated steel
 Stand: Brass tube: dia. 0,5 inches
 Base: Cover in brass, inside counterweight in steel

MEASUREMENT - L x W x H inches

Lamp height: 16,2 inches
 Lamp base: dia. 5,9 inches
 Shade height: 7,8 inches
 Shade diameter: dia. 5,7 inches
 Cable length, exposed: Approx. 98,4 inches

WEIGHT ITEM - LAMP INCL. WIRE

4,9 lb

PACKAGING TYPE

Cardboard box

PACKAGING MEASUREMENT - L x W x H inches

L: 18,1 x W: 16,5 x H: 9,8 inches

WEIGHT PACKAGING - MATERIAL TYPE (recycleable)

- Delivery note: 0,35 oz
- LD-EPE foam: 7,2 oz
- EPE bag: 0,17 oz
- PE polybag: 0,21 oz
- Cardboard inside: 9,3 oz
- Cardboard outside, 5ply Corrugated: 2,4 lb

WEIGHT INCL. PACKAGING - TOTAL

8,4 lb

NUMBER OF PARCELS

1 pcs.

ACCESSORIES

-

ENVIRONMENT

-

TESTS

-

CERTIFICATION AND LABELS

CUL-APPROVED

SAFETY INSTRUCTIONS

If the cord or plug is damaged, unplug it from the socket with dry hands. Do not use the lamp until it is repaired by a qualified Electrician.

Instructions document: No. 53-20-003-01

BULB REPLACEMENT


- Disconnect the power before replacing bulb.

TROUBLESHOOTING

- If lamp does not light, turn off the power. Check the bulb for a broken filament. Replace bulb if necessary. Then turn it on.
- If the lamp still does not light, please contact customer service at the local dealer.
- If the external flexible cable or cord of this lamp is damaged, it must be replaced by a qualified electrician in order to avoid a hazard.


MAINTENANCE

- Employ proper cord care maintenance.
- To clean, use a soft cloth only.
- Do not use any chemical or abrasive cleaners.



Gräshoppa Task Lamp

005-053xx




GUBI AS

Klubbenveg 7-9 / Pihus 53 T. +45 3332 0308
 2150 Nordhavn, Copenhagen C.R. 1760204
 Denmark WWW.GUBI.DK


STEP 1

 - Unpack lamp.
- Place on stable ground.

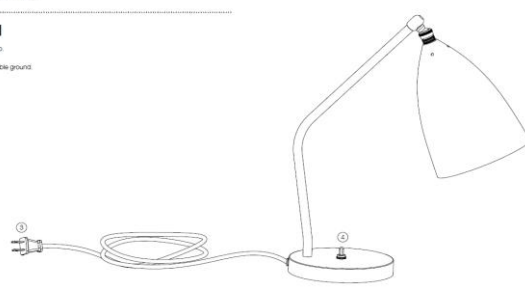

STEP 2

 - Plug lamp to mains voltage.
- Push switch to turn lamp on and off.

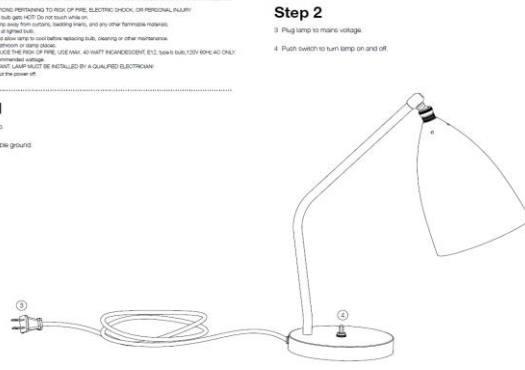


LAMP REPLACEMENT: ALWAYS TURN OFF THE ELECTRIC POWER, OR PERSONAL PLUG!
 VARNING: Lampa bulb get VCT! Do not touch when.
 GUBI AS: Always use the correct bulb. Do not use any other lamp bulb.
 Do not use shades or light bulb.
 Turn off power and always wait 5 min before replacing bulb, cleaning or other maintenance.
 Do not use in the bathroom or other place.
 CAUTION: TO REDUCE THE RISK OF FIRE, USE ONLY A0 (MAXI 40 WATT) INCANDESCENT (E12) BULB (E27 BULB 40W) OR ONLY
 Do not use non-standard cables.
 CAUTION: TO REDUCE THE RISK OF FIRE, USE ONLY A0 (MAXI 40 WATT) INCANDESCENT (E12) BULB (E27 BULB 40W) OR ONLY
 VARNING: VARNING: LAMP MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN!
 FÖRBEREDELSE: Stå lampen på ett stabilt underlag.

53-20-003-01 Mounting and Gräshoppa Task Lamp (C)

LIGHT SOURCE:

 - Socket: E12 base
- Bulb types recommended:

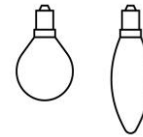

- Recommended light sources:

If LED is chosen, only dimmable versions work.

470 Lumen (~ 40W incandescent ~ 30W halogen ~ 4-6W LED)

- Max. light out put for above lamps:

470 Lumen (~ 40W incandescent ~ 30W halogen ~ 4-6W LED)

- Best result is achieved with frosted light bulbs

with a CRI (Colour Rendering Index) larger than 90.

- Lightbulb not included.

- All lamps can be fitted with a dimmer -Please contact your local electrician.

- Lightbulb not included

- US plug: Type A, 2 PIN, 15 amp, (NEMA 1-15)

- US voltage: 120 V

- Frequency: 60 Hz

- Supply voltage: AC power ~

- Normally Closed: IP20



Class II / Double insulated



 
Mark for Canada and the U.S.



Luminaires accepted for mounting on a flammable base


STEP 1

- Unpack lamp.
- Place on stable ground.

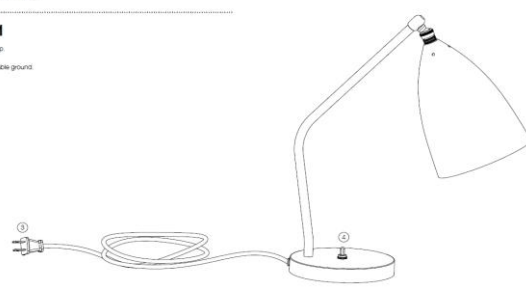

STEP 2

 - Plug lamp to mains voltage.
- Push switch to turn lamp on and off.

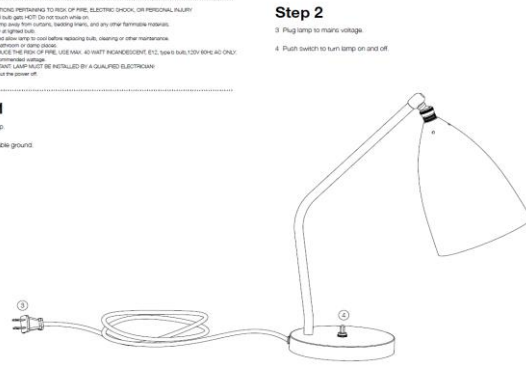

LAMP REPLACEMENT: ALWAYS TURN OFF THE ELECTRIC POWER, OR PERSONAL PLUG!
 VARNING: Lampa bulb get VCT! Do not touch when.
 GUBI AS: Always use the correct bulb. Do not use any other lamp bulb.
 Do not use shades or light bulb.
 Turn off power and always wait 5 min before replacing bulb, cleaning or other maintenance.
 Do not use in the bathroom or other place.
 CAUTION: TO REDUCE THE RISK OF FIRE, USE ONLY A0 (MAXI 40 WATT) INCANDESCENT (E12) BULB (E27 BULB 40W) OR ONLY
 Do not use non-standard cables.
 CAUTION: TO REDUCE THE RISK OF FIRE, USE ONLY A0 (MAXI 40 WATT) INCANDESCENT (E12) BULB (E27 BULB 40W) OR ONLY
 VARNING: VARNING: LAMP MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN!
 FÖRBEREDELSE: Stå lampen på ett stabilt underlag.

53-20-003-01 Mounting and Gräshoppa Task Lamp (C)



GRÄSHOPPA TASK LAMP // Designed by Greta Grossman

DK:
 Tillykke med din Gräshoppa lampe designeret af Greta Grossman i 1947. Vi håber du vil blive glad for den.
 Efter et stykke tid vil du måske opleve, at ledet på skærmens bærer kan løse sig løs for overophedning. Dette gøres ved at drøje
 mezzing udbøjelse på billedet ned ad.

Obs: Et uheld at røre skærmens grene vil resultere i en ulykke, da det kan forårsage ulykke.

ENG:
 Congratulations with your Gräshoppa lamp designed by Greta Grossman in 1947. We hope you will enjoy it.
 After some time you may find that the joints on the shade will get loose and needs tightening. This can be done by turning the
 brass nut clockwise.

Caution: Do not rotate the shade repeatedly on its axis, as this might result in malfunctioning.

DE:
 Gratulation zu Ihrer Gräshoppa Leuchte Entworfen 1947 von Greta Grossman. Wir wünschen Ihnen viel Freude damit.
 Bitte beachten Sie, dass sich die Verbindung des Leuchteschirmes im Laufe der Zeit lockern kann und nachgezogen werden
 muss. Drehen Sie dazu die Messing-Mutter im Uhrzeigersinn.
Achtung: Bitte drehen Sie den Schirm nicht mehrmals um seine Achse, dies verursacht einen Defekt.