

111	1	CAL	This is used during calibration
111	2	CAL	
0.0	R	DIR	This is used to offset launch direction
0.0	L	DIR	
0	1	MDE	This is indoor/outdoor mode. '0' is indoor and '1' is right handed
	1	RST	For expansion
	2	RST	For expansion
	3	RST	Used during calibration
	4	RST	
	1	LED	Identifies the light board used. '0' is original, '1' is newer
	2	LNS	Identifies the lens used. 0' is original, '1' is newer, '2' is newest
	2	EXP	Exposure time – '0' is normal; (1,2,3, or 4. 4 is shortest exposure)
8.1	BAT		Battery – 8.3 is fully charged
176	VER		Firmware version