

**IMPORTANT.** Keep this card in a safe place.

**To Disarm:** With car IGN off: Press [\*](CODE)[#]  
You will hear 2 beeps. You can now start your car within 15 seconds. Blue LED will turn off when engine starts.

**Auto Arm:** 30 sec after IGN off > Blue LED flashes slowly

**Wrong Code Entry:** Hear 4 beeps > if wrong 3 times in a row, 60 second lock-out period to next attempt.

**Valet/Service Mode:** Disarm > Turn IGN on > Press [\*][#](CODE)[#][#] > Hear 3 beeps > Blue LED on solid.

**To Manually exit:** IGN on > Press & hold [\*] for 2 Seconds > Hear 3 beeps > Blue LED turns off.  
*Allows person to drive car without code for 15min max at a time.*

**To Change 4 Digit PIN:** Disarm > Turn IGN on > Press [\*][#][#](CODE)[#][#][#] > Hear 2 beeps > Blue LED Flashes fast > Within 15s Press [\*](NEW CODE)[#] > Hear 2 beeps, new PIN is now saved.

**Note:** Code can't be all the 4 same digits, i.e. 1111

# AVSIMM IMMOBILISER

Published: March 2024



**Scan the QR code or see the website for more  
information about your immobilizer**



**+64 9 273 3600  
[www.avscarsecurity.co.nz](http://www.avscarsecurity.co.nz)**