

# Desk Mount Rotary Panel RF Remote Controller

#### Model No.: RK1, RK2, RK3

Rotary dimming/1-3 color/Wireless remote 30m distance/CR2032 battery







RK1 1 Zone Dimming

RK2 1 Zone CCT

Wai Warr

RK3 1 Zone RGB

CE RoHS [emc] LVD RED

### Features

- · Apply to single color, dual color or RGB LED controller.
- · Rotate knob to change RGB color, color temperature or brightness, support long press or twice click operation.
- · Each remote can match one or more receiver.
- · CR2032 battery powered.
- · Desk mount, removeable anywhere easily.

## **Technical Parameters**

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	<5mA
Standby current	<10µA
Standby time	1 year
Remote distance	30m(Barrier-free space)

 
Environment	
Operation temperature	Ta: -300C ~ +550C
IP rating	IP20

Safety and EMC				
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4			
Safety standard(LVD)	EN 62368-1:2020+A11:2020			
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2			
Certification	CE,EMC,LVD,RED			

rranty	
anty	5 years

#### Weight 61g Net weight Gross weight 118g





Replace battery:



## Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the conti	oller's	Match	key
---------------	---------	-------	-----

```
Match:
```

Short press match key, immediately push the knob. The LED indicator fast flash a few times means match is successful.

#### Delete:


Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

## Use Power Restart Match:

Switch off the power, then switch on power, repeat again. Immediately push the knob 3 times. The light blinks 3 times means match is successful.

#### Delete:

Switch off the power, then switch on power, repeat again. Immediately push the knob 5 times. The light blinks 5 times means all matched remotes were deleted.

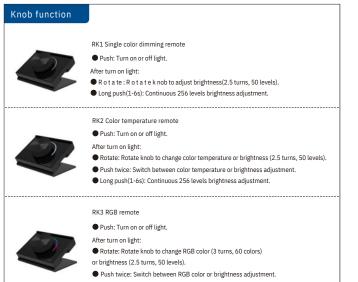

Long push(1-6s): Continuous 256 levels brightness adjustment.

### Safety information

- 1. Read all instructions carefully before you begin this installation.
- 2. When installing battery, pay attention to the battery positive and negative polarity.
- A long time without the remote control, remove the battery.
- When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.