

THE  
**RABBIT**  
COMPANY™

## OVERVIEW

All products by **The Rabbit Company**<sup>™</sup> are made from soft, smooth, body safe materials.

Our easy to use interface allows users to easily find the right stimulation and intensity. Get ready for sensual satisfaction that can not be matched and will have you craving for more.

## G-Spot Rotating Rabbit <sup>™</sup>



 
Internal Stimulator

External Stimulator

Control/  
LED Indicator

DC Charging Port

Flared Suction Cup Base

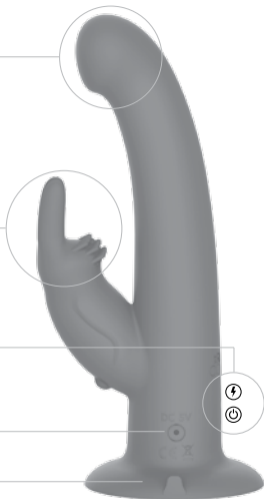

## GETTING STARTED

1. Before first use, charge your rabbit for approximately 2 hours. The USB charging cable can be plugged into any USB port or USB/AC power adapter (Not included).



- Flashing Light = Charging
- Solid Light = Fully Charged

2. Wash your rabbit with soap and water, or toy cleaner suitable for use with silicone items.



FAQs can be found at  
[www.TheRabbitCompany.com](http://www.TheRabbitCompany.com)

 
Email us at  
[customer care@TheRabbitCompany.com](mailto:customer care@TheRabbitCompany.com)  
for any unanswered questions

3. Lubricate your rabbit (if needed) with a water based, silicone compatible lubricant.

4. Press the  button turn the item ON.

5. To change the vibration pattern, press and release 


6. Press the  button 3 seconds again to turn off.

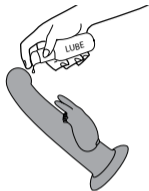


**Turn On/  
Change Vibration  
Pattern**

## CONTROLLING YOUR RABBIT

- Press the  button turn the item ON.

- To change the vibration pattern, press and release , There are a total of 10 vibration patterns.

- Press  for maximum power in an instant, and the item will return to normal power after 7 seconds.

- Press the  button 3 seconds again to turn off.





**Boost  
Function**



**Turn Off**

 
## TRAVEL LOCK

- To enable the travel lock, press and hold the device  button for 3 seconds while the device is off. The LED-indicator will flash twice indicating that the device is locked.
- To disable the travel lock, press and hold the device  button for 3 seconds. The LED-indicator will flash twice indicating that the device is unlocked.
- Plug the USB charging cable into any USB port or USB/AC power adapter (Not included) to disable the travel lock.




## CHARGING

- Insert the charging plug in the designated charging area
- Flashing light indicates item is charging
- Solid light indicates item is fully charged
- Rabbits require approximately **2** hours for full charge

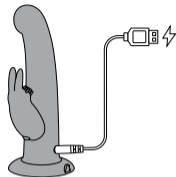


Flashing Light = Charging

 

Solid Light = Fully Charged


## VIBRATION PATTERNS

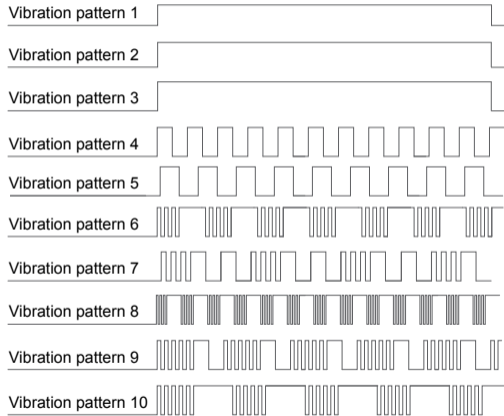 

## HARE CARE™

### Cleaning, Storage & Safety

 
1. Always clean your Rabbit thoroughly before and after each use.
2. We recommend using a premium water-based lubricant when needed. Silicone-based lubricants are not recommended and can cause damage to the product. Never use hand cream, or massage oils as lubricants for your intimate areas.
3. To properly clean your rabbit, use a suitable silicone-compatible toy cleanser. If this is not available, wash the silicone area of your rabbit with luke-warm water and an antibacterial soap. Rinse clean and

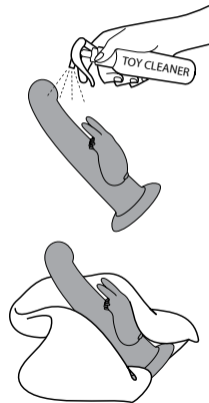

pat dry using a lint-free cloth or towel. Do not use cleaners containing alcohol, petrol or acetone.

4. Avoid leaving your rabbit in direct sunlight and never expose it to extreme heat.

 5. Waterproof function: The rabbit is not intended for extended or excessive submersion. After use in the bath or the shower, make sure to completely and thoroughly dry before storage. For best product performance, limit bathtub use to 15 minutes. Excessive or prolonged underwater exposure can lead to damage or failure of the product.

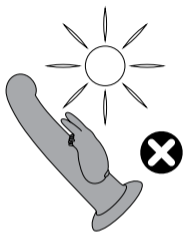

## SPECIFICATIONS

### Materials

Silicone

### Size

75 x 75 x 197 mm

### Weight

310 g

### Battery

Li-ion 500 mAh

### Charging

2 hours

### Use Time

1 hour

### Max Noise Level

<68 db

### Interface

10 vibration patterns

## DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.



**RoHS**  
2002/95/EC



Complete user instructions in additional languages can be found at:

[www.TheRabbitCompany.com](http://www.TheRabbitCompany.com)

Designed and Developed by  
The Rabbit Company™

Made in China  
© The Rabbit Company™

FAQs can be found at  
[www.TheRabbitCompany.com](http://www.TheRabbitCompany.com)

Email us at  
[customercare@TheRabbitCompany.com](mailto:customercare@TheRabbitCompany.com)  
for any unanswered questions



TheRabbitCompany.com