

Alkaline Filter Change Instructions


- 1) Shut off water supply, water storage tank (located on top of the tank), and open RO faucet to relieve pressure.
- 2) The alkaline filter is connected with quick connect fittings. Remove the old filter by pushing in the quick connect collet on the tube fitting to release the tubing on each side of the filter. (See image)



- 3) Once the old alkaline filter is free from the tubings, remove it from the filter clips. Now, remove and reuse the fittings from the old alkaline filter by again pushing down the collet of the quick connect fittings (you may need something flat like a screwdriver or a key). Prepare the new alkaline filter by inserting the quick connect fittings on each end of the alkaline filter. (See Image)



- 4) Before you reconnect the tubings, check for the flow direction arrow on the alkaline filter. Make sure the flow is in the correct direction. (See Image)

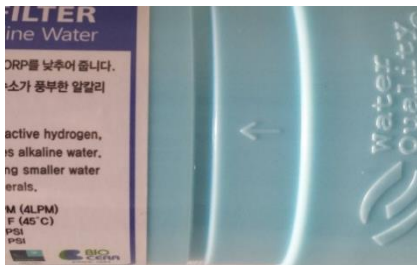

- 5) Secure the alkaline filter on the filter clips.
- 6) Turn on water supply and water storage tank and check for leaks.
- 7) Flush system with one full tank of water before use.