

Easy Twist Filter Change Instructions

- 1) Shut off water supply (located on the right side of the RO water system connected to the red tubing).
- 2) Shut off water storage tank (located on top of the tank).
- 3) Open RO faucet to relieve pressure.
- 4) Pull bottom of cartridge out to a 45° angle.
- 5) Twist counter clockwise ¼ turn to remove filter cartridge.
- 6) To replace, line up the bayonet (tabs) in the slots and twist ¼ clockwise until tight.
- 7) Replace one filter at a time.
- 8) Turn on water supply and water storage tank and check for leaks.
- 9) Flush system with one full tank of water before use.