

# CAMPING STOVE

Instruction For Installation And Use

Model: JK-6330



**IMPORTANT:** Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to a gas container. Keep these instructions for future reference.



## WARNING

### FIRE OR EXPLOSION HAZARD

If you smell gas:

1. Do not attempt to light appliance.
2. Extinguish any open flame.
3. Disconnect from fuel supply.
4. Evacuate immediately.
5. Allow gas to dissipate for 5 minutes before relighting the appliance again.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.

## FOR YOUR SAFETY

Do not store or use gasoline or other liquids with flammable vapors in the vicinity of this or any other appliance.

## DANGER



### CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odor.

Using it in an enclosed space can kill you.

Never use this appliance in an enclosed space such as a camper, tent, car or home.



## General Warnings

- This appliance shall only be connected to a 20lb cylinder with a POL cylinder valve certified to CAN/CSA - B339.
- This appliance is designed for outdoor use only and must be operated away from any flammable material or surfaces and materials.
- This appliance is to be stored in a dry and well ventilated location free from direct sunlight.
- Do not store when valve is still connected to the cylinder.
- Make sure that the cylinder is disconnected and is stored in a well ventilated area, free from direct sunlight, heat and ignition sources.
- If being stored indoors, ensure that the location complies with the standard ANSI/NFPA 58.
- This appliance must only be serviced by an authorised service agent, return to your place of purchase for service and repair.

## DANGER!

- During operation all surfaces will be extremely hot and should not be touched or handled.
- Do not use the appliance if it is leaking, damaged or does not operate properly.
- Handle with care even after brief use, always pick up using the handles, not the cylinder.
- It may be hazardous to attempt to fit other types of gas containers or cartridges.
- Use only in well ventilated areas.
- Always operate appliance a minimum of 24inch from flammable materials, walls and 48inch from the ceiling.
- Do not use adaptors.
- Do not modify appliance to fit other connectors or cylinders.
- Do not use multiple appliances to heat a single utensil.
- Children must be supervised by an adult at all times.
- Never leave appliance unattended when operating.
- Use as a cooking appliance only, not to be used as heater or modified for any other reason.
- Avoid boil over and spills on to burners.





## CARBON MONOXIDE HAZARD

Using this appliance in an enclosed space may cause DEATH. Do not use in caravans, tents, marine craft, cars, mobile homes or similar locations.



## CALIFORNIA PROPOSTION 65:

WARNING: This fuel, and byproducts or combustion of this fuel, contains Carbon Monoxide, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: [www.p65Warnings.ca.gov](http://www.p65Warnings.ca.gov).

## IMPORTANT

- Use outdoors only.
- Keep children away at all times.
- CAUTION: Accessible parts may be very hot. Please take care when handling or moving the appliance.
- Appliance is to be used on a stable, level, flat, non-flammable surface. The appliance should be protected from direct drafts and in a well ventilated place.
- Only cooking vessels with a minimum diameter of 7.8inch and a maximum of 8.7inch are to be used with this appliance.
- Take care that the primary air intakes, located on the burner tube of this appliance are not obstructed, or that air flow is restricted by placing items or other appliances close to or adjacent to the inlets.
- If you smell gas, immediately turn the gas off at the cylinder and move the appliance and cylinder to a well ventilated area outside, keeping well away from sources of heat such as naked flames and pilot lights.
- Do not attempt to move or relocate the appliance when it is operating, extinguish the burner and allow to cool, disengage the gas cylinder then move the appliance.



## Checking For Gas Leaks

- Check that all connections are tight and that the gas cylinder connection has been tightened before you turn the cylinder gas valve on.
- Never check for leaks with a flame or pilot light.
- Using soapy water, coat all connections, if bubbles appear turn the cylinder gas control off and retighten the connection before retesting.
- Inspect the appliance regularly for signs of wear, leaks or incorrect operation. If symptoms such as flaring of the burner, issues with lighting, damages to hoses or connections or leaks from seals or gas controls are identified do not attempt to repair, contact with your dealer for service and maintenance.


## Changing Gas Cylinder

- To check if gas remains in the cylinder, disconnect from the appliance and hold the cylinder in a vertical position then shake from side to side, if there is a sound or feel of liquid movement inside, the cylinder contains gas.
- When changing gas cylinders ensure this is conducted outside in a well ventilated location free from people, animals and ignition sources such as naked flames, pilot lights and electrical equipment with heaters or elements.




# 5 Safety Instructions

This appliance shall only be used in an above ground open air situation with natural ventilation without stagnant areas, where gas leakage is rapidly dispersed by wind and natural convection.

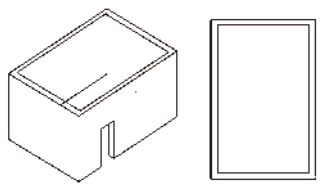


**Any enclosure in which the appliance is used should comply with one of the following:**

A. An enclosure with walls on all sides, but with no overhead cover.


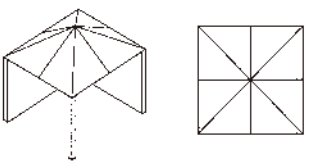


B. Within a partial enclosure that includes an overhead cover and no more than two walls.

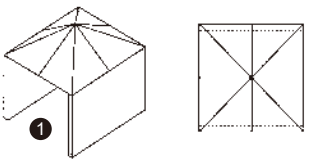

C. Within a partial enclosure that includes an overhead cover and more than two walls the following must apply:

1. At least 25% of the total wall area is completely open.
2. 30% or more in total of the remaining wall side, back and front wall areas is open and unrestricted.
3. In the case of balconies, 20% or more of the total wall area must remain open and unrestricted.

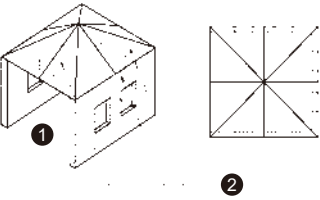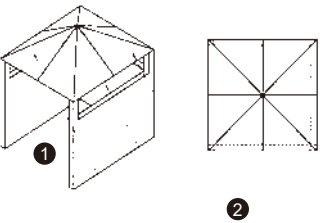


The figures shown are diagrammatic representations of outdoor areas. Rectangular areas have been used in these figures - the same principles apply to any other shaped areas.



# Understanding Your Appliance



3/8" Gas Regulator - 5ft

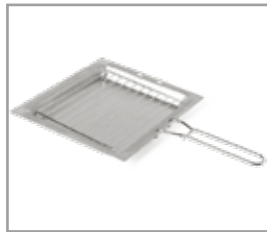

Grill Tray - Removable Handle



# 1. Leg Assembly



Step 1. Turn stove upside down and release legs from storage.



Step 2. Insert legs into locating brackets.



Step 3. Turn stove over and locate on a solid and stable surface.





## 2. Connection

Your stove is designed to connect directly to a gas cylinder with a POL cylinder valve using the specially designed LP gas hose and regulator supplied.



Step 1. Check that the cylinder gas control is in the "OFF" position(turned fully clockwise).



Step 2. Take the hose and attach to the gas inlet on the appliance, tighten up using a spanner. Don't use fingers to tighten connection.




Step 3. Attach the other end of the hose with the regulator to the gas cylinder, tightening using the two finger support posts.



Step 4. Check that the gas control on the stove is turned "OFF", then turn the cylinder gas valve on in an anti-clockwise direction for one full turn and then check the connections for leaks with soapy water. If a leak is detected turn the cylinder gas valve "OFF" and retighten all connections then retest.



### 3. Lighting Stove And Grill burner

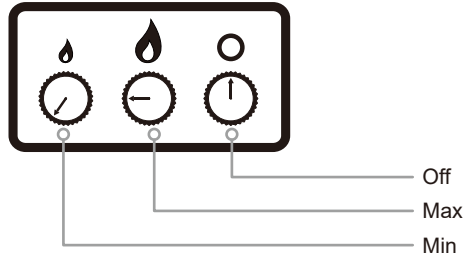

Step 1. Select the burner to be ignited, depress the gas control, turn to the "MAX" position and release.



Step 2. Depress the piezo button firmly and look for a spark from the electrode positioned above the burner.



Step 3. If the burner does not ignite, depress and turn the gas control in the clockwise direction to the "OFF" position and allow the residual gas to disperse before attempting to reignite the burner.



## 4. Adjusting Flame



Step 1. Depress the gas control and turn to "MIN" for a lower flame.

## 5. Turn Off



Step 1. When burner is no longer required, depress the gas control and turn to the "OFF" position.



## 6. Disconnection

The LP-gas cylinder(s) used with a stove shall be constructed and marked in accordance with the specifications for LP-gas cylinders of the U.S. Department of Transportation or Transport Canada, the Standard for Cylinders, Spheres and Tubes for the Transportation of Dangerous Goods, CAN/CSA B339.



Step 1. Check the gas appliance all surfaces are cool enough, the gas cylinder control valve is in fully "OFF" position.



Step 2. Loose the gas inlet on the appliance by a spanner.



Step 3. Loose the other end of the hose with the regulator to the gas cylinder.



## 7. Check for gas leaks

1. Check connection between the appliance and the gas cylinder are all the way on and in a good condition before connecting the gas cylinder.
2. For safety check for leaks, spray soapy water on the gas cylinder to see if bubbles appear. The information of bubbles indicated a gas leak. If there is a gas leak present, immediately shut off the gas cylinder and do not try to operate the appliance. Do not try to detect leaks using a flame.
3. To check if gas remains in the cylinder, disconnect from the appliance and hold the gas cylinder in a vertical position the shake from side to side. If there a sound or feel of liquid movement inside means the cylinder contains gas.
4. Change the gas cylinder outside in well-ventilated location away from people and ignition sources, such as naked flames, pilot lights and electrical equipment.

## Storage

If the appliance use with other disposable cylinder or will not use in a period, the gas should be turn off at the LP gas cylinder.

If the LP gas cylinder is not disconnected from the appliance, the appliance and cylinder should be stored outdoors, in a well-ventilated space, out of the reach of children and should not be stored in a building, garage, or any other enclosed area.

Storage of the appliance indoors is permissible only if the cylinder is disconnected and removed from the appliance.



## Care Instructions

Using warm soapy water with a mild detergent wipe down all surfaces and areas of the appliance, taking care not to allow water to enter the burner outlets or aeration holes located in the burner tube.

**DO NOT** submerge the appliance in a sink or bowl.

**DO NOT** use abrasive cleaners or bleach.

## Maintenance And Service

During operation if it is noted that the burner flame is unstable, is changing colour from blue to yellow or has a distinct smell it is important that you take the appliance to your local authorised gas appliance repairer for inspection.

Periodically check the gas control is tight and has no leaks, follow the testing for leaks procedure. Check the gas connection and regulator for any signs of wear or damage, if identified contact customer service for a replacement assembly immediately.





