



# 雅居200 Agile 200 Tent

## 安装说明 Instruction manual

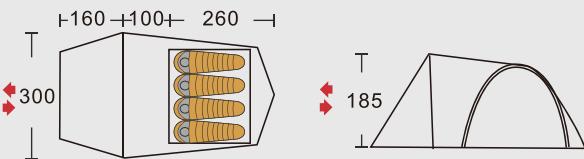

从外袋中取出帐篷，地钉袋（如上图），选择背风、平整的地面，防止有锐物划伤底部，把帐篷平摊于地。

Take tent and pole bag out from carry bag, then choose the leeward and flat ground.

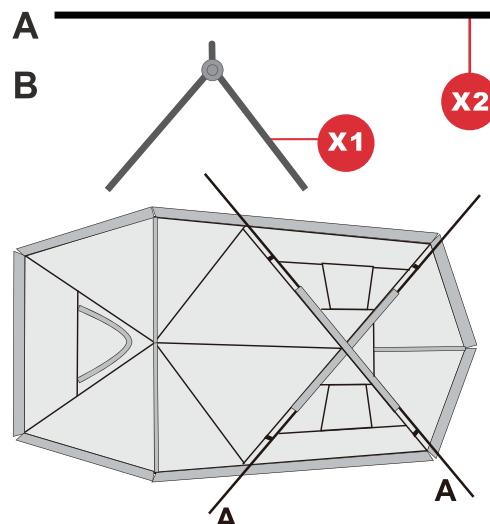


从杆子袋中取出支杆安装成图中所画的形状（如图1）并将铝支杆按图例位置摆放。

Take poles out from pole bag and install it as above shape.

### 养护说明


1

- 每次出行后将内外帐及帐杆、地钉清理干净，主要清理对象为雪、雨、尘灰、泥草以及小虫子。
- 帐篷不可使用洗衣机清洗，可用水冲、手搓等洗涤方法，使用非碱性清洗剂，清洗后放置通风处阴干，拆好装进收纳袋存放在干燥、阴凉的地方。帐篷要不规律折叠，因为多次使用帐篷后，折叠太规律整齐会使折痕硬化出现裂痕。
- 使用帐篷时注意不可穿鞋进入内帐，因为鞋底连带的泥土、石子等极其容易将内帐底部划破，从而失去防水意义。
- 避免在帐篷内炊事、吸烟、高温及明火对帐篷的危害很大，如果外部天气恶劣必须在帐内炊事，则需在炉头下垫上铝膜或其他隔热物品，并将帐篷的所有门窗打开。
- 夜间帐内照明尽量避免使用蜡烛等无保护措施的明火物品做为照明道具，尽量使用头灯、手电及帐篷专用汽灯。
- 出现洞孔，拉链及支架破损可以联系经销商或者联系厂家。

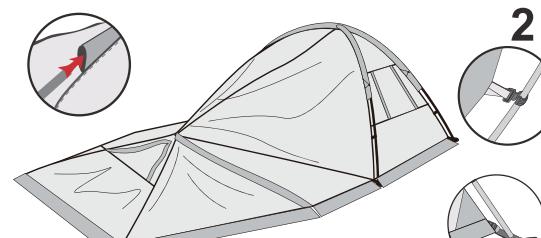


A杆子穿入管套内，杆子末端穿入圈棒内钩上G型钩。  
Put the pole A into the pole sleeve and insert the pole endings into the alloy part of tent corners and pitch up.

先将前厅门打开后，将B杆撑入顶部蓬圈，尾部穿入圈棒内，  
然后把前底角2个点打上地钉  
Open the front porch door and pitch up the pole B. Make the top into the eyelet and endings into the pin ring. Then fix the tent with stakes.

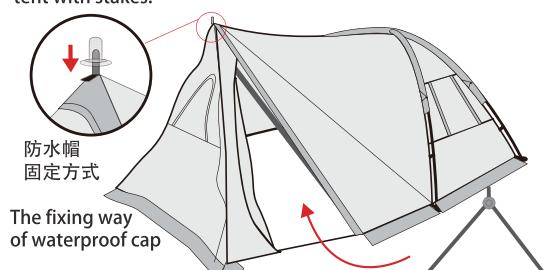


The fixing way of waterproof cap  
防水帽固定方式  
将织带上的蓬圈重叠后，  
把B杆穿入蓬圈内  
Overlay the eyelet on the webbing and put the pole B top into the eyelet.  
然后把B杆的尾部  
穿入圈棒内  
Put the pole B endings into the pin ring.  
最后把插口拉链拉上  
再把前底角打上地钉  
Close the front porch door with zipper and fix the tent with stakes.

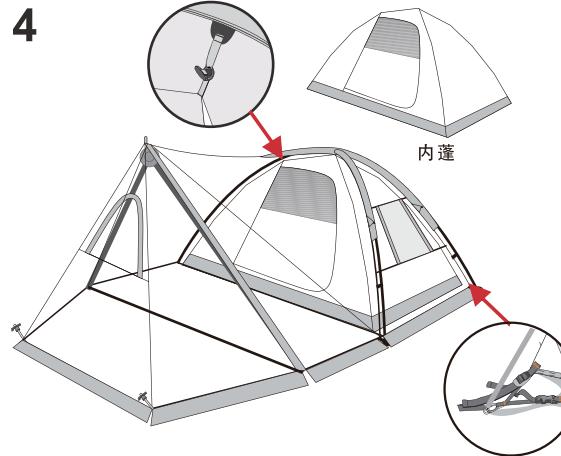




将内蓬固定在外蓬，底角用背包扣连接，其他固定点用橄榄扣+O环  
Hang tent inner tent to the flysheet with buckles.

前厅通过插口拉链可拆卸然后将顶部织带穿拉绳打上地钉  
Move the front porch door with zipper and fix the tent with stakes and guy lines.

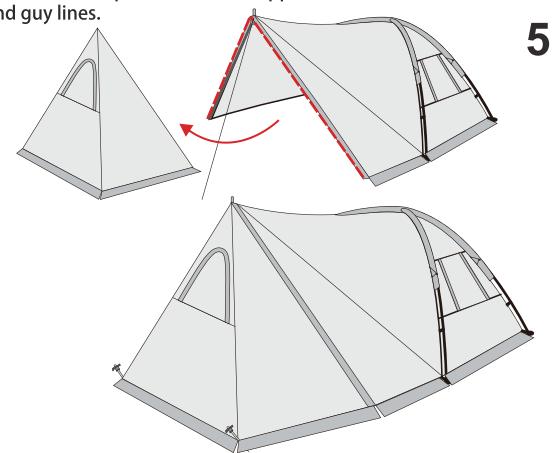

将地钉固定好，所有拉绳打上地钉  
Fix the tent with stakes and guy lines.

### 综合配件

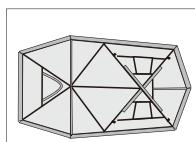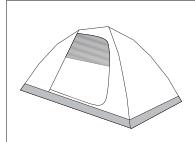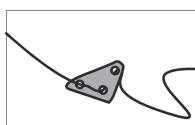

**MOBI GARDEN**

若有质量问题，请立即与销售商联系。

售后咨询电话：400 066 2858

依据ISO9001

Aftersales service:  
0086-4000662858