


# 指挥官 185 (中球) TENT

## 安装说明


Instruction manual

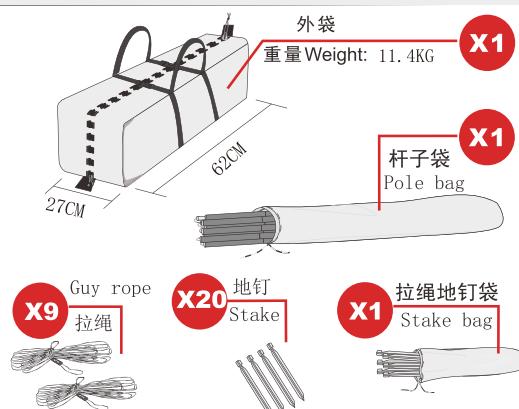

从外袋中取出帐篷，杆子袋，地钉袋（如上图），选择背风、平整的地面，防止有锐物划伤底部，把帐篷平摊于地。

Take tent and pole bag out from carry bag, then choose the leeward and flat ground.

A  
杆子  
Poles  
X6

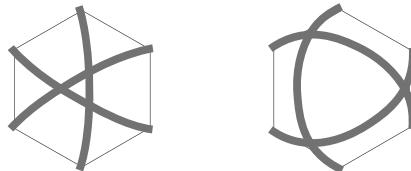

将杆子相同长度杆子放在一起，按色标颜色撑帐篷，先将3根A杆穿入管套内，在将另外3根A杆穿入相应的管套内，  
Choose the pole in the same length and color, then put 3 pole A into the pole sleeve and another 3 pole B into another sleeve.




从杆子袋中取出支杆安装成图中所画的形状“如图1”并  
将支杆按图例位置摆放。


Take poles out from pole bag and install it as above shape.

养护说明  
Maintenance instructions


1

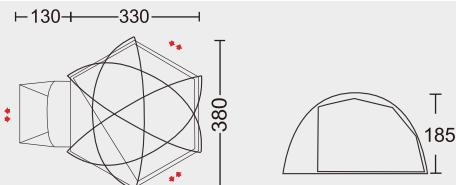

先将A杆插入蓬圈内，使帐篷站立，然后将B杆插入底角蓬圈，并调节扣调至底部，再将G型钩钩在帐篷上。  
Put the pole A ending into the eyelet and make the tent stand. Then put the pole B ending into the eyelet and fix the tent with adjustable buckle and G hook.

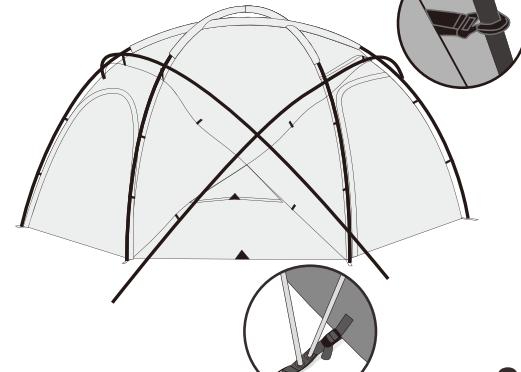

2

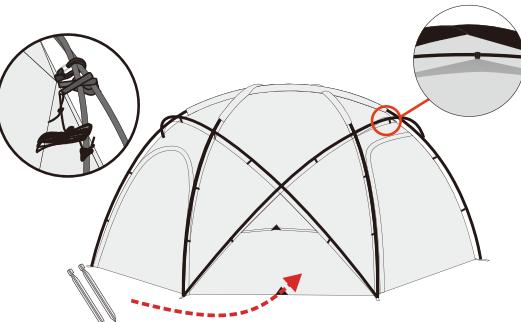


3

顶部风帽用G型钩钩在杆子上（拆帐篷时，G型记得取下），交叉杆处大G钩固定好后，将长粘扣条绕杆，地钉袋拿出地钉，底角一圈打上地钉。

Fix the top vent on the pole sleeve with G hook(remember to take out the G hook after using). Fix the tent with G hook, guandopeakes.

4

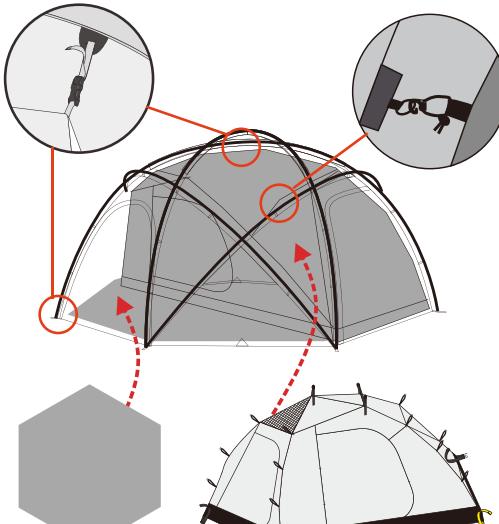

内蓬单独购买  
Buy inner tent additionally.


内蓬顶部按照颜色插入背包扣件，侧边小挂钩钩入O环内，底角插入背包扣件  
Fix the inner tent with backpack buckle and hook.

5



前厅单独购买  
Buy front extended tent additionally.

前厅  
Front tent

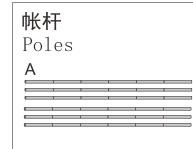

综合配件  
Accessories

MOBI GARDEN

若有质量问题，请立即与销售商联系。  
售后咨询电话：400 066 2858  
依据ISO9001  
Aftersales service:  
0086-4000662858